

Problem determination and troubleshooting

Problem determination steps for the SE350 V2 and SE360 V2

Lenovo

Problem determination and troubleshooting overview

The SE350 V2 and SE360 V2 use XCC as the management console, so the problem determination and troubleshooting procedures are the same as those for other ThinkEdge and ThinkSystem platforms. To understand the procedures, go thorough the following course:

- [ES41759C – ThinkSystem problem determination](#)

The troubleshooting items listed below are specific to the SE350 V2 and SE360 V2 and will be covered on the following pages:

- System power on problem
- Flashing power button LED
- No system display
- Hung system at MEM INIT during a system power on
- I/O module board issue

System power on problem

Perform the following checks:

- Check the power status LED
- Check the power cable connection
- Check the power module board and system board connection
- Check the front operator panel module and connection




Click each step in turn to see the procedure

Step **1** — **2** — **3** — **4**

System power on problem


1. Check the power status LED

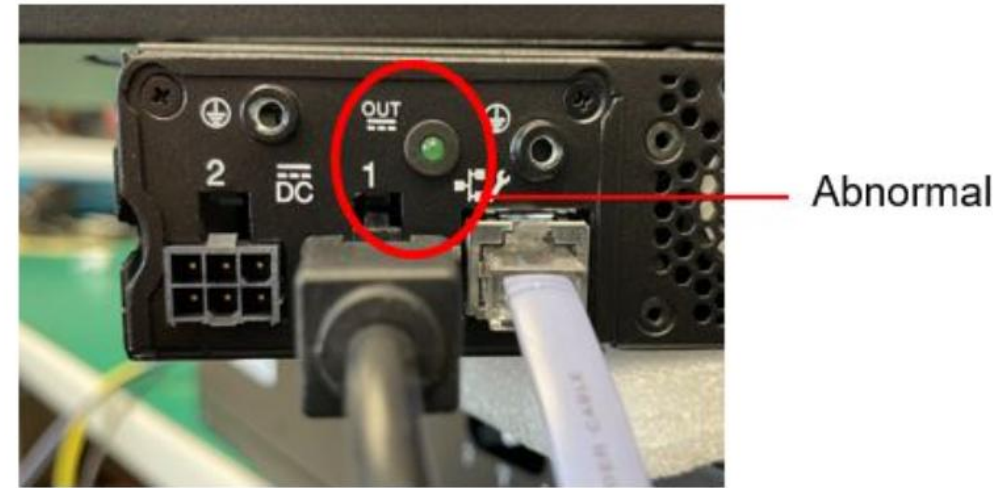

Step ①—②—③—④

System power on problem

2. Check the power cable connection

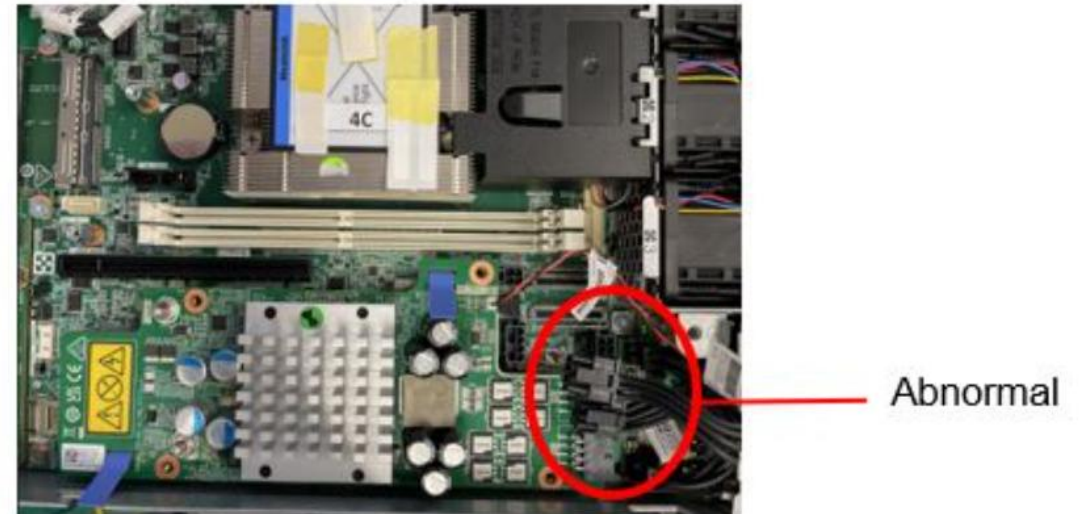


Step 1 — 2 — 3 — 4



System power on problem

3. Check the power module board and system board connection

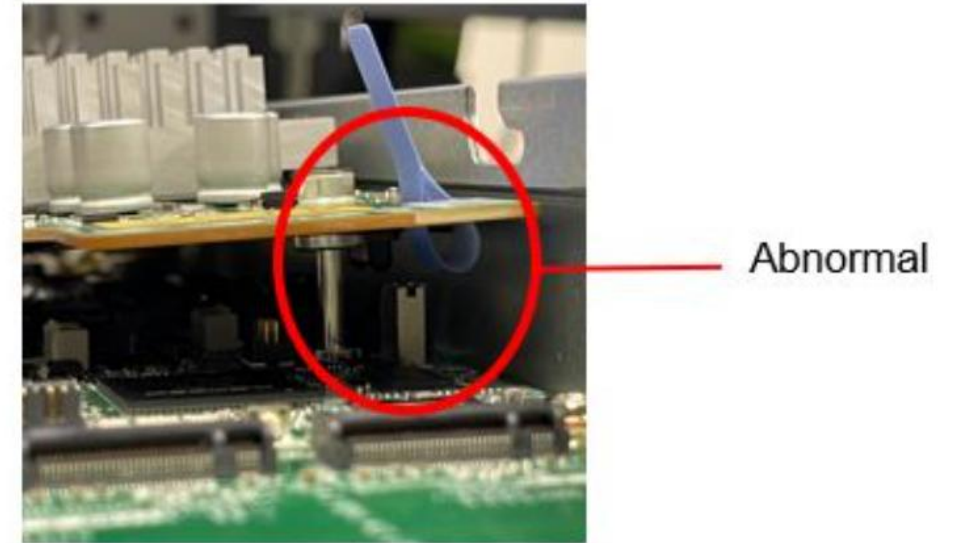

Step 1 — 2 — 3 — 4




System power on problem

4. Check the front operator panel module and connection



Front operator panel assembly

Step



Flashing power button LED

Perform the following checks:

1. Check the I/O module board to system board power connectors and the bridge board connection
2. Check the XCC SEL messages for any failures, and then check any components mentioned in the XCC SEL messages

Click each step in turn to see the procedure




Step



Flashing power button LED

1. Check the I/O module board to system board power connectors and bridge board connection

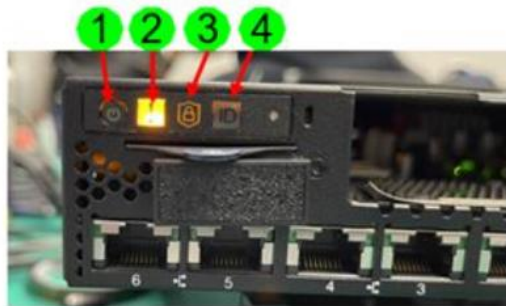


1. Power button with power status LED
2. System error LED
3. ThinkShield activation LED
4. System ID button with system LED

I/O module board power connector on the system board

Power connector on the I/O module board

Bridge board

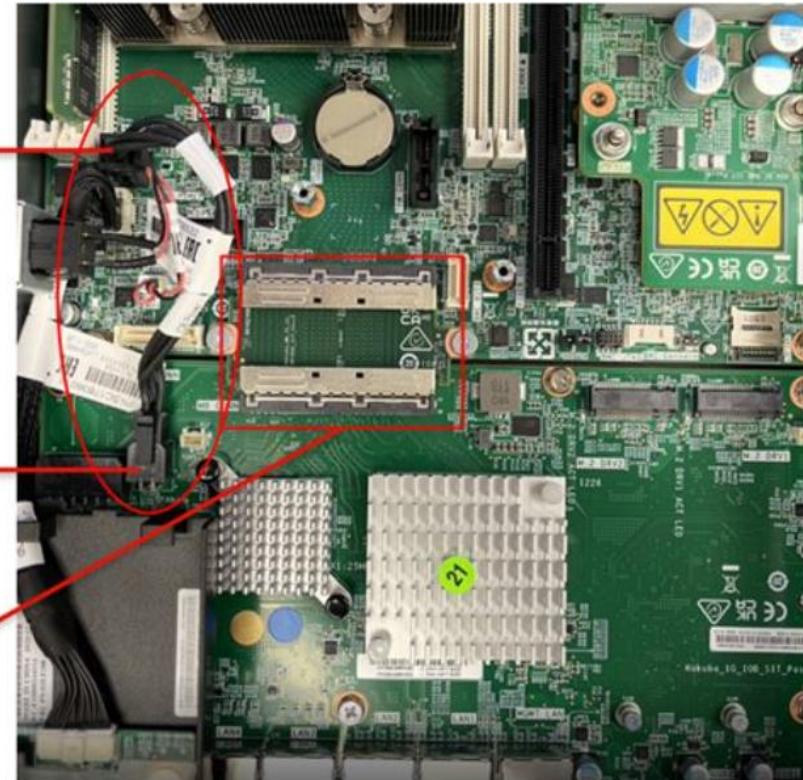


Step ① — ②



Flashing power button LED

2. Check XCC SEL messages

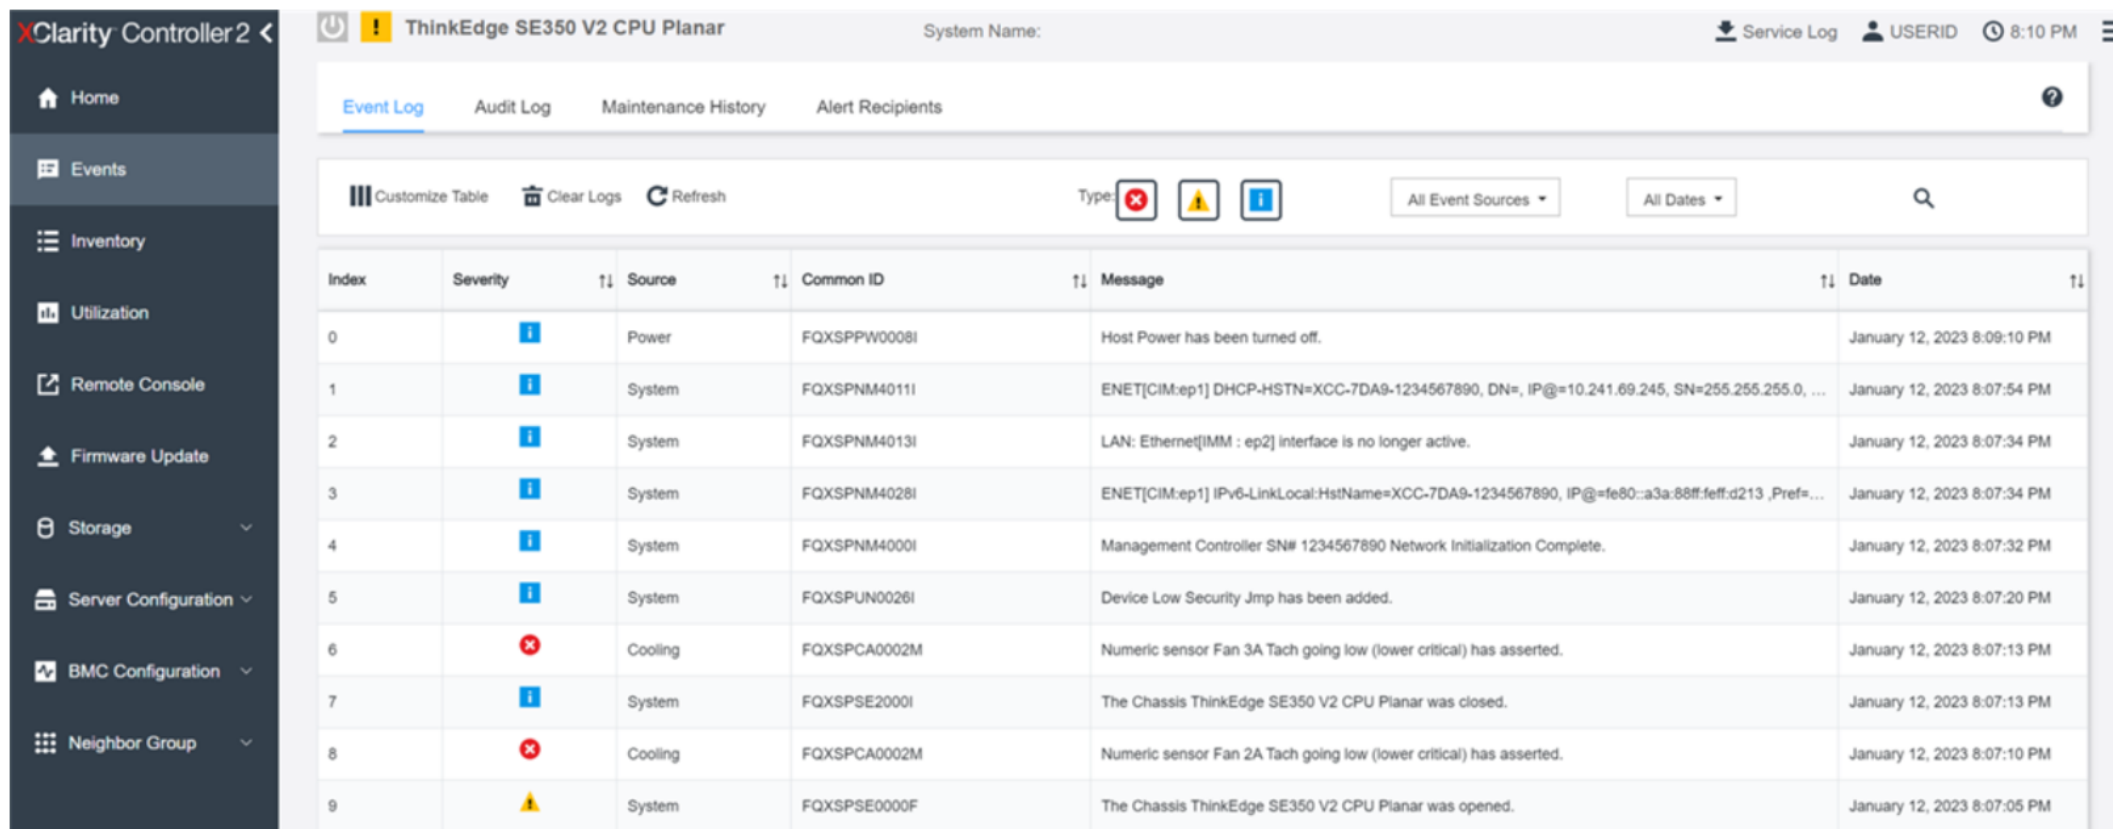

Index	Severity	Source	Common ID	Message	Date
0		Power	FQXSPPW0008I	Host Power has been turned off.	January 12, 2023 8:09:10 PM
1		System	FQXSPNM4011I	ENET[CIM:ep1] DHCP-HSTN=XCC-7DA9-1234567890, DN=, IP@=10.241.69.245, SN=255.255.255.0, ...	January 12, 2023 8:07:54 PM
2		System	FQXSPNM4013I	LAN: Ethernet[IMM : ep2] interface is no longer active.	January 12, 2023 8:07:34 PM
3		System	FQXSPNM4028I	ENET[CIM:ep1] IPv6-LinkLocal:HstName=XCC-7DA9-1234567890, IP@=fe80::a3a:88ff:feff:d213 ,Pref=...	January 12, 2023 8:07:34 PM
4		System	FQXSPNM4000I	Management Controller SN# 1234567890 Network Initialization Complete.	January 12, 2023 8:07:32 PM
5		System	FQXSPUN0026I	Device Low Security Jmp has been added.	January 12, 2023 8:07:20 PM
6		Cooling	FQXSPCA0002M	Numeric sensor Fan 3A Tach going low (lower critical) has asserted.	January 12, 2023 8:07:13 PM
7		System	FQXSPSE2000I	The Chassis ThinkEdge SE350 V2 CPU Planar was closed.	January 12, 2023 8:07:13 PM
8		Cooling	FQXSPCA0002M	Numeric sensor Fan 2A Tach going low (lower critical) has asserted.	January 12, 2023 8:07:10 PM
9		System	FQXSPSE0000F	The Chassis ThinkEdge SE350 V2 CPU Planar was opened.	January 12, 2023 8:07:05 PM

Step **1** — **2**



No system display

Perform the following checks:

1. Ensure the monitor is connected to the correct USB-C port
2. Check the cable between the system and the monitor
3. Ensure the monitor is operable


Click each step in turn to see the procedure



Step **1** — **2**

No system display

1. Ensure the monitor is connected to the correct USB-C port

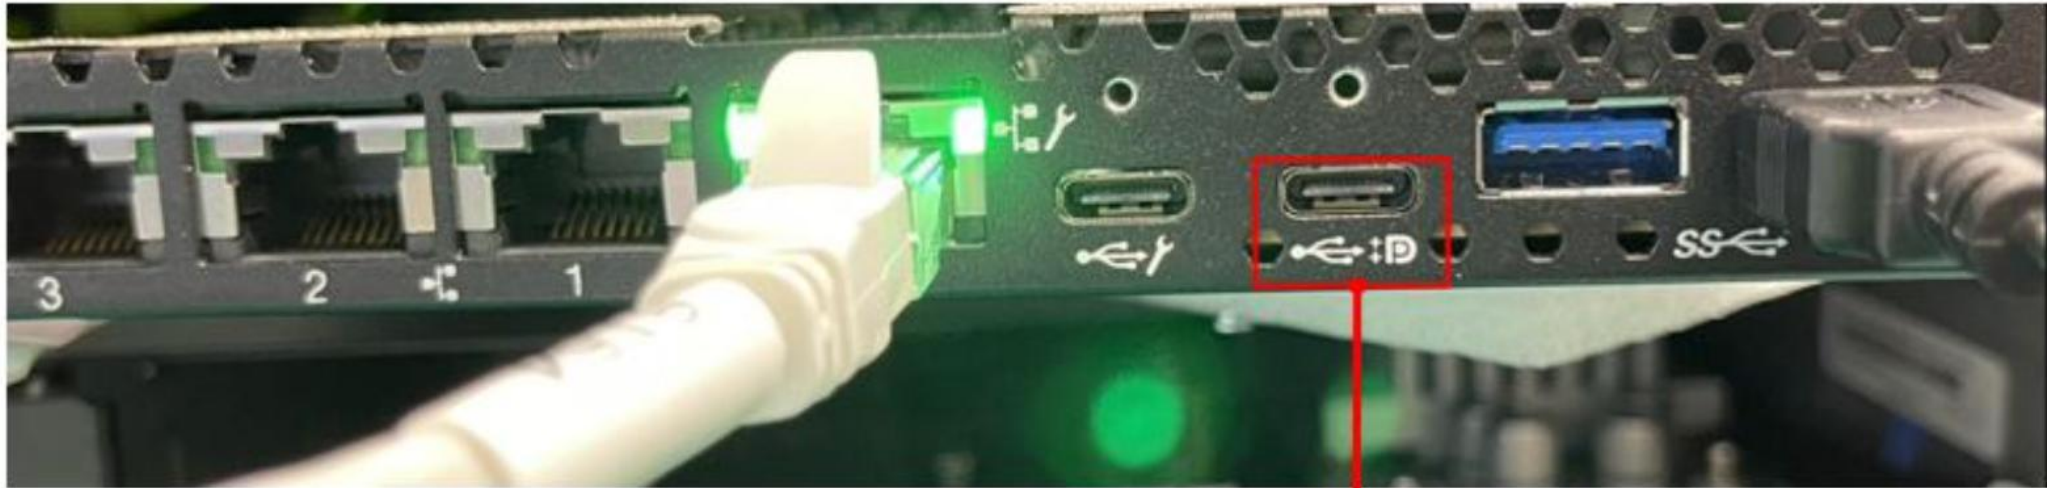

Display USB 3.2
Gen 1 Type-C

Step ① — ②



No system display

2. Check the cable between the system and the monitor
3. Ensure the monitor is operable




Display USB 3.2
Gen 1 Type-C



Display USB 3.2
Gen 1 Type-C

Step

1 — 2

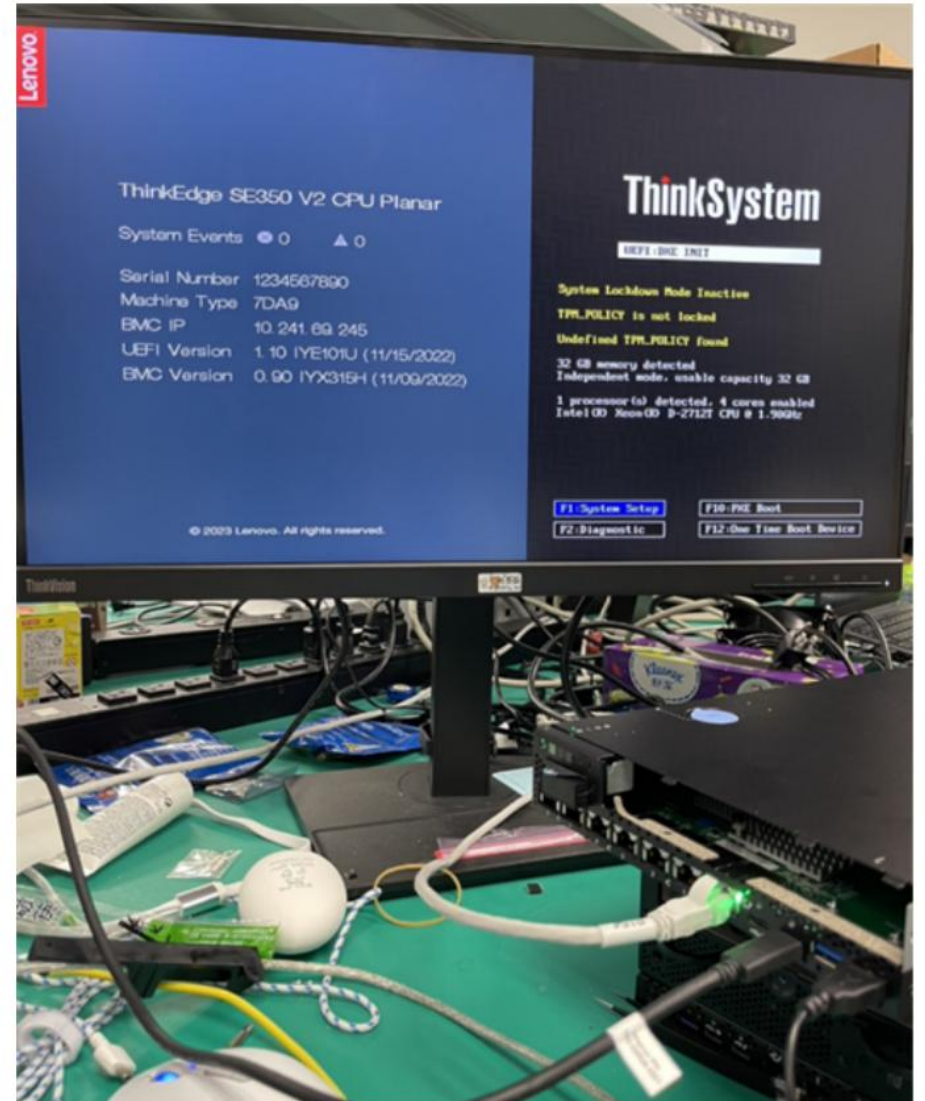

Hung system at MEM INIT during a system power on

Perform the following checks:

1. Check that the DIMMs are installed correctly
2. Check the status of the DIMM LEDs

Possible repair steps:


1. Ensure the DIMM is fully seated
2. Replace the DIMM

System hangs in “MEM INIT”

Click each step in turn to see the procedures


Step

1 — 2

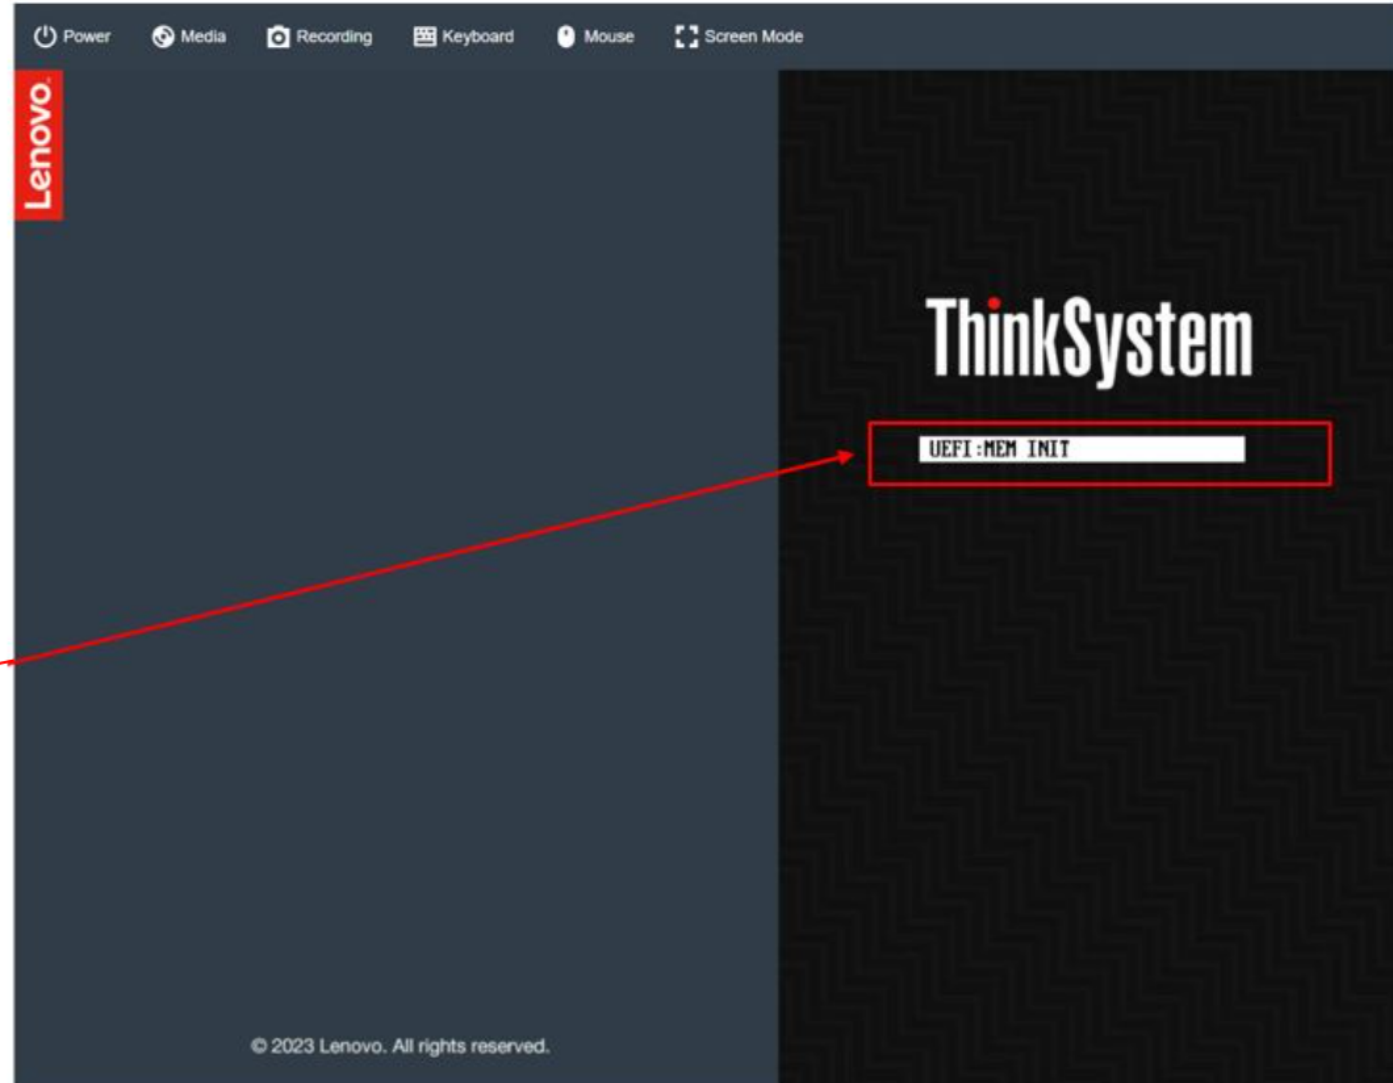

Hung system at MEM INIT during a system power on


1. Check that the DIMMs are installed and seated correctly

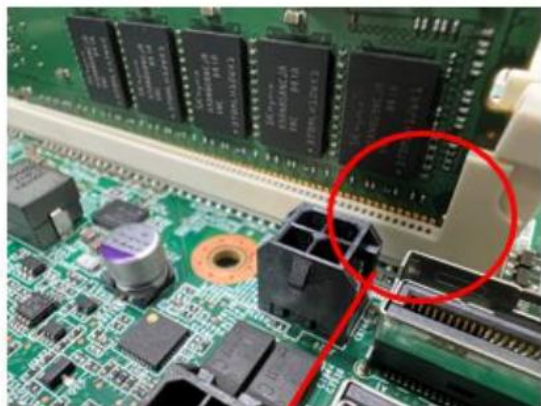

Not seated



Fully seated


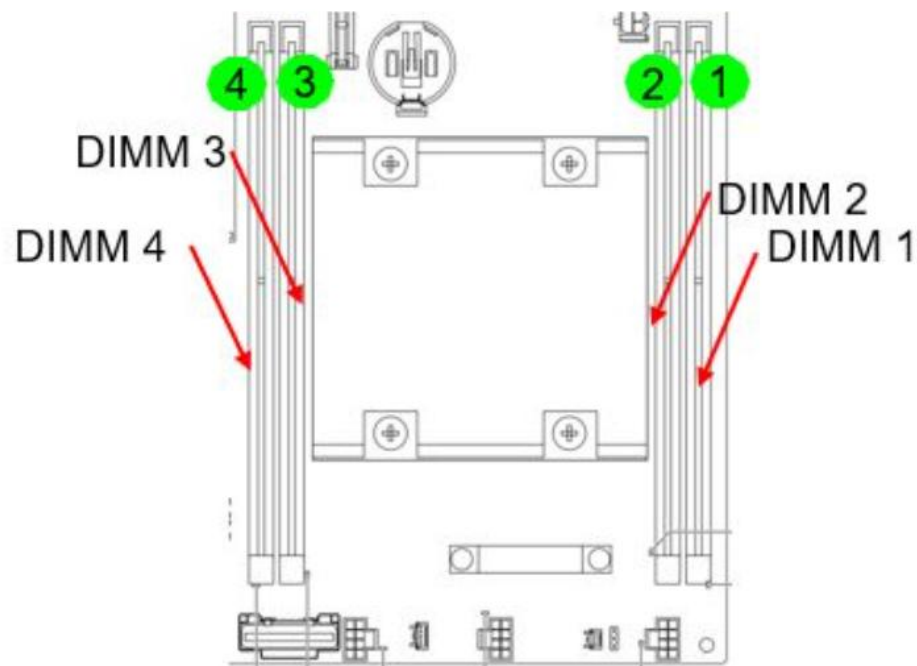


Step ① — ②



Hung system at MEM INIT during a system power on

2. Check the status of the DIMM LEDs

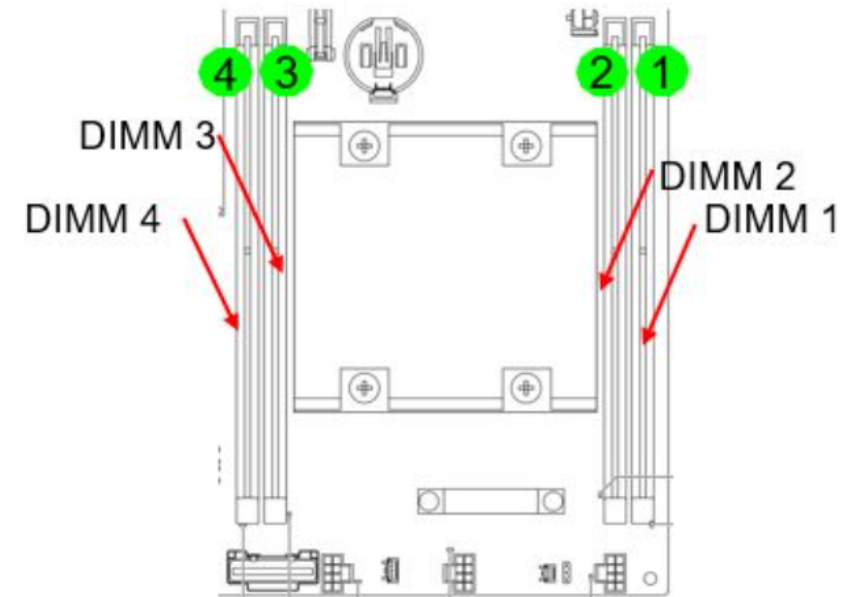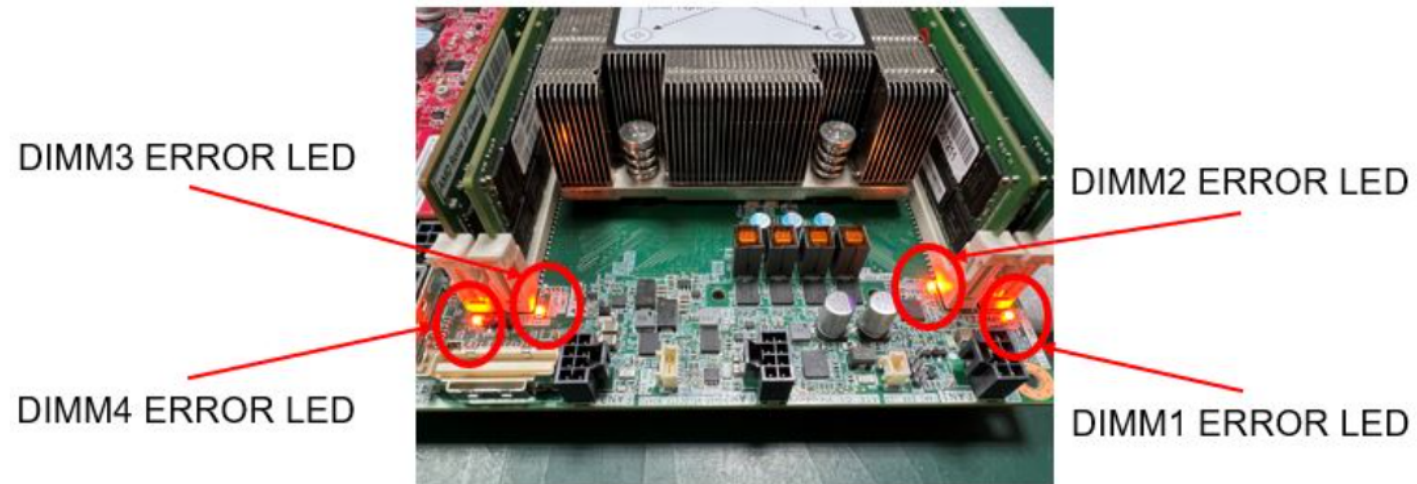

Step **1** — **2**




I/O module board issue

Perform the following checks:

1. Check the I/O module board to system board power connectors
2. Check the bridge board connection

I/O module board power connector on the system board

Power connector on the I/O module board

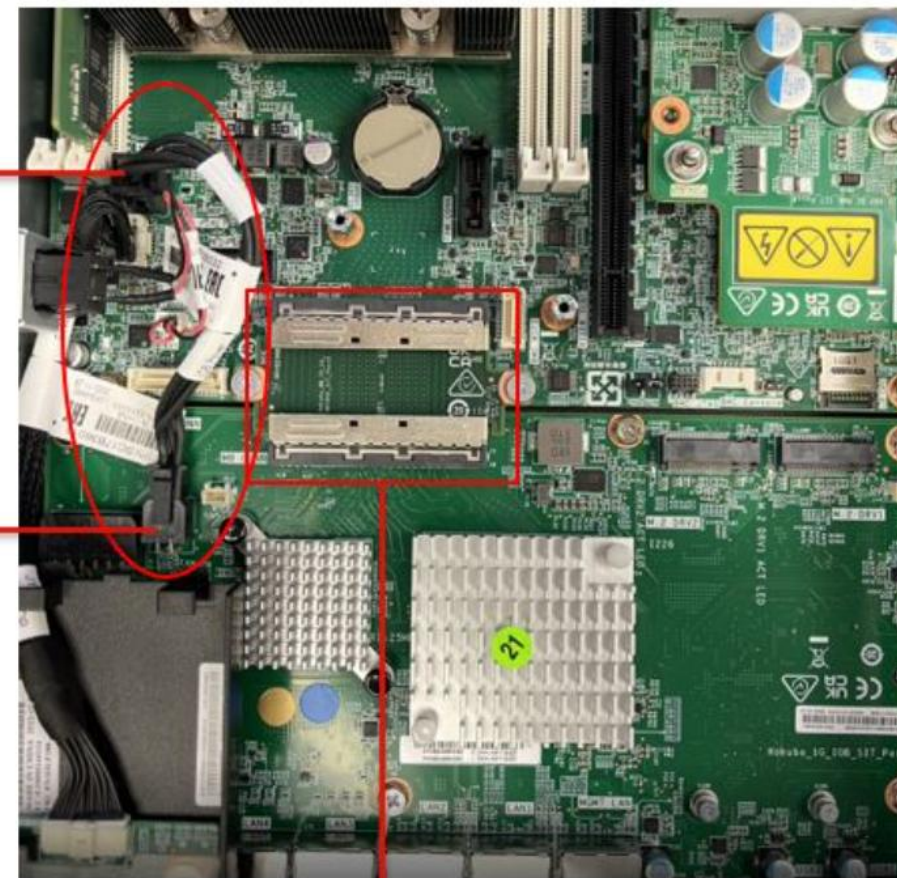

Bridge board

Summary

This course enabled you to:

- Describe the SE350 V2 and SE360 V2 and their components
- Describe the features and specifications of the SE350 V2 and SE360 V2
- Describe the different SE350 V2 and SE360 V2 mounting options and explain how to install them
- Describe the SE350 V2 and SE360 V2 security mechanism and explain how to activate the server
- Describe the problem determination steps and explain how to troubleshoot issues with the SE350 V2 and SE360 V2