


SE360 V2 system configurations and diagrams

Block diagram, mounting options, drive bay configuration, and parts installation


Lenovo

Block diagram

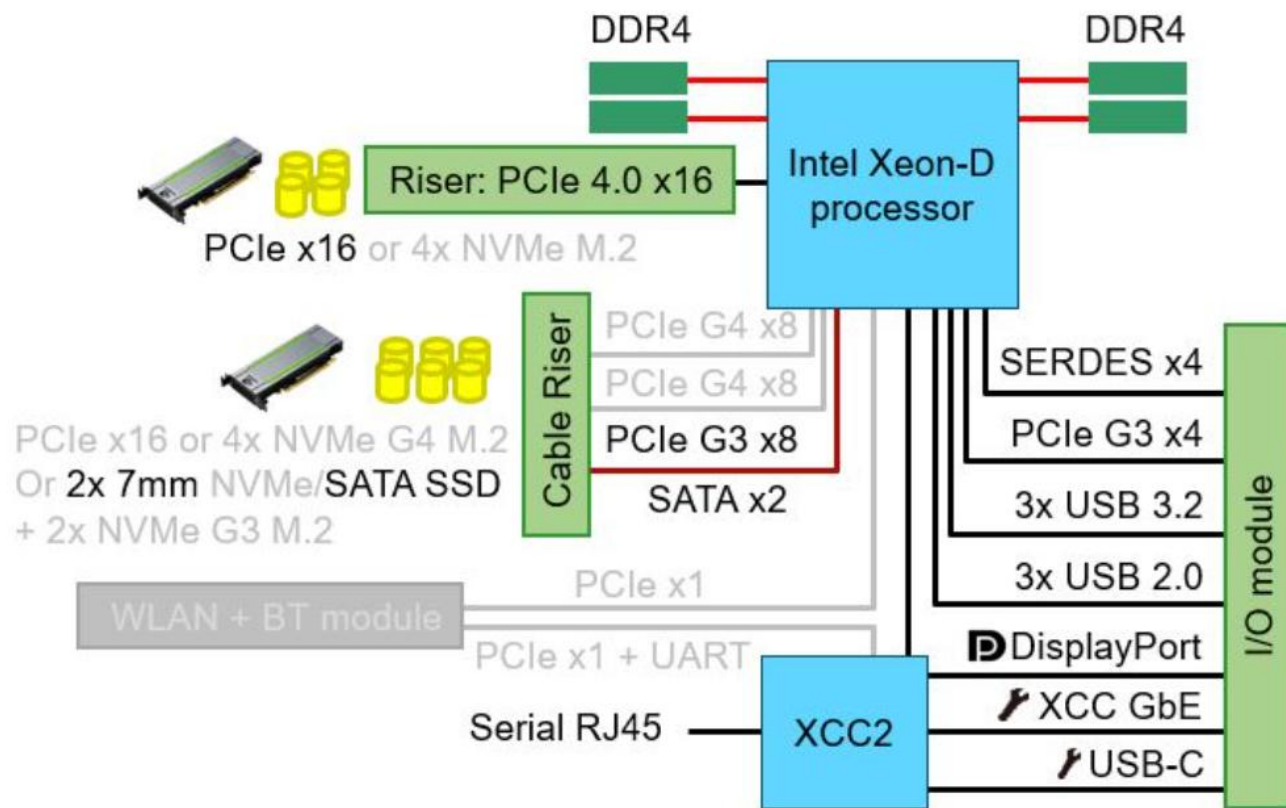


System board block diagram

25G/10G SFP28 I/O Module (4Q/2023)

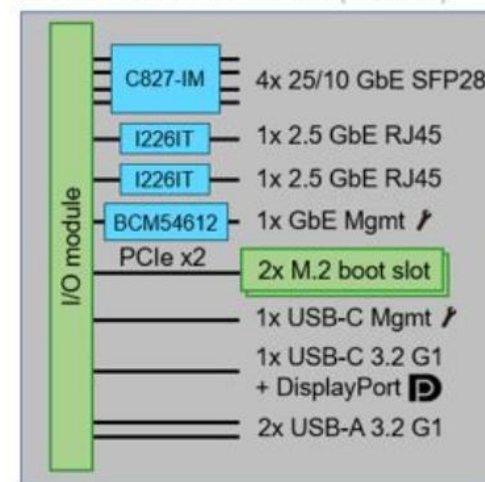

1G RJ45 I/O Module

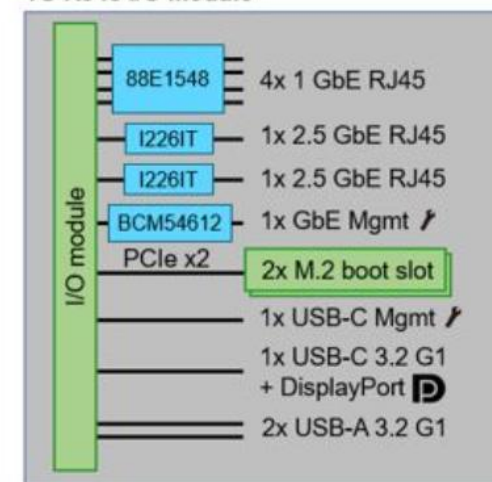

I/O module block diagram

Note: Areas marked in gray are planned for future releases

Mounting options

The SE360 V2 can currently only be mounted as a standalone node on a desktop.



The SE360 V2 front drive bay supports the following configuration:

-
- The image shows the front panel of a Dell R740 server. The top section features a green LED indicator strip with two rows of lights, labeled 1 and 2. Below this is a large black perforated grille. The bottom section contains a row of ports and indicators, including a power button, a status indicator (ID), a network status indicator (Wi-Fi), and a row of six network ports labeled 1 through 6. The server is black and has a sleek, industrial design.

Parts installation and removal

- Refer to the parts removal and installation videos on the course landing page
- Refer to the SE360 V2 user guide on [Lenovo Docs](#) for detailed installation steps, including
 - Installation guidelines
 - Memory module installation rules and order
 - Power on and power off the server
 - Configuration guide
 - Dust filter replacement
 - Power adapter replacement
 - Node component replacement
 - Complete parts replacement
 - Mounting options