

Hardware replacement tips

Part replacement highlights

Lenovo

Removing a system from a rack

Due to the design of the rack rail kit and length of the PSU power cords, when replacing a part in the system, servicers must power off the system and disconnect the PSU power cords before pulling the system out of the rack. For the complete procedure, refer to the *Remove the server from the rack* section of the HS350X V3 user guide.

About this task

Attention:


- Read "Installation Guidelines" on page 31 and "Safety inspection checklist" on page 32 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See "Power off the server" on page 38.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding systems.

CAUTION:

Make sure to have three people operate the server removal procedures to prevent injury.



Procedure

Step 1. If the server comes with two shipping brackets on both rear ends of the chassis, remove them first.

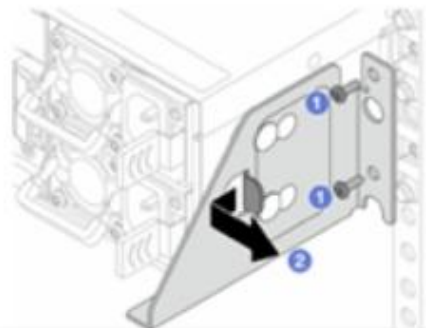


Replacing riser 2 cables or a rear drive signal cable

The riser 2 signal cables and rear drive signal cable are routed under the heat sink and fan cage. Remove the heat sink and fan cage before disconnecting or reconnecting these cables.

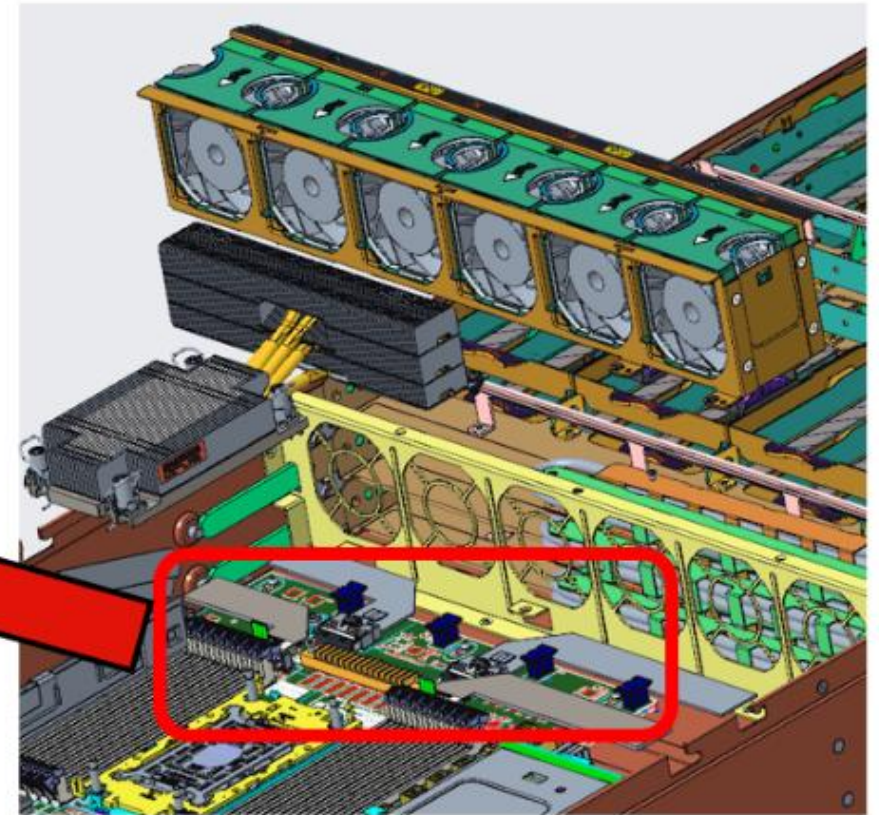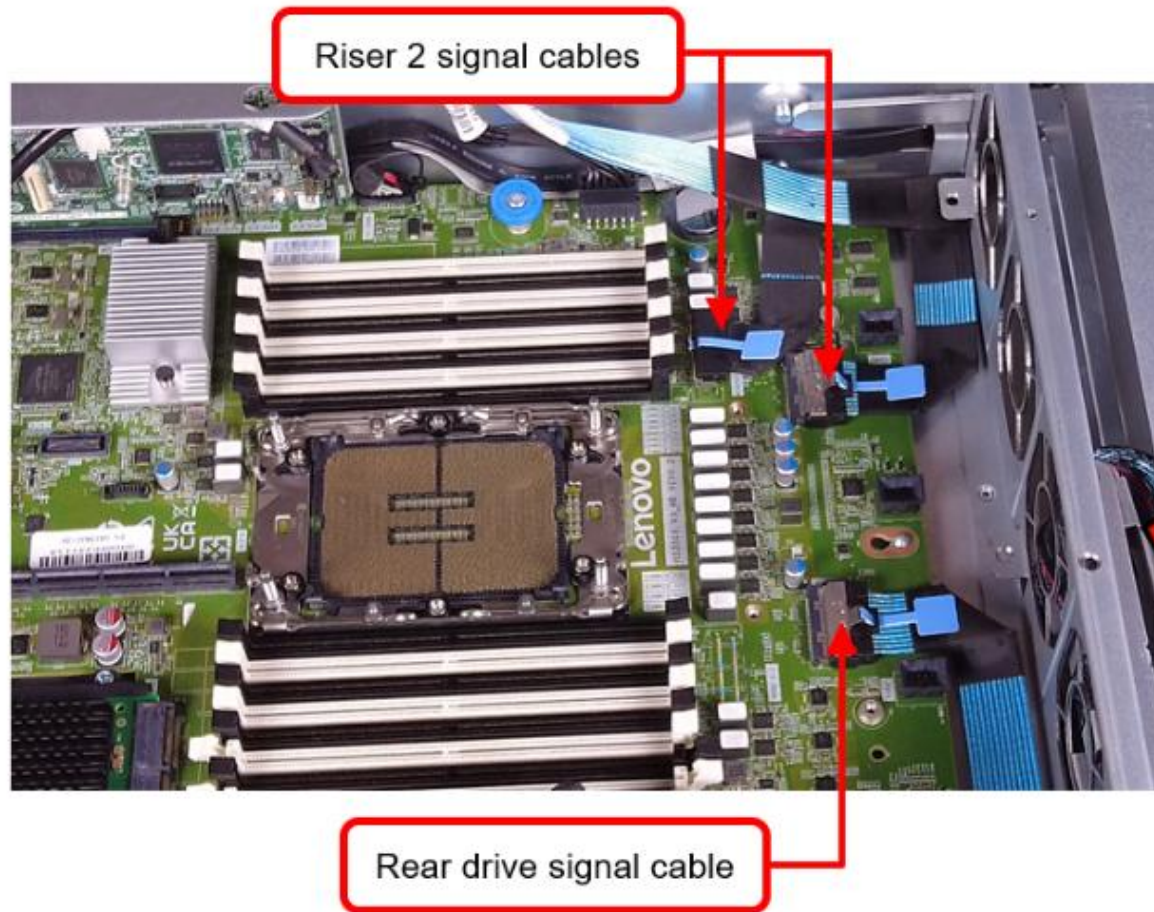

Replacing M.2 drives

The M.2 drive cage is covered by the system board power cables, drive tray backplane power cables, and signal cables. Disconnect these cables before replacing the M.2 drives in the M.2 drive cage.

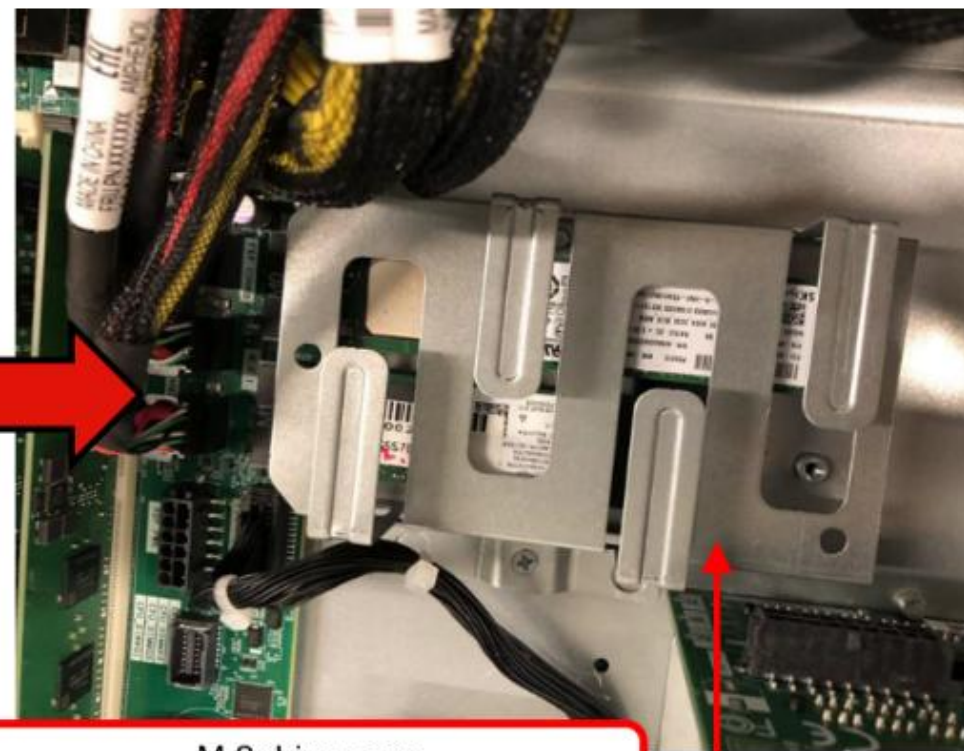


M.2 drive cage
(up to two M.2 drives in the cage)

Replacing a CMA


Each front drive tray backplane signal cable is installed in a CMA (cable management arm). If you need to replace a front tray backplane signal cable, replace the whole CMA. Do not separate the cable from the CMA.

To remove a CMA from the middle or bottom drive tray, you must first remove the CMA and upper drive tray. Refer to HS350X V3 user guide for the complete replacement procedures.

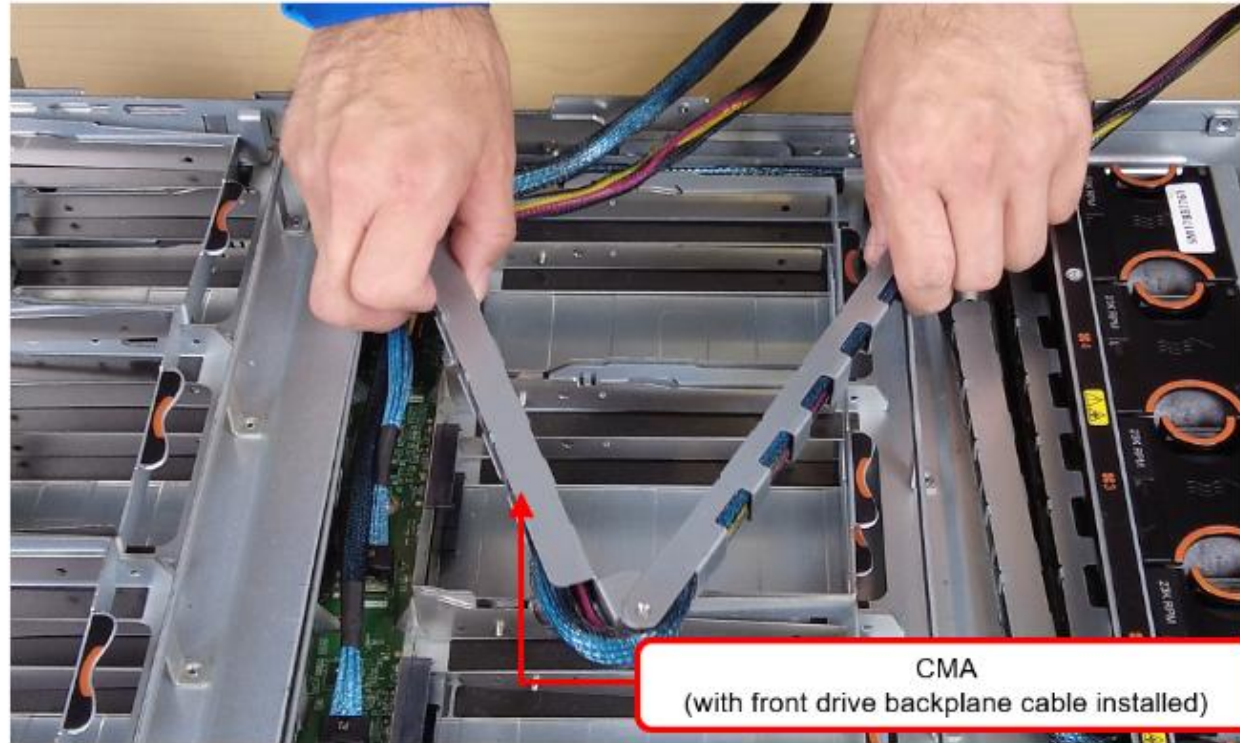

Replacing drives in a tray

Before replacing a CMA in a drive tray, you must remove all the drives from the tray. To ensure that drives are reinstalled in the same tray and drive slot location they occupied before the service action started, it is strongly recommended that you use stickers to record the location of each drive.

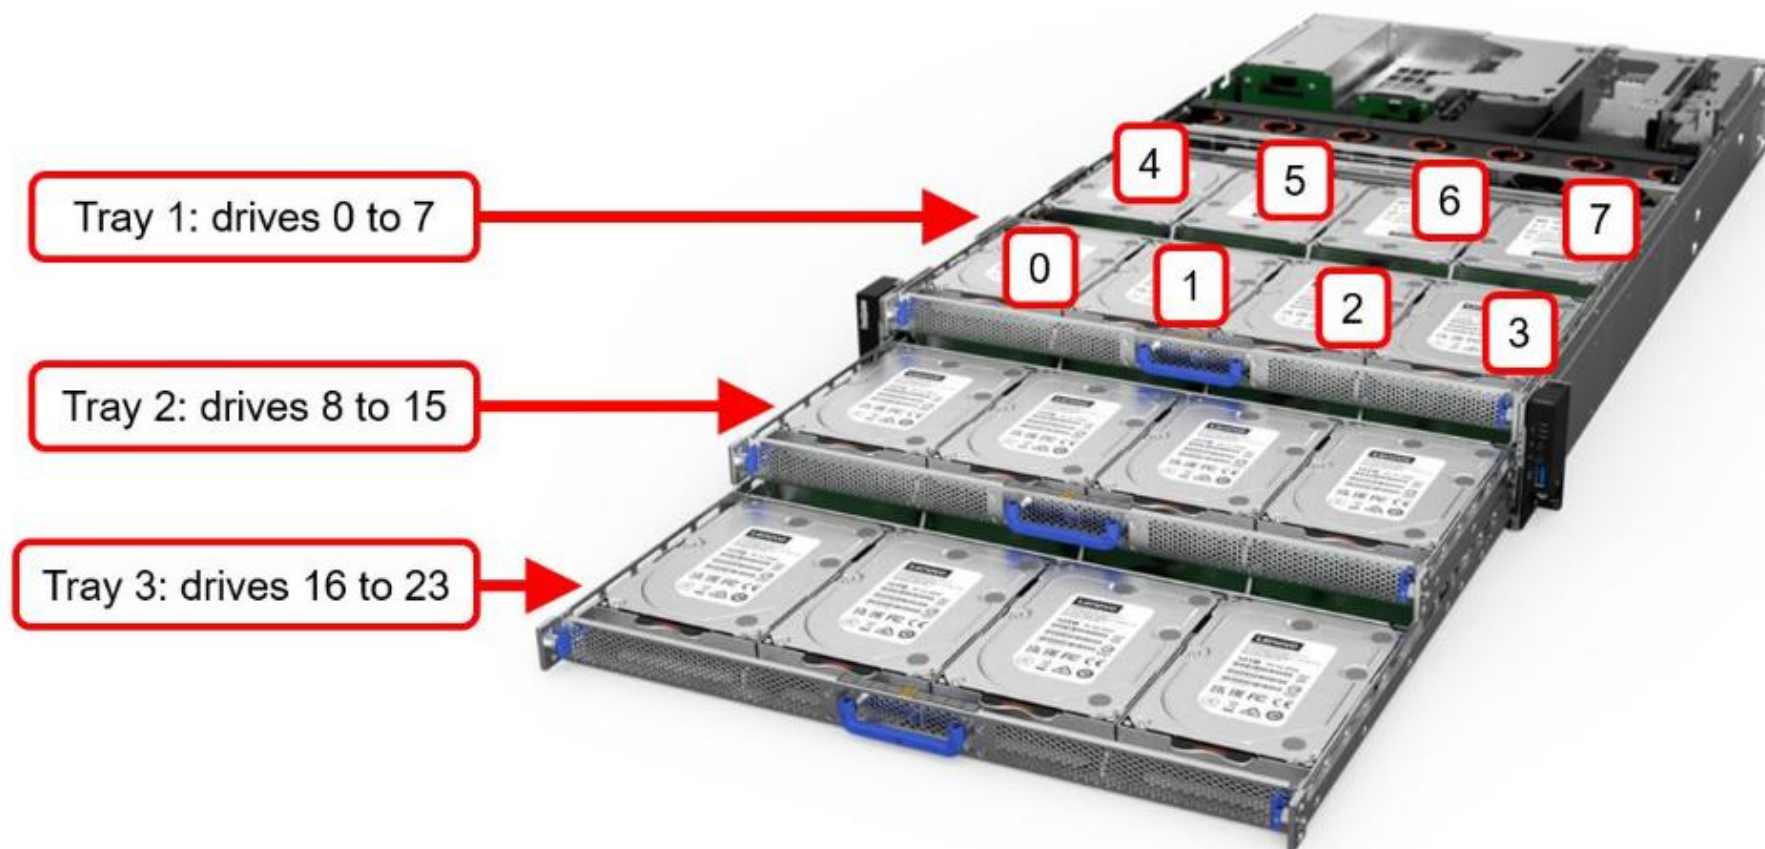

Mandatory process after replacing a system board

After replacing a system board, service personnel must perform the following tasks:

- Enable the BMC AST2600 secure boot function
- Set the system board to the end of manufacture (EOM) state
- Update the VPD

Refer to the following technical tips on Lenovo Support for the complete procedures:

- Enabling BMC AST2600 secure boot: <https://support.lenovo.com/tw/en/solutions/TT1934>
- Mandatory process when replacing System Board:
<https://support.lenovo.com/tw/en/solutions/tt1963>

(this tip includes setting up the EOM state and updating VPD procedures)

Enabling BMC AST2600 secure boot after systemboard replacement - Lenovo ThinkSystem HS350X V3

[Affected Configurations](#) | [Issue](#) | [Workaround](#) | [Details](#)

Affected Configurations

The system may be any of the following Lenovo servers:

- ThinkSystem, HS350X V3, Machine Type 7DE3

HS350X V3: Mandatory process when replacing System Board

[Affected Configurations](#) | [Issue](#) | [Workaround](#) | [Details](#)

Affected Configurations

The system may be any of the following Lenovo servers:


- ThinkSystem, HS350X V3 (ThinkSystem), 7DE3

One of the following parts is being replaced:


No.	Part Description	FRU PN	L2 PN
1	ThinkSystem HS350X V3 L40 Business	701 D424	CR27B22004

Removing a CMOS battery

The HS350X V3 supports two types of CMOS battery socket.

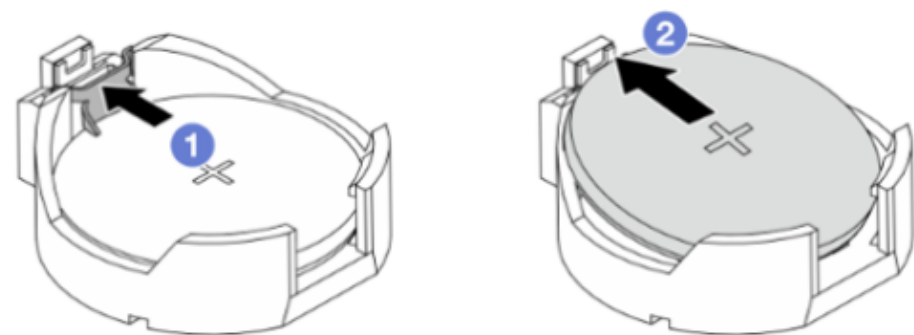

Socket type 1

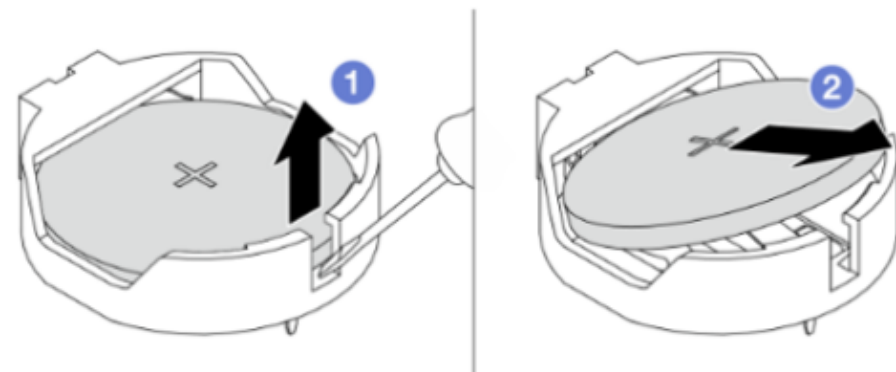

Socket type 2

Removing a CMOS battery:

- For **Socket type 1**, use your finger to press the clip and release the CMOS battery.
- For **Socket type 2**, use a flat-head screwdriver to pry the CMOS battery from its socket.

You will not know which CMOS battery socket type a system has by looking at the system model name or FRU information. Always prepare a flat-head screwdriver if you need to replace a CMOS battery in an HS350X V3.

Summary

This course enabled you to:

- Describe the ThinkSystem HS350X V3 and its components
- List the HS350X V3 specifications
- Describe the HS350X V3 configurations and block diagrams
- Describe the HS350X V3 management tools
- Describe the problem determination steps and explain how to troubleshoot issues with the HS350X V3