

Hardware replacement tips


Part replacement highlights

Lenovo


Replacing a processor heat sink

The SR630 V4 heat sink replacement procedure requires a Torx T30 torque screwdriver. The SR630 V4 heat sink, processor, and system board are shipped with a Torx T30 bit. Follow the removal sequence instructions and torque settings shown on the heat sink label to remove or install a heat sink. The recommended torque required to fully fasten heat sink screws is 0.9 to 1.3 newton-meters, or 8 to 12 inch-pounds.

Installing a standard heat sink

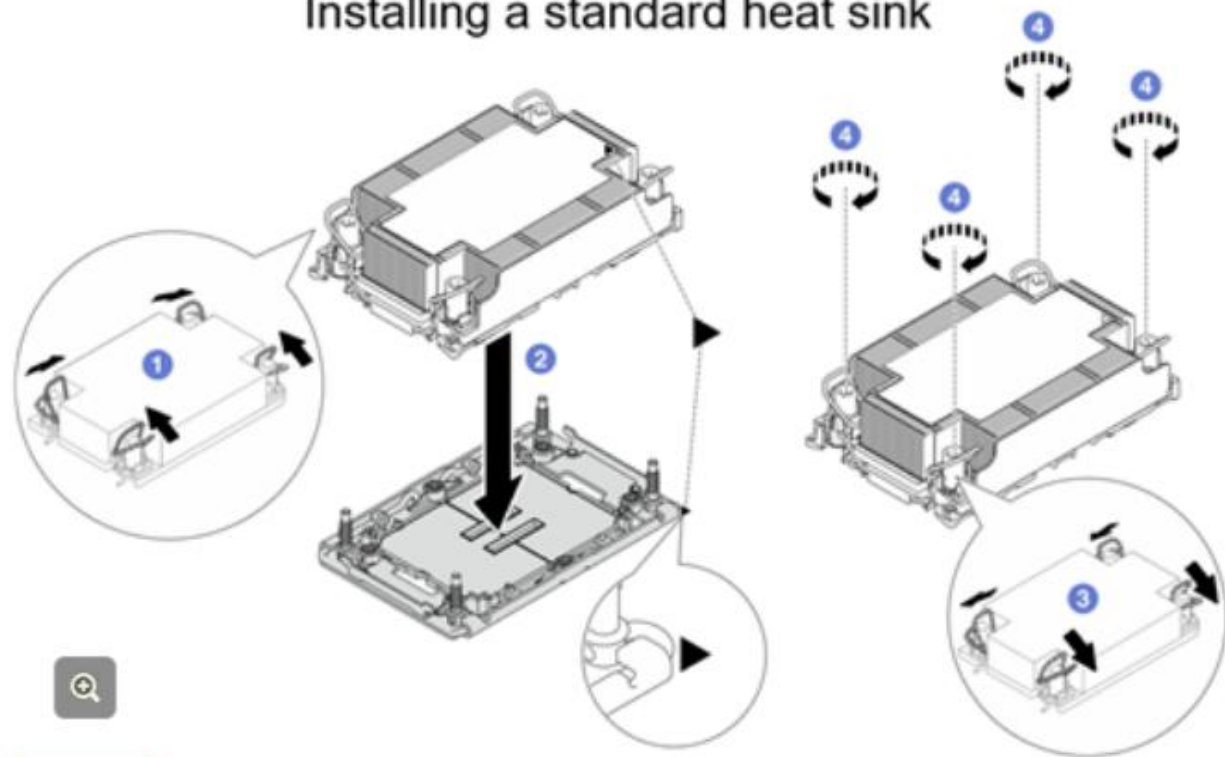

Installing a performance heat sink

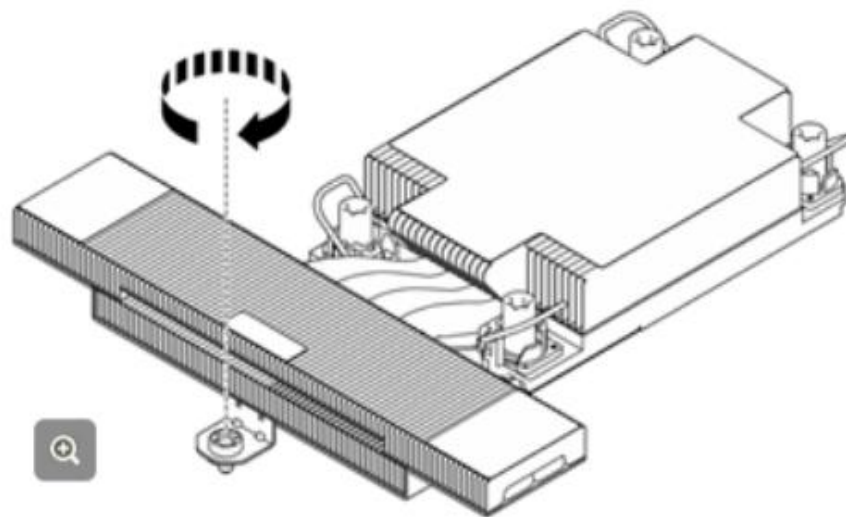

Updating the VPD


After replacing a processor board or a system I/O board, the service personnel must update the VPD on the system board. The SR630 V4 VPD update procedure is the same as that used with other Intel-based ThinkSystem models (using the `onecli config set` OneCLI command).

Servicers can also use the XCC tool (for servicers only – not available for customers) to update the VPD on an SR630 V4 server.

For more information, refer to the *LXCE OneCLI common task* sections of courses [ES51757B Introducing ThinkSystem tools](#) and [ES52678 – ThinkSystem tools for the ThinkSystem V4 platform](#), or the *Update the Vital Product Data (VPD)* section of the *ThinkSystem SR630 V4 User Guide* on [Lenovo Docs](#).

Handling a Lenovo Processor Neptune Core Module

Before replacing the Processor board or the system I/O board, check the heat sink in the system to be serviced. If it is a Lenovo Processor Neptune Core Module, you will need a module handle. Do NOT attempt to move the module with your hands as this could damage the module.

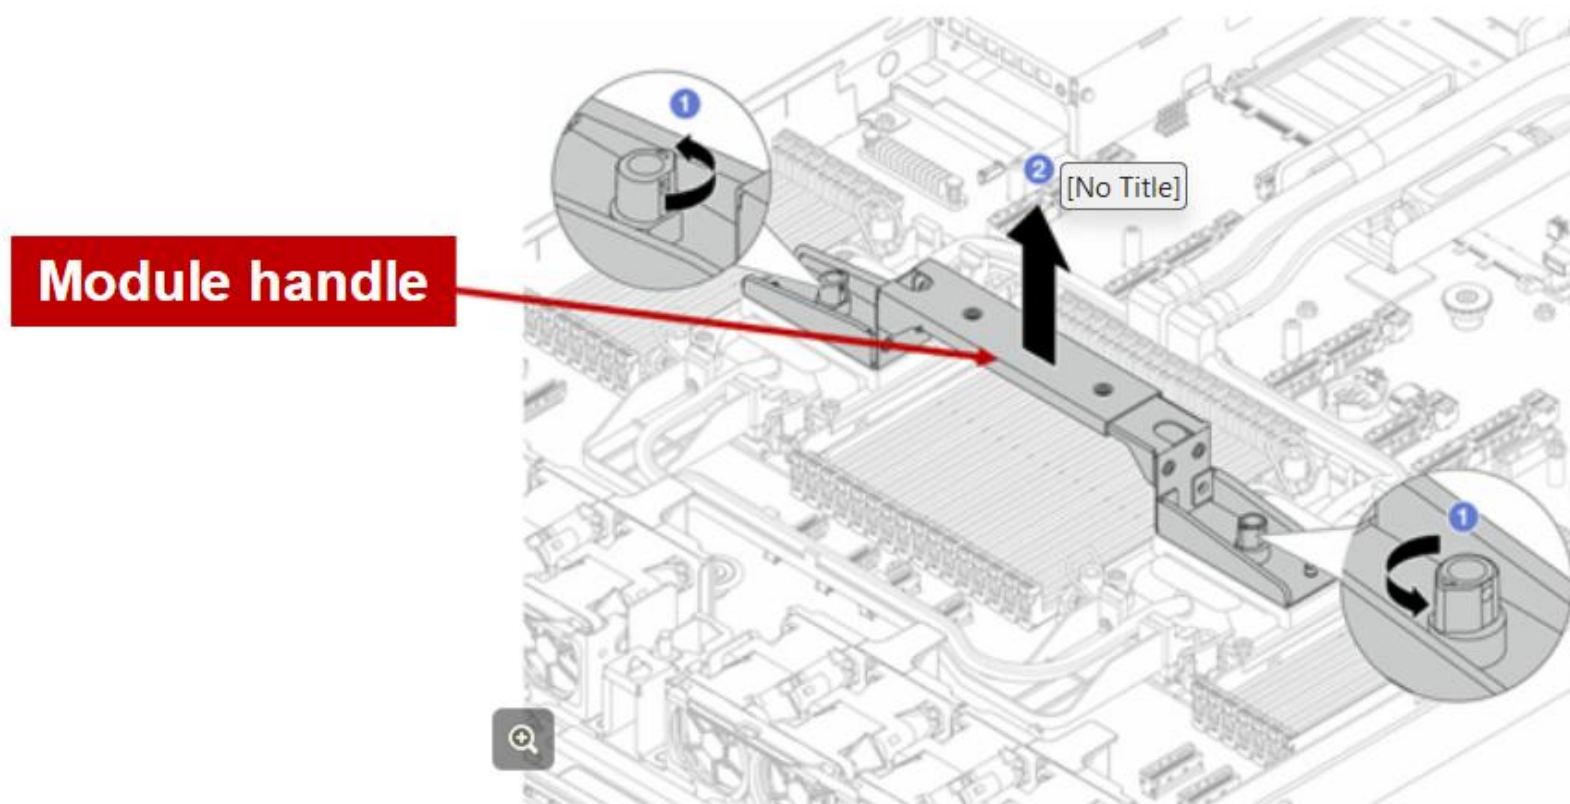

Summary

This course enabled you to:

- Describe the features and specifications of the ThinkSystem SR630 V4
- Identify the components of the SR630 V4
- Describe the configurations of the SR630 V4
- Describe the SR630 V4 management tools
- Describe the specific problem determination steps and explain how to troubleshoot issues with the SR630 V4