

Requesting an organization account

How to access XClarity One

Lenovo


Setting up an organization account

An organization is typically created for an entire company or for one or more departments in that company. Only the organization owners and users that are assigned to the organization can access the organization's management hubs, devices, and data.

A request for a new organization can be submitted from the **Sign in** page at <https://xclarityone.lenovo.com>. The registration process can be completed by filling in the necessary information in the pop-in window.

Note:

- A Lenovo customer number is needed to complete the process
- The organization name must be unique
- The request for activation will be sent to the Lenovo enablement administrators

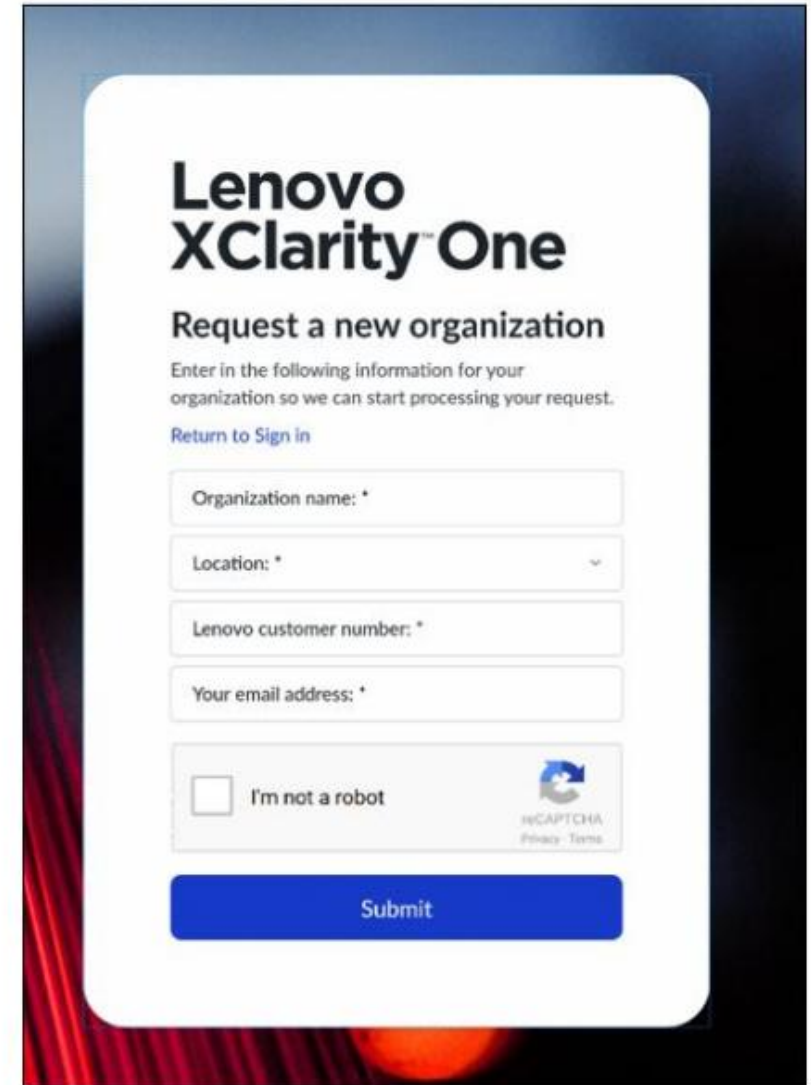


The screenshot shows a web form titled "Lenovo XClarity One" with the subtitle "Request a new organization". Below the title, it says "Enter in the following information for your organization so we can start processing your request." and provides a link "Return to Sign in". The form contains four input fields: "Organization name: *", "Location: *" (with a dropdown arrow), "Lenovo customer number: *", and "Your email address: *". Below these fields is a reCAPTCHA section with a checkbox labeled "I'm not a robot" and the reCAPTCHA logo. At the bottom of the form is a blue "Submit" button. The background of the form is white with rounded corners, set against a dark blue and red abstract background.

Managing an organization account request

After a user submits an organization creation request, the organization administrator will receive a request that can be seen in the **Requested organizations** section of the context menu.

The request can be edited, approved, or denied by the organization administrator. If it is approved, the user will receive an activation account email; if it is denied, the user will also receive a notification email.

The Lenovo enablement administrator who approves the customer organization **MUST** check that the customer ID in the portal and the POE are identical.

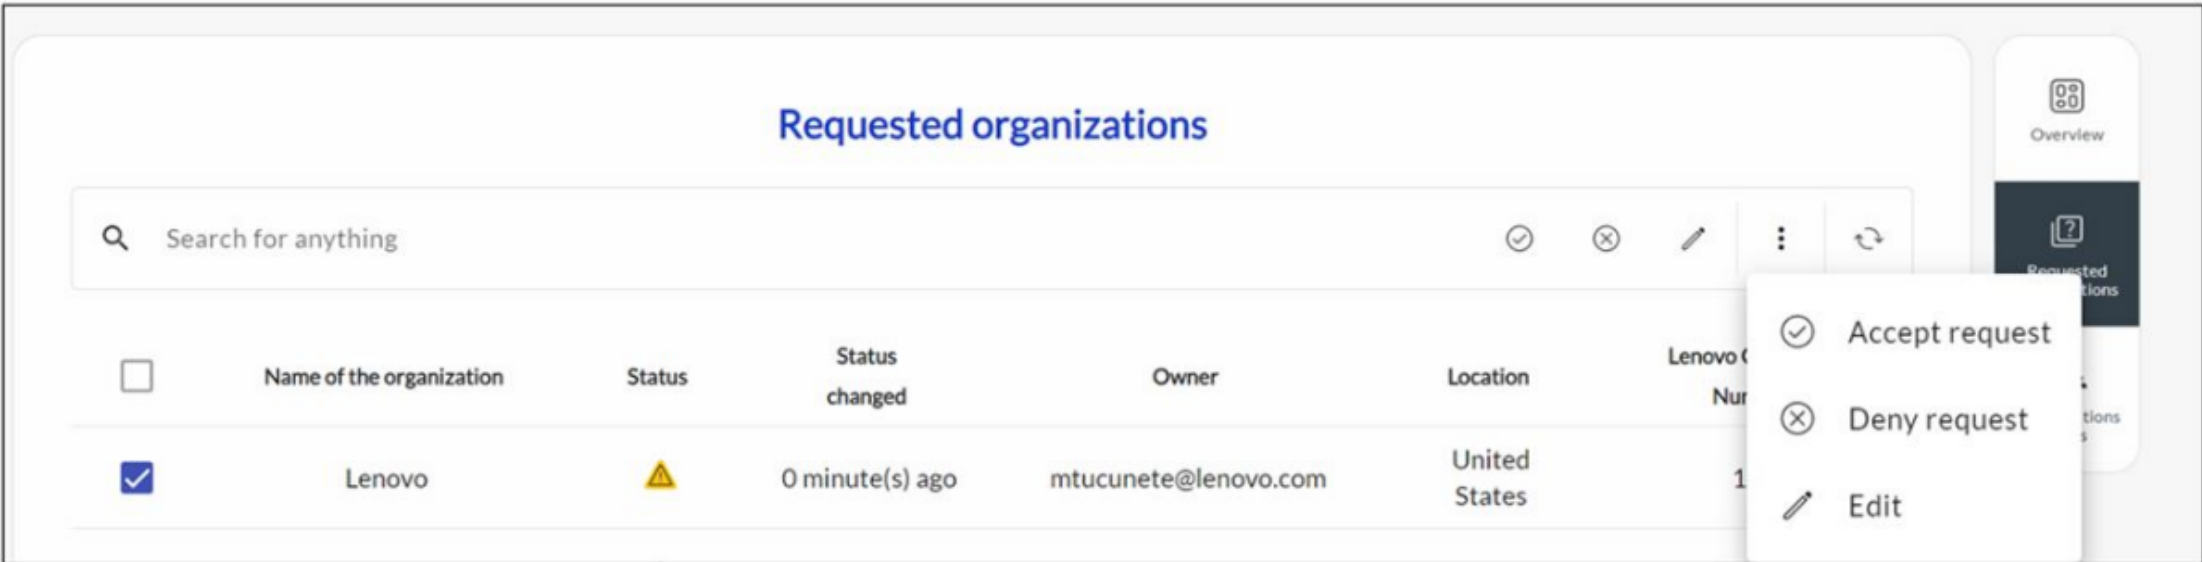

The screenshot displays the 'Requested organizations' section of a web application. It features a search bar at the top with the placeholder text 'Search for anything'. Below the search bar is a table with the following columns: 'Name of the organization', 'Status', 'Status changed', 'Owner', and 'Location'. A single row is visible in the table for the organization 'Lenovo', which has a status of 'Warning' (indicated by a yellow triangle icon) and was updated '0 minute(s) ago' by the owner 'mtucunete@lenovo.com' in the 'United States'. To the right of the table, a context menu is open, showing three options: 'Accept request' (with a checkmark icon), 'Deny request' (with a cross icon), and 'Edit' (with a pencil icon). On the far right, a sidebar contains two buttons: 'Overview' and 'Requested organizations' (which is highlighted).

☐	Name of the organization	Status	Status changed	Owner	Location
☒	Lenovo	Warning	0 minute(s) ago	mtucunete@lenovo.com	United States

- Accept request
- Deny request
- Edit

First login


Logging to the XClarity One portal for the first time

Lenovo

First login

Invitation email

Organization owners or portal users can invite other people to join an organization. If the invitation is accepted, the user will receive a welcome email and registration link from noreply@xc1mail.lenovo.com. The link will expire after 72 hours, and if the user does not complete the registration process in that time, they will have to ask the organization owner or portal administrator to send a new invitation.

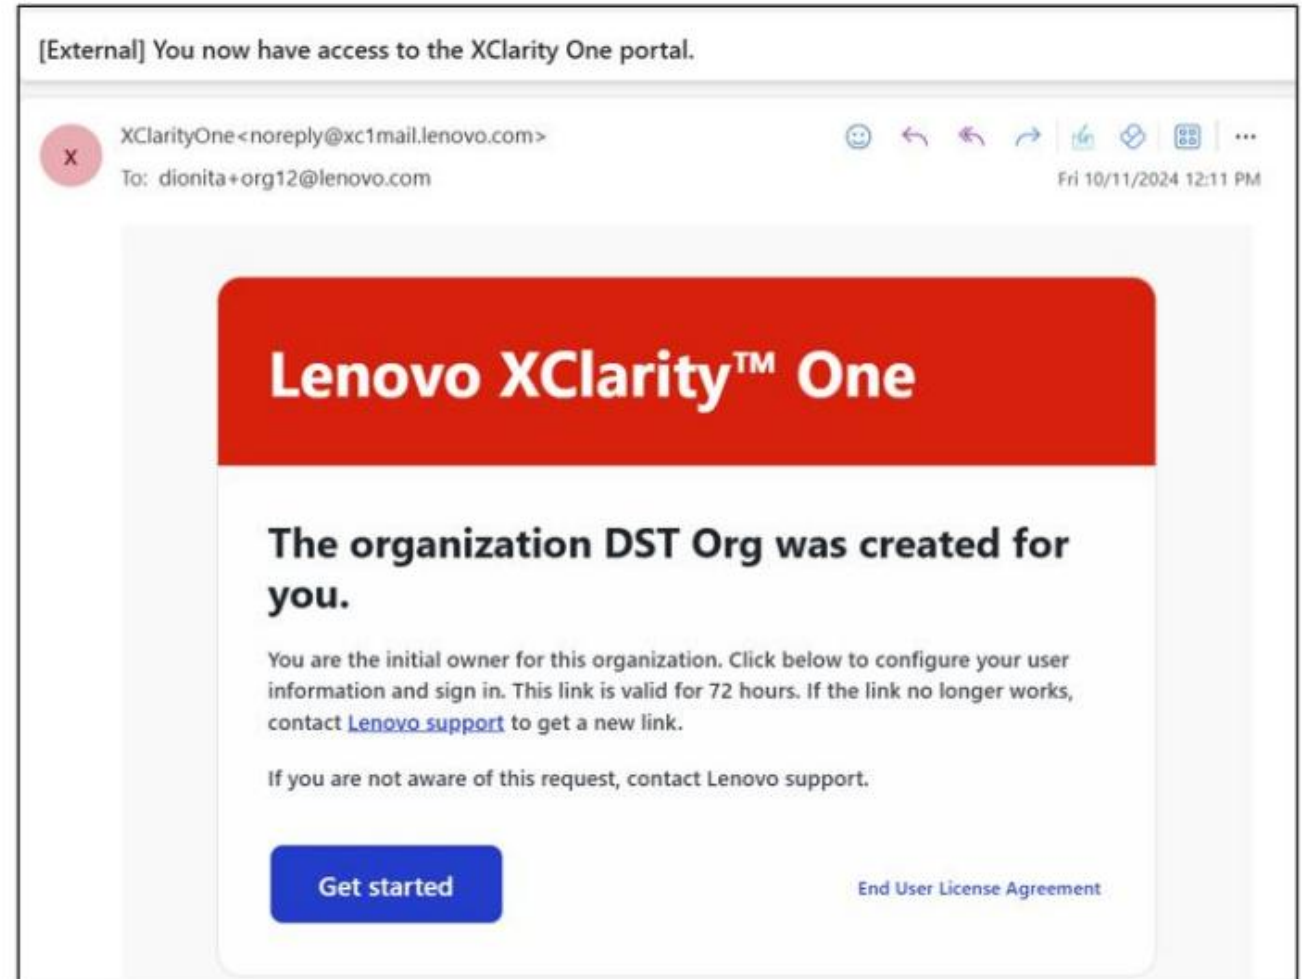

User registration steps

After clicking the registration link in the welcome email, users should work through the following steps to complete the registration.

Step 1: Accept the terms, conditions, and cookie policy



Step 1

Step 2

Step 3

Lenovo XClarity™ One

Terms, conditions, and privacy agreements

When you sign in for the first time, you are asked to agree to the [End User License Agreement](#) and the [Lenovo Privacy Statement](#). Ensure that you read these agreements in their entirety before clicking Accept. You must accept the statements to sign in to XClarity One.

Accept

Lenovo XClarity™ One

This site relies on cookies, JavaScript, and other web technologies to serve essential elements on the site and cannot be switched off. They are set in response to your use of the services and are intended only to keep this site running and operational. If you set your browser to block or alert you about these cookies, some parts of the site will not work properly.

Click below to acknowledge this and continue setting up your account.

I agree

User registration steps


After clicking the registration link in the welcome email, users should work through the following steps to complete the registration.

Step 1

Step 2

Step 3

Step 2: Enter personal information and a password. Passwords must have a minimum of eight characters and must include at least one of each of the following: an uppercase letter, a lowercase letter, a number, a special character.

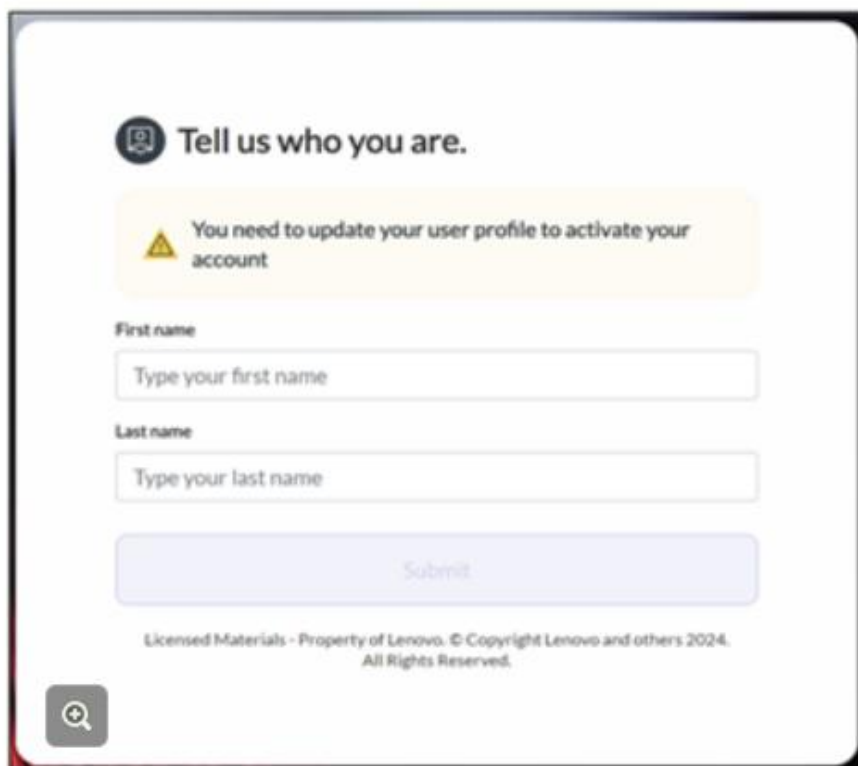

Tell us who you are.


 You need to update your user profile to activate your account

First name

Last name

Licensed Materials - Property of Lenovo. © Copyright Lenovo and others 2024. All Rights Reserved.



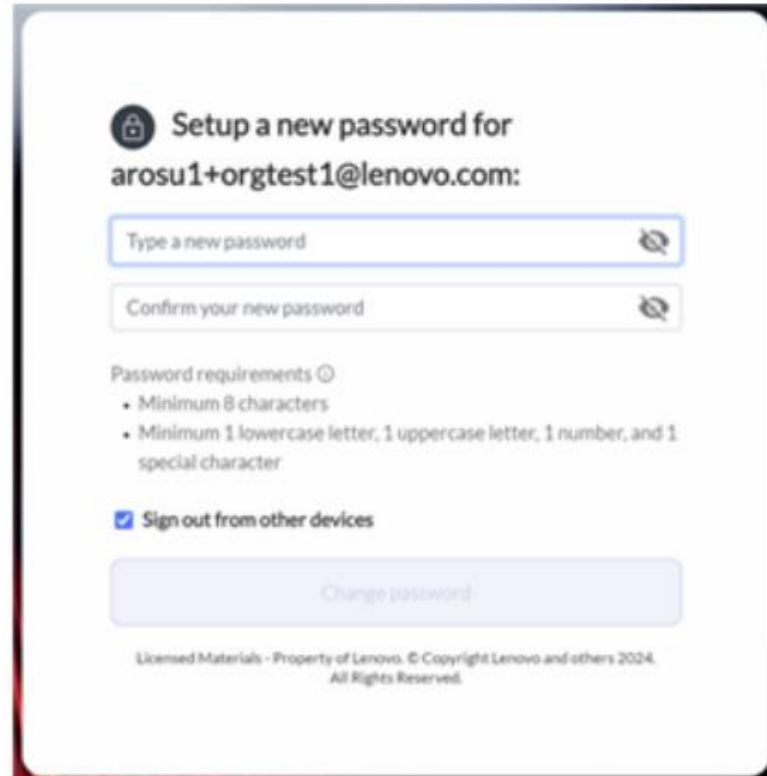

Setup a new password for arosu1+orgtest1@lenovo.com:





Password requirements ⓘ

- Minimum 8 characters
- Minimum 1 lowercase letter, 1 uppercase letter, 1 number, and 1 special character

☒ Sign out from other devices

Licensed Materials - Property of Lenovo. © Copyright Lenovo and others 2024. All Rights Reserved.

User registration steps

After clicking the registration link in the welcome email, users should work through the following steps to complete the registration.

Step 1


Step 2

Step 3

Step 3: Set up an authenticator application and connect to XClarity One to obtain a one-time passcode (OTP), which will be required for each login.

The following authenticator applications are supported:


- FreeOTP
- Google Authenticator
- Microsoft Authenticator

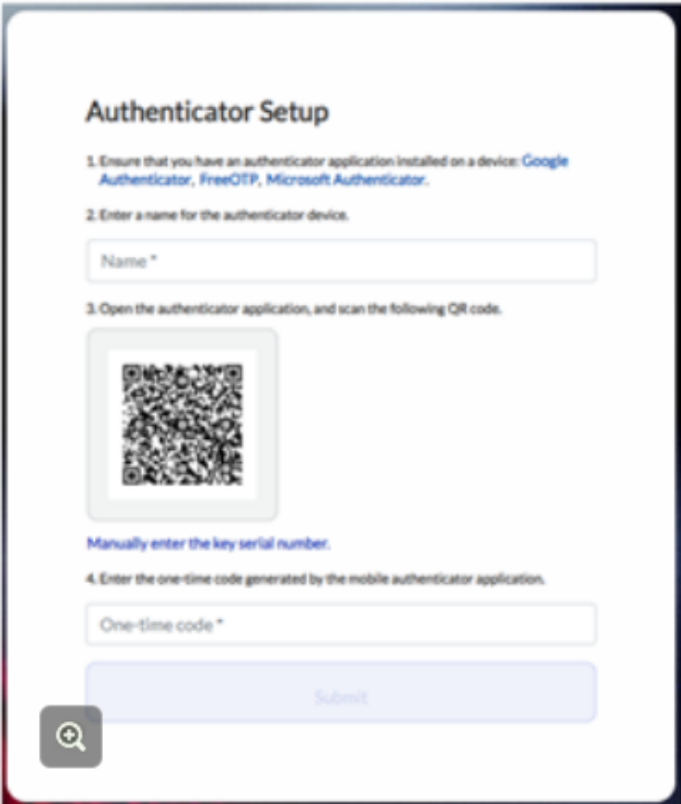


First login

After the account is activated, the user should open a web browser and go to <https://xclarityone.lenovo.com>.

Logging in requires a two-step authentication process. First, enter the necessary credentials and then enter the OTP code from the configured authenticator application.

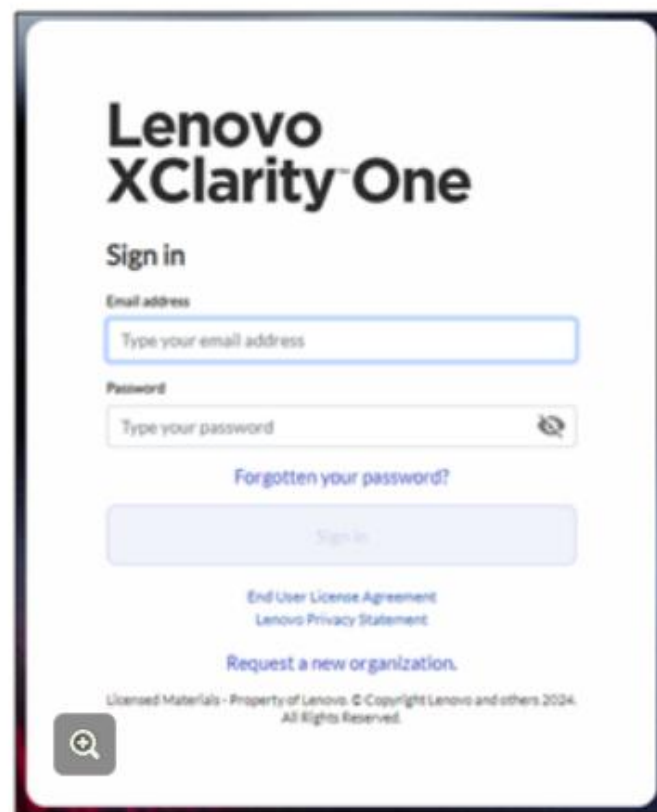




The image shows the 'Sign in' screen of the Lenovo XClarity One web application. At the top, the 'Lenovo XClarity One' logo is displayed. Below it, the 'Sign in' heading is followed by two input fields: 'Email address' and 'Password'. The 'Email address' field has a placeholder 'Type your email address'. The 'Password' field has a placeholder 'Type your password' and a toggle icon on the right. Below the password field is a link 'Forgotten your password?'. A large 'Sign in' button is centered below these fields. At the bottom, there are links for 'End User License Agreement', 'Lenovo Privacy Statement', and 'Request a new organization.'. A footer contains the text 'Licensed Materials - Property of Lenovo. © Copyright Lenovo and others 2024. All Rights Reserved.' and a small circular icon with a magnifying glass.

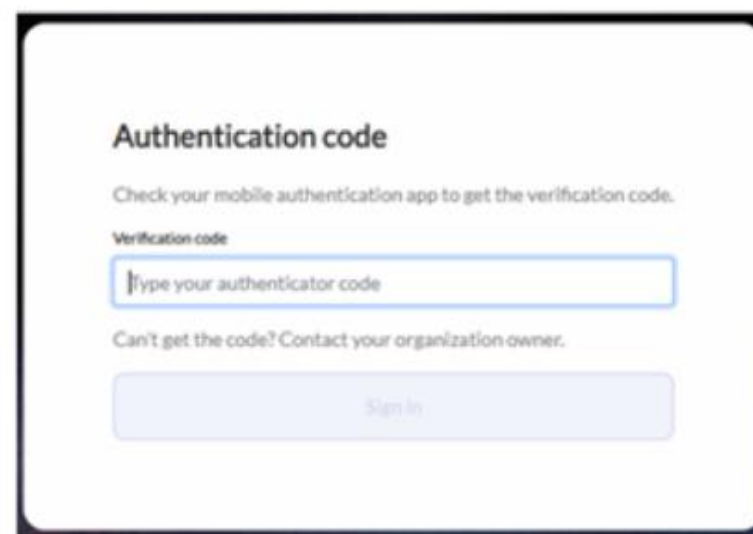


The image shows the 'Authentication code' screen of the Lenovo XClarity One web application. It features the heading 'Authentication code' followed by the instruction 'Check your mobile authentication app to get the verification code.'. Below this is a 'Verification code' section with a text input field containing the placeholder 'Type your authenticator code'. Underneath the input field is a link 'Can't get the code? Contact your organization owner.'. At the bottom, there is a 'Sign in' button.

Selecting an organization

- Users who are only part of one organization will be redirected to the organization dashboard.
- Users who are part of multiple organizations will have to select an organization after logging in. At this stage, users will also see whether any organization they belong to have a critical or warning health status.
- Users are able to switch organizations at any time by using a drop-down menu at the top of the screen.

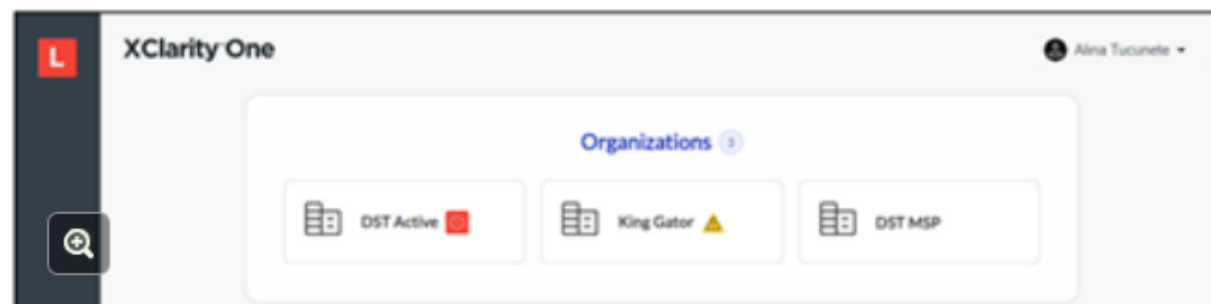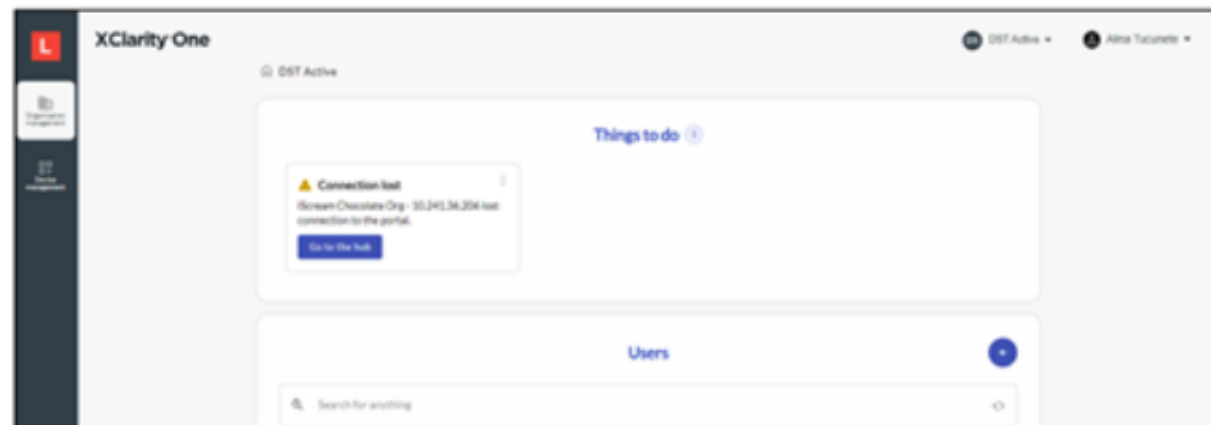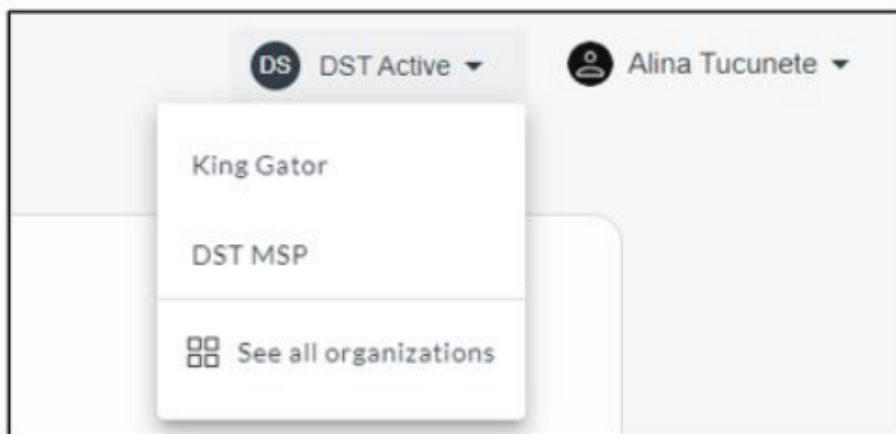

XClarity One main menu overview

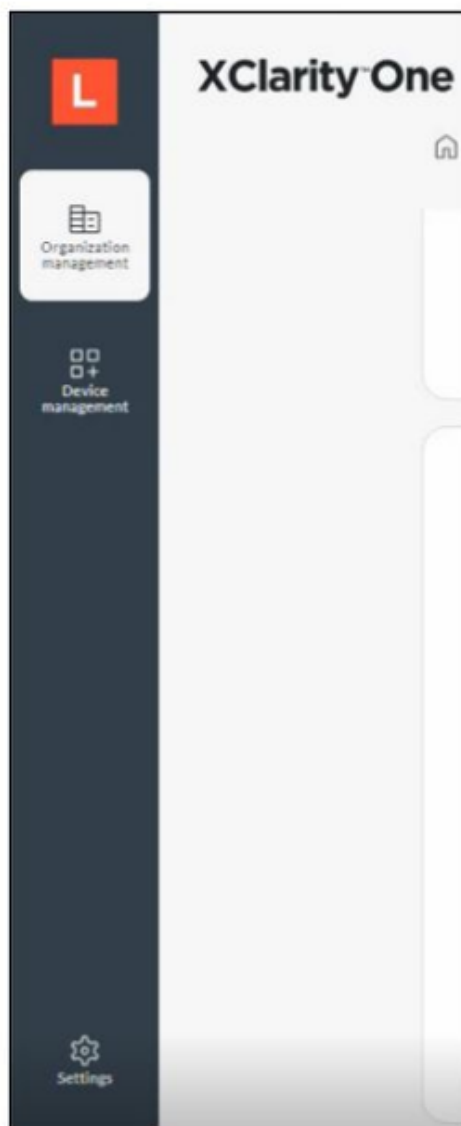

The main XClarity One menu is displayed on the left of the screen.

- **Organization management:** allows users to manage user accounts and hubs added to their organization – only device administrators can see the hubs
- **Device management:** allows users to monitor and manage devices
- **Settings:** allows users to modify organization details – only device administrators can see the data, and only the organization owner can update the data

Organization management dashboard overview

The dashboard has three panels:

- **Things to do**
- **Users:** Only user administrators can use this panel
- **Management hubs:** Hub administrators can use this panel to go to individual hub pages

The screenshot displays the XClarity One dashboard interface. At the top, the header shows 'XClarity One' and a user profile for 'Alina Tutunets'. The left sidebar contains navigation icons for 'Organization management' and 'Device management'. The main content area is divided into three panels:

- Things to do:** Contains a 'Connection test' notification for 'Screen Chassis Org - 10.241.16.206' with a 'Go to the hub' button.
- Users:** A table listing users. The first user is 'Alina Tutunets' with email 'alutunets@lenovo.com', roles of 'User administrator', 'Hub administrator', and 'Device administrator', and a last activity of '5 minutes ago'.
- Management hubs:** A table listing management hubs. The first hub is 'My_Hub' with IP '10.241.16.206', status 'Offline', 0 managed devices, location 'India', and service 'Device management'. The second hub is 'TestHub1' with IP '10.241.16.206', status 'Online', 0 managed devices, location 'Bartolito', and service 'Device management'.

At the bottom left, there is a 'Settings' icon.

Management hub overview

After selecting a hub on the dashboard, hub administrators can see the following information displayed:

- Details about the hub such as status, IP address, version, last connectivity
- Devices managed by this hub
- Devices discovered by this hub

If the user is also a device administrator, they will also be able to manage the devices on this page.

The screenshot shows the XClarity One Management Hub interface. The top navigation bar includes the XClarity One logo and user information (DST Active, Admin Tutorial). The main content area is divided into several sections:


- Things to do:** A notification card titled "Connection test" indicating a successful connection to the portal, with a "Go to the hub" button.
- Status:** A card showing "Hub details" with a "Health status" indicator (red square) and the name "My_Hub". A "Go to the hub" link is at the bottom.
- Details:** A card displaying key information:
 - IP address: 10.241.34.204
 - Location: India
 - Version: 1.0.0
 - Connected: 09/29/2024 - 16:17
 - Service: Device management
- Managed Devices:** A section indicating "There are no managed devices."
- Unmanaged Devices:** A section with a search bar and a table of discovered devices.

	Device	IP address	Serial number	Product
☐	Akoya-0R030-Q-04.130	10.241.34.130 See more	0U00007103	7270-78L02
☐	Anany-0R030-Q-04.130	10.241.34.131 See more	1234567890	7270-A000W
☐	BonaEdge-08x00-04.130	10.241.34.134 See more	1234567890	7045-C700W

Device management overview

By selecting **Device management** on the left, users can complete the following tasks:

- Manage devices and collections
- Monitor alerts, vulnerabilities, service tickets, events, and jobs
- Update firmware

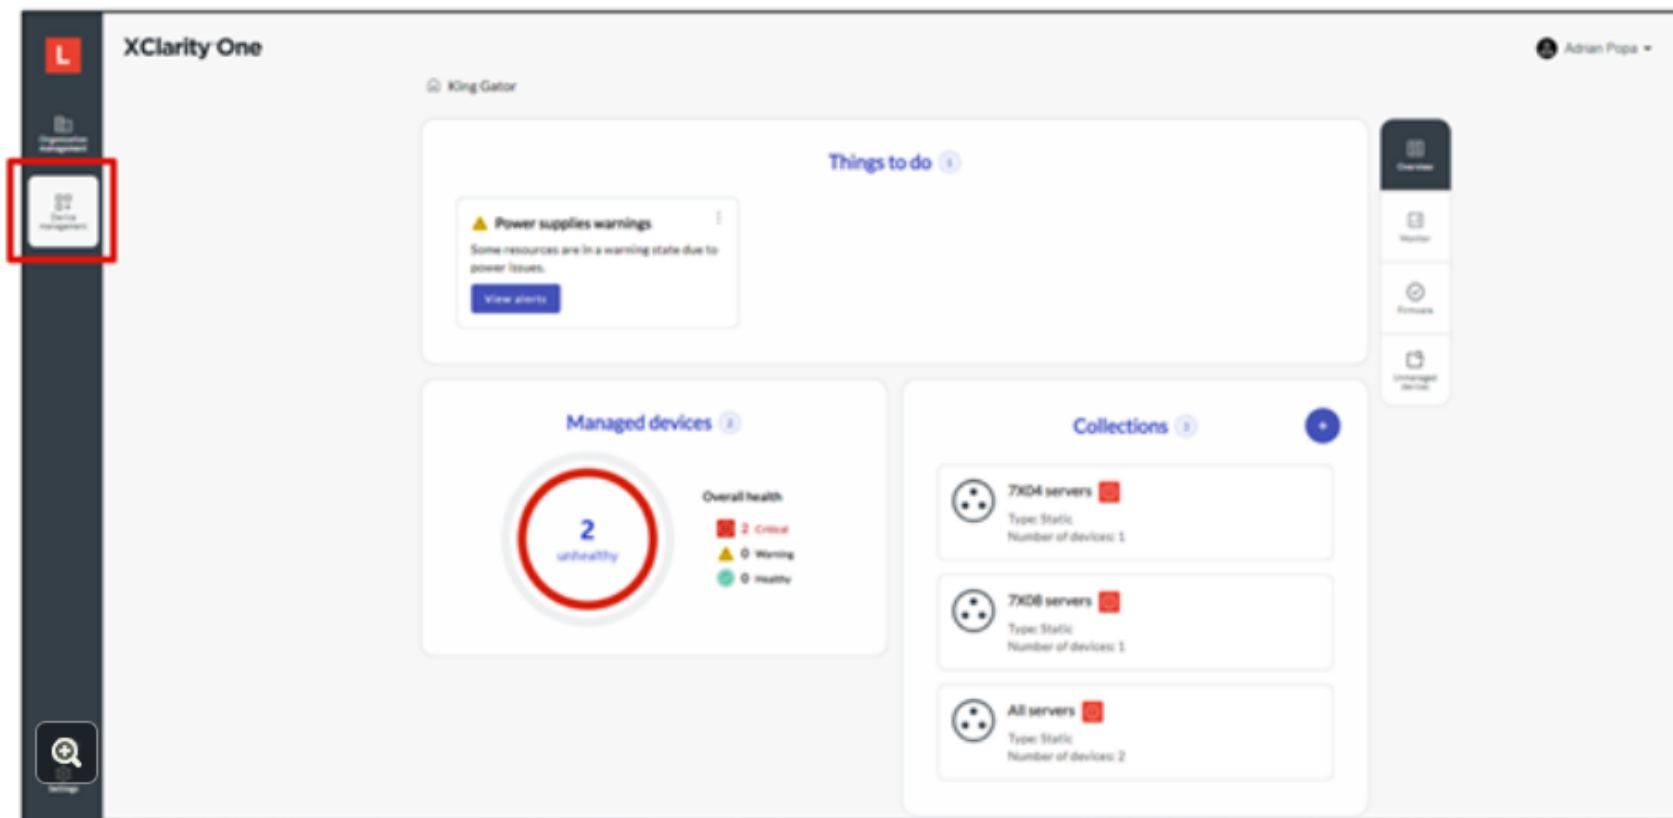

Managed devices overview

On the **Managed devices** page, users can see the devices managed by their organization and also check details about them, including the name, IP address, health status, product and collections they're a part of, and the hub that manages them.

Managed devices

☐	Name / IP	Status	Product	Collections
☐	Constantine-SR530-31.29 10.241.31.29		ThinkSystem SR530 7X08 CTO1WW	7X08 servers All servers
☐	Carnage-SR550-31.23 10.241.31.23		ThinkSystem SR550 7X04 CTO1WW	7X04 servers All servers

0 selected

Items displayed 10  1 - 2 of 2  



 Overview

 Management

 Firmware status

 Vulnerabilities

 Warranty information