


Provisioning

Device firmware upgrades

Lenovo

Firmware updates

To update firmware, select one or more devices on the **Managed devices** page. This will enable the update action button , which opens the firmware update wizard. The same wizard can be also opened on a device's **Firmware inventory** page. For an overview, refer to the [Firmware inventory](#) slide.

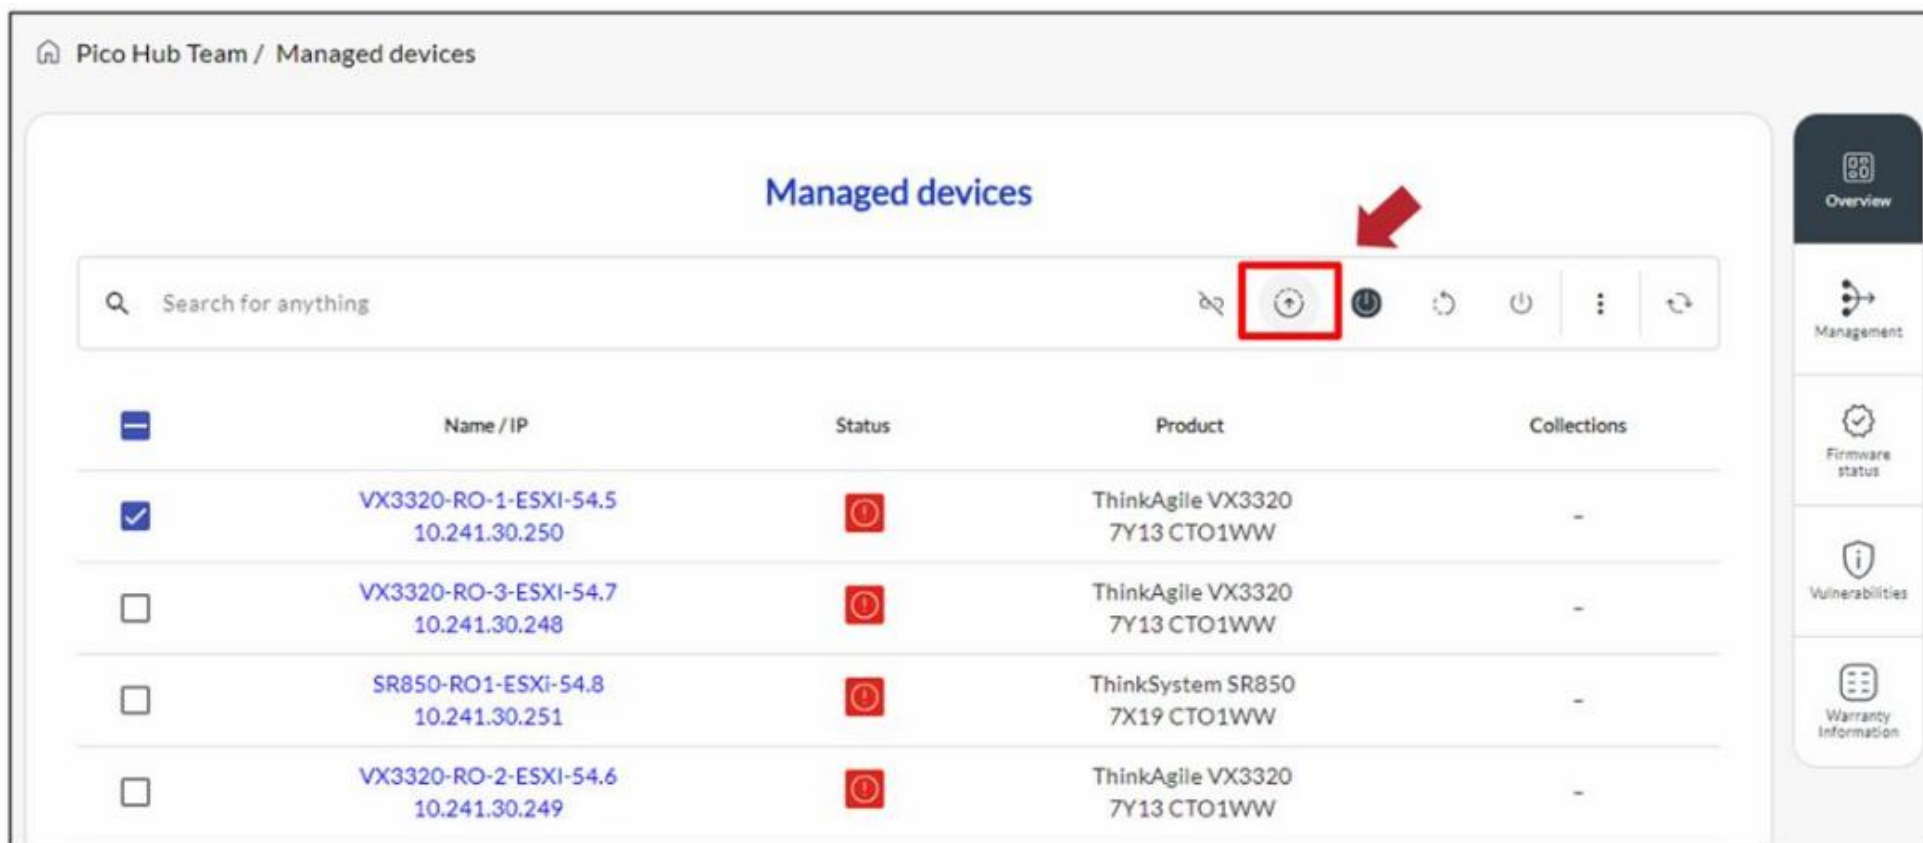

Pico Hub Team / Managed devices

Managed devices

Search for anything

	Name / IP	Status	Product	Collections
☒	VX3320-RO-1-ESXI-54.5 10.241.30.250		ThinkAgile VX3320 7Y13 CTO1WW	-
☐	VX3320-RO-3-ESXI-54.7 10.241.30.248		ThinkAgile VX3320 7Y13 CTO1WW	-
☐	SR850-RO1-ESXI-54.8 10.241.30.251		ThinkSystem SR850 7X19 CTO1WW	-
☐	VX3320-RO-2-ESXI-54.6 10.241.30.249		ThinkAgile VX3320 7Y13 CTO1WW	-

Overview
Management
Firmware status
Vulnerabilities
Warranty information

Firmware update procedure

Work through the following steps to update device firmware through XClarity One:

Click each number in turn to see the procedure.

Step



Firmware update procedure


Step 1. On the **Managed devices** page, select the devices that require a firmware update. Then, click the  icon to start the process.

Managed devices

	Name / IP	Status	Product	Versions	Vulnerabilities fixed by version
☒	VX3320-RO-1-ESXI-54.5 10.241.30.250		ThinkAgile VX3320 7Y13 CTO1WW	 XClarity Controller: 9.87  XClar...ckup): 7.80  Unifi...rface: 4.11 See more	0

Step



Firmware update procedure

Step 2: Select a default update rule.

Several options are provided:

- **Don't apply a default rule**
- **By tagged version** – There is currently only one tag in the drop-down menu
 - **Latest version:** The firmware on the device is compared with the latest firmware version available in the firmware-updates repository
- **By template** – Update the firmware using the template assigned to the device or without an assigned template
- **By template set** – Not currently available

The screenshot shows a web interface for configuring device updates. On the left, under 'Update devices', there are four radio button options: 'Devices to update' (selected), 'Default update rule', 'Custom update rules', and 'Confirmation'. The main area is titled 'Default update rule' and contains the instruction: 'Select the default update rule to use for updating all devices. You can select specific rules for each device and each type of firmware in the next step.' Below this, there are four radio button options: 'Don't apply a default rule' (selected), 'By version', 'By template', and 'By template set'. The 'By version' option has a sub-section with the text 'Firmware that is currently installed on devices is compared to the selected level of firmware available in the catalog.' and a dropdown menu currently showing 'Latest version'. The 'By template' and 'By template set' options have a yellow 'Coming soon' button to their right. At the bottom, there are 'Cancel', 'Back', and 'Next' buttons.

Step



Firmware update procedure

Step 3. If necessary, select custom update rules for individual devices and components.

The screenshot shows the 'Custom update rules' section of a provisioning interface. On the left, under 'Update devices', there are four radio buttons: 'Devices to update' (checked), 'Default update rule' (checked), 'Custom update rules' (selected), and 'Confirmation' (unchecked). The main area is titled 'Custom update rules' and contains a search bar with the placeholder 'Search for anything'. Below the search bar is a table with two columns: 'Firmware collection' and 'Rule'. The first row shows 'ThinkAgile VX3320/VX3320' under the 'Firmware collection' column and a dropdown menu under the 'Rule' column. The dropdown menu is open, showing three options: 'Don't update', 'Latest version', and 'Don't update' (with a checkmark). The text 'Items displayed: 10' is visible to the right of the table. At the bottom of the interface, there are three buttons: 'Cancel', 'Back', and 'Next'.

Firmware collection	Rule
ThinkAgile VX3320/VX3320	Don't update


Items displayed: 10

Step



Firmware update procedure

Step 4. Click **Start update** to confirm your selections and start the job. A pop-up window with a progress bar will be displayed.

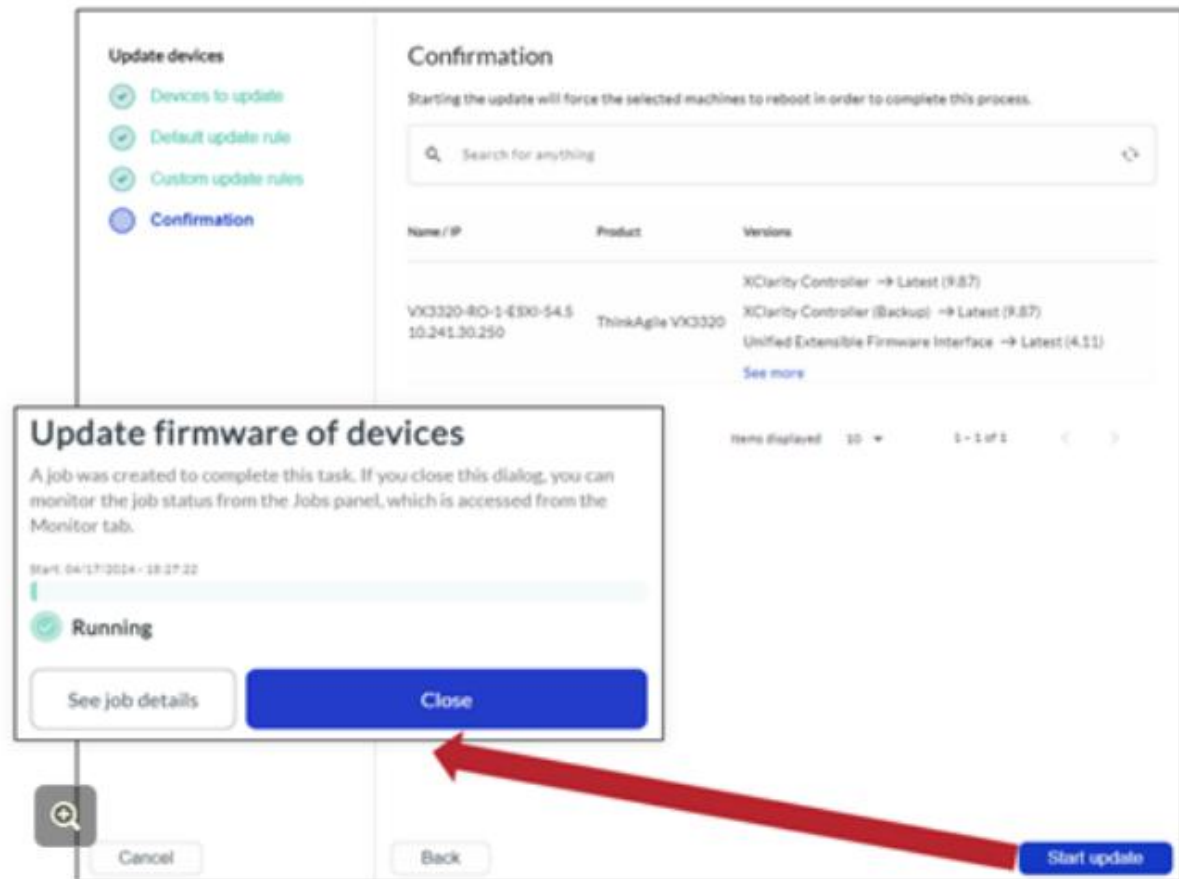

Step




Firmware inventory

For an overview of the firmware running on their organization's devices, users can access the **Firmware inventory** page from the dashboard context menu.

This page shows a tree-view of the platforms with their respective components and firmware versions.

It also shows the number of devices using different firmware versions and the number of vulnerabilities those versions fixed.

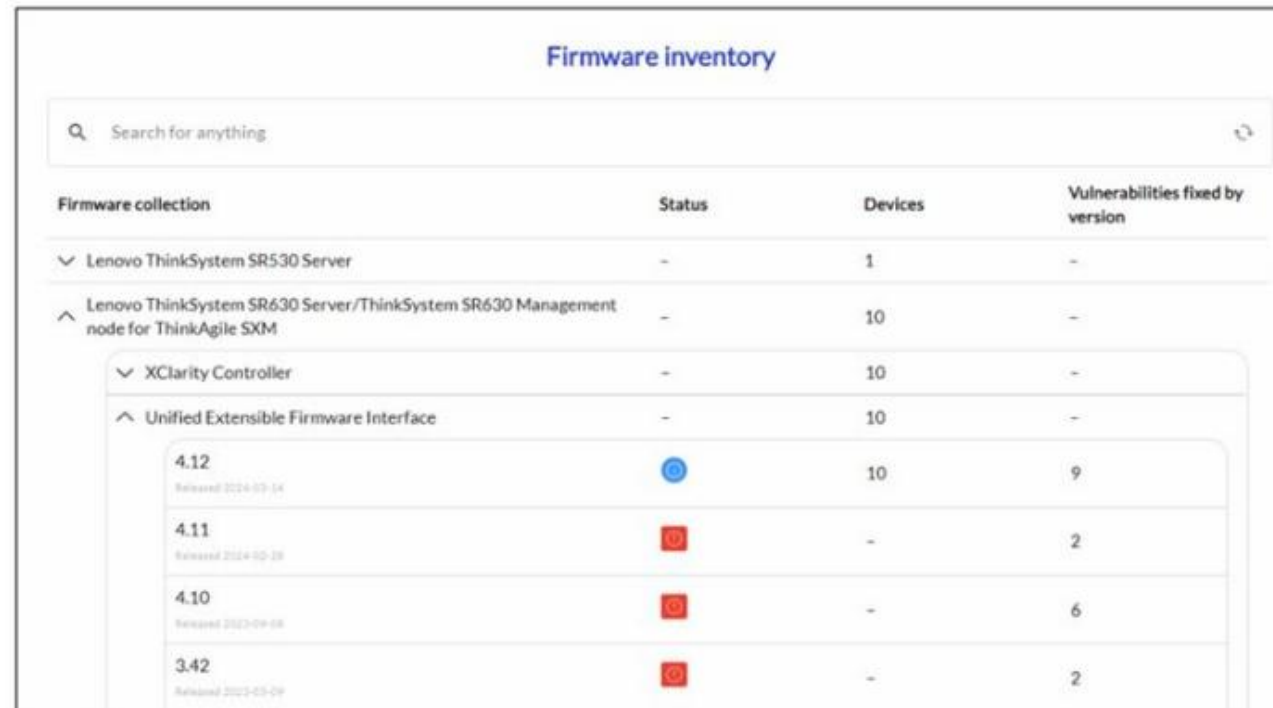


The screenshot displays the 'Firmware inventory' page. At the top, there is a search bar with the placeholder text 'Search for anything'. Below the search bar is a table with four columns: 'Firmware collection', 'Status', 'Devices', and 'Vulnerabilities fixed by version'. The table is organized into a tree-view structure. The first level shows 'Lenovo ThinkSystem SR530 Server' and 'Lenovo ThinkSystem SR630 Server/ThinkSystem SR630 Management node for ThinkAgile SXM'. The second level, under the SR630 node, shows 'XClarity Controller' and 'Unified Extensible Firmware Interface'. The third level, under the UEFI node, shows four firmware versions: 4.12, 4.11, 4.10, and 3.42. Each version row includes a status icon (blue circle for 4.12, red square with a white 'X' for 4.11, 4.10, and 3.42), the number of devices, and the number of vulnerabilities fixed by that version.

Firmware collection	Status	Devices	Vulnerabilities fixed by version
▼ Lenovo ThinkSystem SR530 Server	-	1	-
^ Lenovo ThinkSystem SR630 Server/ThinkSystem SR630 Management node for ThinkAgile SXM	-	10	-
▼ XClarity Controller	-	10	-
^ Unified Extensible Firmware Interface	-	10	-
4.12 Released 2024-03-14		10	9
4.11 Released 2024-02-28		-	2
4.10 Released 2023-09-08		-	6
3.42 Released 2023-03-09		-	2

Templates

Templates consist of a set of rules and criteria that define the desired configuration for a certain type of server and identifies which managed servers are monitored for compliance. The Templates page is under the Firmware inventory tab on the Device Management page. Users can see the **Templates** tab in the context menu on the right-hand side of the screen. If a server is out of compliance, you can use the templates to update the server to match the desired profile. Users can view template details, criteria, and assigned devices by clicking the template name in the table.

Click here to create a new template

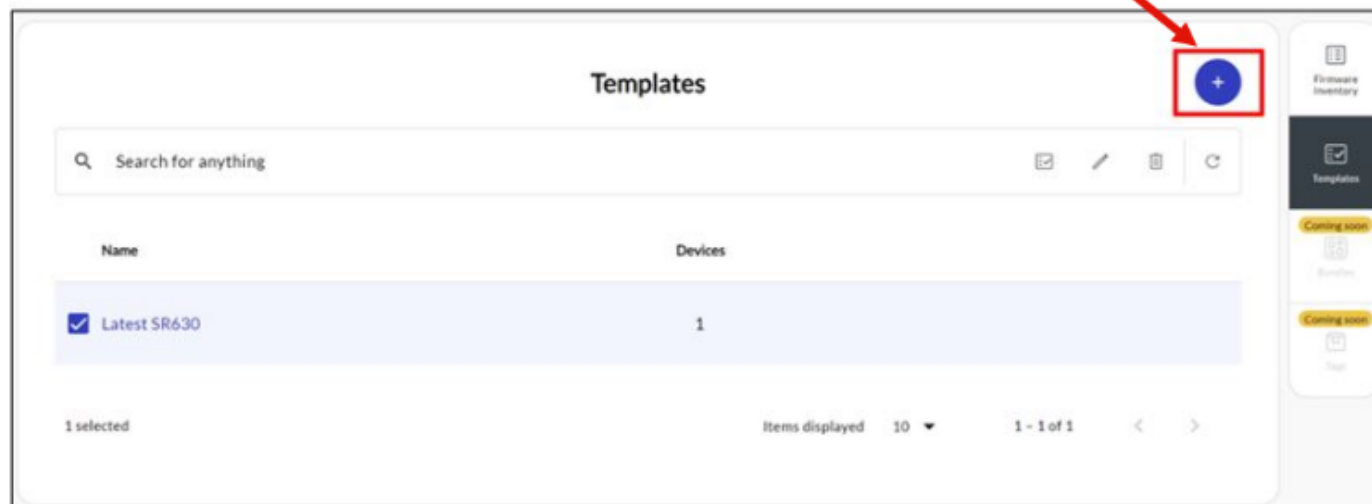

Creating a template

To create a template, users should click the add icon (+). Follow the steps in the wizard to create the template.

- Give a name and description to the template.
- Select a rule and version for the template.
- Assign the template to one or more devices.
- Click **Create template**.

Note: XClarity One will check the compliance status of devices by comparing the device profile with the rules that are defined by its assigned template. The compliance check is run on a device when:

- A template is initially assigned to a device
- An assigned template is modified
- The server inventory changes

Note: After a template has been created, users can update firmware based on the template.

