

TeleCon4ESP32 Fast Guide

First session: Default + Classic Simple

Phone and ESP32 DevKit — about ten minutes

Full walkthrough: User Guide PDF

Version 1.0 2026

Abstract

Get a stick moving on **Control panel** with Bluetooth Classic Simple. No Pro, no coins, no camera. The full User Guide covers RC Vehicle, Wi-Fi, and troubleshooting.

Default user	Classic Simple	Control panel — free
--------------	----------------	----------------------

1 You need

- Android phone with TeleCon4ESP32.
- ESP32 DevKit (no camera), USB cable, Arduino IDE.

2 Flash the board

Open the folder that contains `TeleCon_Classic_Simple.ino`. Tools → Board → **ESP32 Dev Module**. Select the USB port. Upload. Serial Monitor **115200**. Press RESET. Wait for the ready banner. The board advertises **ESP32-TC-RC-BT-Simple**.

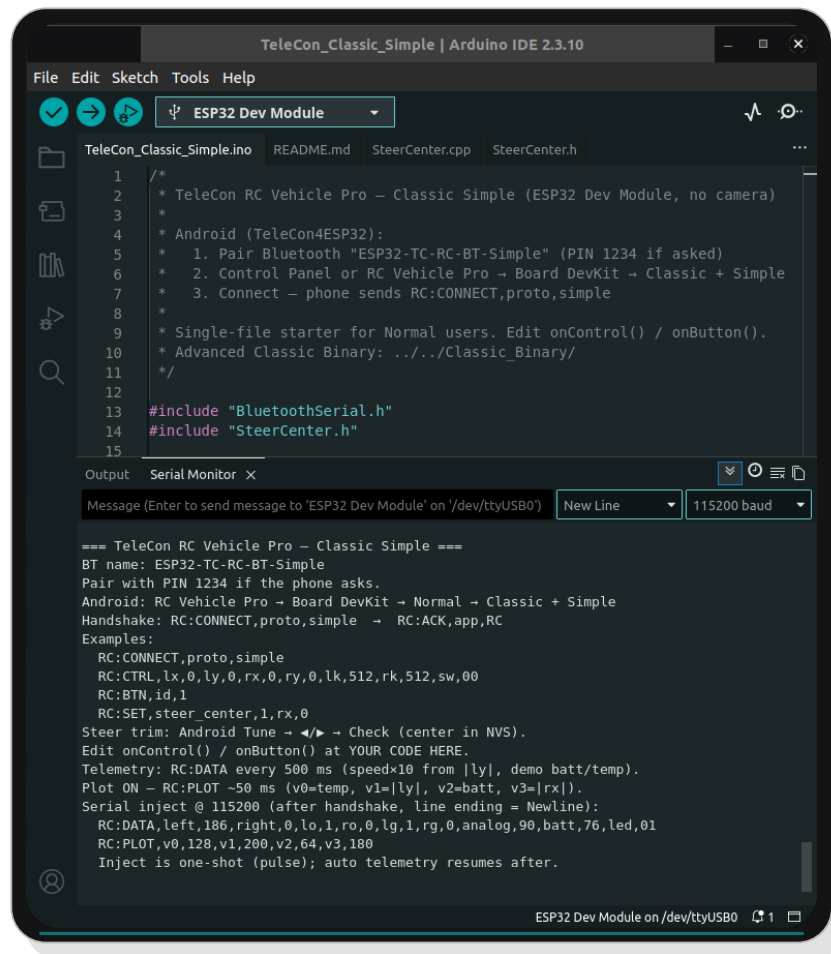


Figure 1: **S01**. Serial at 115200 after RESET. Ready banner visible.

Computer, Arduino IDE Serial Monitor ▪ s01_serial.png

3 Phone settings

Grant Nearby devices / Bluetooth when Android asks. Open **Control panel** → gear:

Setting	Value
User type	Default
Board	DevKit
Connection	Bluetooth, Classic + Simple (text lines)

Leave settings. Tap Bluetooth on the module toolbar. Scan. Tap the advertised name ESP32-TC-RC-BT-Simple (PIN 1234 if asked). Status must show **Connected**.

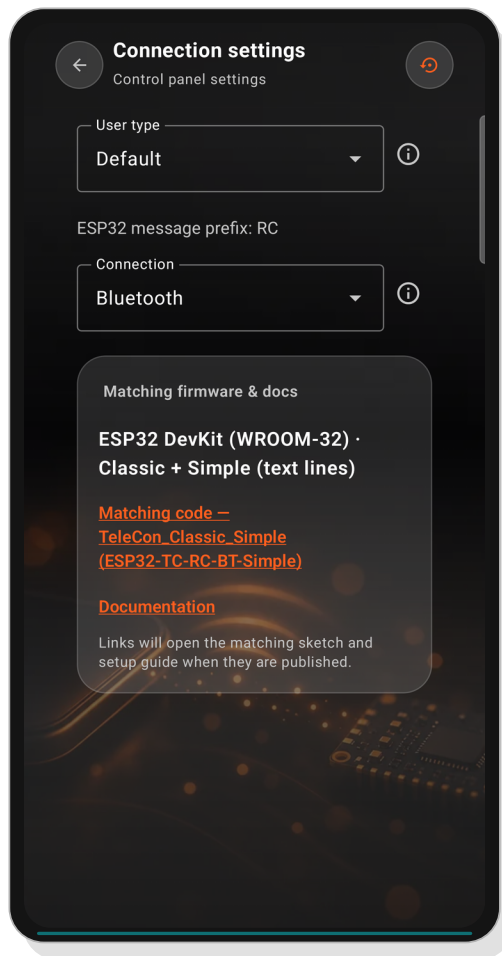


Figure 2: **S02.** Control panel settings: Default + Classic + Simple (text lines). English UI.

Portrait, light theme ■ s02_settings.png

Screenshot S03

s03_scan.png

Portrait, Bluetooth scan

ESP32-TC-RC-BT-Simple in Scanned Devices. English UI.

Save as General_Documentation/figures/s03_scan.png.

4 Move a stick

Open **Control panel** (landscape). Drag the left stick. Until the board answers OK, on-screen motion is not a live session — even if Android says Bluetooth is connected. On the bench, official firmware echoes or updates gauges without motors.

Treat sticks as live once **Connected** is shown. Official sketches fail-safe on drop (sticks to 0).

5 If it fails

Power + RESET. Nearby devices allowed. Mode matches this sketch (not BLE, not Binary). Forget a stale Android bond and scan again. Full table: User Guide PDF.

6 Next

- User Guide PDF — Home, RC Vehicle, camera roles, troubleshooting.
- Sketch `README.md` — pins, motors, trim.
- Stay off Advanced until this path works.