


820-0232 – Install Instructions Main Blower (P/N: 205-0121-04) GE P/N: 5156315

Tools Required:

- Hoist Assembly (P/N: 205-0121-17)
- Flat bladed screwdriver
- 1/2" wrench or slip wrench

Removal Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Install Hoist Assembly (P/N: 205-0121-17)
4. Remove Electrical Box cover by loosening 4 thumb screws (Refer to photo 1).

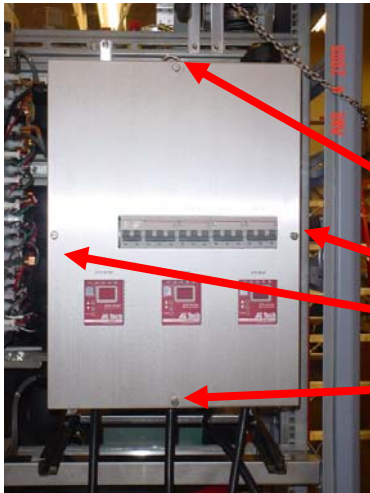


Loosen these 4 thumbscrews

Photo 1 Electrical Box exterior

5. Remove leads U, V, and W as well as GND connection from Blower Variable Frequency Drive (VFD) (Refer to Photo 2).

CAUTION: OBSERVE PROPER SAFETY PROCEDURES WHEN INSIDE THE ELECTRICAL CABINET. HIGH VOLTAGE IS PRESENT WHEN COVER IS REMOVED.

6. Remove Blower power cable from bottom of Electrical Box.
7. Remove the following cable from the connectors at the Signal Box:
 - a. P1 115v Power to the PLC
 - b. P2 DI Kit
 - c. P19 GPMP (GC Pump) VFD
 - d. P20 PPMP (PE Pump) VFD
 - e. P7 Blower VFD

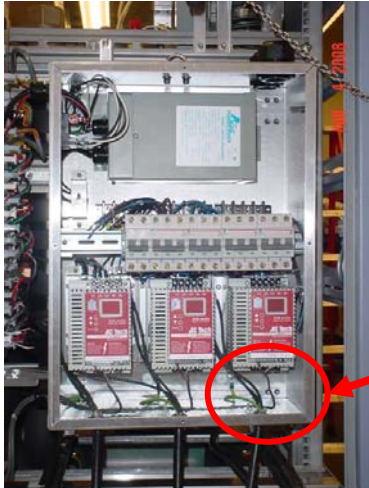

Leads U, V, and W as well as GND

Photo 2

8. Pull Electrical Box forward by loosening 2 thumb screws to the left of the cabinet (top and bottom) securing it to the frame.
9. Pull forward and swing out of the way to the right.
10. Remove supply and return air hoses by loosening worm gear clamps with 1/4 " nut driver or regular flat blade screwdriver. Carefully move hoses out of the way in order to facilitate blower removal.

CAUTION: Care should be taken when removing hoses. The hoses are easily torn.

11. Coil power cord into 6" coils and attach to blower using tie wraps.
12. Loosen 2 thumbscrews securing blower plate to frame.
13. Slide out blower until it stops on the rails. Be careful that the blower hoist lift bracket does not damage the removed air hoses.
14. Attach hoist chain eyelet to Blower lifting bracket.


CAUTION: Ensure hoist ratchet handle is selected to "UP" position.

15. Take out slack from lift chain.
16. Remove the 1/2" bolts, lock washers, and flat washers that secure Blower to frame. Use a 1/2" wrench or socket.
17. Raise Blower using hoist. Ratchet in the "UP" direction using handle until the Blower clears its' mounting tray.
18. Push mounting tray in toward the rear of the chiller.
19. Put Hoist ratchet in the "DOWN" position and lower the Blower to a cart or pallet.
20. Disconnect hoist chain eyelet from Blower.

End of Procedure

Installation of Blower:

1. Place Blower close to front of cabinet.
2. Attach Hoist chain eyelet to Blower lift bracket.
3. Place Hoist ratchet in the "UP" position.
4. Lift Blower steadily to a height above the mounting tray.
5. Pull mounting tray forward.
6. Lower Blower onto tray and align with bolt holes.
7. Use a 1/2" wrench or socket to tighten 4 bolts, lock washers, and flat washers that secure Blower to mounting tray.
8. Push Blower and tray toward back of machine and lock into position with 2 thumbscrews in the front.
9. Ensure power leads are uncoiled from the Blower and ready to attach to the Variable Frequency Drive (VFD).
10. Connect supply and return air hoses to the Blower. Be careful not to tear the hoses as they are delicate. Tighten with flat bladed screwdriver.
11. Swing Electrical Box to the left and secure with 2 thumbscrews on the top and bottom of the Electrical Box.
12. Route the power cable for the Blower to the appropriate VFD and wire as follows:

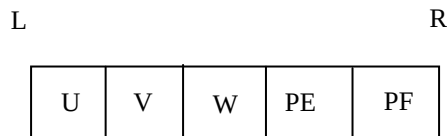

13. Reattach the following cables at the connectors on the Signal Box:

- a. P1 115v Power to the PLC
- b. P2 DI Kit
- c. P19 GPMP (GC Pump) VFD
- d. P20 PPMP (PE Pump) VFD
- e. P7 Blower VFD

End of Procedure

