

820-0295 – Install Instructions for Cryo Fitting Kit GE PN 5357155

Tools Required:

- Cryo Fitting Kit (5357155)
 - o Kit Includes
 - Fitting
 - Teflon[™] tape
 - Wrench
 - Insulating tape
 - Install Instructions

Removal of Installed Fittings

Procedure:


1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Shut off Facility water Supply at the top of the unit. Drain Facility water per GE procedures.

Note: Before shutting off the facility water supply, check with the facility maintenance to determine what measures are needed. The goal is to prevent dead head of pumps or other possible issues.

4. Disconnect cryo hoses from the HEC by loosening and disconnecting them at the swivel flare fitting.

CAUTION: There may be residual coolant in the lines, which may drip out during removal. Any coolant that escapes should be cleaned up with an absorbent towel.

5. Using a utility knife, cut away the black insulating covering around the fitting (see Illustration 1).
6. Using the pipe wrench supplied in the FRU kit to hold the pipe, loosen and remove the installed cryo fittings with an adjustable wrench. (See Illustration 2)

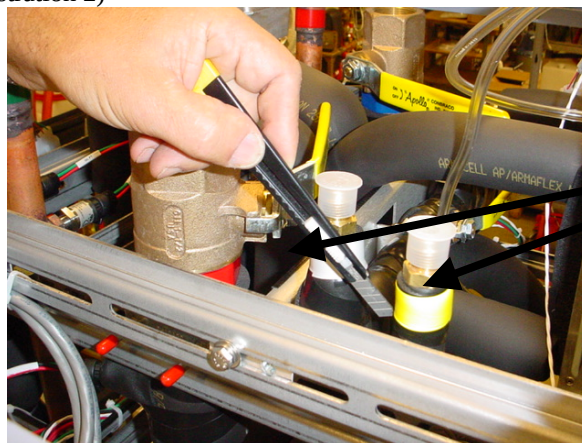

Cut away
insulation here

Illustration 1 Detail of Removing Insulation around fitting.

Place pipe wrench
here.



Illustration 2

Detail of Removing Fittings

Installation of Cryo Fitting Kit

1. Clear threads of tubes prior to cryo fitting installation.
2. Wrap threads with 2 turns of Teflon™ tape prior to installation of fittings.
3. Screw fitting onto pipe until finger tight.
4. Using the pipe wrench supplied in the FRU kit to keep the base from moving, tighten the fitting over the Teflon™ tape until finger tight and then 2-3 turns past finger tight.
5. Tape around the black insulating tape to secure the insulation.
6. Reconnect the cryo compressor hoses at top of HEC by tightening the female flare fitting onto the newly installed male flare cryo fitting. Hold the male cryo fitting with a wrench while tightening. Tighten female flare to finger tight and then ¼ turn past finger tight.
7. Open the Facility water Supply by opening valves on top of the system. Check for leaks before proceeding.
8. Check for any leakage around fittings just installed and correct before proceeding.
9. Replace insulating tape around joint.
10. Return system to operation.

Note: Pipe wrench is magnetic and a consumable. For safety reasons, it should be discarded once procedure is complete.