

SECTION 2 – SYSTEM CABLES

2-1 LOCATING AND UNPACKING CABLES

This section assumes Signa MR/i System and options are delivered complete with all cables present.

Many of the cables are common to both the 9.x , 10.x (EXCITE I) and 11.x (EXCITE II) System. The cables that are specific to 9.x, 10.x, or 11.x installation are designated in the applicable cable maps and in the first column of the following tables as:

- * Cable used on 9.x installation only
- ** Cable used on 10.x installation only
- *** Cable used on 11.x (EXCITE II) installation only

Cables shipment containers have color coded labels which identify the cable routing areas:

- Green – Equipment Room
- Purple – Operator's Room
- Orange – Magnet Room
- Yellow – Post-installation (Phatoms, Coils)



Ty-wraps must be cut flush with no protruding sharp edges or points. Failure to do so can result in numerous laceration hazards when servicing the equipment.

The table below provides definitions for the following cable tables.

COLUMN HEADING	DESCRIPTION	SPECIAL NOTES
RUN	The run number as seen on the delivered cable	The vendor cable may not have run numbers.
"FROM" & "TO"	Labels the destination of the cable	
DESCRIPTION	Could include information on length, number of conductors, type of cable, and end plug type	Total length of cable delivered to site, type of cable specifies power from data.
CABLE TYPE	Type designation for the cable	
VOLTAGE RATING	The highest voltage that may be continuously applied to a wire	Specific to the core cable manufacturer given.
ACTUAL VOLTAGE	Nominal for continuous; maximum for variable voltage	If voltage varies during use, the maximum is given.
TEMP RATING	Maximum temperature insulating material may be used without loss of basic properties	Specific to the core cable manufacturer given.
FLAME RATING	Measure of material's ability to support combustion	Specific to the core cable manufacturer given.
REMARKS	Describe the cable's use in the MR system	

2-1 LOCATING AND UNPACKING CABLES (continued)

1. Unpack magnet room cables from the GE Magnet accessory box(s) and move them into the magnet or equipment room for routing. The shield cooler runs should have been installed previously when magnet was delivered.
 - a. For magnet and equipment room standard runs delivered with GE Magnet, refer to Table 2-3.
2. Unpack and move power and ground cable boxes to the PDU area where they will be routed. Set Run 040, 044, and 045 aside. Power and ground cables are listed in Table 2-1.
 - a. Move Run 040 and 045 Ground Cables into magnet room. Refer to Table 2-1.

TABLE 2-1
PDU POWER AND GROUND CABLES

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
037	PD1 GND	MR2 A12 GND	36 ft Ground Wire (#10)	SO	600	0	105	VW-1	MR2 "permanent" (UL) ground
038	PD1 A2 A2	MR1 A7 GND	31 ft Ground Wire (#10)	SO	600	0	105	VW-1	SRF Cabinet ground
040	MSI	RF COM GND	69 ft Ground Wire (#1/0)	SO	600	208Y	105	VW-1	Magnet Ground Cable
044	PP1 GND	MR1 A7 GND	31 ft Ground Wire (#10)	SO	600	0	105	VW-1	RF Cabinet Separate ground
045	PP1 GND	MG6 GND	41 ft Ground Wire (#10)	SO	600	0	105	VW-1	Blower Cabinet Separate ground
048 * **	PD1 GND	OW1 A2 A5 GND	51 ft Ground Wire (#10/1)	SO	600	0	105	VW-1	Operator Workspace Cabinet ground
049 * **	OW1 A1 A1	OW1 A2 A5 J2	Power Cord	STO	600	120	90	VW-1	Operator Workspace Table to OW Cabinet
966	MR1 A7 J1	MR3 PD1	35 ft Power (5-#8)	SO	600	208Y	75	FT-4	ACGD SSM Module Power
967	MR1 CB1	MR3 PD1	35.5 ft Power (4-#8)	SO	600	208	90	FT-4	ACGD SRF Cabinet Power
968	MR1 A12 J1	MR3 PD1	35 ft Power (5-#8)	SO	600	208Y	75	FT-4	ACGD System Cabinet Power
969 * **	OW1 A2 A5 J1	MR3 PD1	65.5 ft Power (4-#10)	SO	600	120	75	FT-4	ACGD Operator Workspace Cabinet Power
970	WC1	MR3 PD1	82 ft Power (3-#10)	STO	600	208	90	FT-4	ACGD Water Chiller Power
973	HE1	MR3 PD1	82 ft Power (3-#12)	SO	600	208	75	FT-4	ACGD Heat Exchanger Power
1081 ***	OW1 A19 J1	MR3 PD1	65.5 ft Power (4-#10)	SO	600	120	75	FT-4	Operator Workspace Power
N/A	PD1 MAG/SHIM OUTLET	MAG/SHIM POWER SUPPLY	50 ft Power (5-#8) With 30A Plug and Receptacle						Cable for Compact PDU to GE Magnet Power Supply or SC Shim Supply Power

2-1 LOCATING AND UNPACKING CABLES (continued)

3. Unpack and move fixed site magnet room interconnect cables to magnet room. Refer to Table 2-2.
 - a. Locate Body Coil RF input Cables (ship with Body Coil) and move cables to magnet room.
 - b. Runs 404, 414, 421, 422, 485, and 749 are shipped with the Magnet Enclosure.
 - c. Move gradient cables into magnet room. Gradient installation instructions are located in Tab 1.

TABLE 2-2
MAGNET ROOM RUNS (NOT CUT TO LENGTH)

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
262	PP1 J8	MG3 A3 A5 OUT	45 ft. RG223/U Coax	CMX	1900 VRMS	<30	80	VW-1	Body Coil receive
282	PP1 J12	MG3 A2 J6	45 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Patient Intercom
297	PP1 J18	EO1	90 ft. 9 pin Sub-D	CI3	300	<30	80	FT-4	Emergency off switch
300	PP1 J15	MG2 A15	60 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Bore Light power
318	PP1 J11	MG3 A7	45 ft. 9 pin Sub-D	CI3	300	38.5 VDC	80	FT-4	Long Drive Motor power
385	PP1 J20	MG2 A30	67 ft. 37 pin Sub-D	CI3	300	<30	80	FT-4	Patient Alignment Light power
387	PP1 J47	MG2 A29 J1	60 ft. 25 pin Sub-D	CI3	300	38.5 VDC	80	FT-4	Table Elevation motor power
404	MG3 A17 J1	MG2 A16 A5 J6	13.67 ft. RG58/U Coax	CI2	1900 VRMS	<30	80	VW-1	Head transmit cable take up
414	MG3 A35	MG3 A2 J9	30 ft. 9-pin Sub-D	CI3	300	<30	80	FT-4	Front Cover Microphone
421	MG2 A33 J1	MG3 A31 J1	15 ft. 15 pin Sub-D	CI3	300	<30	80	FT-4	Dock Limit
422	MG2 A33 J2	MG3 A1 J4	25 ft. 37 pin Sub-D	CI3	300	<30	80	FT-4	Long Drive Encoder/Limit Switch
458	PP1 J17	OM3	9 pin Sub-D	CI3	300	<30	80	FT-4	Optional Remote O2 Sensor
485*	MG3 A17 J2	MG2 A16 A3 OUT	13.67 ft. RG58/C Coax	CI2	1900 VRMS	<30	80	VW-1	Head receive cable take up
491	PP1-J80	MG3-A36-J7	80 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC2 Receive
492	PP1-J81	MG3-A36-J8	80 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC3 Receive
493	PP1-J82	MG3-A36-J9	80 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC4 Receive
494*	PP1-A14-J87	MG3-A36-J6	80 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC1 Receive
495*	PP1-A15-J78	MG3-A36-J10	80 ft. 15 Sub-D	CI3	300	<30	80	FT-4	Multi-coil Switching
700*	PP1 A14 J86	MG2/MG3 A17 J2	45 ft. RG223/U Coax	CMX	1900 VRMS	<30	80	VW-1	Head or Surface Coil receive
715	PP1 J14	MG2 A33 J1	65 ft. 37 pin Sub-D	CI3	300	<30	80	FT-4	SRI Power
716	PP1 J89	MG2 A11 A1 J2	65 ft. 15 pin Sub-D	CI3	300	<30	80	FT-4	PAC Power
727*	PP1-A16-J77	MG3-A36-J5	80 ft. 15 Sub-D	CI3	300	<30	80	FT-4	Multi-coil Bias
728	MG3 A36 J11	MG2 A16 OUT J1	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
729	MG3 A36 J12	MG2 A16 OUT J2	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
730	MG3 A36 J13	MG2 A16 OUT J3	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
731	MG3 A36 J14	MG2 A16 OUT J4	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
732	MG3 A36 J15	MG2 A16 OUT J5	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable

2-1 LOCATING AND UNPACKING CABLES (continued)

TABLE 2-2 (CONTINUED)
MAGNET ROOM RUNS (NOT CUT TO LENGTH)

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
733	MG3 A36 J16	MG2 A16 OUT J6	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
734	MG3 A36 J17	MG2 A16 OUT J7	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
735	MG3 A36 J18	MG2 A16 OUT J8	13.67 ft. BNC	CI2	500 VRMS	<30	200	VW-1	RF Cable
736*	MG3 A36 J19	MG2 A16 A8 J9	12 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	RF Cable
743	MG2 A12 A1 J2	MG3 A3 A1 J3	10 ft Coax w/M&F "N"	STO	2500 VDC	950	85	VW-1	Body Coil Drive
744	MG2 A12 A1 J1	MG3 A3 A1 J4	10 ft Coax w/M&F "N"	STO	2500 VDC	950	85	VW-1	Body Coil Drive
749	MG2 A33 J10	MG2 A36	35 ft 3 cond w/ 9-Sub D	CI3	300	<30	105	FT-4	Bore Temperature Sensor
778	PP1 A11 J72	MG2 A12 A2 J3	70 ft. MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	Dynamic Disable (body coil frnt)
779	PP1 A11 J73	MG2 A12 A2 J4	70 ft. MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	Dynamic Disable (body coil frnt)
780	PP1 A11 J74	MG3 A3 A3 J6	60 ft. MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	Inductive Drive
781	PP1 A11 J75	MG2 A12 A2 J5	60 ft. MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	Dynamic Disable (body coil rear)
782	PP1 A11 J76	MG2 A12 A2 J6	60 ft. MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	Dynamic Disable (body coil rear)
784	PP1 F5, F6	MG6 J1	40 ft. 2 cond power cable	SO	600	120	80	FT-4	Patient cooling blower power
786	PP1 F7, F8	MG6 J2	40 ft. 2 cond power cable	SO	600	120	80	FT-4	Gradient cooling blower power
848	MG2 A11 J4	MG2 A4 J5	16 ft. 25 pin Sub-D/rt. angl	CI3	300	<30	80	FT-4	Operator Display to PAC II
861 * **	MG2 A4 J4	MG2 A33J5,6,7,8,9	20 ft 5/37 pin Sub-D/80 pin	CI2	300	<30	80	VW-1	Operator Display to SRI
862	MG2 A4 J1	MG2 A5 J1	2 ft. 26 pin Rt. angle	CI2	300	<30	80	VW-1	Operator Display to Rt. Op Cntrl
863	MG2 A4 J2	MG2 A5 J2	2 ft. 26 pin Rt. angle	CI2	300	<30	80	VW-1	Operator Display to Lt. Op Cntrl
893	MG3 A3 J2	MG3 A3 A5 INPUT	6.6 Inch BNC		1900 VRMS	<30	80	VW-1	Splitter to Preamp Cable
897	MG2 A4 J3	MG2 A33 J4	20 ft. 37 pin Sub-D/26 pin	CI3	300	<30	80	FT-4	Operator Display to SRI
1011 ***	MG2 A4 J4	MG2 A33 J5	20 ft. Data Cable (80-#28)	CI2	300	<30	80	VW-1	SRI Splitter to Oper Display
1035 ** / ***	MG2 A16 A3/A5 J4	MG3 A36 J21	40 ft. RG58/C Coax	CI2	1900 VRMS	<30	80	VW-1	Head or Surface Coil Receive
1036 *X / ***	PP1 J84	MG3 A36 J6	BNC	CMX	1900 VRMS	<30	80	VW-1	MC4 Receive
1037 ** / ***	PP1 J6	MG3 A36 J1	BNC	CMX	1900 VRMS	<30	80	VW-1	MC4 Receive
1038 ** / ***	PP1 J7	MG3 A36 J2	BNC	CMX	1900 VRMS	<30	80	VW-1	MC4 Receive
1039 ** / ***	PP1 J58	MG3 A36 J3	BNC	CMX	1900 VRMS	<30	80	VW-1	MC4 Receive
1040 ** / ***	PP1 J59	MG3 A36 J4	BNC	CMX	1900 VRMS	<30	80	VW-1	MC4 Receive

2-1 LOCATING AND UNPACKING CABLES (continued)

TABLE 2-2 (CONTINUED)
MAGNET ROOM RUNS (NOT CUT TO LENGTH)

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
1041 ** / ***	PP1 A15 J78	MG3 A36 J10	80 ft. 15 Sub-D	CI3	300	<30	80	FT-4	SRI Power
1042 ** / ***	PP1 A16 J77	MG3 A36 J5	80 ft. 15 Sub-D	CI3	300	<30	80	FT-4	CrossPoint/8 Channel SW Control Power Cable
1043 ** / ***	MG3 A8 J11	MG3 A5 J1	0.5ft Discrete Wires (13-#22)	CI3	300	<30	60	VW-1	Head T/R Power/Coil ID LED
1049 ** / ***	MG3 A36 J19	MG2 A16 A8 J9	12 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Multi-Coil Select Cable
1054 ***	MG3 A36 J20	MG2 A33 J15	Data Cable (9-#22)	CI3	300	<30	80	vw-1	MXA Signal Cable
1057 ***	PP1 J85	MG3 A8 J1	32 ft. R223/U Coax	CMX	1900 VRMS	<30	80	VW-1	UNTS Antenna

TABLE 2-3
GE MAGNET CABLES

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
601	MS8	MS1	Power Cable (#4/0)	SO	600	208	80	VW-1	Ramp cables, Power Assembly Positive 4/0
602	MS8	MS1	Power Cable (#4/0)	SO	600	208	80	VW-1	Ramp cables, Power Assembly Negative 4/0
603	MS7	MS1 A3 A1	Power Cable (#4/0)	SO	600	208	80	VW-1	Ramp and Shim Cable Assembly
604	MS7 or MS8	MS1 A3 A1	Data Cable (12-#22)	CI3	150	60 VDC	80	FT-4	Switch Heaters
605	MS1	MR2 A8	Data Cable (4-#22)	CI3	300	<30	105	FT-4	Instrumentation Cable, 80 feet
606	MS4	MS1 A3 A1	Data Cable (4-#22)	CI3	300	<30	105	FT-4	Emergency Run Down Unit
608	MS1	MR2 A8	Data Cable (4-#22)	CI3	300	<30	105	FT-4	Instrumentation Cable, 15 feet
609	MS7 OR MS8	PDU	Power Cable (5-#16)	SO	300	208Y	105	FT-4	Feeder Cables
621	MS5 A1	MS1 A2	7/8" Gas Flex Line	STO	N/A	N/A	85	VW-1	Supply Flexible Gas Line (PP1 J60 or J61)
622	MS5 A1	MS1 A2	7/8" Gas Flex Line	STO	N/A	N/A	85	VW-1	Return Flexible Gas Line (PP1 J60 or J61)
623	MS5 A1	PP1 F1, F2, F3, F4	Power Cable (4-#18)	SO	600	200	105	VW-1	Compressor to Pen Panel Cable (equipment room)
624	MS1 A2	PP1 F1, F2, F3, F4	Power Cable (4-#18)	SO	600	200	105	VW-1	Cold Head Control Cable

2-1 LOCATING AND UNPACKING CABLES (continued)

4. Unpack and move fiber optic cables into routing location. Refer to Table 2-4.

TABLE 2-4
FIBER OPTIC CABLES DELIVERED WITH FIXED-SITE KIT

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
708*	MR2 A11 J16	MR1 A7 TX	1/2 in. fiber optic conduit	N/A	N/A	0	85	N/A	Single simplex plastic fiber optic cable
709	MR3 A11 J2	MR1 A7 RX	3/4 in. fiber optic conduit	N/A	N/A	0	85	N/A	Single simplex plastic fiber optic cable
710*	MR2 A11 J17	MR3 A11 J1	3/4 in. fiber optic conduit	N/A	N/A	0	85	N/A	Four glass fiber optic and one plastic fiber optic cables
711/ 712*	MR2 A11 J13	PP1-J91	3/4 in. fiber optic conduit	N/A	N/A	0	85	N/A	Two duplex fiber optic and one simplex fiber optic cables
711/ 712	PP1-J91	MG2 A33 and MG2 A11 A1	3/4 in. fiber optic conduit	N/A	N/A	0	85	N/A	One duplex fiber optic cables and one simplex fiber optic cable and One duplex plastic fiber optic cable for PAC-II
836*	MR2 A11 J30 BIT3	OW1 A15 BIT3	3/8 in. jacketed cable	N/A	N/A	0	85	N/A	Two fiber optic cables with two spares
1033 ** / ***	MR2 A11 J16	MR1 A7 TX	20 ft. 1/2 in. fiber optic conduit	N/A	N/A	0	85	N/A	Single simplex plastic fiber optic cable
1034 ** / ***	MR2 A11 J17	MR3 A11 J1	20 ft. 3/4 in. fiber optic conduit	N/A	N/A	0	85	N/A	Four glass fiber optic and one plastic fiber optic cables
1044**	MR2 A11 J22	OW1 A15 SLOT2	72.2 ft. 3/8 in. jacketed cable	N/A	N/A	0	85	N/A	Two fiber optic cables with two spares
1045 ** / ***	MR2 A11 J13	PP1 A17 A1	3/4 in. fiber optic conduit	N/A	N/A	0	85	N/A	Two duplex fiber optic and one simplex fiber optic cables
1078 ***	MG2 A33 J30/J29	MG3 A36 J18/J19	72.2 ft. 3/8 in. jacketed cable	N/A	N/A	0	85	N/A	Two fiber optic cables, SRI to Cross Point Switch
1083 ***	MR2 A11 J22	OW1 A15 XMT1	72.2 ft. 3/8 in. jacketed cable	N/A	N/A	0	85	N/A	Two fiber optic cables with two spares

2-1 LOCATING AND UNPACKING CABLES (continued)

5. Unpack and move interconnect cables which are cut to length to the applicable room. Refer to Table 2-5.

TABLE 2-5
EQUIPMENT ROOM AND MAGNET ROOM CABLES CUT TO LENGTH

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
536	WC1	MG2 A12 A1	Flexible Tubing	N/A	N/A	N/A	N/A	N/A	Gradient Coil Cooling Line
537	WC1	MG2 A12 A1	Flexible Tubing	N/A	N/A	N/A	N/A	N/A	Gradient Coil Cooling Line
235	MR1 A7 J13	PP1 J44	7/8 in. HELIAX® Coax or	STO	6000 VDC	<30	120	VW-1	1.5T Body Coil Run created from kit
			Times Microwave LMR-900FR	CATV R	5000 VDC		85	FT-4	
236	MR1 A7 J12	PP1 J4	1/2 in. HELIAX® Coax or	STO	4000 VDC	<30	120	VW-1	1.5T Head Coil Run created from kit
			Times Microwave LMR-600FR	CATV R	4000 VDC		85	FT-4	
257	PP1 J44	MG3 A3 A1 J1	7/8 in. HELIAX® Coax or	STO	6000 VDC	<30	120	VW-1	1.5T Body Coil Transmit
			Times Microwave LMR-900FR	CATV R	5000 VDC		85	FT-4	
258	PP1 J4	MG3 A17 J1	1/2 in. HELIAX® Coax or	STO	4000 VDC	<30	120	VW-1	1.5T Head Coil Transmit
			Times Microwave LMR-600FR	CATV R	4000 VDC		85	FT-4	
745	MG3 A7 J13	PP1 J44	50 ft 1/2" Helix (HN)	STO	4000 VDC	950	120	VW-1	1.0T Body RF Transmit
746	PP1 J44	MG3 A3 J1	55 ft 1/2" Helix (HN)	STO	4000 VDC	950	120	VW-1	1.0T Body Coil Transmit
747	PP1 J4	MG3 A17 J1	50 ft 3/8" Helix (N)	STO	2500 VDC	950	85	VW-1	1.0T Head Coil Transmit
748	MG3 A7 J12	PP1 J4	50 ft 3/8" Helix (N)	STO	2500 VDC	950	85	VW-1	1.0T Head RF Transmit
762	MR3 CABI/F J3	PP1 A7 1, 2	2 Conductor #2	STO	1000	600	90	FT-4	X Gradient output
762	MG3 A32 1/2	PP1 A7 1, 2	2 Conductor #2	STO	1000	600	90	FT-4	X Gradient output
763	MR3 CABI/F J4	PP1 A7 3, 4	2 Conductor #2	STO	1000	600	90	FT-4	Y Gradient output
763	MG3 A32 3/4	PP1 A7 3, 4	2 Conductor #2	STO	1000	600	90	FT-4	Y Gradient output
764	MR3 CABI/F J5	PP1 A7 5, 6	2 Conductor #2	STO	1000	600	90	FT-4	Z Gradient output
764	MG3 A32 5/6	PP1 A7 5, 6	2 Conductor #2	STO	1000	600	90	FT-4	Z Gradient output

2-1 LOCATING AND UNPACKING CABLES (continued)

6. Verify magnet monitoring cables for GE Magnet are delivered (or if previously installed, remain in place). Refer to Table 2-6.

TABLE 2-6
MAGNET MONITORING CABLES DELIVERED WITH MAGNET

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
823	MSM1 A1 J10	MR2 A11 J24	Data Cable (15-#22)	CI3	300	<30	80	FT-4	Monitor to System Cabinet I/F
824	PP1 J10	FJ1	Data Cable (9-#22)	CI3	300	<30	80	FT-4	Monitor Sensor I/F to Penetration Panel
825	PP1 J48	MSM1 A1 J8	Data Cable (25-#22)	CI3	300	<30	80	FT-4	Magnet Monitor connector to Penetration Panel
826	MSM1 A1 J9	FJ3	Data Cable (15-#22)	CI3	300	<30	80	FT-4	Monitor to Compressor I/F
827	FJ3	MS5 A5 A1 J1 / FJ4	Data Cable (8-#22) & Data Cable (4-#22)	CI3	300	<30	80	FT-4	Compressor I/F
828	PP1 J10	MA1 A3 A1 P403	Data Cable (9-#22)	CI3	300	<30	80	FT-4	Penetration Panel to Sensor
829	PP1 J48	MS1 FJ2	Data Cable (25-#22)	CI3	300	<30	80	FT-4	Penetration Panel to Magnet I/F
830	MS1 FJ2	MS1 A2 J2/ MS1 A5 A2 J1/ MG3 TB1	3cond/3cond/25cond	CI3	300	<30	80	FT-4	Magnet I/F
831	FJ1	MSM1 A1 J7	Data Cable (8-#24)	CI3	300	<30	80	FT-4	Monitor to Sensor I/F
832	MS1 A2 J1	MS1 SLEEVE/ MS1 COLDHEAD	Data Cable (8-#22)	CM	300	<30	80	FT-4	Buffer Amp to Cooling Sleeves
833	FJ4	MS5 A1 A6 JR	Data Cable (6-#24)	CM	300	<30	80	FT-4	Compressor to Compressor I/F
940	MSM3 RS232	MSM1 J1	6 ft. Data Cable (9-#22)	CI3	300	<30	80	FT-4	Monitor to Modem
	MR2 A11 J24	MR2 IPG J9/ MR2 PDU J5							System Cabinet I/F

2-1 LOCATING AND UNPACKING CABLES (continued)

7. Unpack and move equipment room system cables into routing location (cabinets, Operator Console, Operator Workstation, PDU). Refer to Table 2-8.

TABLE 2-7
EQUIPMENT ROOM RUNS

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
229	MR2 A11 J1	MR1 A7 J3	20 ft RG223/U Coax	CMX	1900 VRMS	<30	80	VW-1	Exciter RF output
231	MR2 A11 J2	PP1 J8	40 ft RG223/U Coax	CMX	1900 VRMS	<30	80	VW-1	Body Coil receive
296	FACILITY DISCNCT	PP1 J18	45 ft 9 pin Sub-D	CI3	300	<30	80	FT-4	Emergency off switch
457	OM1	PP1 J17	9 pin Sub-D	CI3	300	<30	80	FT-4	Optional O2 Monitor cable
486*	PP1-A14-J85	MR1-A7-J22	30 ft. 9 Sub-D	CI3	300	<30	80	FT-4	Head/MC1 Receive Select Switch
487*	PP1-A15-J78	MR1-A7-J20	40 ft.15 Sub-D	CI3	300	<30	80	FT-4	Multi-coil Switching
488	PP1-J80	MR2-A11-J8	40 ft. BNC	CMX	300	<30	80	VW-1	MC2 Receive
489	PP1-J81	MR2-A11-J9	40 ft. BNC	CMX	300	<30	80	VW-1	MC3 Receive
490	PP1-J82	MR2-A11-J10	40 ft. BNC	CMX	300	<30	80	VW-1	MC4 Receive
499/ 233	MR2 A11 J5	PP1 J7	40 ft RG223/U Coax	CMX	300	<30	80	VW-1	Head and Surface Coil receive
701	MR2 A11 J15	RF Door switch	70 ft 9 pin Sub-D	CI3	300	<30	80	FT-4	RF Door switch
702	MR2 A11 J18	MR1 A7 J5	20 ft 9 pin Sub-D	CI3	300	<30	80	FT-4	Unblank/EFB
703	MR2 A11 J23	PD1 A14 A1 J2/ MR1 PD1 J2	40 ft 15 pin Sub-D	CI3	300	<30	80	FT-4	PDU Status
706*	MR2 A11 J14	PD1 A14 A1 J3/ MR1 PD1 J3	40 ft 9 pin Sub-D	CI3	300	<30	80	FT-4	Remote PDU
726*	PP1-A16-J77	MR1-A7-J18	30 ft. 15 Sub-D	CI3	300	<30	80	FT-4	Multi-coil Bias
768	MR1 A7 J31	PP1 J20	30 ft 37 pin Sub-D	CI3	300	<30	80	FT-4	Patient Alignment Light power
769	MR1 A7 J34	PP1 J15	30 ft 25 pin Sub-D	CI3	300	<30	80	FT-4	Bore Light power
770	MR1 A7 J41	PP1 J11	30 ft 9 pin Sub-D	CI3	300	38.5 VDC	80	FT-4	Long Drive Motor power
771	MR1 A7 J36	PP1 J47	30 ft 25 pin Sub-D	CI3	300	38.5 VDC	80	FT-4	Dock Power
772	MR1 A7 J40	PP1 J14	30 ft 37 pin Sub-D	CI3	300	<30	80	FT-4	SRI Power
773	MR1 A7 J35	PP1 A17 J1	30 ft 25 pin Sub-D	CI3	300	<30	80	FT-4	PAC & Fiber Optic I/F Power
774	MR2 A11 J25	MR1 A7 J32	20 ft 25 pin Sub-D	CI3	300	<30	80	FT-4	Hydraulic Manifold Interface
775	MR1 A7 J42	PP1 A11 J92	30 ft MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	100V Dynamic Disable
776	MR1 A7 J44	PP1 A11 J93	30 ft MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	100V Dynamic Disable
777	MR1 A7 J43	PP1 A11 J94	30 ft MHV Coax	CI2	1900 VRMS	1000 VDC	80	VW-1	100V Dynamic Disable
783	MR1 A7 J37	PP1 F5/F6	30 ft 2-#8 AWG	SO	600	120	80	FT-4	Blower Cabinet Power
785	MR1 A7 J18	PP1 F7/F8	30 ft 2-#8 AWG	SO	600	120	80	FT-4	Blower Cabinet Power
788	OW1 A1 A4 J7	PP1 J12	40 ft Data (25-#22)	CI3	300	<30	80	FT-4	Intercom
789	OW1 A1 A4 J18	MR2 A11 J26	51 ft Data (9-#22)	CI3	300	<30	80	FT-4	E-stop
791	OW1 A16 PORT1	MR2 A11 J30	51 ft Data (25-#22)	CI3	300	<30	80	FT-4	TNF monitoring (Octane)

2-1 LOCATING AND UNPACKING CABLES (continued)

TABLE 2-7 (CONT'D)
EQUIPMENT ROOM RUNS

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
797	OW1 A2 A1 PC	OW1 A3 LCD	2 line; 3.5 mm jacks	CI3	300	<30	80	FT-4	LCD Display
798	OW1 A2 A3 HOST	OW1 A6	10.5 ft. Data (3-#24)	CI3	300	<30	80	FT-4	Color Monitor cable
805	OW1 A1 A4 J6	OW1 A7	3.3 ft. Data	CI3	300	<30	80	FT-4	Keyboard cable
807	OW1 A2 A3 HOST	OW1 A5	9.8 ft. Data	CI3	300	<30	80	FT-4	DASM SCSI cable
810	OW1 A1 A2 J8	OW1 A15 KBD,MS	9 ft. 25 pin Sub-D	CI3	300	<30	80	UL-1581	Keyboard/Mouse cable (Octane)
811	OW1 A2 A4	OW1 A15	12 ft. Ethernet	CI3	300	<30	80	FT-4	Communication
812	OW1 A15	OW1 A13	12 ft. 25/9 pin Sub-D	CM	300	<30	80	UL-1581	Modem
813	OW1 A2 A1 COM2	OW1 A415 PORT7	12 ft. 9 pin Sub-D	CI3	600	<30	105	VW-1	Communication
814	OW1 A2 A1 KBD,MS	OW1 A1 A4 J9	9 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Keyboard/Mouse cable (PC)
815	OW1 A16	OW1 A15 SCSI	6 ft. 68/50 pin	CI3	300	<30	80	FT-4	SCSI Cable (Octane)
817	OW1 A2 A5 J3	OW1 A1 A2 J17	8 ft. 9 pin Sub-D	CI3	300	<30	80	FT-4	Workspace I/F Module
818	OW1 A16 J6,7,8	MR2 A11 J31	70 ft. 25/3-25 pin	CI3	300	<30	80	FT-4	TNF monitoring
819	OW1 A2 A7 SCSI	OW1 A15	10 ft. 68/50 pin	CI3	300	<30	80	FT-4	SCSI Cable
821	OW1 A15 MONITOR	OW1 A6 R,B,G	10.5 ft. 3 BNC/SubD	CI3	300	<30	80	FT-4	Color Monitor cable
971	MR2 A11 J23	MR3 PD1 J2	40 ft 15 pin Sub-D	CI3	300	<30	80	FT-4	PDU Status (ACGD)
972*	MR2 A11 J14	MR3 PD1 J3	40 ft 9 pin Sub-D	CI3	300	<30	80	FT-4	Remote PDU (ACGD)
1025 **/**	MR2 A11 J40	PP1 J6	40 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC2 Receive
1026 **/**	MR2 A11 J41	PP1 J7	40 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC2 Receive
1027 **/**	MR2 A11 J42	PP1 J58	40 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC2 Receive
1028 **/**	MR2 A11 J43	PP1 J59	40 ft. BNC	CMX	1900 VRMS	<30	80	VW-1	MC2 Receive
1029 **/**	MR2 A11 J62	PP1 A16 J77	60 ft. 15 pin Sub-D	CI3	300	<30	80	FT-4	Monitor to Compressor I/F
1030 **/**	MR2 A11 J61	PP1 A16 J78	30 ft. 37 pin Sub-D	CI3	300	<30	80	FT-4	SRI Power
1031**	MR2 A11 J63	OW1 A15 SLOT1	65 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Communication
1032	MR2-A11-J31	OW1-A16-FJ100	65 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Serial Communication
1046	FJ100	OW1-A16-PORT 1,6,7,8	4.5 ft. 25 pin Sub-D	CI3	300	<30	80	FT-4	Serial Communication
1053 ***	PP1 J85	MR2 A11 J54	34.5 ft RG223/U Coax	CMX	1900 VRMS	<30	80	VW-1	UNTS Antenna

2-1 LOCATING AND UNPACKING CABLES (continued)

TABLE 2-7 (CONT'D)
EQUIPMENT ROOM RUNS

RUN	"FROM"	"TO"	DESCRIPTION	CABLE TYPE	VOLTAGE RATING	ACTUAL VOLTAGE	TEMP RATING	FLAME RATING	REMARKS
1056 ***	OW1 A17 PRT6	OW1-A12 ETHRNET	3.3 ft. Ethernet Cat 5	CI3	30	<30	80	FT-4	Laptop Access cable
1059 ***	OW1 A17 PRT2	OW1-A15 ETHRNET	5.9 ft. Ethernet Cat 5	CI3	30	<30	80	FT-4	Lan Hub cable
1060 ***	OW1 A19 J3	OW1 A21 J17	3.9 ft. 9 pin Sub-D	CI3	300	<30	80	FT-4	WIM Power cord
1061 ***	OW1 A15 KYBD/MS	OW1 A21 J8	2.9 ft. 25 pin Sub-D 2 PS/2s	CI3	300	<30	90	CL-2	Keyboard/Mouse cable
1062 ***	OW1 A20	OW1 A21 J6	13.2 ft. 50 pin SCSI, 9 pin Sub-D	CI3	300	<30	80	VW-1	SCIM cable
1063 ***	OW1 A15 Video 1	OW1 A6 HOST LCD	9.9 ft. 29 pin DVI, 15 pin VGA	CI3	300	<30	80	VW-1	Host LCD Display Video cable
1064 ***	OW1 A15 SCSI 1	OW1 A16 SCSI TOWER	9.9 ft. SCSI cable 50	CI3	300	<30	80	VW-1	SCSI Tower Data cable
1065 ***	OW1 A11 J2	OW1 A6 Pwr	9.9 ft. Power (3-#18)	SVT	300	120	80	VW-1	Host LCD Display Power cable
1066 ***	OW1 A15	OW1 A13	3.9 ft. 25/9 pin Sub-D	CM	300	<30	80	FT-4	Modem I/O cable
1067 ***	OW1 A15 SCSI 2	OW1 A5 DASM	5.9 ft. SCSI cable 50	CI3	30	<30	80	VW-1	DASM I/O cable
1068 ***	OW1 A15 Video2	OW1 A3 LCD	9.9 ft. Data (15-#28)	CI3	300	<30	80	VW-1	LCD Display Video cable
1069 ***	OW1 A11 J8	OW1 A3 Pwr	9.9 ft. Power (3-#18)	SVT	300	120	80	VW-1	LCD Display Power cable
1070 ***	OW1 A11 J11	OW1 A16 Pwr	9.9 ft. Power (3-#18)	SVT	300	120	80	VW-1	SCSI Tower Power cable
1071 ***	OW1 A11 J1	OW1 A15 Pwr	9.9 ft. Power (3-#18)	SVT	300	120	80	VW-1	Host Computer Power cable
1074 ***	OW1 A19 J2	OW1 A11	3.3 ft. Power (3-#14)	SVT	600	120	105	VW-1	Power Strip cord
1075 ***	OW1 A19 J4	OW1 A11	3.3 ft. Power (3-#14)	SVT	600	120	105	VW-1	Power Strip cord
1082 ***	OW1 A15 ETH SLOT 2	MR2 A11 J63	75 ft. Ethernet Cat 5	CI3	300	<30	80	FT-4	EXCITE Ethernet C'cable
1084 ***	OW1 A21 J6 via Run 1062	MR2 A11 J26	60 ft 9 pin Sub-D	CI3	300	<30	80	FT-4	E-stop
1085 ***	OW1 A21 J7	PP1 J12	65 ft 25 pin Sub-D	CI3	300	<30	80	FT-4	Intercom

8. Unpack additional equipment room cables for Signa MR/i Options:
 - a. Refer to the service/installation manual shipped with options.
 - b. Refer to *Direction 2151387, Signa Horizon Spectroscopy Subsystem*, for 1.5T Spectroscopy (M1040JB) equipment room cables.

2-2 SORTING AND ROUTING CABLES



Ty-wraps must be cut flush with no protruding sharp edges or points. Failure to do so can result in numerous laceration hazards when servicing the equipment.


System power, ground, and data cables are color coded at each end by destination per colors shown on Cable Map.

1. Sort cables by destination. Normally, it is best to sort cables originating from the farthest cabinet or component from the PDU first. This will make it easier to pull cables through the troughs.

Note

Carefully review architectural drawings to insure that all ducts are properly installed and that all signal and power cables are accounted for before starting to route cable runs.

2. Unroll coiled cables along the intended route to insure that they will lay freely without twists or kinks. Route cables in accordance with the applicable System Interconnect Diagram.
3. Plan for storage location of coiled cable excess length if cables are to remain at delivered length. See Illustration 2-1. Some cables are usually cut to length such as gradient cables, power cables, Helix, and Fiber-optic cables.

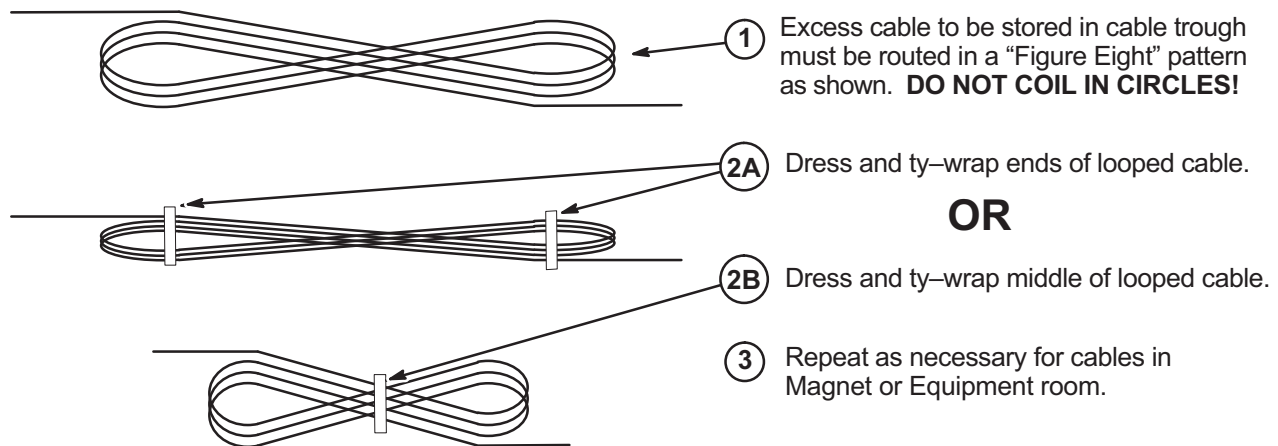

PROPER STORAGE OF EXCESS CABLES

ILLUSTRATION 2-1

4. Place cables in provided troughs, conduit, or ducts. Leave sufficient slack for later connection when cabinets are in final position according to site architectural plans. Route cables inside exam room to Rear Pedestal area with sufficient length remaining to complete routing and connecting within Magnet Enclosure.


2-3 EMERGENCY OFF CONNECTIONS

Run 296 is routed to EO2 (Equipment Room Emergency Off) and connected to EO2 and wire from Facility Disconnect. Run 297 is routed from Penetration Panel to EO1 (Magnet Room Emergency Off Button). Refer to *Direction 2223170, Signa MR/i Pre-Installation*, Section 5-3-1, Protective Disconnect Device, for detailed wiring diagram.

1. Complete routing of Run 296 to EO2 (Equipment Room Emergency Off) location, and trim cable to length. Locate red and black pair of wires and prepare ends for applicable terminals.

Aside: In Illustration 2-3, black and red wires are used for connections in Runs 295 and 297. Actually any pair of wires on these runs could be used so long as both ends are consistent with one another. Runs 296 and 297 are actually nine wire cables.

2. At equipment room room "Emergency Off" (EO2) location, terminate red wire at end of Run 296 with local supplied terminal and connect to customer supplied Equipment Room Emergency Off Button (EO2). See Illustration 2-3.
3. Terminate customer supplied wire (from fuse in Protective Disconnect Device) with local supplied applicable terminal and connect to customer supplied Emergency Off Button (EO2). See Illustration 2-3.
4. Terminate customer supplied wire from R1 in Protective Disconnect Device with local supplied push-on terminal.
5. Terminate black wire at end of Run 296 with local supplied "push-on" terminal.
6. Connect black wire from end of Run 296 to customer supplied wire from protective disconnect device with local supplied in-line splice. See Illustration 2-3.
7. Complete routing of Run 297 to EO1 (Magnet Room Emergency Off) location, and trim cable to length. Locate red and black pair of wires and prepare ends for applicable terminals.
8. Terminate red and black wires at end of Run 297 with local supplied terminals and connect to customer supplied Magnet Room Emergency Off Button (EO1). See Illustration 2-3.

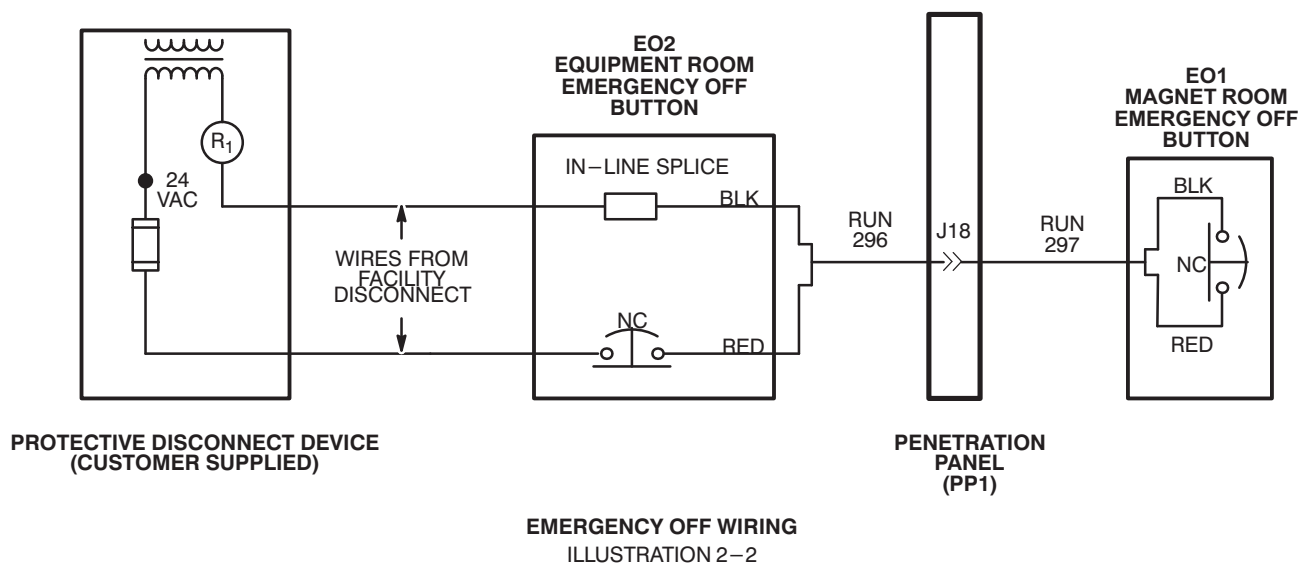

2-4 RUN 701 (RF DOOR SWITCH) CONNECTIONS

1. Route Run #701 (from System Cabinet) to RF Door Switch. This 100 ft cable has a 9-pin subminiature "D" plug on one end. The other end is cut off with the black and red leads from pair #1 dressed for connecting to a switch. Should it be desired to cut off excess length, make sure that the black and red leads have continuity to pins 1 and 6 on the 9 pin subminiature D plug.
2. Connect black lead on Run #701 to RF Door Switch COM (common) contact.
3. If RF door switch is normally open, proceed to step 4. If normally closed, proceed to step 5.
4. Connect red lead on Run #701 to RF Door Switch N.O. (normally open) contact.
5. If RF door switch is not normally open, connect red lead on Run #701 to RF Door Switch N.C. (normally closed) contact.

2-5 CABLE INTERCONNECTION DOCUMENTATION

The cable maps illustrate the Signa MR/i (or CV/i) System interconnect for all supplied cables and interface with customer supplied wiring.

1. Interconnects for additional cables supplied with other options (Spectroscopy, etc.) are illustrated in the installation manual shipped with the option.
 - Connections for 1.5T Spectroscopy are in *Direction 2151389, Signa Horizon Spectroscopy Subsystem*.
 - Instructions for connections for optional laser cameras are supplied with option.
 - Connection procedures for other options are covered in the installation manual shipped with the option.
2. Procedures for connections made at the Magnet Enclosure, Operator Workspace, cabinets, etc. are detailed in the respective installation section within this manual.
3. Interconnect details for magnet subsystem is covered in the applicable magnet subsystem manual.

Fold-out MR/i (or System Interconnect Cable Maps are provided at the end of this section. They are:

Description	Page
1.5T 11.x MR/i SmartSpeed, HiSpeed or EchoSpeed System with EXCITE II (Fixed)	2-15
1.5T 11.x MR/i SmartSpeed, HiSpeed or EchoSpeed System with EXCITE II (Mobile & T/R)	2-16
1.5T 10.x MR/i SmartSpeed, HiSpeed or EchoSpeed System with EXCITE I (Fixed)	2-17
1.5T 10.x MR/i SmartSpeed, HiSpeed or EchoSpeed System with EXCITE I (Mob or T/R)	2-18
1.5T 9.x MR/i SmartSpeed, HiSpeed or EchoSpeed (CV/i) System with Multi-Coil (Fixed)	2-19
1.5T 9.x MR/i SmartSpeed, HiSpeed or EchoSpeed (CV/i) System with Multi-Coil (Mob or T/R)	2-20
1.0T 9.x MR/i SmartSpeed or HiSpeed System with Multi-Coil (Fixed Site)	2-21
1.0T 9.x MR/i SmartSpeed or HiSpeed System with Multi-Coil (Mobile or T/R)	2-22
1.0T 9.x MR/i SmartSpeed System without Multi-Coil (Fixed Site)	2-23
1.0T 9.x MR/i SmartSpeed System without Multi-Coil (Mobile or T/R)	2-24


Select the map that applies to the system being installed. Tape map in a convenient location to check off routed cable. Upon completion of connecting cables, return fold-out map to the binder for future reference.

- | | | |
|----|---|--|
| 1 | Customer furnished | |
| 2 | Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option. | |
| 3 | Adapters selected according to coil used (head, surface) and magnet polarity. | |
| 4 | Typical connection for normally closed emergency off switch | |
| 5 | Optional: May not be present on all systems. | |
| 6 | Magnet ramping cables pass through ramp port on ppr plate. | |
| 7 | RUNS (600 SERIES) Furnished with GE Magnet. | |
| 8 | RUNS R23 to R33 Furnished with Magnet Monitoring. | |
| 9 | Hybrid To Body Coil Connections depend on magnet field polarity. | |
| 10 | Customer supplied telephone line for InSite Modem. | |
| 11 | Ethernet cable a customer supplied. RUN 1066 and modem may not be required if connection to InSite is provided thru data ethernet connection. | |

**SIGNA 11.x MR/i with EXCITE II Technology
SYSTEM INTERCONNECT
- 1.5T SmartSpeed, HiSpeed or EchoSpeed
(MOBILE OR T/R)**

NOTES:


- Customer furnished
- Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- Adaptors selected according to coil used (head, surface) and magnet polarity.
- Typical connection for normally closed emergency off switch
- Optional. May not be present on all systems.
- Magnet ramping cables pass through ramp port on ppi cable.
- RUNS (800 SERIES) Furnished with GE Magnet.
- RUNS 823 To 833 Furnished with Magnet Monitoring.
- Body Hybrid To Body Coil Connections depend on magnet field polarity.
- Customer supplied telephone line for in-site Modem.
- Ethernet cable is customer supplied. RUN 1066 and modem may not be required if connection to inSite is provided thru site ethernet connection.

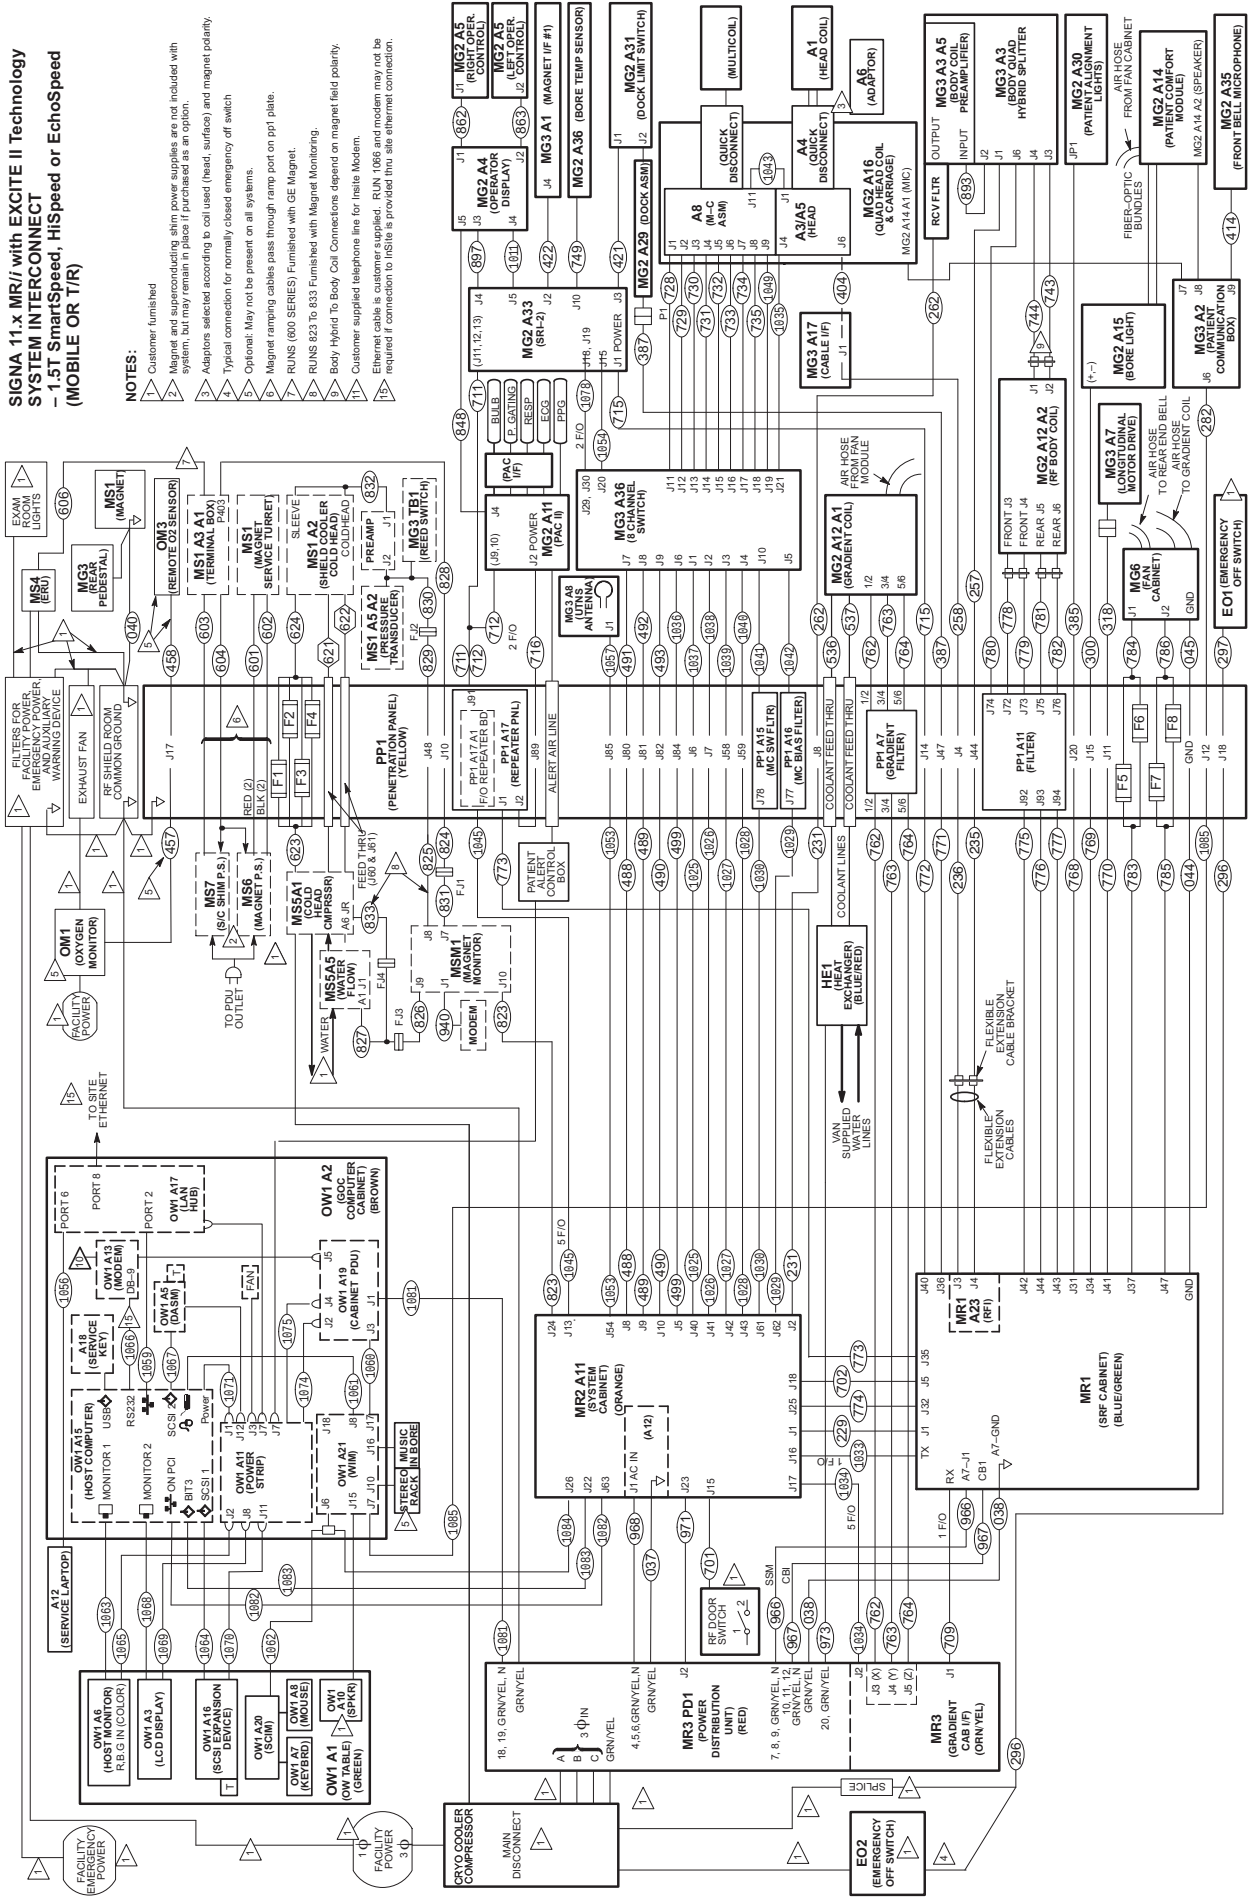

**SIGNA 10-x MRI/ with EXCITE I Technology
SYSTEM INTERCONNECT
- 1.5T SmartSpeed, HiSpeed or EchoSpeed
(FIXED SITE)**

NOTES:


- 1 Customer furnished
- 2 Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- 3 Adaptors selected according to coil used (head, surface) and magnet polarity.
- 4 Typical connection for normally closed emergency off switch
- 5 Optional. May not be present on all systems.
- 6 Magnet ramping cables pass through ramp port on ppi plate.
- 7 RUNS (800 SERIES) Furnished with GE Magnet.
- 8 RUNS 823 TO 833 Furnished with Magnet Monitoring.
- 9 Body Hybrid To Body Coil Connections depend on magnet field polarity.
- 10 Customer supplied telephone line for InSite Modem.
- 11 Ethernet cable is customer supplied. RUN 812 and modem may not be required if connection to InSite is provided thru site ethernet connection.
- 12

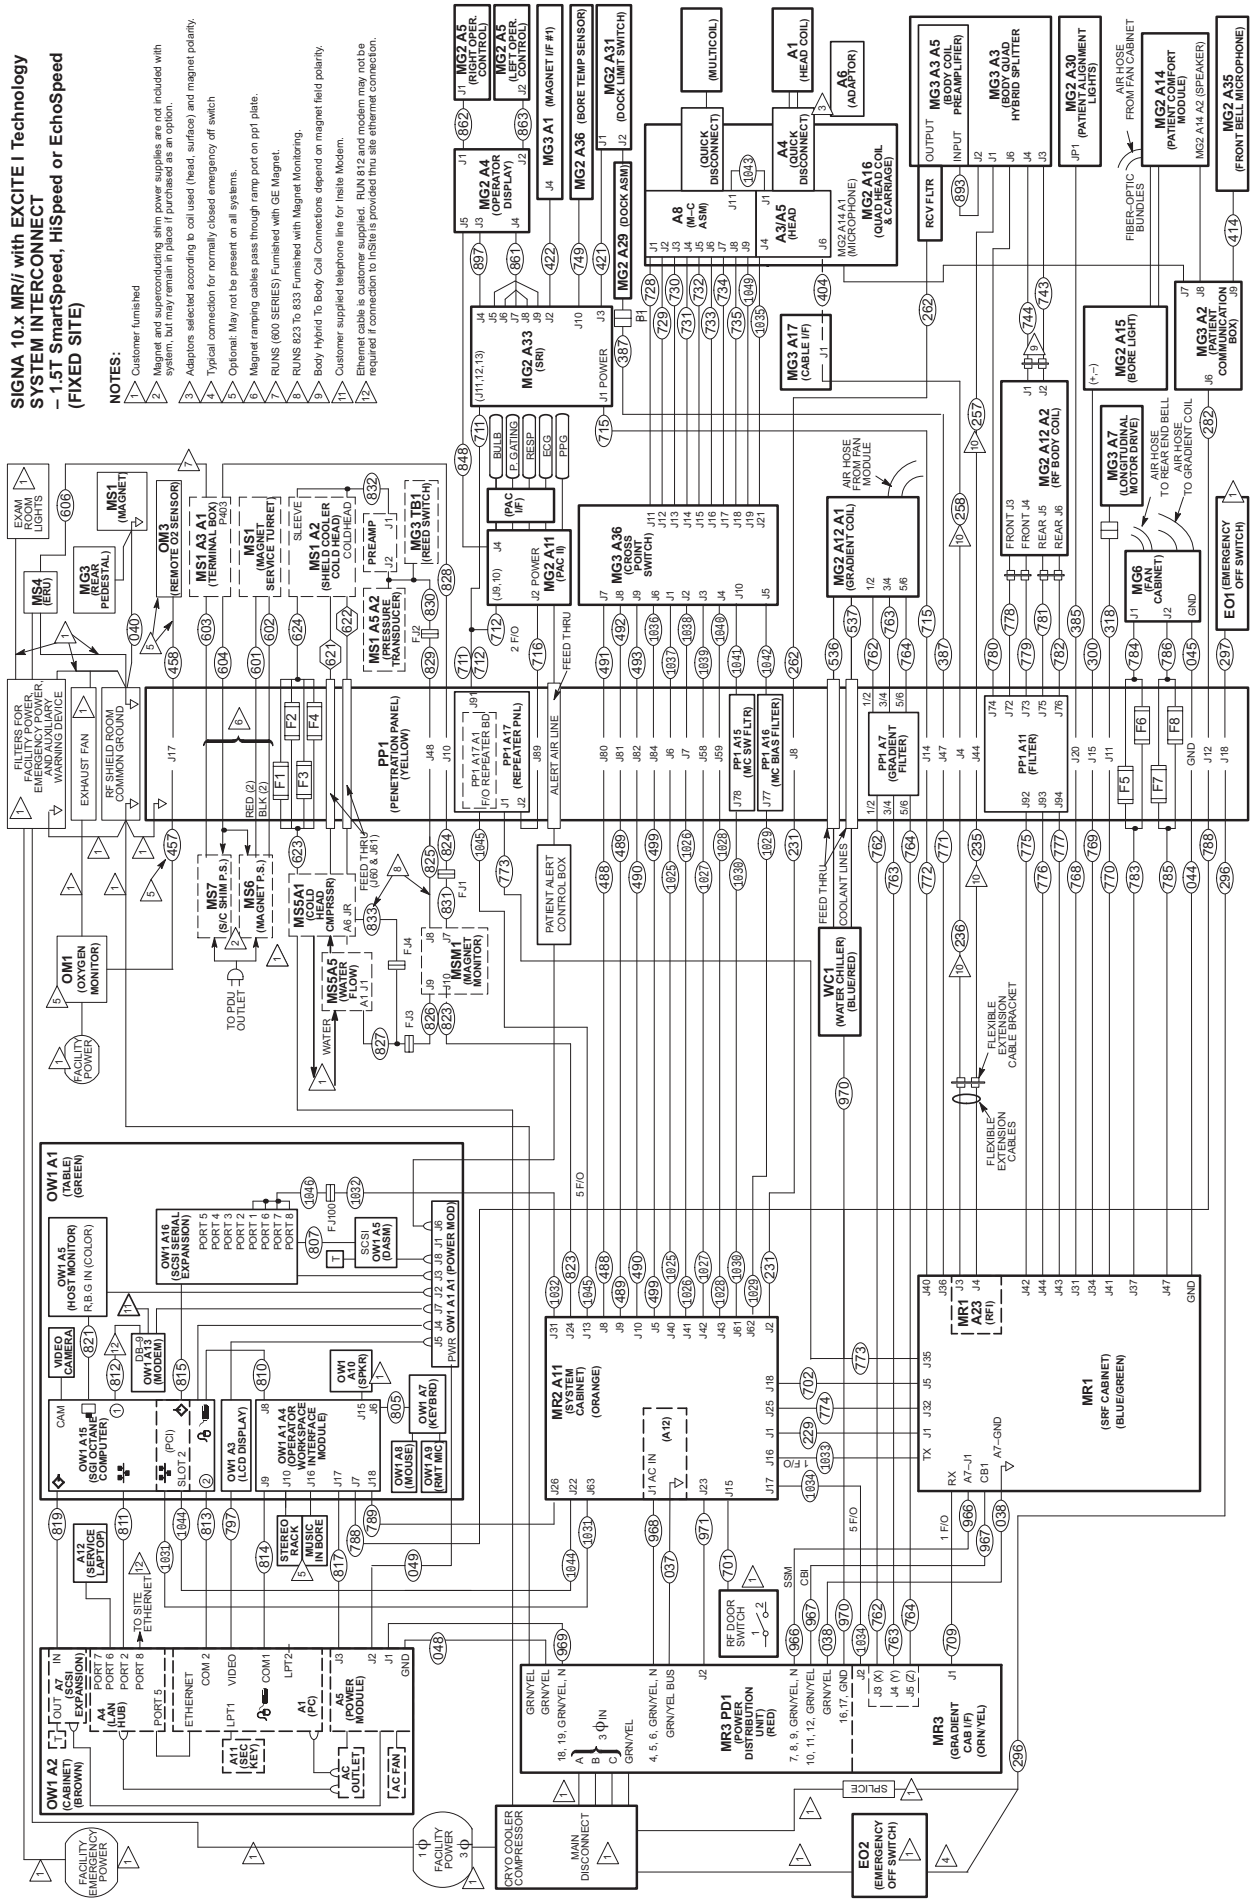

SIGNA 10-x MRI/ with EXCITE I Technology
SYSTEM INTERCONNECT
- 1.5T SmartSpeed, HiSpeed or EchoSpeed
(MOBILE OR T/R)

NOTES:

- 1 Customer furnished
- 2 Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- 3 Adaptors selected according to coil used (head, surface) and magnet polarity.
- 4 Typical connection for normally closed emergency off switch
- 5 Optional. May not be present on all systems.
- 6 Magnet ramping cables pass through ramp port on ppi plate.
- 7 RUNS (800 SERIES) Furnished with GE Magnet.
- 8 RUNS 823 TO 833 Furnished with Magnet Monitoring.
- 9 Body Hybrid To Body Coil Connections depend on magnet field polarity.
- 10 Customer supplied telephone line for InSite Modem.
- 11 Ethernet cable is customer supplied. RUN 812 and modem may not be required if connection to InSite is provided thru site ethernet connection.
- 12

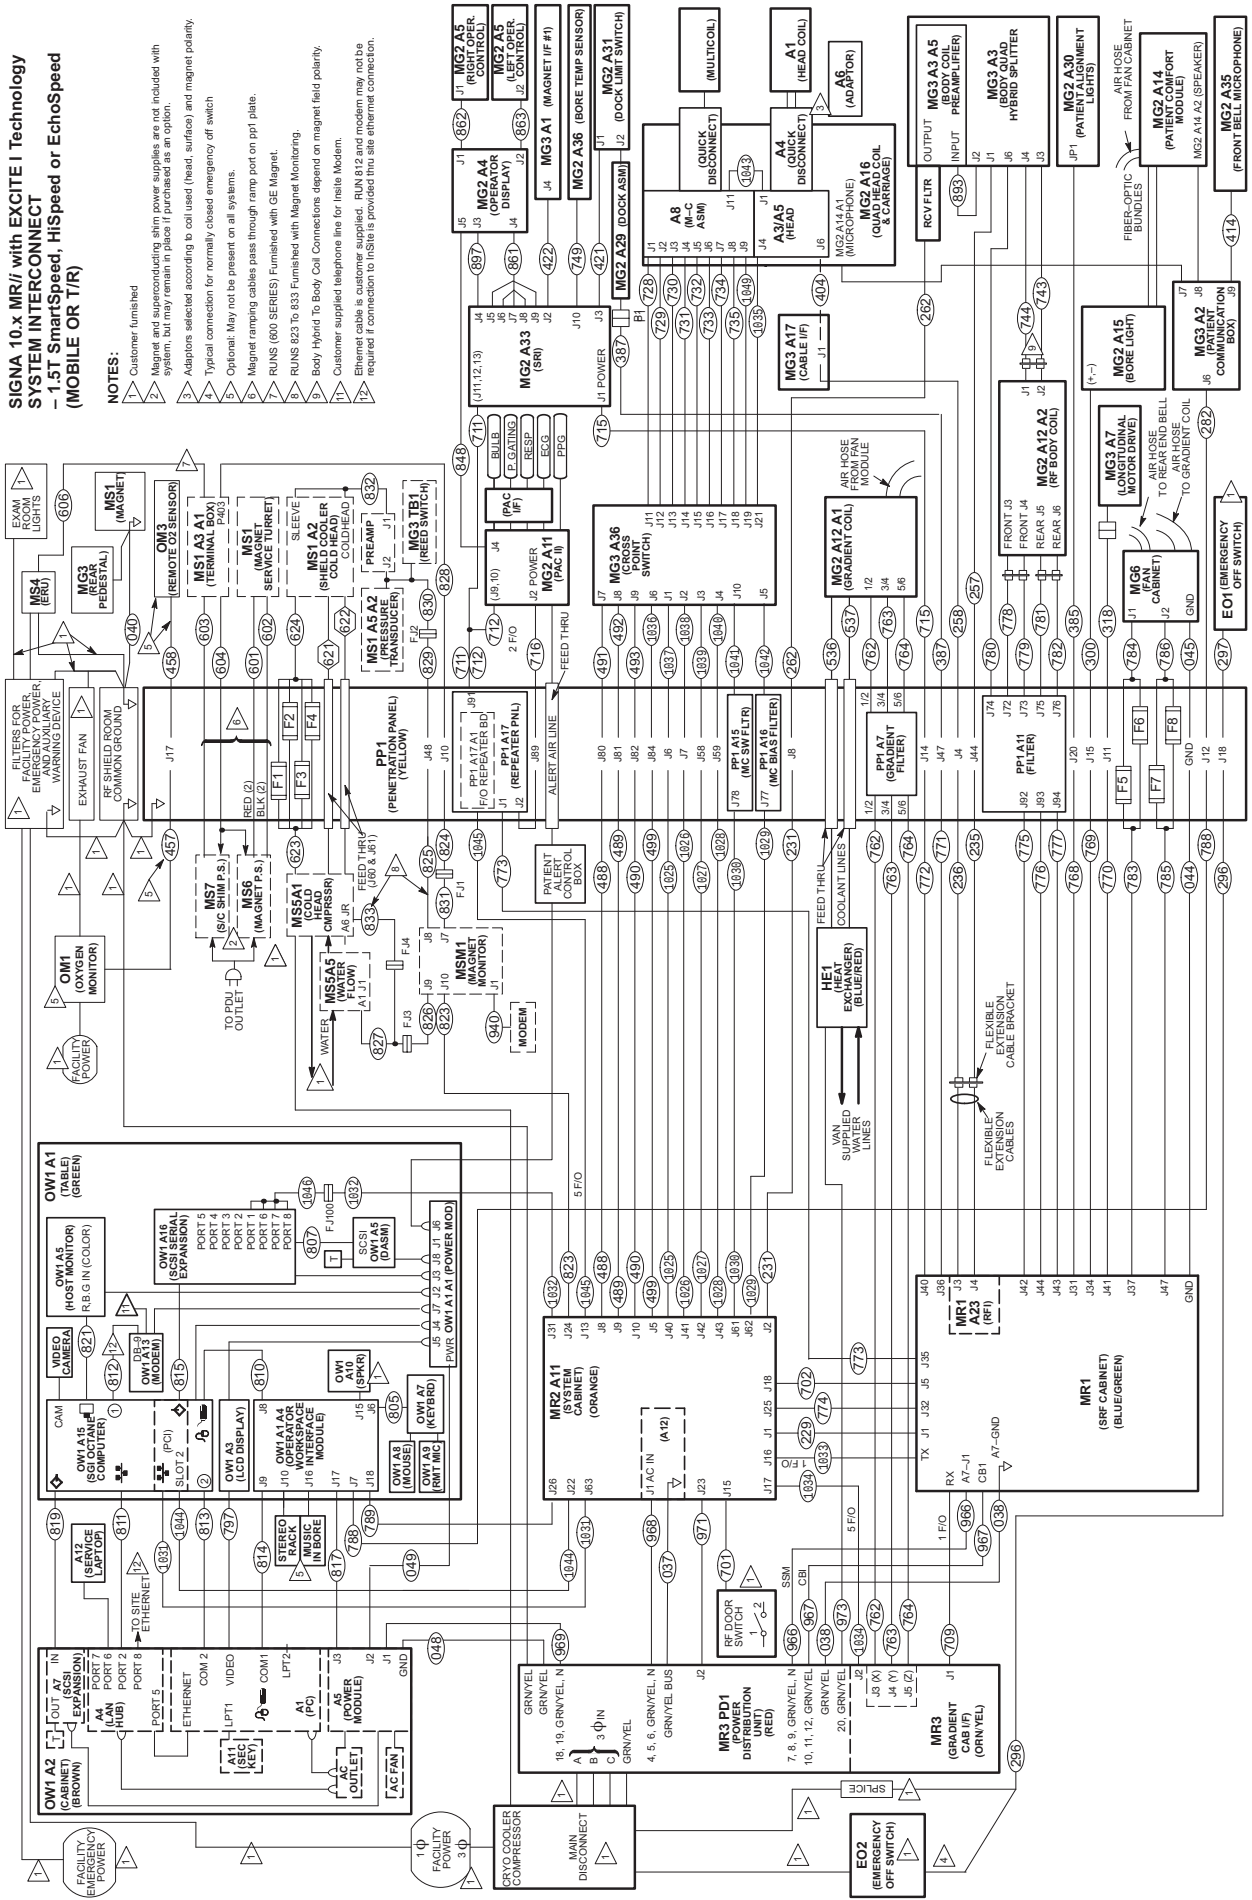


[illegible]

1	Customer furnished
2	Magnet and remaining shim power supplies are not included with system, but may remain in place if purchased as an option.
3	Adapters selected according to coil used (head, surface) and magnet polarity.
4	Typical connection for normally closed emergency off switch
5	Optional. May not be present on all systems.
6	Magnet armoring cables pass through ramp port on pp1 plate.
7	RUNS (600 SERIES) Furnished with GE Magnet.
8	RUNS R23 to R233 Furnished with Magnet Monitoring.
9	Body Hybrid To Body Coil Connections depend on magnet field polarity.
10	RUN numbers are different according to field strength. 1.5T Systems use 235, 236, 237 and 258. 1.0T Systems use 745, 746 and 747.
11	Customer supplied telephone line for Insite Modern.
12	Ethernet cable is customer supplied. RUN R22 and modem may not be present on some DUSRs provided the Ethernet connection is made.

**SIGNA 9 x MR/I SYSTEM INTERCONNECT –
1.5T SmartSpeed, HiSpeed or EchoSpeed
or
SIGNA CV/I SYSTEM INTERCONNECT –
1.5T EchoSpeed (MOBILE OR T/R)
• (MOBILE OR T/R with MULTI-COIL)**

NOTES:

- △ Customer furnished
- △ Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- △ Adapters selected according to coil used (head, surface) and magnet polarity.
- △ Typical connection for normally closed emergency off switch.
- △ Optional. May not be present on all systems.
- △ Magnet ramping cables pass through ramp port on pvt plate.
- △ RUNS (600 SERIES) Furnished with GE Magnet.
- △ RUNS 823 To 833 Furnished with Magnet Monitoring.
- △ Body Hybrid To Body Coil Connections depend on magnet field polarity.
- △ Run numbers are different according to field strength.
- △ 1.0T Systems use 745, 746, 746 and 747.
- △ Customer supplied telephone line for Insite Modem.
- △ Ethernet cable is customer supplied. RUN B12 and modem may not be required if connection to Insite is provided thru site ethernet connection.

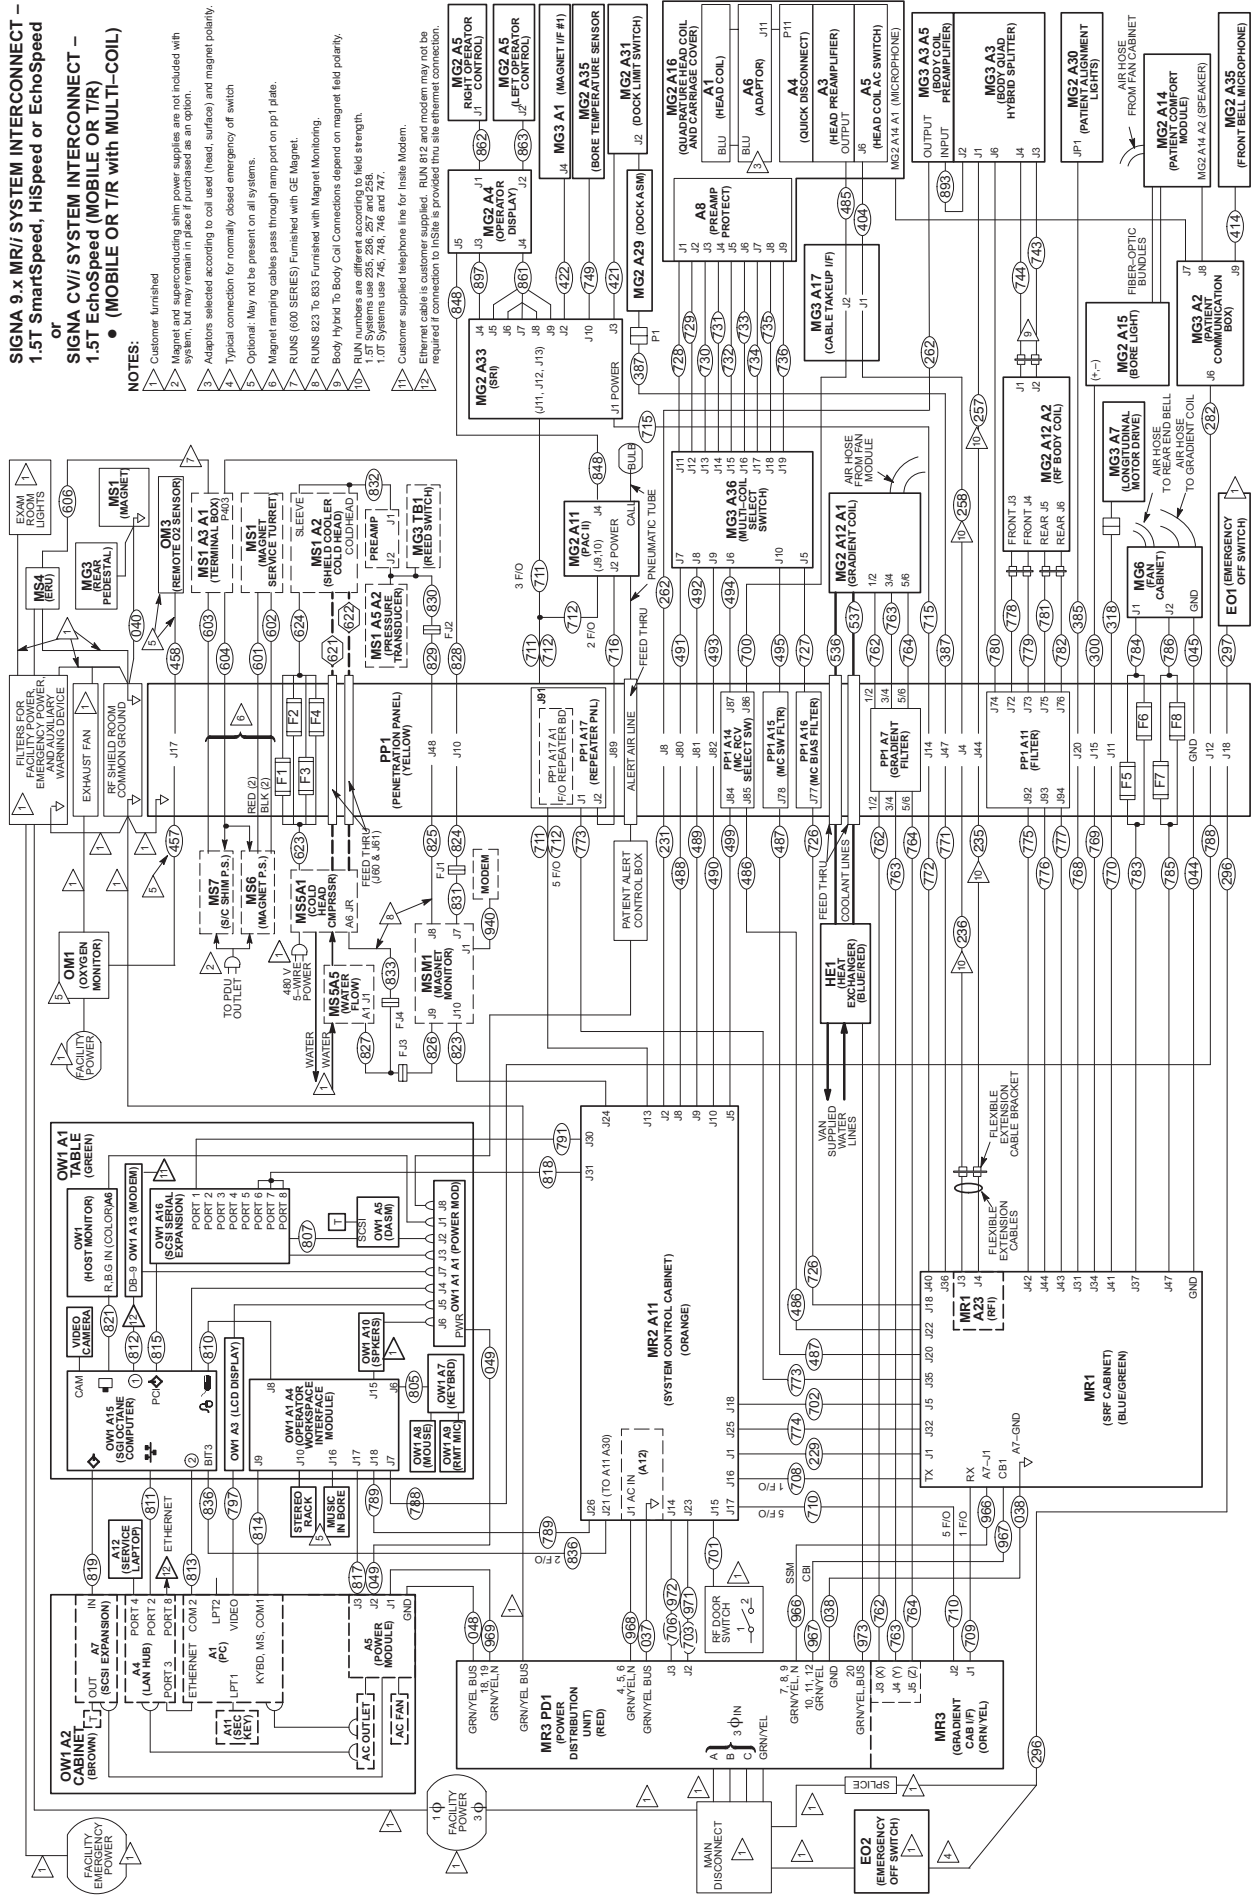


DIRECTION 2223752

**SIGNA 9 x MRI/ SYSTEM INTERCONNECT –
1.0T SmartSpeed or HiSpeed
(FIXED SITE)
• with MULTI-COIL**


NOTES:

- Customer furnished
- Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- Adaptors selected according to coil used (head, surface) and magnet polarity.
- Typical connection for normally closed emergency off switch
- Optional. May not be present on all systems.
- Magnet ramping cables pass through ramp port on ppt plate.
- RUNS (800 SERIES) Fulfilled with GE Magnet.
- RUNS 823 To 833 Fulfilled with Magnet Monitoring.
- Body Hybrid To Body Coil Connections depend on magnet field polarity.
- RUN numbers are different according to field strength.
- 1.0T Systems use 745, 748, 746 and 747.
- Customer supplied telephone line for inside Modem.
- Ethernet cable is customer supplied. RUN 812 and modem may not be required if connection to inside is provided thru site ethernet connection.

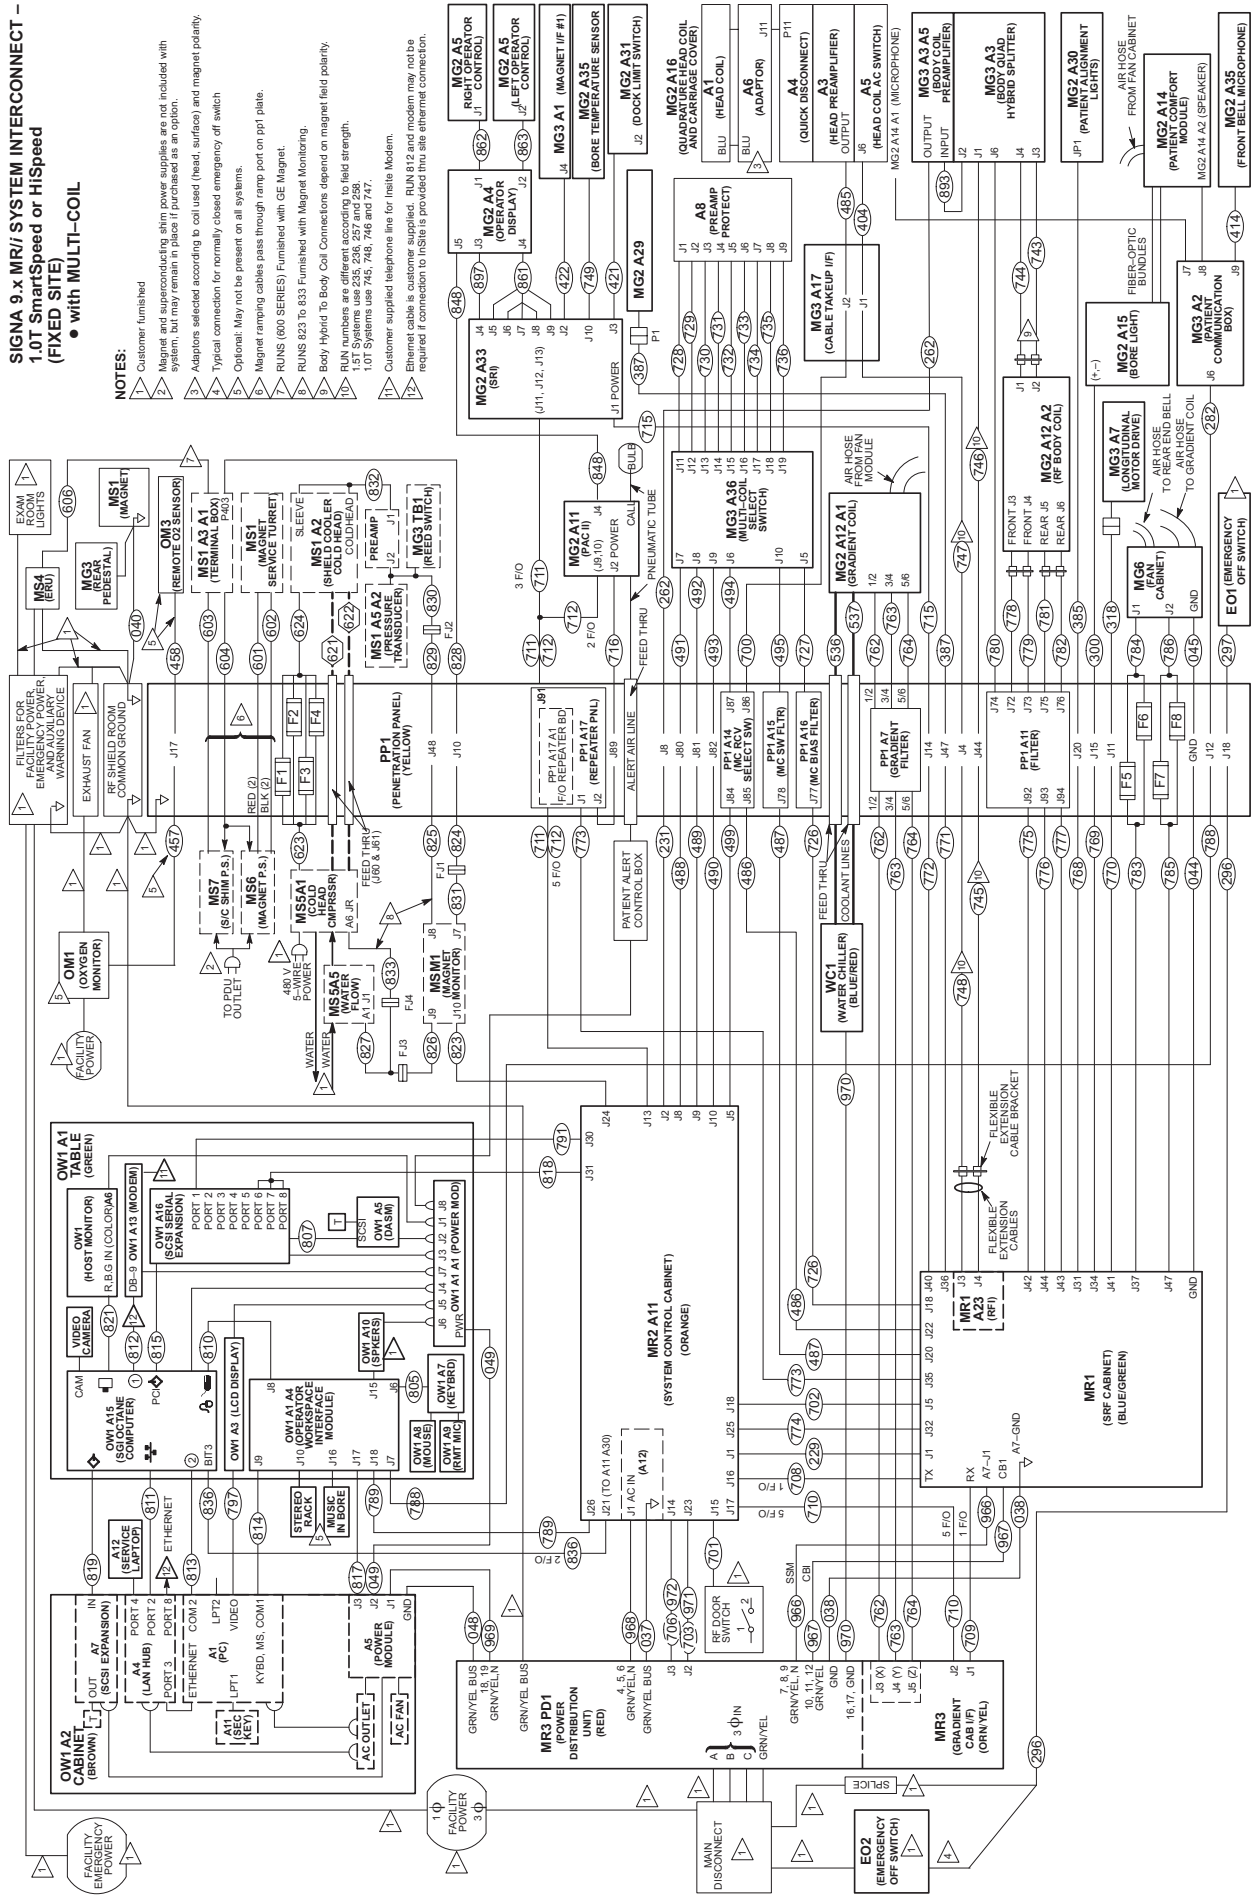

DIRECTION 2223752


**SIGNA 9 x MRI SYSTEM INTERCONNECT –
1.0T SmartSpeed, HiSpeed
(MOBILE OR T1R)
• with MULTI-COIL**

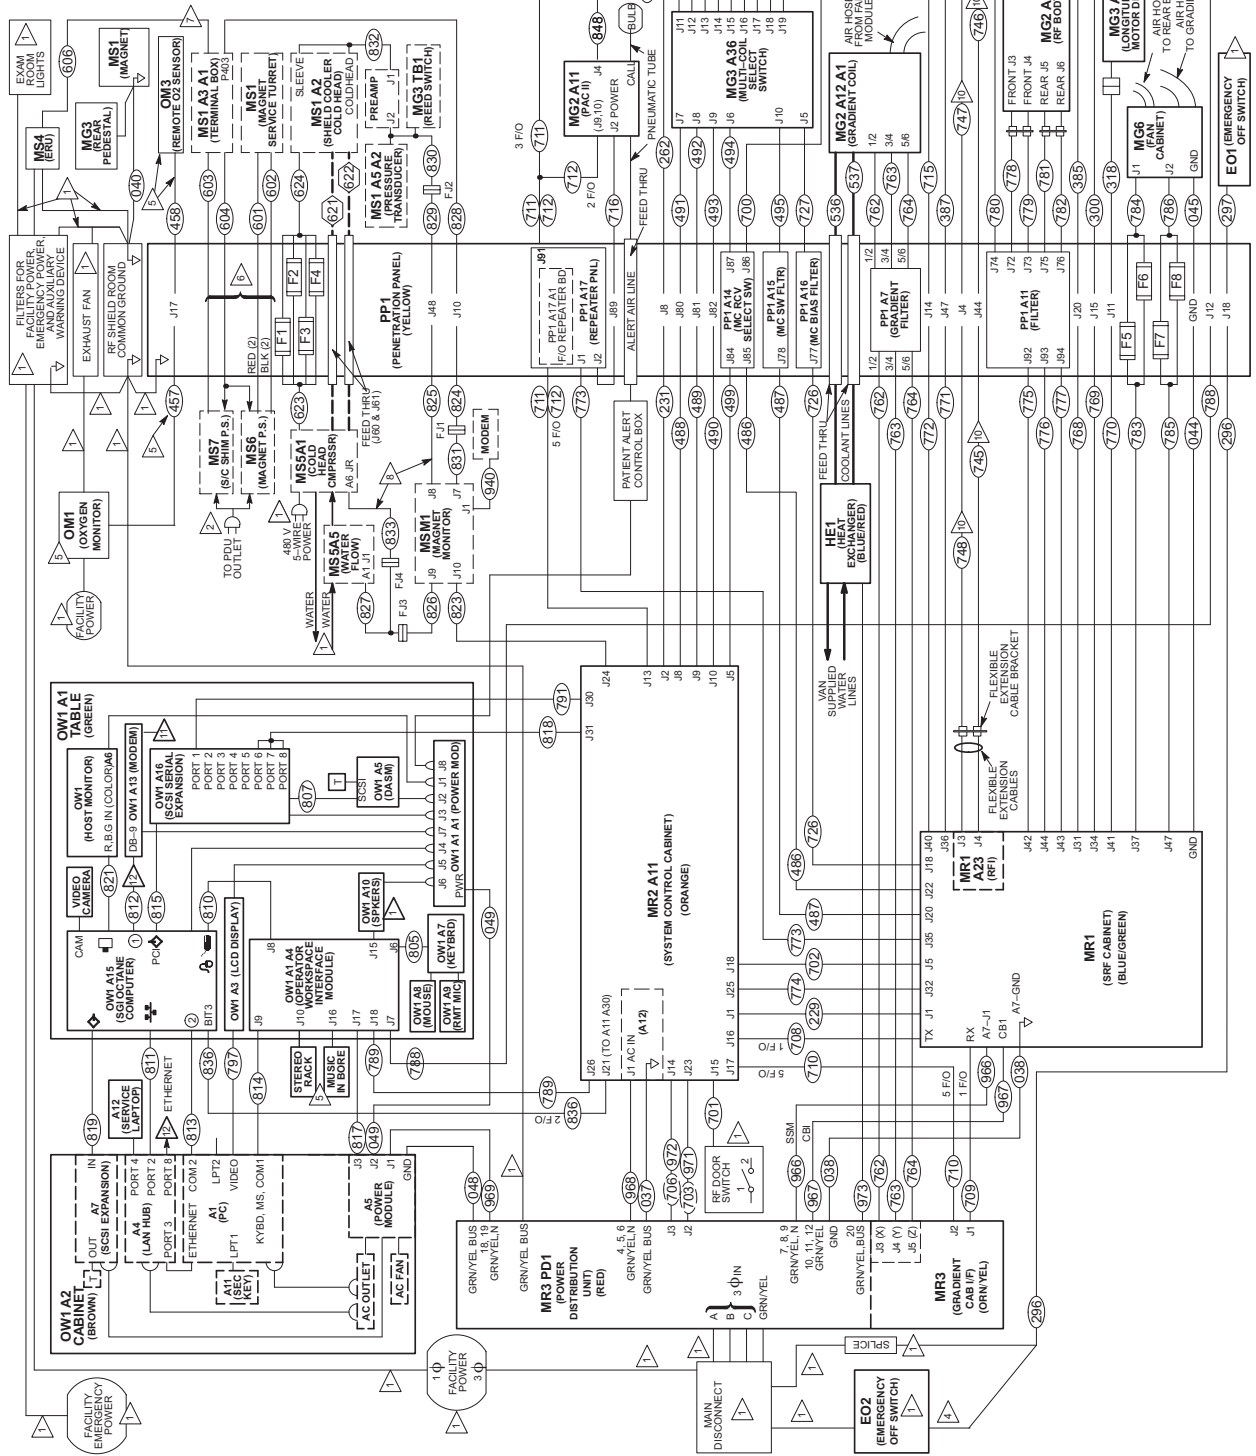

NOTES:

- △ Customer furnished
- △ Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- △ Adaptions selected according to coil used (head, surface) and magnet polarity.
- △ Typical connection for normally closed emergency off switch
- △ Optional. May not be present on all systems.
- △ Magnet tanning cables pass through ramp port on ppi plate.
- △ RUNS 823 TO 833 Furnished with GE Magnet.
- △ Body Hybrid To Body Coil Connections depend on magnet field polarity.
- △ RUN numbers are different according to field strength.
- △ 1.0T Systems use 745, 746, 747 and 747.
- △ Customer supplied telephone line for Insite Modem.
- △ Ethernet cable is customer supplied. RUN 812 and modem may not be required if connection to Insite is provided thru an ethernet connection.


**SIGNA 9 x MR/I SYSTEM INTERCONNECT –
1.0T SmartSpeed (FIXED SITE)**
• without MULTI-COIL

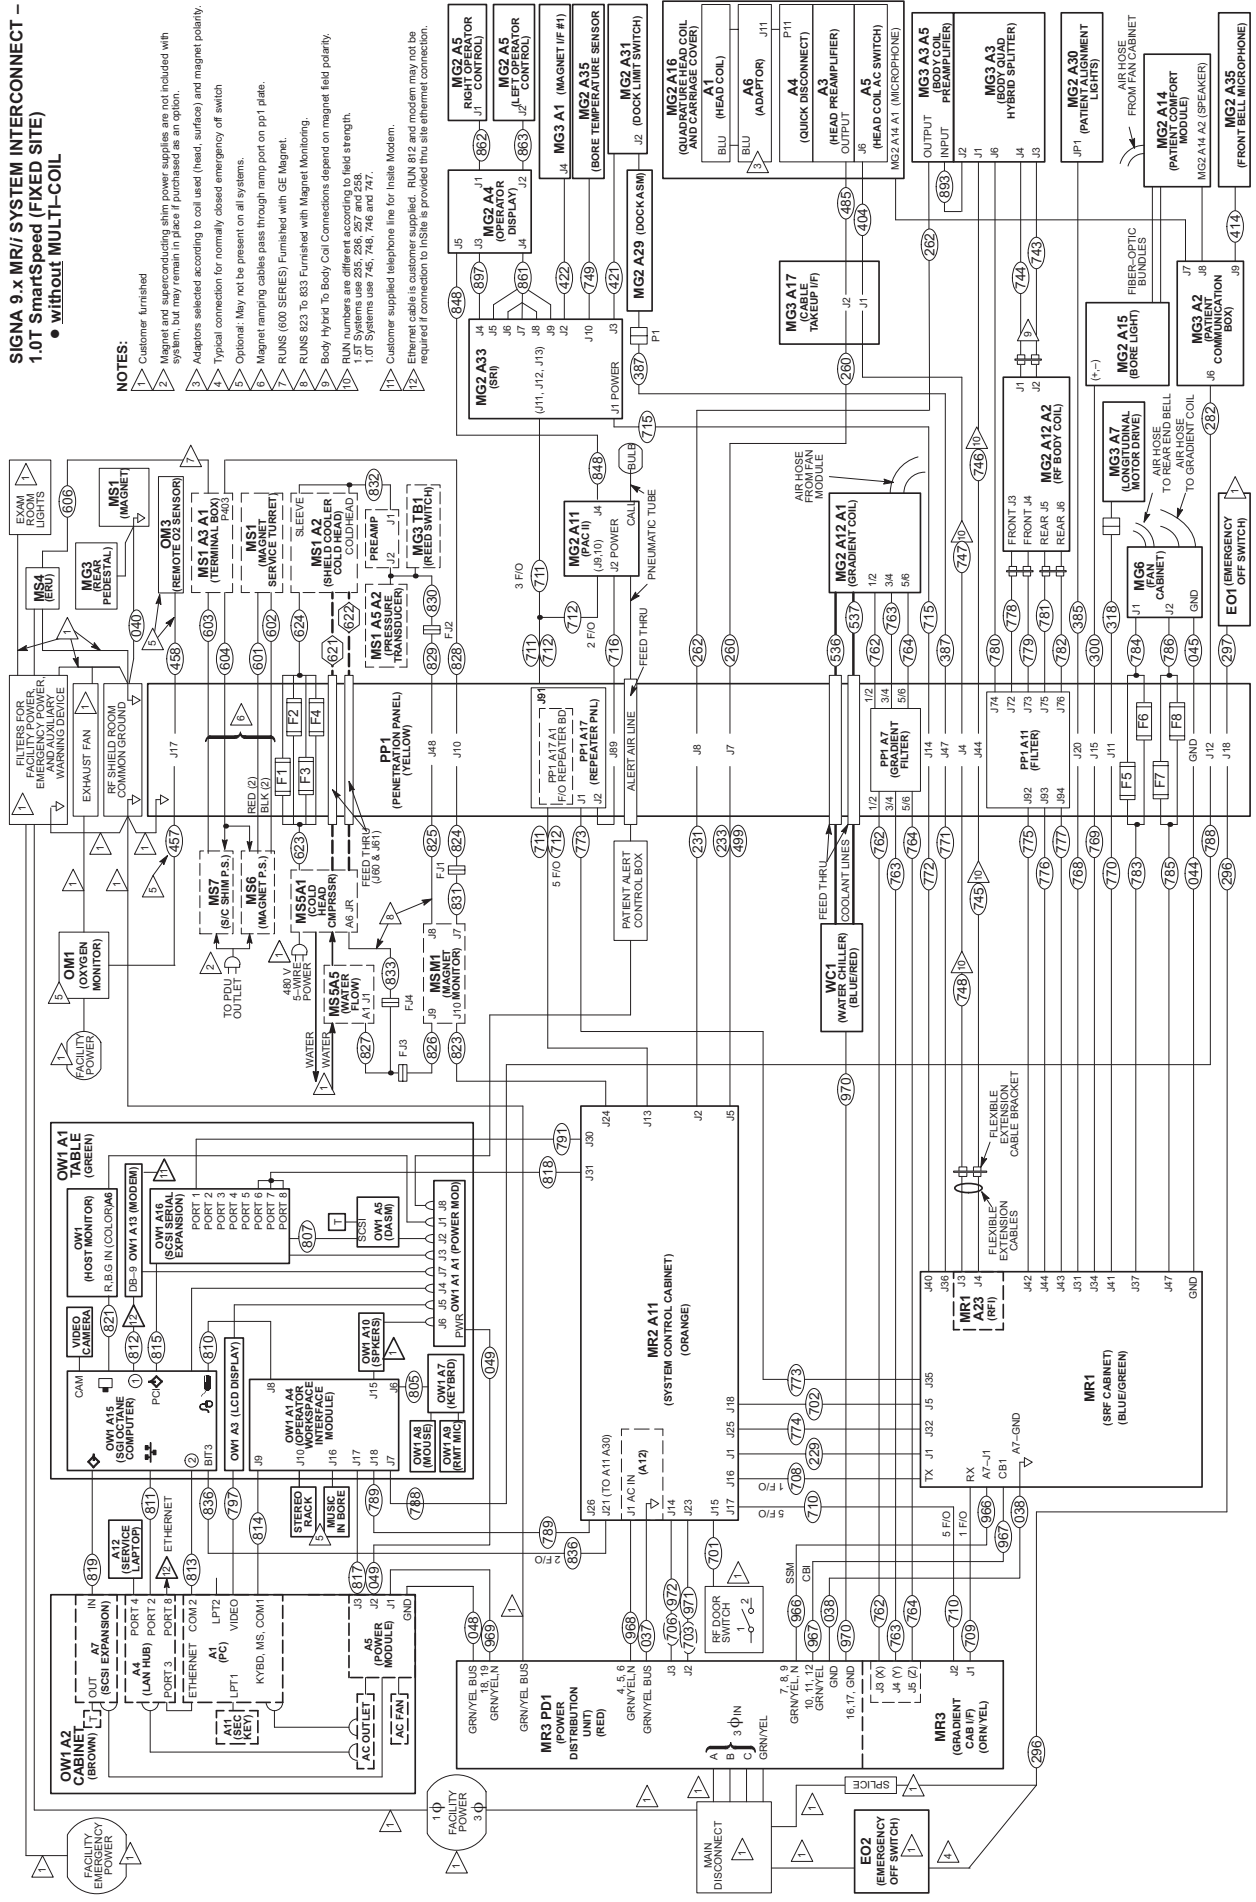

NOTES:

- Customer furnished
- Magnet and associated cabling power supplies are not included with system, but may remain in place if purchased as an option.
- Adapters selected according to coil used (head, surface) and magnet polarity.
- Typical connection for normally dosed emergency off switch
- Optional. May not be present on all systems.
- Magnet amping cables pass through ramp port on ppi plate.
- RUNS 823 To 833 Furnished with Magnet.
- Body Hybrid To Body Coil Connections depend on magnet field polarity.
- RUN numbers are different according to field strength.
- 1.0T Systems use 255, 256, 257 and 258.
- 1.5T Systems use 745, 746, 747 and 747.
- Customer supplied telephone line for InSite Modem.
- Ethernet cable is customer supplied. RUN 812 and modem may not be required if connection to InSite is provided thru site ethernet connection.

**SIGNA 9 x MR/ SYSTEM INTERCONNECT –
1.0T SmartSpeed (MOBILE OR T/R)
• without MULTI-COIL**

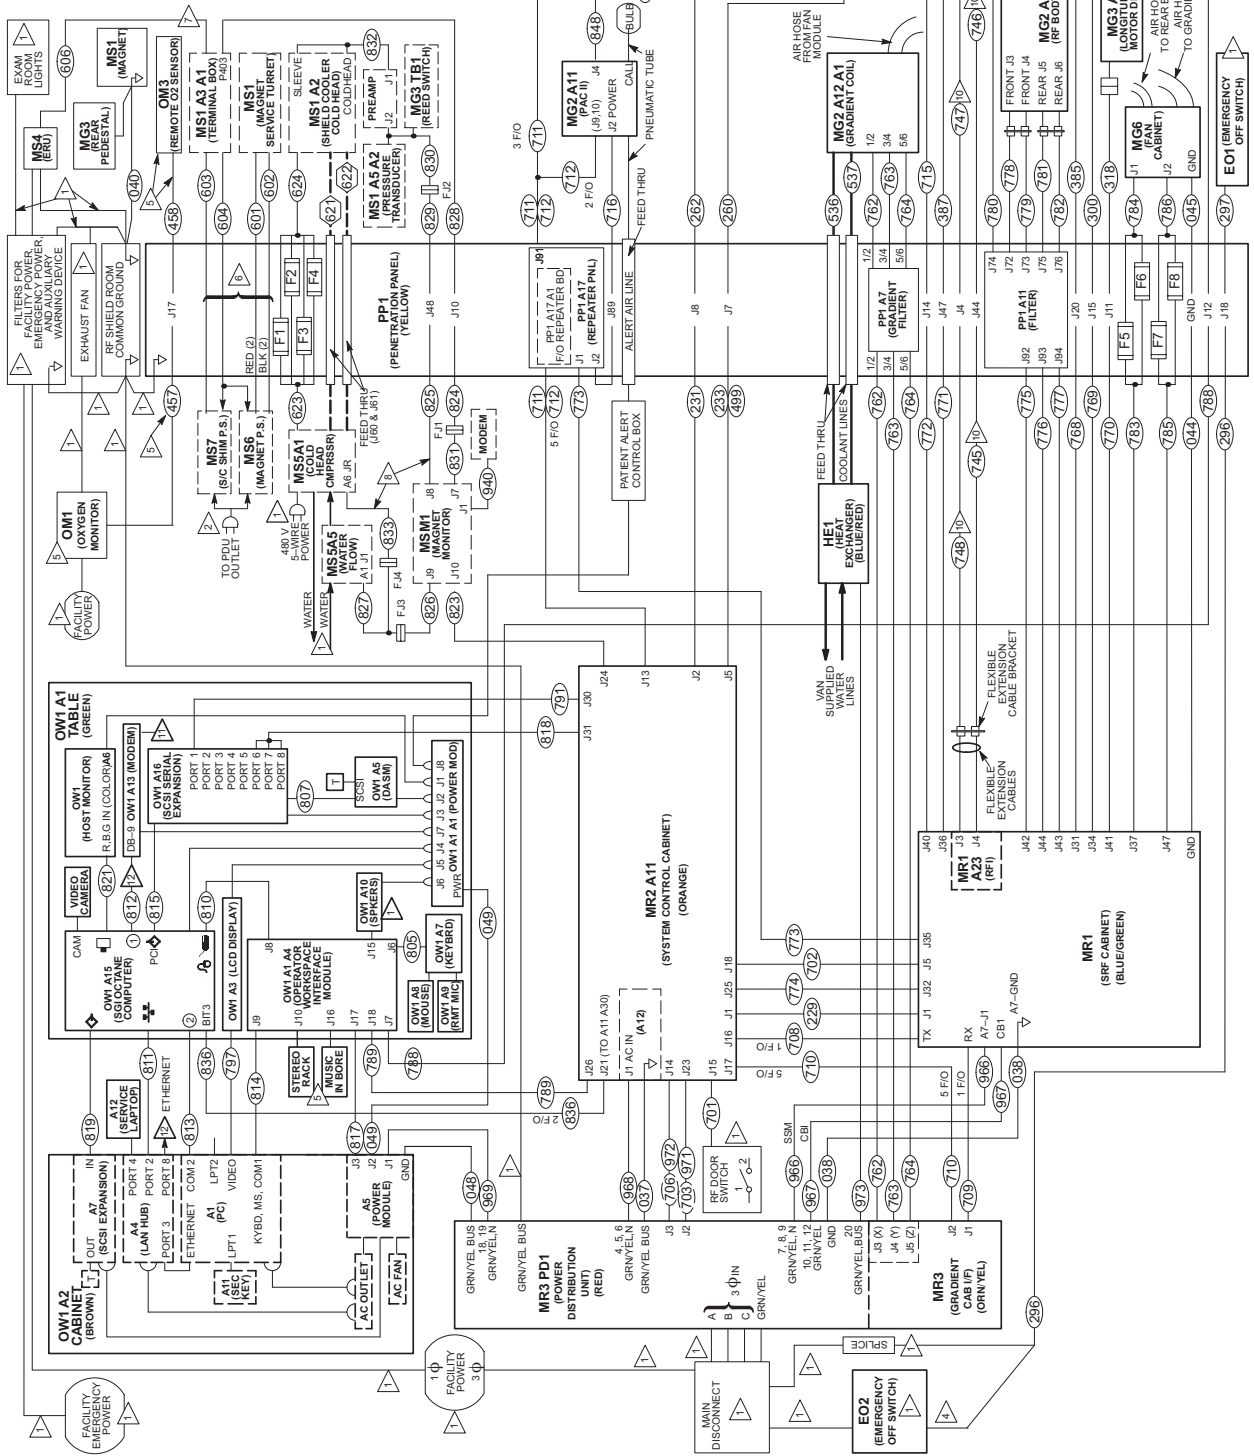

NOTES:

- 1 Customer furnished
- 2 Magnet and superconducting shim power supplies are not included with system, but may remain in place if purchased as an option.
- 3 Adaptors selected according to coil used (head, surface) and magnet polarity
- 4 Typical connection for normally closed emergency off switch
- 5 Optional: May not be present on all systems.
- 6 Magnet ramping cables pass through ramp port on ppt plate.
- 7 RUNS (600 SERIES) Furnished with GE Magnet.
- 8 RUNS 823 to 833 Furnished with Magnet Monitoring.
- 9 Body Hybrid To Body Coil Connections depend on magnet field polarity
- 10 RUN numbers are different according to field strength.
- 11 1.0T Systems use 235, 238, 237 and 238.
- 12 1.0T Systems use 745, 746, 746 and 747.
- 13 Customer supplied telephone line for halite Modem.
- 14 Ethernet cable is customer supplied. RUN 812 and modem may not be required if connection to InSite is provided this site ethernet connection.