


3T TRM RF Body Coil

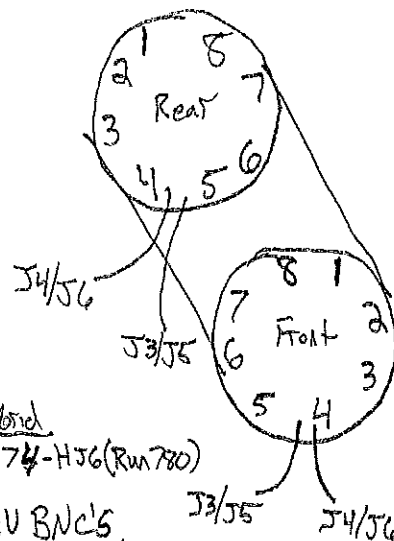

Hybrid

J74-HJ6(Run 780)

HV BNC'S

J72-FJ3(Run 778)

J73-FJ4(Run 779)

J75-RJ5(Run 781)

J76-RJ6(Run 782)

Dynamic Disable boards

Front 1, 2, 3, & 4

Connect to J4/J6

Front 5, 6, 7 & 8

Connect to J3/J5

Rear 1, 2, 3 & 4


Connect to J4/J6

Rear 5, 6, 7 & 8

Connect to J3/J5

(Need to Verify Correct Run Numbers)

1.5T BRM RF Body Coil

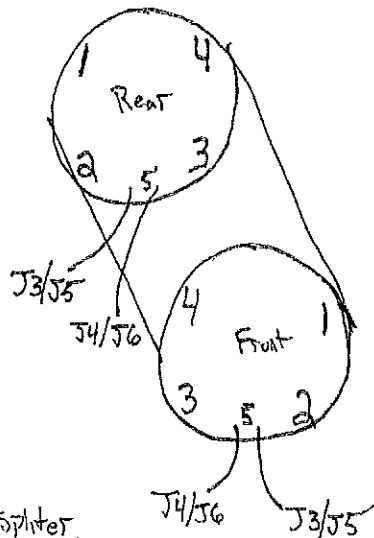

Hybrid Splitter

J74-HJ6(Run 780)

HV BNC'S (Magnet Room)

J72-FJ3(Run 778)

J73-FJ4(Run 779)

J75-RJ5(Run 781)

J76-RJ6(Run 782)

Dynamic Disable boards

Front 1 & 2

Connect to J3/J5

Front 3 & 4

Connect to J4/J6

Resistor Splitter board

& Front 5 & Rear 5

Rear 1 & 2

Connect to J3/J5

Rear 3 & 4

Connect to J4/J6