

820-0242 – Install Instructions Fuse Kit (PN 205-0121-16) GE PN 5266827

Tools Required:

- No special tools required

Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Locate Fuse on DI board in Signal Box (Refer to picture).

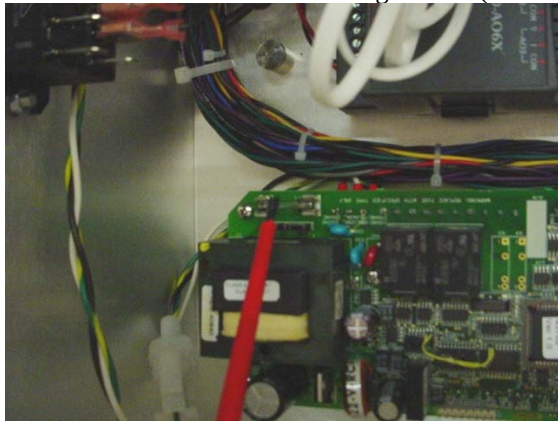


Photo 1 DI Board Fuse location

4. Replace fuse with same value from kit.
5. Locate fuse for mixing valve next to P5 on the top left inside the Signal Box. (Refer to picture).
6. Replace fuse with same value from kit.

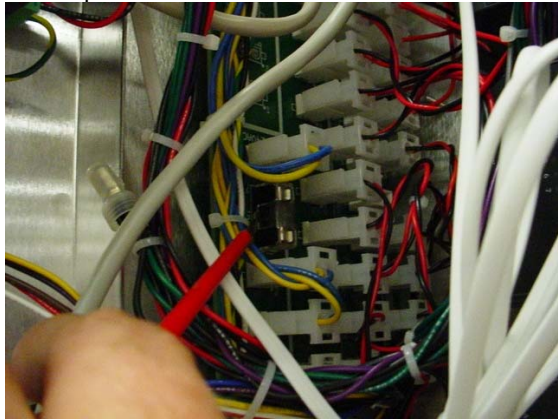


Photo 2 Fuse location on inside of Signal Box

NOTE: On older models of machine there is a fuse for the mixing valve located in the upper left inside of Signal Box. Refer to photo below for location.



Older style in-line
fuse holder

Photo 3 Older Style In-line Fuse holder.

7. Clear Lockout/Tag out of system per GE procedures.
8. Start system in accordance with Lytron manual #820-0190.
9. Observe system for proper operation - specifically in relation to fuse replaced.

End of Procedure