


3—7 SCR FAILURE SENSE BOARD

PD1 A9 A2

PD1 A14 A2

SCR FAILURE SENSE BOARD

46—307819P15

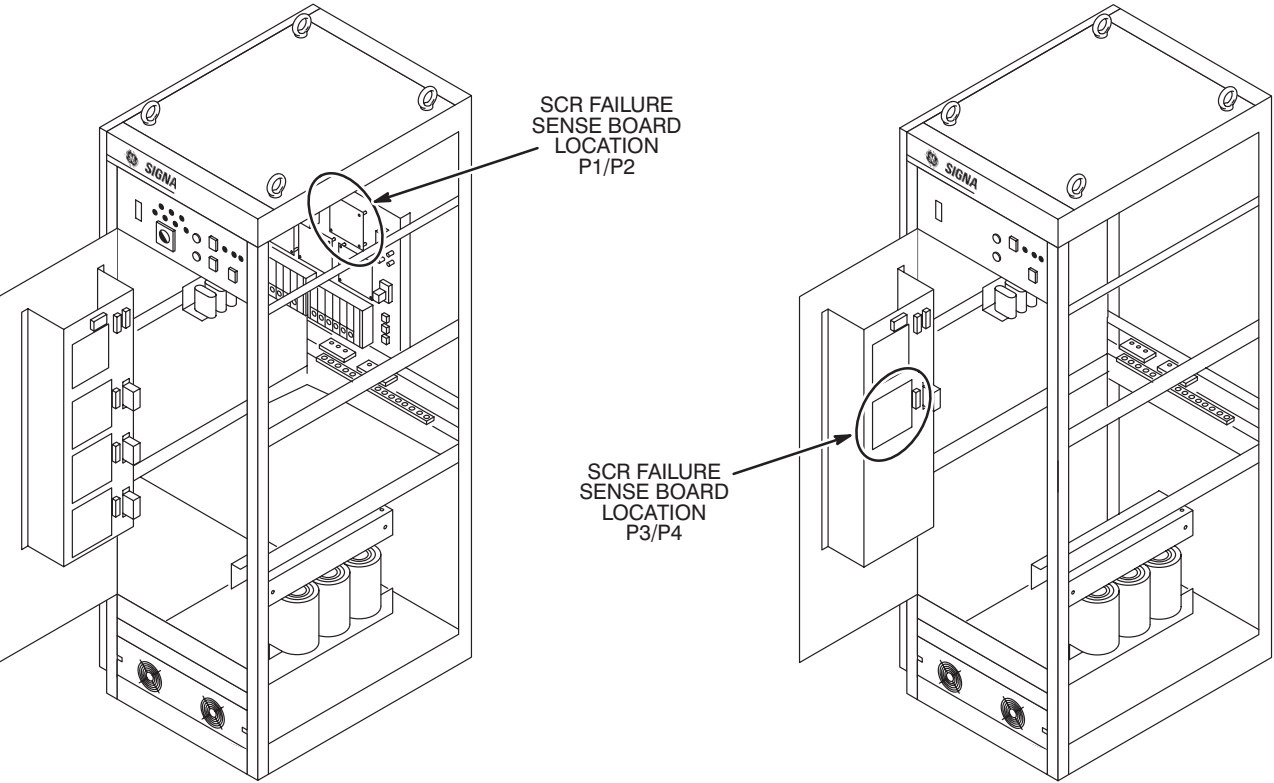

Description

The SCR Failure Sense Board monitors fuselink continuity and will shunt trip the Main Circuit Breaker and provide a signal for the SCR FAILURE LIGHT if this circuit is open (P1/P2). Additional functions of the SCR Failure Sense Board are: providing input, output, and neutral signals to the front panel test points (P1/P2); and providing power to the POWER OFF and EMER. STOP RESET switches.

PD1A9 A2

REV. C	46-307819P15
TITLE	CONT ON SHEET - SH NO. 1
SCR FAILURE SENSE BOARD	

