

TABLE OF CONTENTS

TABLE OF CONTENTS 1

1- BRIDGE REMOVAL 2

 1-1 Front Bridge removal..... 7

 1-2 Rear Bridge Removal..... 8

2- BRIDGE RESTORATION..... 8

REVISION HISTORY 10


1- BRIDGE REMOVAL

1. With the patient transport docked, move the carriage to the rear of the magnet by pressing the **[In Fast]** button on the enclosure.
2. Undock and move patient transport out of the way of the front cover of the magnet.
3. Remove the two rear pedestal magnet corner covers. See Illustration 1-1.



MAGNET CORNER COVERS
ILLUSTRATION 1-1

4. Remove the rear pedestal covers. See Illustration 1-2.

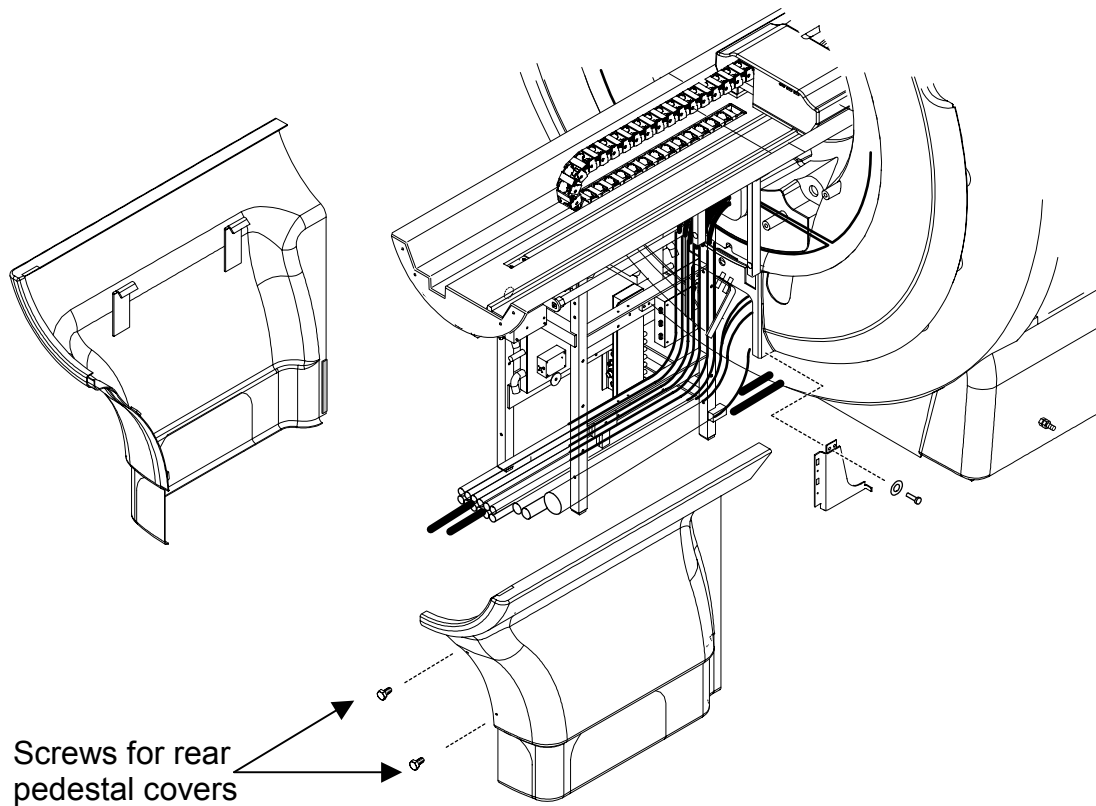

REAR COVERS
ILLUSTRATION 1-2


Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.

For **RF/Pen II** and **RF/PDU Cabinet**: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).
(Refer to *Procedure For Safety: Section 6.*)

Verify that voltage between MR1 A14 TP1 (+) and TP14 (–) is 0 Vdc.


For **RF/Pen II** and **RF/PDU Cabinet**, verify voltage between MR1 A20 TP1 (+) (Dock) and TP14 (–) (Dock RTN) is 0 Vdc.

5. Remove four screws from the top of the carriage cover. See Illustration 1-4.
6. Lift the carriage cover and remove it from the carriage.
7. Lift the tension arm to release tension from carriage drive belt. See Illustration 1-3.

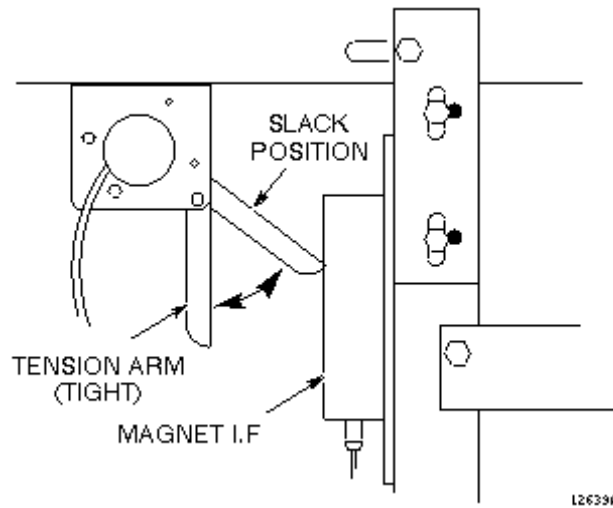


RIGHT SIDE VIEW OF REAR PEDESTAL (AS VIEWED FROM REAR)
ILLUSTRATION 1-3

8. Unclamp both ends of the belt by removing the four screws holding down the two belt clamp plates. See Illustration 1-4.

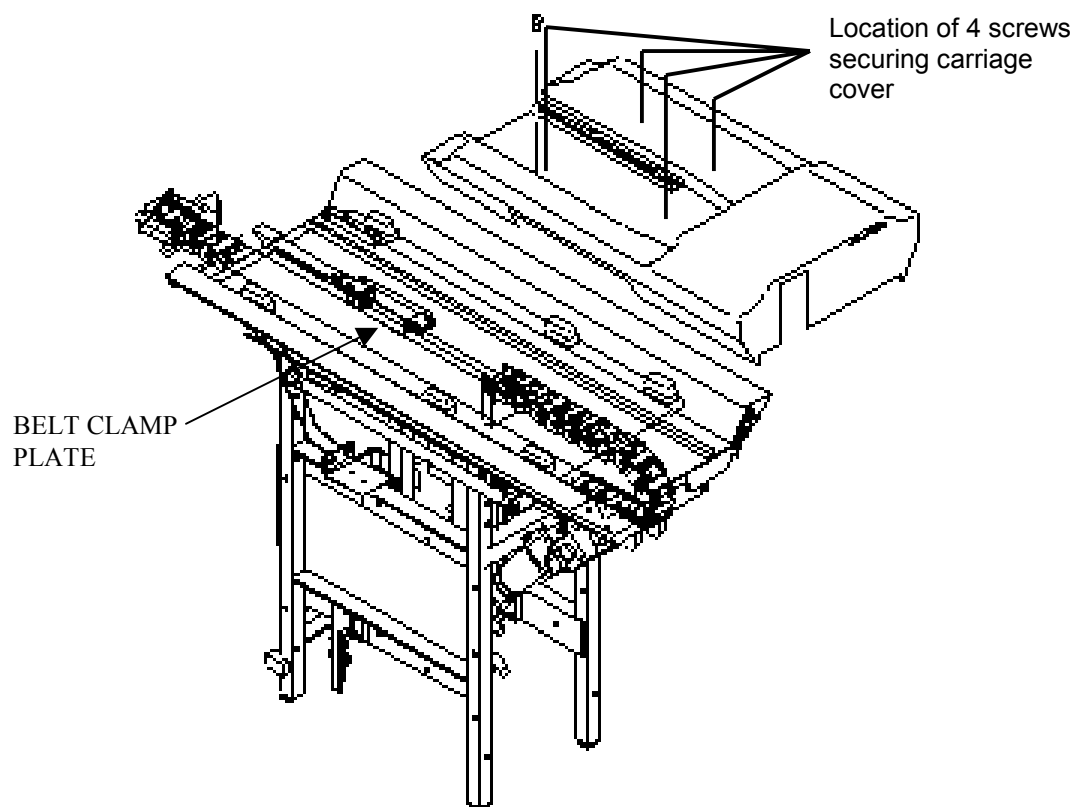

BELT CLAMP PLATES
ILLUSTRATION 1-4

9. Remove the rear section of the belt from being routed through the drive motor and rear pedestal. DO NOT pull the belt completely out from beneath the bridge.
10. Remove the four bolts holding the cable track cup. See Illustration 1-5.

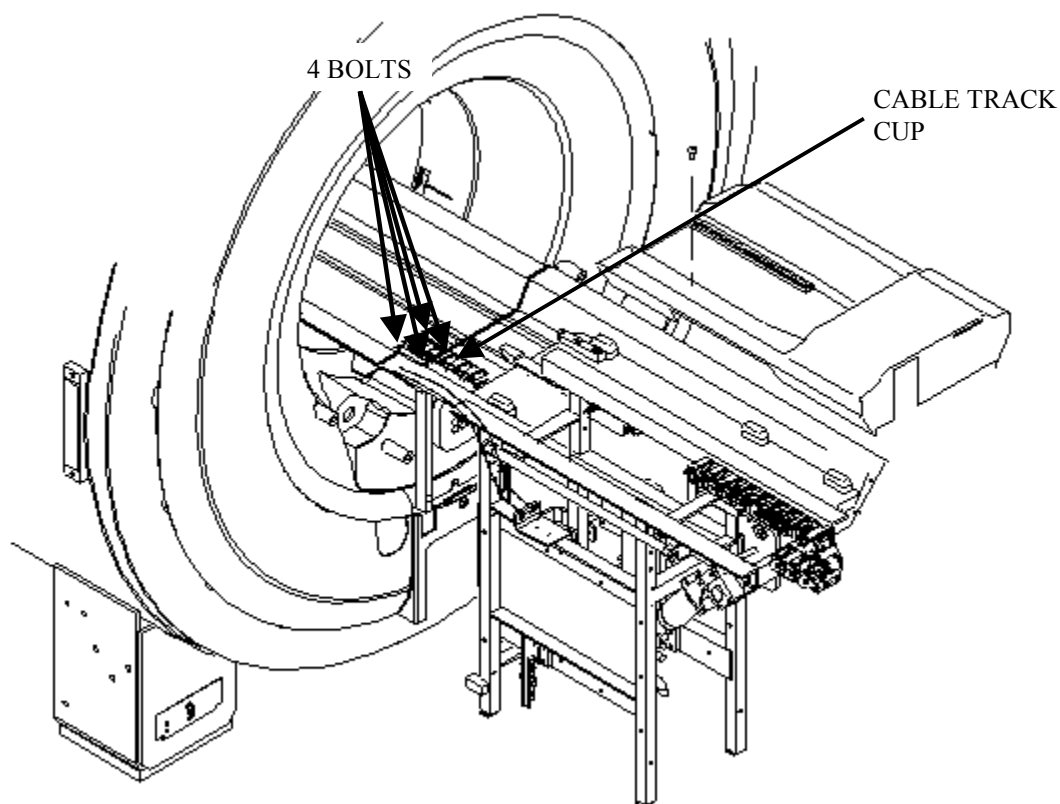


CABLE TRACK PLATE
ILLUSTRATION 1-5

11. Remove the four M10 hex nuts holding the front bridge to the rear bridge, and slide the rear pedestal assembly back. The nuts are located on the rear pedestal side of the mating flanges. See Illustration 1-6.

NOTE


The carriage cover cables do not need to be disconnected from the rear pedestal.

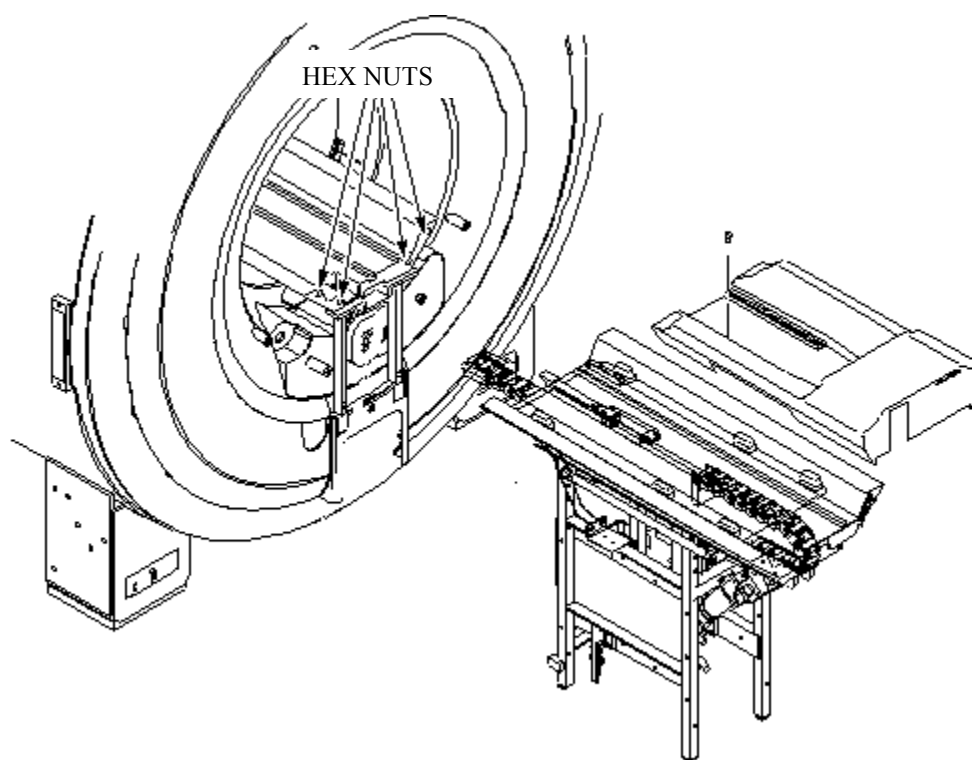

FRONT AND REAR BRIDGE CONNECTION
ILLUSTRATION 1-6

1-1 Removal and Replacement of the Front Bridge

1. Remove the two screws holding the front bridge cover. See Illustration 1-7.

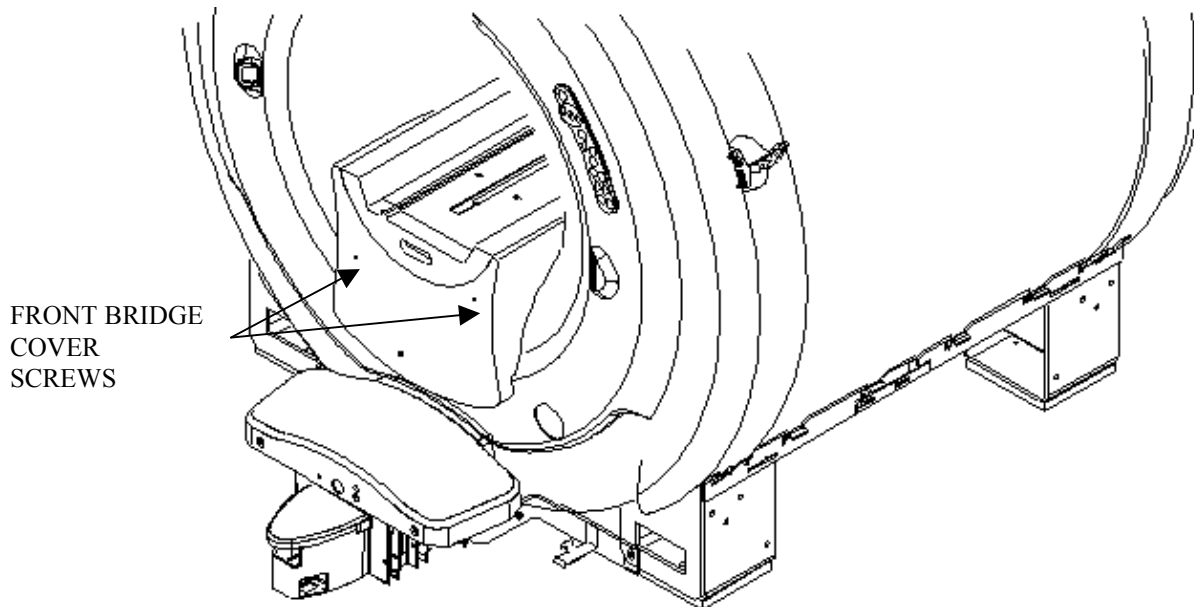

FRONT AND REAR BRIDGE CONNECTION
ILLUSTRATION 1-7

2. Remove the two bolts that attach the bridge bracket to the magnet end ring.
3. Carefully lift and slide the existing front bridge out of the magnet bore.
4. Carefully lay the replacement front bridge in the magnet bore, lining up the support bracket with the screw holes.



FERROUS MATERIAL HAZARD!! THE FRONT PULLY ASSEMBLY CONTAINS PARTS MADE WITH FERROUS COMPONENTS. HOLDING THIS ASSEMBLY TOO CLOSE TO THE MAGNET BORE WILL FORCIBLY ATTRACT IT TO THE MAGNET. TO PREVENT POSSIBLE BODILY INJURY, OR DAMAGE TO COMPONENTS, PUT THE ASSEMBLY IN PLACE DIRECTLY, NOT MOVING IT IN THE MAGNETIC FIELD MORE THAN IS NECESSARY.

5. Install the two front bridge bracket bolts and support hardware. Do not fully tighten the bridge supports at this time. Wait until the front and rear sections have been secured together before fully tightening the front bridge support.

1-2 Removal and Replacement of the rear bridge

1. Remove the two screws that secure the rear bridge to the rear pedestal. See Illustration 1-8.



Remove two
screws, located
under the belt

REAR BRIDGE REMOVAL
ILLUSTRATION 1-8

2. Slowly lift the rear section of the bridge from the rear pedestal.
3. Install the replacement rear bridge by placing it on top of the rear pedestal.
4. Secure the rear bridge to the rear pedestal by reinstalling the two screws from step 1.

2- BRIDGE RESTORATION

1. Slide the rear pedestal back to its original position so it properly mates to the front bridge.
2. Replace the four M10 hex nuts that hold the front bridge and rear bridge together (see Illustration 1-7).
3. Level the bridge by adjusting the vertical location of the front bridge support.
4. Reconnect the cable track cup that holds the bridge cables.
5. Re-clamp the belt using four screws holding the two belt clamp plates. See Illustration 1-4.
6. Push down the tension arm to reapply tension to carriage drive belt. See Illustration 1-3.
7. Replace the carriage cover and reinstall four screws in carriage cover.
8. Install covers on the rear pedestal. See Illustration 1-2.
9. Install the corner magnet covers. See Illustration 1-1.
10. Remove tag-out tag from circuit breaker MR1 A14 CB6.

For **RF/Pen II** and **RF/PDU Cabinet**: Remove tag-out tag from circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

11. Switch on the circuit breaker MR1 A14 CB6 located at the rear of the RF/Pen Cabinet (MR1) on the MEPS module.

For **RF/Pen II** and **RF/PDU Cabinet**: Switch on circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

revision history

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	Oct. 22, 2001	K. Schraufnagel	Preliminary Release
B	Nov 19, 2001	Kargard	Improvements per Engineering
0	Nov 26, 2001	Kargard	Initial zero release