


TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- BRIDGE REMOVAL	2
2- BRIDGE REPLACEMENT	7
REVISION HISTORY	11

Description - Procedure for replacing the patient transport bridge.

1- BRIDGE REMOVAL

1. Undock patient transport. Move patient transport out of the way of the front cover of the magnet.
2. Remove covers on rear pedestal.
3. While holding in the patient transport dock plunger (see Illustration 1-1), move the carriage to the rear of the magnet by pressing the **[In Fast]** button on the enclosure.

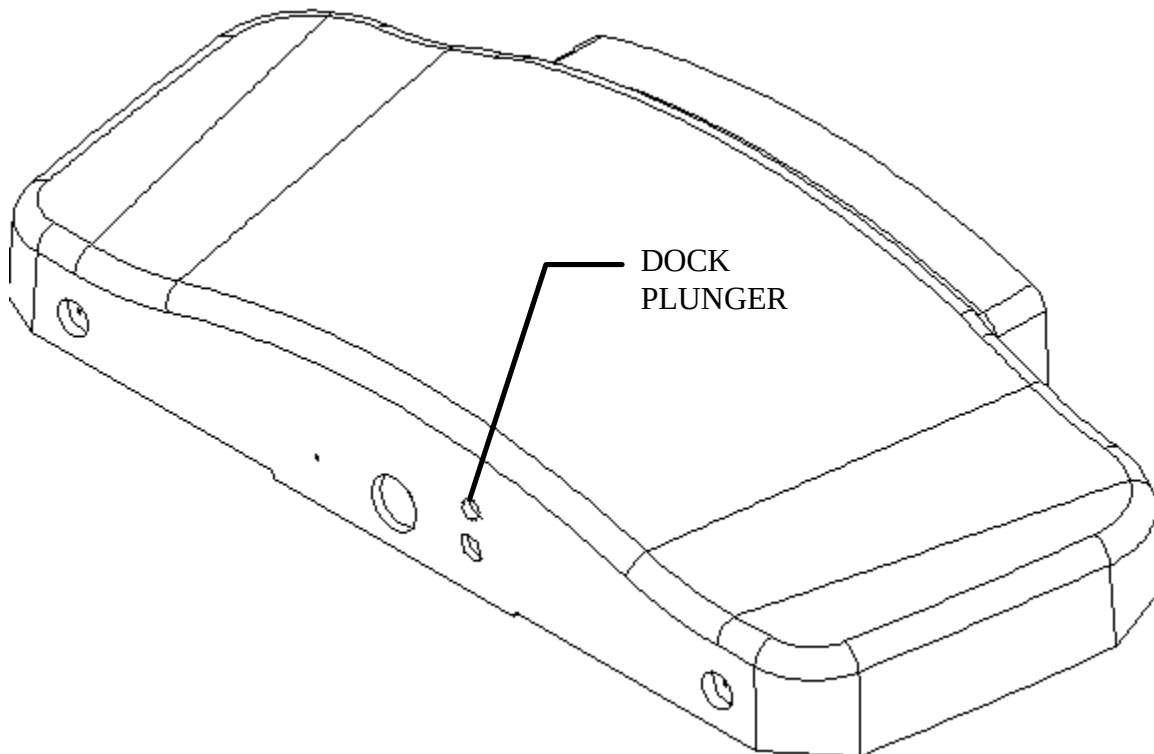

HOLDING DOCK PLUNGER
ILLUSTRATION 1-1

4. Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.

For **RF/Pen II** and **RF/PDU Cabinet**: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).


(Refer to CD-ROM *Dir. 2187583-3 [or -2]*, *MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)

5. Verify that voltage between MR1 A14 TP1 (+) and TP14 (–) is 0 Vdc.

For **RF/Pen II** and **RF/PDU Cabinet**, Verify voltage between MR1 A20 TP1 (+) (Dock) and TP14 (–) (Dock RTN) is 0 Vdc.


6. Remove four screws from the top of the carriage cover.

7. Lift carriage cover and disconnect eleven cable connections. Remove carriage cover from the bridge.
8. Lift the tension arm to release tension from carriage drive belt (see Illustration 1-2).

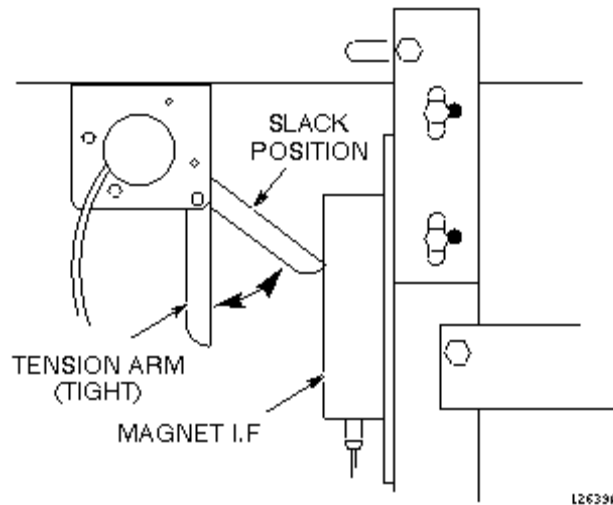

RIGHT SIDE VIEW OF REAR PEDESTAL (AS VIEWED FROM REAR)
ILLUSTRATION 1-2


9. Unclamp belt by removing four screws holding belt clamp plate (see Illustration 1-3).

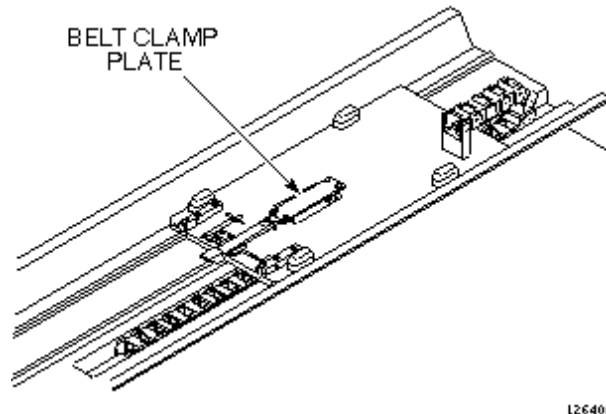

BELT CLAMP PLATE
ILLUSTRATION 1-3


10. Pull belt out completely from beneath the bridge.
11. Disconnect cables from rear pedestal.

12. Carefully disconnect the cable track from carriage by using two standard-blade screwdrivers to gently ease pins from retaining holes in bracket (see Illustration 1-4).

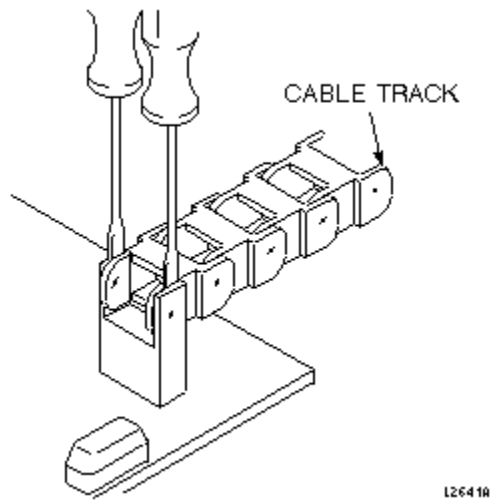

REMOVING CABLE TRACK
ILLUSTRATION 1-4

13. Lift carriage off of bridge.
14. Remove two screws from longitudinal drive assembly tongue at back of bridge while supporting sensor plate beneath bridge as you remove the screws. See Illustration 1-5 for exploded view.

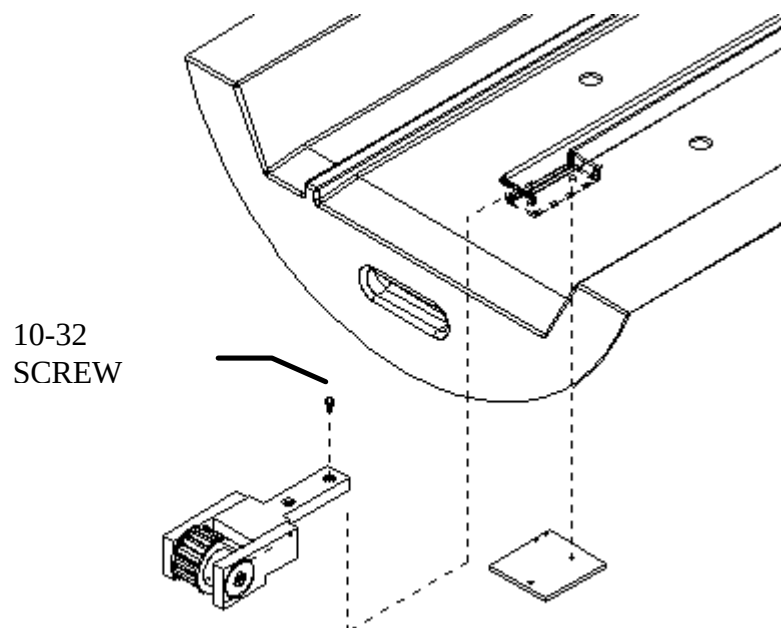

LONG. DRIVE PULLEY ASSEMBLY
ILLUSTRATION 1-5


15. Set sensor plate on top of Magnet I/F, or devise some other method of support so that sensor plate is not hanging by wires.

16. Disconnect cable run 318 from short cable on Longitudinal Drive motor.
17. Disconnect Longitudinal Encoder cable from J3 on Magnet I/F.

DANGER!!

FERROUS MATERIAL HAZARD!! THE PULLEY ASSEMBLY CONTAINS PARTS MADE WITH FERROUS COMPONENTS. HOLDING THIS ASSEMBLY TOO CLOSE TO THE MAGNET BORE WILL FORCIBLY ATTRACT IT TO THE MAGNET. TO PREVENT POSSIBLE BODILY INJURY, OR DAMAGE TO COMPONENTS, REMOVE THE ASSEMBLY DIRECTLY, NOT MOVING IT IN THE MAGNETIC FIELD MORE THAN IS NECESSARY.


18. Remove two bolts holding longitudinal drive assembly to the rear pedestal (see Illustration 1-6).

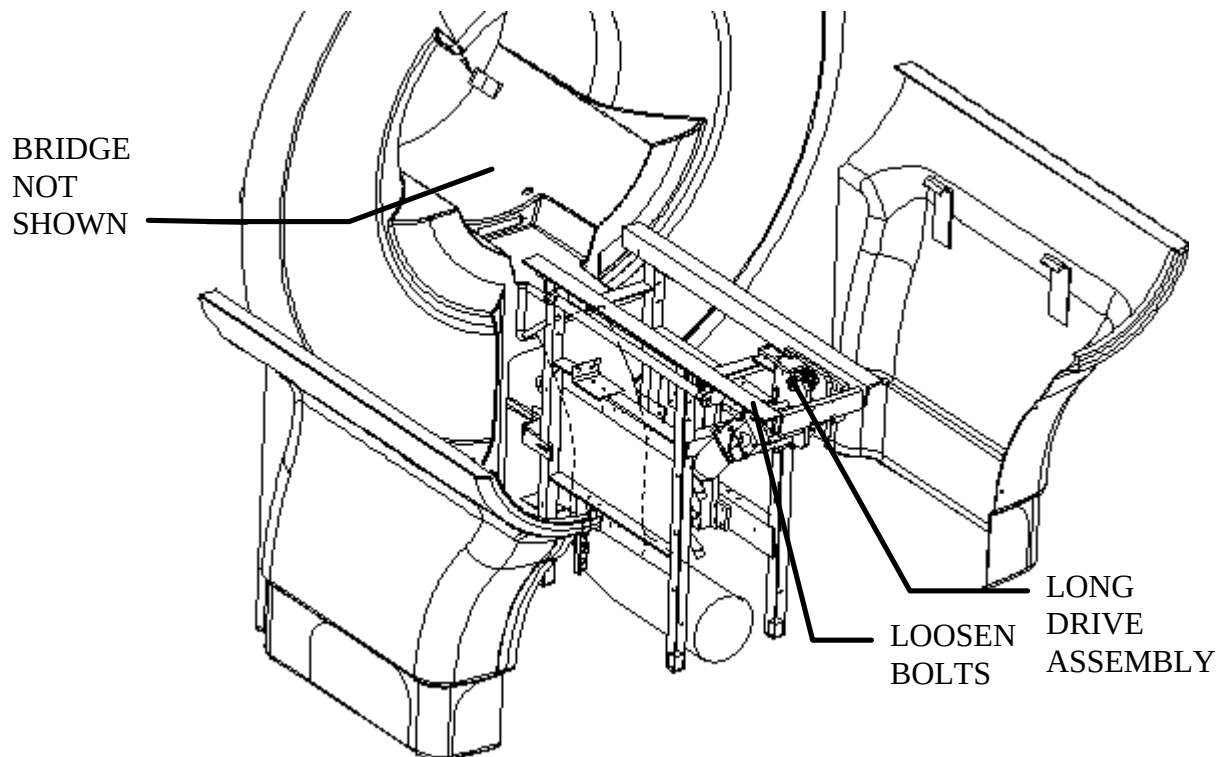

LONG. DRIVE ASSEMBLY LOCATION
ILLUSTRATION 1-6

19. Tilt drive assembly so tongue points upward; remove drive assembly, taking care not to damage motor by bumping it against rear pedestal.
20. Loosen two screws from the tongue of the front belt pulley assembly, and remove clamp plate from beneath bridge. Remove screws and washers from tongue.
21. Remove cables from J1 and J2 of dock control module.

22. Using an allen wrench, remove (4) four M6 bolts holding down bridge. Two of the bolts are in the front of the bore and two bolts are in the back of the bore. Lift front of bridge off front bridge pin (see Illustration 1-7).

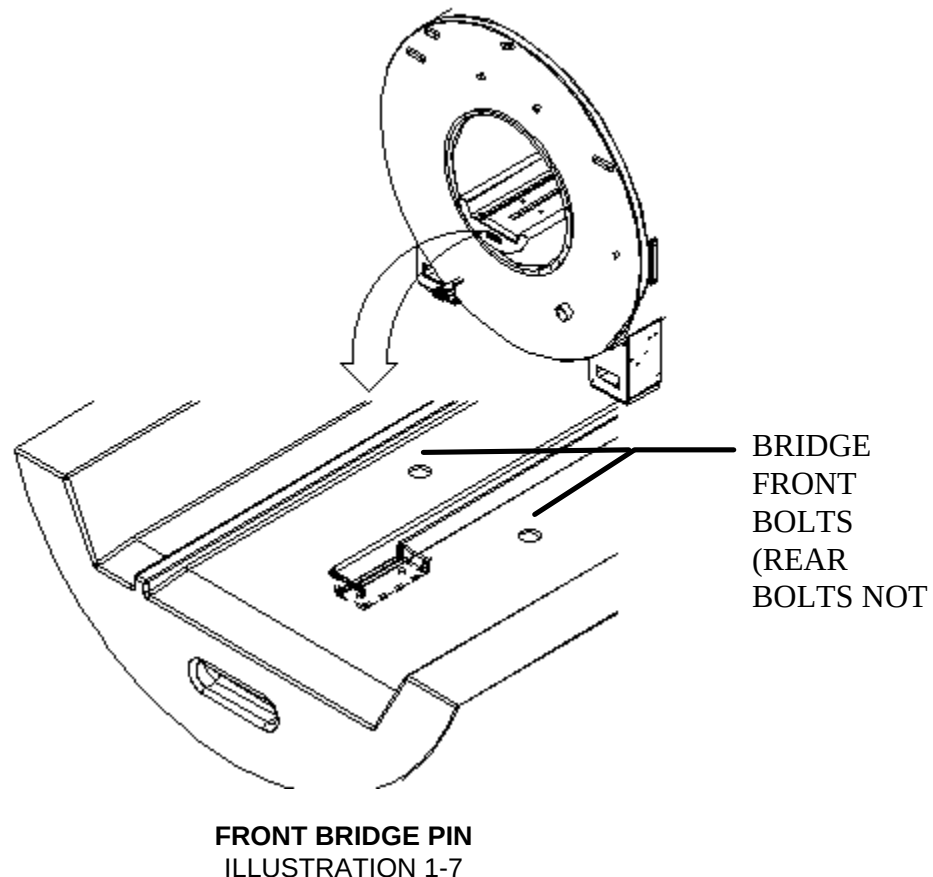

DANGER!!

FERROUS MATERIAL HAZARD!! THE FRONT BRIDGE SUPPORT ASSEMBLY CONTAINS PARTS MADE WITH FERROUS COMPONENTS. HOLDING THIS ASSEMBLY TOO CLOSE TO THE MAGNET BORE WILL FORCIBLY ATTRACT IT TO THE MAGNET. TO PREVENT POSSIBLE BODILY INJURY, OR DAMAGE TO COMPONENTS, REMOVE THE ASSEMBLY DIRECTLY, NOT MOVING IT IN THE MAGNETIC FIELD MORE THAN IS NECESSARY.

23. Remove the front bridge support assembly.
24. Carefully lift and slide bridge out of the magnet bore.


2- BRIDGE REPLACEMENT

1. Lay belt in bore with teeth facing up. Have excess length at front of magnet.

DANGER!!

FERROUS MATERIAL HAZARD!! THE FRONT SUPPORT ASSEMBLY CONTAINS PARTS MADE WITH FERROUS COMPONENTS. HOLDING THIS ASSEMBLY TOO CLOSE TO THE MAGNET BORE WILL FORCIBLY ATTRACT IT TO THE MAGNET. TO PREVENT POSSIBLE BODILY INJURY, OR DAMAGE TO COMPONENTS, PUT THE ASSEMBLY IN PLACE DIRECTLY, NOT MOVING IT IN THE MAGNETIC FIELD MORE THAN IS NECESSARY.

2. Install two front bridge support allen bolts.
3. Install front bridge support assembly with two bolts.
4. Connect cables to J1 and J2 on dock control module.
5. Carefully lift and slide bridge into the magnet bore.
6. Feed the drive belt into and through front pulley assembly.
7. Insert the end of the belt, and tongue of the pulley assembly into the bridge.
8. Install two screws into the tongue of the front bridge mount and position clamp plate under the bridge. Tighten screws into the clamp plate (see Illustration 2-1).

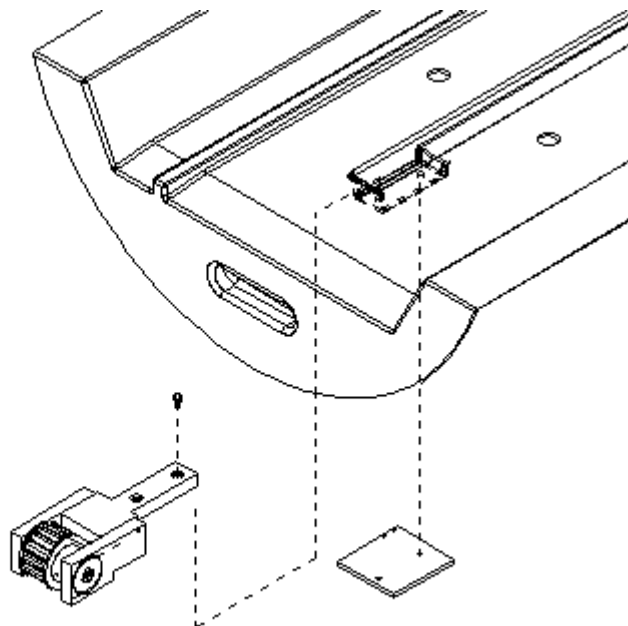


FRONT BRIDGE MOUNT
ILLUSTRATION 2-1

DANGER!!

FERROUS MATERIAL HAZARD!! THE DRIVE ASSEMBLY CONTAINS PARTS MADE WITH FERROUS COMPONENTS. HOLDING THIS ASSEMBLY TOO CLOSE TO THE MAGNET BORE WILL FORCIBLY ATTRACT IT TO THE MAGNET. TO PREVENT POSSIBLE BODILY INJURY, OR DAMAGE TO COMPONENTS, PUT THE ASSEMBLY IN PLACE DIRECTLY, NOT MOVING IT IN THE MAGNETIC FIELD MORE THAN IS NECESSARY.


8. At the back of the magnet, at the rear pedestal, tilt drive assembly so tongue points upward and insert drive assembly tongue into bridge, taking care not to damage motor by bumping it against rear pedestal (see Illustration 1-6 in Section 1).
9. Install two bolts holding longitudinal drive assembly to the rear pedestal.
10. Connect Longitudinal Encoder cable to J3 on Magnet I/F #1.
11. Connect run 318 to short cable on Longitudinal Drive motor.
12. Insert two screws through bridge and tongue at back of bridge, and support sensor plate beneath bridge as you tighten the screws (see Illustration 2-2).

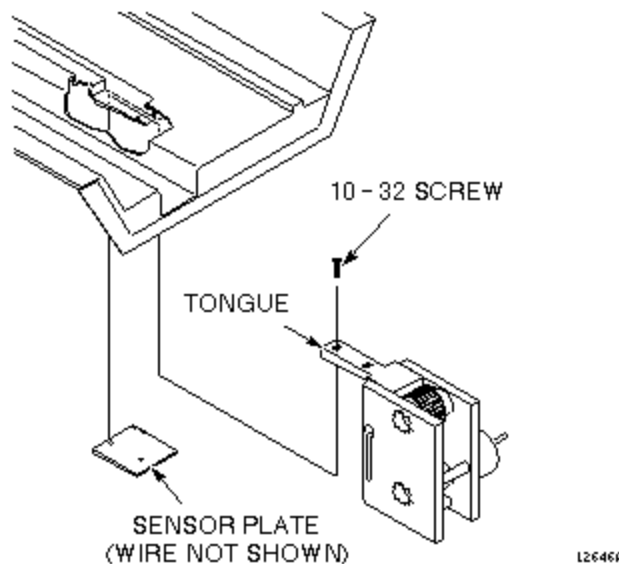

MOUNTING BRIDGE ON REAR BRIDGE MOUNT
ILLUSTRATION 2-2

13. Set carriage into position on the bridge.
14. Carefully connect the PlastiTrak to carriage by sliding pins into retaining holes in bracket.
15. Connect eleven cables to connectors on rear pedestal.

16. Insert both ends of the drive belt up into the carriage base. Illustration 2-3 shows routing of belt.

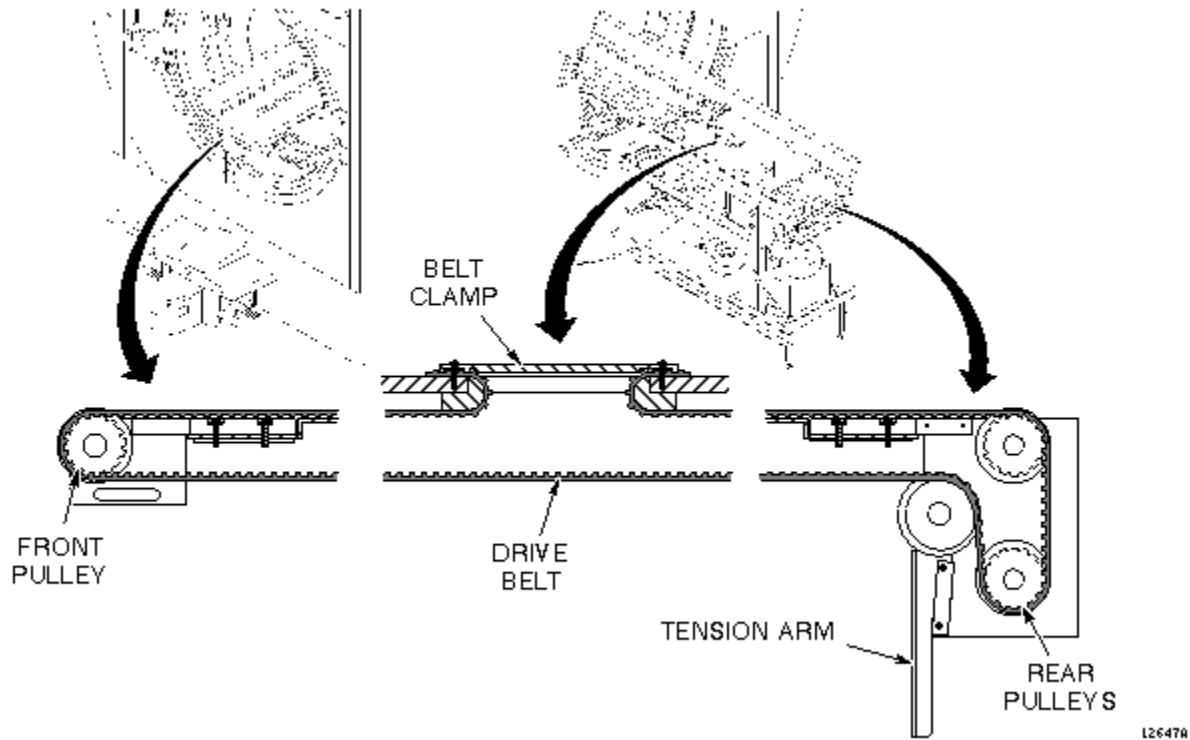

ROUTING DRIVE BELTS
ILLUSTRATION 2-3

Note

At rear pedestal, route drive belt over rear pulleys only. Do not route the drive belt over cross bars, or other objects in the rear pedestal. Doing so can overstress the drive system.

17. Install four screws holding belt clamp plate. See Illustration 1-3 in Section 1 and Illustration 2-3 above.
18. Push down the tension arm to apply tension to carriage drive belt (see Illustration 1-2 in Section 1).
19. With carriage cover in approximate position, connect eleven cable connections inside of carriage cover.
20. Replace carriage cover; install four screws in carriage cover.
21. Push in and latch front cover of the magnet and install covers on rear pedestal.
22. Remove tag-out tag from circuit breaker MR1 A14 CB6.

For **RF/Pen II** and **RF/PDU Cabinet**: Remove tag-out tag from circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

23. Switch on circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on MEPS module.

For **RF/Pen II** and **RF/PDU Cabinet**: Switch on circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM).

REVISION HISTORY

RE V	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
A	Nov 1, 1998	W. Pasciak	Initial release
0	Feb 4, 1999	W. Pasciak	Final release