

TABLE OF CONTENTS

<u>TABLE OF CONTENTS</u>	1
<u>DESCRIPTION</u>	2
<u>1- INTRODUCTION</u>	2
<u>2-REPLACEMENT / INSTALLATION OF PC MONITOR</u>	2
2-1 Fixed site- 12.1 or 15.1 inch PC LCD Monitor Replacement / Installation	2
2-2 Mobile- PC 15.1 inch LCD Monitor Replacement / Installation (Amtran Model AX150T)	3
2-3 Mobile- PC 12.1 inch LCD Monitor Replacement / Installation	5
<u>3- PC LCD MONITOR CONTRAST AND BRIGHTNESS ADJUSTMENT</u>	7
3-1 Contrast and Brightness Adjust on the 10 inch NEO LCD	7
3-1-1 Sharpness, Phase, Position and Reset Adjustment On The NEO LCD	7
3-2 Contrast and Brightness Adjust on the 12 inch NVIEW LCD	7
3-2-1 NView Adjustment Procedure	7
<u>4- CHANGING RESOLUTION WINDOWS 95/98 ALL 15 INCH LCD MONITORS</u>	8
4-1 STB Video Driver Board- Display Setup	8
4-2 ATI Video Driver Board – Display Setup	8
<u>5- CHANGING RESOLUTION WINDOWS 95/98 ALL 10 AND 12 INCH LCD MONITORS</u>	9
5-1 STB Video Driver Board- Display Setup for 10 and 12 inch LCD Monitors	9
5-2 ATI Video Driver Board – Display Setup for 10 and 12 inch LCD Monitors	10
<u>A- APPENDIX- CTX PANOVIEW 600 INSTALLATION INSTRUCTIONS, WINDOWS 3.1</u>	11
<u>B- APPENDIX B- TROUBLESHOOTING THE PC MONITOR</u>	14
B-1 If the PC Monitor is experiencing Alphanumeric Sheering	14
B-2 PC Monitor is experiencing visible Raster Lines	14
B-3 PC Monitor is experiencing Blocky Icons and characters look cut off	14
B-4 PC Monitor is experiencing fuzzy regions	14
B-5 PC Monitor Does not display but the Power LED is blinking green	14
<u>REVISION HISTORY</u>	15

DESCRIPTION

There are several model types of LCDs now being used. The First and older type is a 10 inch NEO Systems product. The next model type is the 12 inch CTX Panoview 600. The latest Model type is the 15 inch Amtran.

1- INTRODUCTION

The LCD Desktop Monitor adjustments at the front of the panel should be intuitive. If necessary, consult the vendor manual that came with the monitor.

2-REPLACEMENT / INSTALLATION OF PC MONITOR

2-1 Fixed site- 12.1 or 15.1 inch PC LCD Monitor Replacement / Installation


1. Shutdown Windows.
2. Shutdown the PC, turn it off.
3. Disconnect the Data cable from the old PC Monitor.
4. Disconnect the Power cable from the old PC Monitor.
5. Remove the old PC Monitor from the Workspace.
6. Unpack the replacement PC Monitor and place it on the Workspace desk.
7. If necessary, feed the new data cable and power cord through the opening provided.
8. Remove the old power supply and feed the new power cord through the opening provided.
9. Plug the new PC Monitor Power Supply into the terminal strip under the Workspace.
10. If necessary, install the data cable to the back of the Workspace PC and also connect the other end, to the PC Monitor.
11. Locate the Power Switch of the PC LCD monitor.
12. Turn on the PC. If Windows does not start, start windows.
13. Windows will "Auto detect" the Basic "Plug and Play" Driver. Allow the system to use this driver.

2-2 Mobile- PC 15.1 inch LCD Monitor Replacement / Installation (Amtran Model AX150T)



15.1IN AMTRAN LCD MONITOR
ILLUSTRATION 2-1

1. Shutdown Windows.
2. Shutdown the computer and turn it off.
3. Disconnect the Data cable from the old PC Monitor.
4. Disconnect the Power cable from the old PC Monitor.
5. Remove the three screws holding the old PC Monitor to the Desktop.
6. Remove the old PC Monitor from the Desktop.
7. Unpack the replacement PC Monitor and place it on the Desktop.
8. Inspect the base of the new PC Monitor. If this is NOT the same brand of replacement monitor, the existing holes will not align properly. Refer to illustration 2-2 and install the PC monitor Base Adapter Plate using the kit provided. Once the adapter plate is installed the existing boltholes can be used to secure the monitor to the desktop. (See Next page).

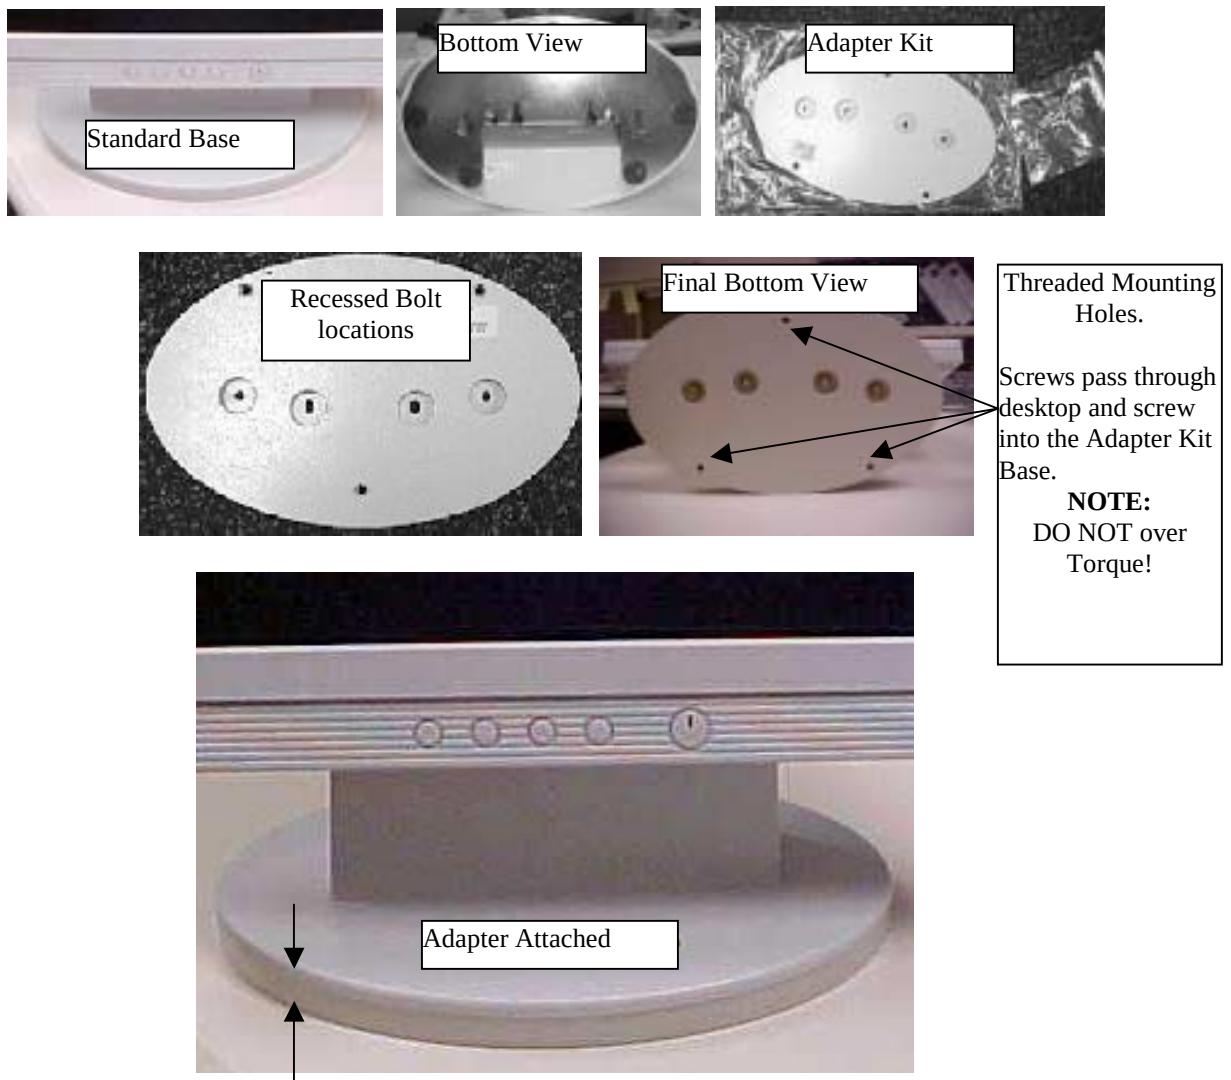


ATTACHING THE AMTRAN MOBILE BASE ADAPTER
ILLUSTRATION 2-2

9. Secure the new monitor to the Desktop with the mounting screws. Do not over torque.
10. If necessary, feed the new data cable through the opening provided and attach to PC Monitor.
11. Install the new power Supply and feed the new power cord through the opening provided.
12. Plug the new PC Monitor Power Supply into the terminal strip under the Workspace.
13. Locate the Power Switch on the LCD and Turn it on.

14. Restore power to the PC, Windows should boot up automatically and detect the monitor, ("new Hardware Found"). It will load the standard Plug and Play Driver.

2-3 Mobile- PC 12.1 inch LCD Monitor Replacement / Installation

1. Shutdown Windows.
2. Shutdown the PC.
3. Disconnect the Data cable from the old PC Monitor.
4. Disconnect the Power cable from the old PC Monitor.
5. Remove the three screws holding the PC Monitor to the Desktop.
6. Remove the old PC Monitor from the Desktop.
7. Unpack the replacement PC Monitor and place it on the Desktop.
8. Inspect the base of the new PC Monitor. If this is NOT the same brand of replacement monitor, the existing holes will not align properly. Refer to illustration 2-4 and drill the new holes in the desktop as the drawing describes. The old boltholes will be covered by the base of the new PC Monitor.

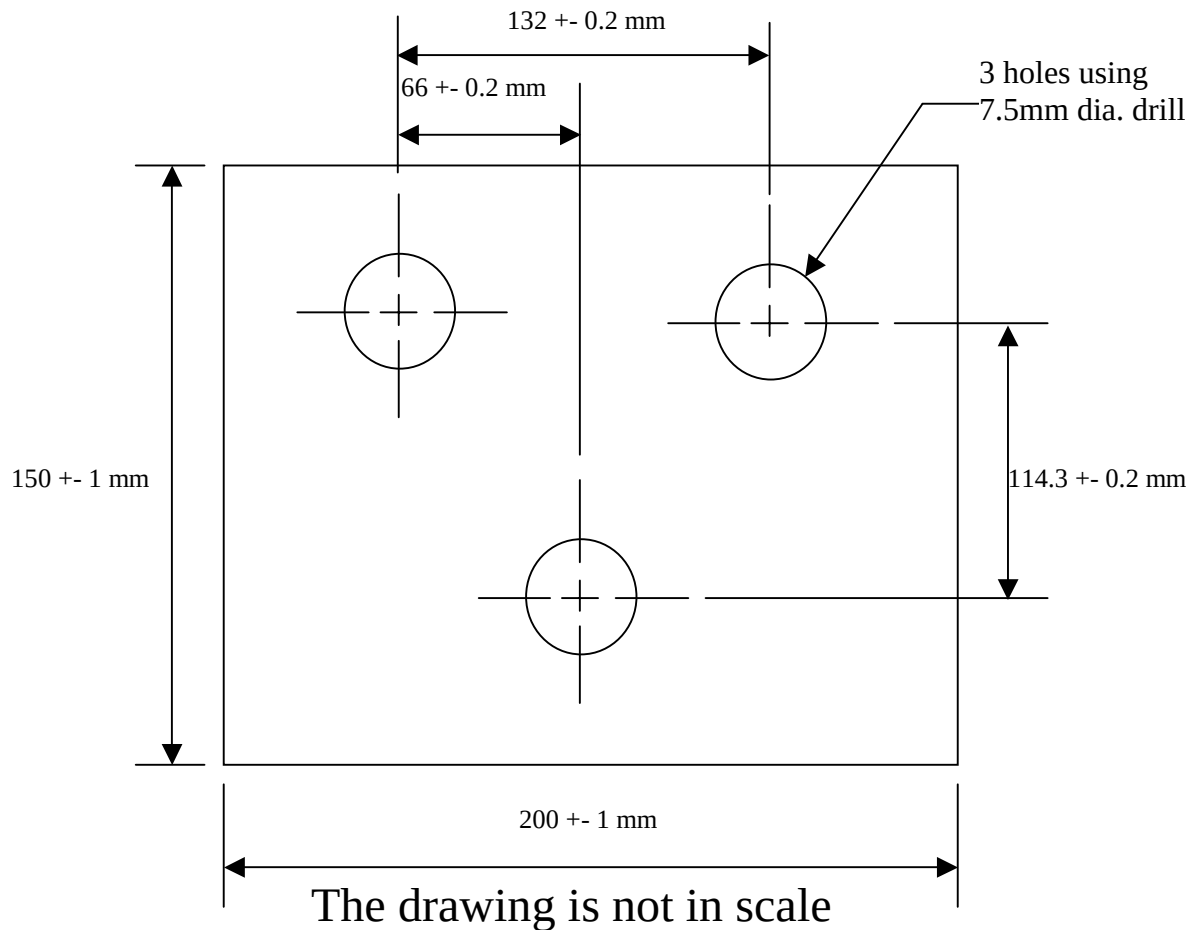


MOBILE BOLTHOLE TEMPLATE FOR NEWER 12.1 LCD PC MONITOR
ILLUSTRATION 2-4

9. Secure the new monitor to the Desktop with the mounting screws.
10. If necessary, feed the new data cable and power cord through the opening provided and connect it to the PC Monitor.
11. Install the new power supply and feed the new power cord through the opening provided.
12. Locate the Power Switch on the PC Monitor and turn it on.
13. Restart the PC, Windows should automatically boot and load the default "Plug and Play" driver.

3- PC LCD MONITOR CONTRAST AND BRIGHTNESS ADJUSTMENT

3-1 Contrast and Brightness Adjust on the 10 inch NEO LCD

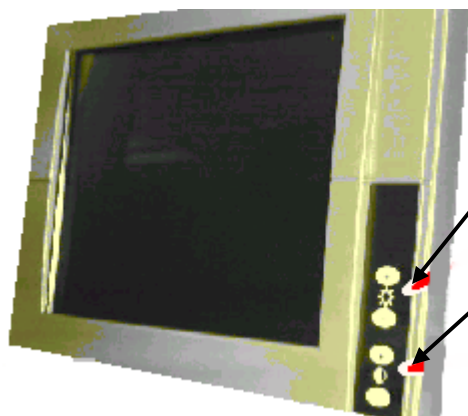

Brightness: Increase (+) or decrease (-) the brightness of a displayed image.

Contrast: Increase (+) or decrease (-) the contrast of a displayed image.

3-1-1 Sharpness, Phase, Position and Reset Adjustment On The NEO LCD.

Phase: Increase or decrease the phase button to eliminate vertical lines from the image.

Sharpness: Fine tune the video signal from the computer by increasing or decreasing the sharpness setting.



Position: Adjust the displayed image horizontally or vertically by selecting any of the four directional control buttons.

Reset: Reset all adjustment controls back to the initial factory settings.

3-2 Contrast and Brightness Adjust on the 12 inch NVIEW LCD

3-2-1 NView Adjustment Procedure

1. Open the Windows control panel and click on the DESKTOP Icon.
2. Set the wallpaper to lcdvert.bmp. Select Tile and OK in the dialog box.
3. Iconize the Windows so that only the background is showing.
4. Use the Phase button (on back of LCD) and the Contrast button (on front of LCD) to produce a clear image.

5. If you find that the display is way out of adjustment, press the reset button on the back of the display to return to the factory settings, then redo step 4.
6. When the display is properly adjusted, open up the Windows control panel and click on the DESKTOP icon. Set the background back to the original setting.

4- CHANGING RESOLUTION WINDOWS 95/98 ALL 15 INCH LCD MONITORS

4-1 STB Video Driver Board- Display Setup

Some PC's have this version of Video Driver board. Refer to the Windows Help Pages to set these parameters. The Desktop Size should always be set to its largest setting. This will give the clearest display. This section provides a way to optimize at 800x 600 but a higher value can be used if the version of video board accommodates higher settings.

Note

Only do this procedure if the LCD PC display is a 15.1-inch model.

The Newest model is the Amtran 15.1 inch LCD. The older models are Panoview 600 (12.1 inch) and Nview (10 inch). Refer to section 7 for those monitor types.

1. Open the system Control Panel by selecting the **[Start]** button.
2. Select: **[Settings]**.
3. Select: **[Control Panel]**.



4. Find the "Display" Icon and double click it
5. Setup the display as follows as required by Customer preference. If you need further instruction on how to do this, refer to the Windows 95/98 "Help" pages.
6. Change Color Palette to optimize the display.
7. Change Desktop Area to at least **"800 x 600"**.
8. Change Font Size to **"Small Fonts"** or based on Customer preference.
9. The default "Monitor Type" should be set to "Plug and Play Monitor". If this is not sufficient, select **[Super VGA 800 x 600]**, allow the change to take affect by rebooting the PC.

4-2 ATI Video Driver Board – Display Setup

Some PC's have this version of Video Driver board. Refer to the Windows Help Pages to set these parameters. The Desktop Size should always be set to its largest setting. This will give the clearest display. This section provides a way to optimize at 800x 600 but a higher value can be used if the version of video board accommodates higher settings.

Note

Only do this procedure if the LCD PC display is a 15.1-inch model.

The Newest model is the Amtran 15.1 inch LCD. The older models are Panoview 600 (12.1 inch) and Nview (10 inch). Refer to section 7 for those monitor types.

10. Open the system Control Panel by selecting the **[Start]** button.
11. Select: **[Settings]**.
12. Select: **[Control Panel]**.



13. Find the "Display" Icon and double click it
14. Setup the display as follows as required by Customer preference. If you need further instruction on how to do this, refer to the Windows 95/98 "Help" pages.
15. Change Color Palette to optimize the display.
16. Change Screen Area to "800 x 600"
17. Change Desktop Area to at least "**800 x 600**".
18. Change Font Size to "**Small Fonts**" or based on Customer preference.
19. The default "Monitor Type" should be set to "Plug and Play Monitor". If this is not sufficient, select **[Super VGA 800 x 600]**, allow the change to take affect by rebooting the PC.

5- CHANGING RESOLUTION WINDOWS 95/98 ALL 10 AND 12 INCH LCD MONITORS

5-1 STB Video Driver Board- Display Setup for 10 and 12 inch LCD Monitors

Some PC's have this version of Video Driver board. Refer to the Windows Help Pages to set these parameters. The Desktop Size should always be set to its largest setting. This will give the clearest display. This section provides a way to optimize at 640x 480 but a higher value can be used if the version of video board accommodates higher settings.

Note

Only do this procedure if the LCD PC display is a 10 inch or 12 inch model.

There are two older types of LCD PC display monitors still in use. The older models are Panoview 600 (12.1 inch) and Nview (10 inch).

- For the **Nview, (10 inch)** the default resolution of **640 by 480** is the highest possible setting.
- For the **Panoview 600 (12 inch)** use at least **800 x 600** resolution.

1. Open the system Control Panel by selecting the **[Start]** button.
2. Select: **[Settings]**.
3. Select: **[Control Panel]**.



1. Find the "Display" Icon and double click it
2. Setup the display as follows as required by Customer preference. If you need further instruction on how to do this, refer to the Windows 95/98 "Help" pages.
3. Change Color Palette to optimize the display.
4. Change Desktop Area:
 - a. Panoview 12 inch: At least "**800 x 600**".
 - b. Nview 10 inch: "**640 x 480**".
1. Change Font Size to "**Small Fonts**" or based on Customer preference.
2. The default "Monitor Type" should be set to "Plug and Play Monitor". If this is not sufficient, select:
 - a. Panoview 12 inch: [**Super VGA 800 x 600**]
 - b. Nview 10 inch: [**Standard 640 x 480**]
1. Allow the change to take affect by rebooting the PC.

5-2 ATI Video Driver Board – Display Setup for 10 and 12 inch LCD Monitors

Some PC's have this version of Video Driver board. Refer to the Windows Help Pages to set these parameters.

Note

Only do this procedure if the LCD PC display is a 10 inch or 12 inch model.

There are two older types of LCD PC display monitors still in use. The older models are Panoview 600 (12.1 inch) and Nview (10 inch).

- For the **Nview, (10 inch) the default resolution of 640 by 480** is the highest possible setting.
 - For the **Panoview 600 (12 inch) use at least 800 x 600** resolution.
1. Open the system Control Panel by selecting the [**Start**] button.
 2. Select: [**Settings**].
 3. Select: [**Control Panel**].




4. Find the "Display" Icon and double click it
5. Setup the display as follows as required by Customer preference. If you need further instruction on how to do this, refer to the Windows 95/98 "Help" pages.
6. Change Color Palette to optimize the display.
7. Change Desktop Area:
 - a. Panoview 12 inch: At least "**800 x 600**".
 - b. Nview 10 inch: "**640 x 480**".
1. Change Screen Area:
 - a. Panoview 12 inch: At least "**800 x 600**".
 - b. Nview 10 inch: "**640 x 480**".
1. Change Font Size to "**Small Fonts**" or based on Customer preference.
2. The default "Monitor Type" should be set to "Plug and Play Monitor". If this is not sufficient, select:
 - a. Panoview 12 inch: [**Super VGA 800 x 600**]

- b. Nview 10 inch: [Standard 640 x 480]
1. Allow the change to take affect by rebooting the PC.

A- APPENDIX- CTX PANOVIEW 600 INSTALLATION INSTRUCTIONS, WINDOWS 3.1.

Refer to Illustration 1 for the Panoview 600 connections required.

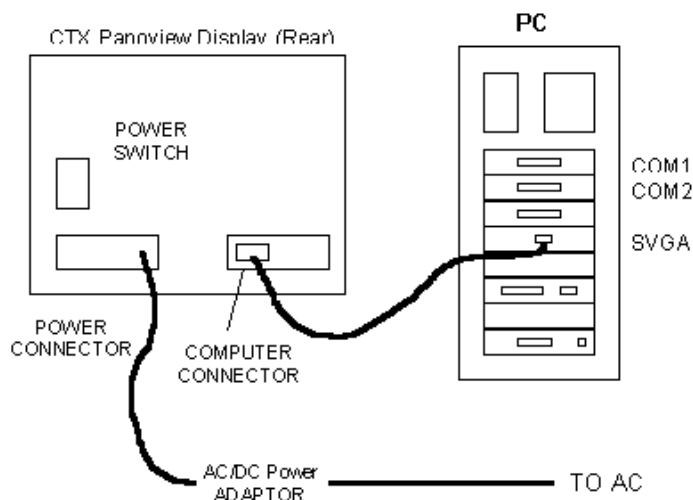

This display has a separate power adapter. Connect the AC line cord to the power adapter, then connect the power module cable to the to the **Power** connector on the rear of the display.


ILLUSTRATION A-1
PANOVIEW 600 CONNECTIONS

Connect the video signal cable between the 15-pin sub-D Computer connector on the rear of the display and the SVGA video out connector on the rear of the LX PC computer. Turn on the LCD display, and turn on the LX PC. If the computer is already on, then be sure that the computer is running *Windows* and *not* running *wavetime*, if the system is Windows 3.1 operating system.




ATI Desktop


1. In Microsoft Windows Program manager, find the ATI program group and open it.

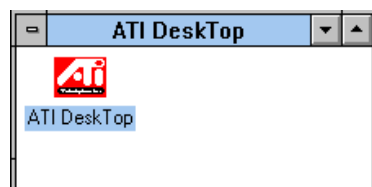

2. Double Click on the ATI Desktop icon.

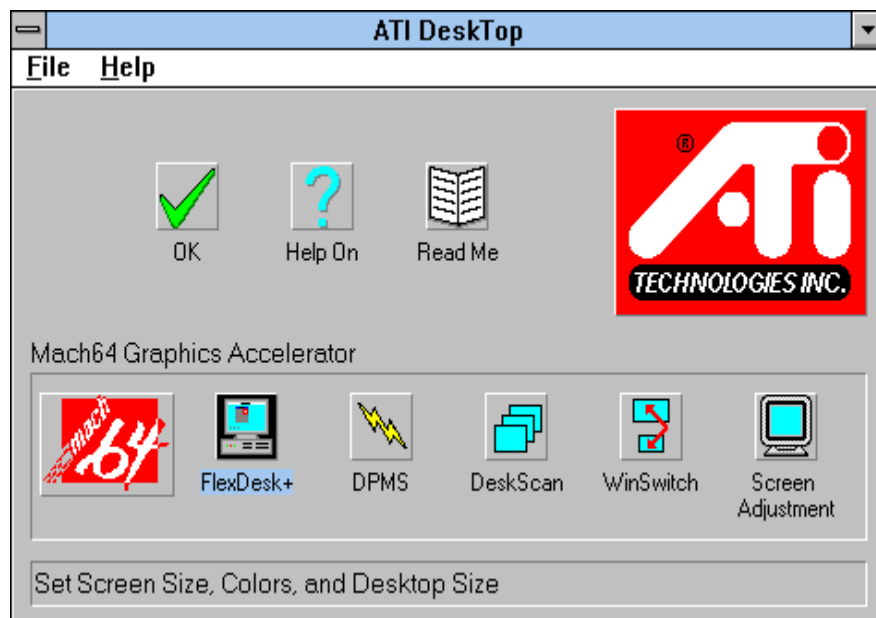


3. Click on the Screen Adjustment Icon

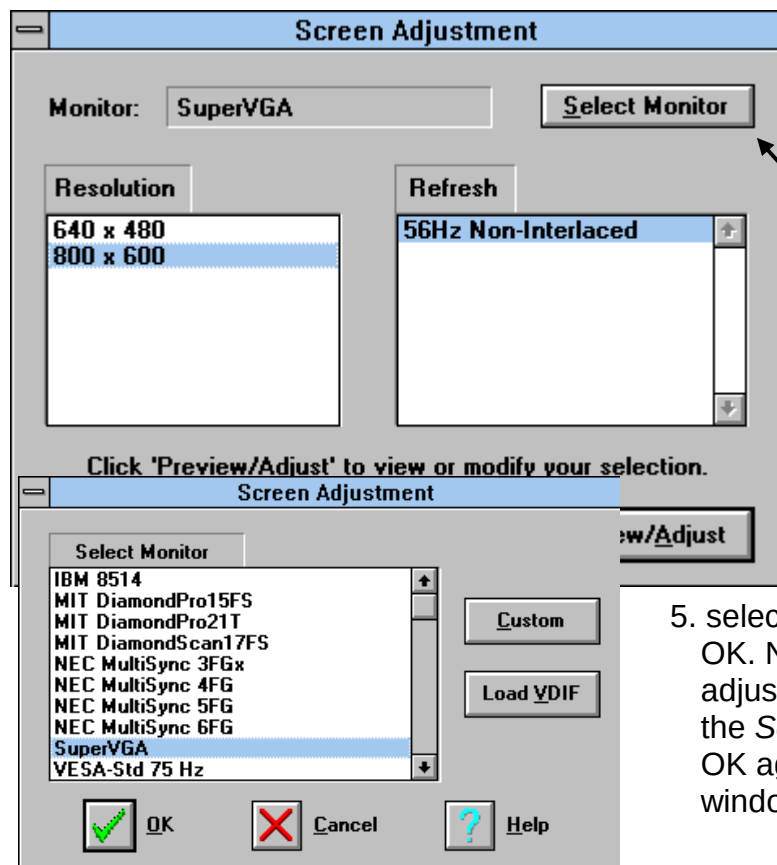

4. Select the: "Select Monitor" button.


5. select the SuperVGA monitor and click on OK. Now click on OK on the previous screen adjustment menu (above) Now click on OK in the *Screen Adjustment* window, then click on OK again in the previous *Screen Adjustment* window.

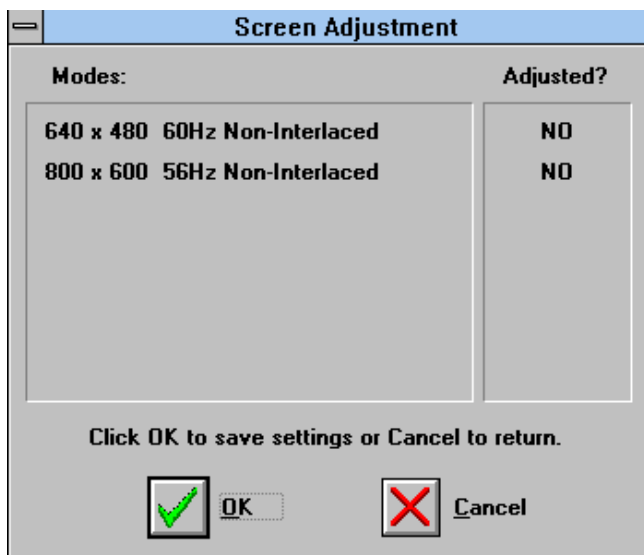

6. Verify that the window that is now displayed appears as is shown on the right, with only two modes:

640x480 60 Hz Non-Interlaced
800x600 56 Hz Non-Interlaced

If not, then check your previous steps.
Now click on OK to save settings, and then Restart Windows.

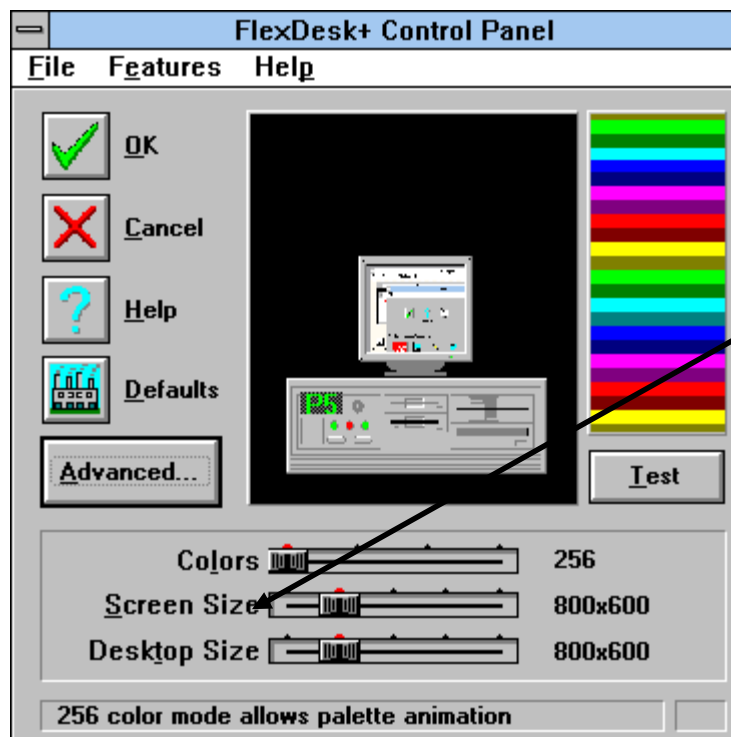

7. Drag the screen size selection to 800x600, then click on OK.

Setup is now done. Reboot the LX PC.

B- APPENDIX B- TROUBLESHOOTING THE PC MONITOR

B-1 If the PC Monitor is experiencing Alphanumeric Sheering

Refer to the Windows HELP tool for help adjusting the display.

- Adjust the Refresh rate to a higher Frequency (Select Optimal or 75Hz)
- Increase the resolution to the highest setting possible for the driver board.
- Plug the power supply into the power strip on the Operators Workspace.
- Change to video driver that matches the resolution set in software.
 - o Open Display Icon and select:
 - Super VGA 640x480
 - Super VGA 600x800
 - Super VGA 1024x 768

B-2 PC Monitor is experiencing visible Raster Lines

Refer to the Windows HELP tool for help adjusting the display.

- Adjust the Refresh rate to a higher Frequency (Select Optimal or 75Hz)
- Increase the resolution to the highest setting possible for the driver board.
- Plug the power supply into the power strip on the Operators Workspace.
- Change to video driver that matches the resolution set in software.
 - o Open Display Icon and select:
 - Super VGA 640x480
 - Super VGA 600x800
 - Super VGA 1024x 768

B-3 PC Monitor is experiencing Blocky Icons and characters look cut off

Refer to the Windows HELP tool for help adjusting the display.

- Adjust the Refresh rate to a higher Frequency (Select Optimal or 75Hz)
- Increase the resolution to the highest setting possible for the driver board.
- Plug the power supply into the power strip on the Operators Workspace.
- Change to video driver that matches the resolution set in software.
 - o Open Display Icon and select:
 - Super VGA 640x480
 - Super VGA 600x800
 - Super VGA 1024x 768

B-4 PC Monitor is experiencing fuzzy regions

Refer to the Windows HELP tool for help adjusting the display.

- Adjust the Refresh rate to a LOWER Frequency (Select 60Hz)
- Decrease the resolution to the lowest setting possible for the driver board.
- The backlight could be failing.
- The Monitor LCD face could have been hit or damaged. These are pressure sensitive.

B-5 PC Monitor Does not display but the Power LED is blinking green

This is an indication of a power supply failure for the PanoView 600.

- Replace the power supply or entire unit.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	Sep 10, 2002	Hofstetter	Initial Version.
1	Sep 30, 2002	D. Hofstetter	Added mobile install procedure and win98 Line rate setup.
2	June 12, 2003	D. Hofstetter	Added Amtran 15.1 inch Monitor to this procedure.