

TABLE OF CONTENTS

TABLE OF CONTENTS.....	1
1- TOOLS NEEDED.....	2
2- REMOVAL OF FAILED QUAD DIRECTIONAL COUPLER.....	2
2-1 Removing the RF/Pen Cabinet I/F Panel	3
2-2 Removing the RF Amplifier	3
2-3 Removing the Failed Quad Directional Coupler	4
3- INSTALLATION OF THE NEW QUAD DIRECTIONAL COUPLER	4
3-1 Installing the New Quad Directional Coupler	4
3-2 Replacing the I/F Panel	4
3-3 Replacing the RF Amplifier	4
4- CALIBRATION REQUIREMENTS	5
5- FUNCTIONAL CHECK REQUIREMENTS	5
REVISION HISTORY	6

Description - This section applies only to Signa1.5T or 1.0T systems installed with the Erbtec RF/Pen cabinet.

1- TOOLS NEEDED


#2 nonferrous Phillips screwdriver

WARNING!

POSSIBLE PERSONAL INJURY! REMOVE POWER AND ALL EXTERNAL CABLES FROM THE RF/PEN CABINET BEFORE YOU REMOVE ANY COMPONENTS FROM IT. VERIFY THAT ALL BREAKERS IN THE REAR OF CABINET ARE OFF, AND DISCONNECT MAIN POWER FEED CORD BEFORE OPENING CHASSIS FOR SERVICE. SERIOUS INJURY OR DEATH BY ELECTROCUTION MAY OTHERWISE OCCUR. LOCK OUT AND TAG OUT THE RF/PEN CABINET.

2- REMOVAL OF FAILED QUAD DIRECTIONAL COUPLER


There are two ways to remove the Quad Directional Coupler: One is to remove the RF/Pen cabinet interface (I/F) panel. Illustration L3129a shows the location of both of these components on the back of the RF/Pen cabinet. The second method is to pull out the RF amplifier until the Quad Directional Coupler can be removed easily.

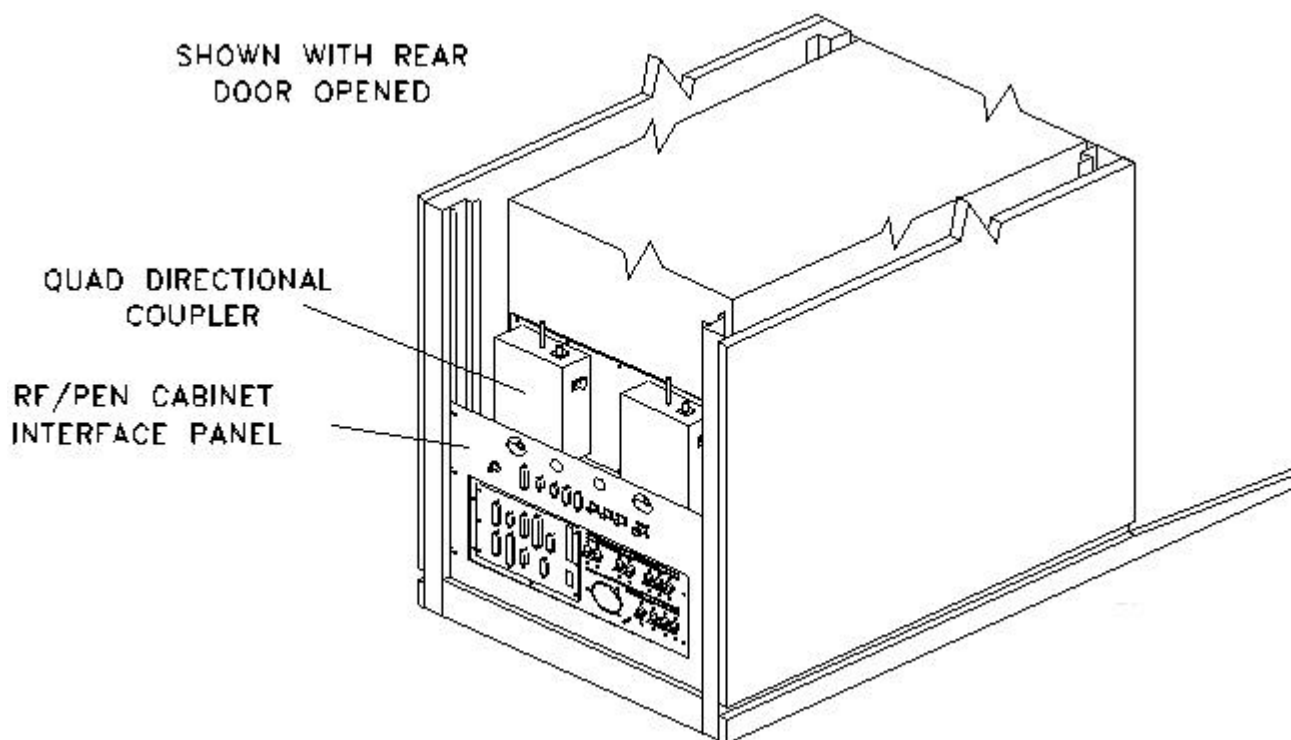

RF/PEN CABINET LOWER BACK SHOWING COMPONENT LOCATIONS
ILLUSTRATION L3129A

2-1 Removing the RF/Pen Cabinet I/F Panel

1. Turn off RF/Pen cabinet power circuit breakers on rear of RF/Pen cabinet. Lock out and tag out the RF/Pen cabinet. (Refer to *Procedure For Safety: Section 6*)
2. Verify that power to the RF/Pen Cabinet is off by checking the fans and LEDs on both the RF amplifier and the RF System Controller (RFSC).
3. Disconnect the cables on the I/F panel and the rear of the magnet enclosure power supply (MEPS) module. See Illustration L3134a.

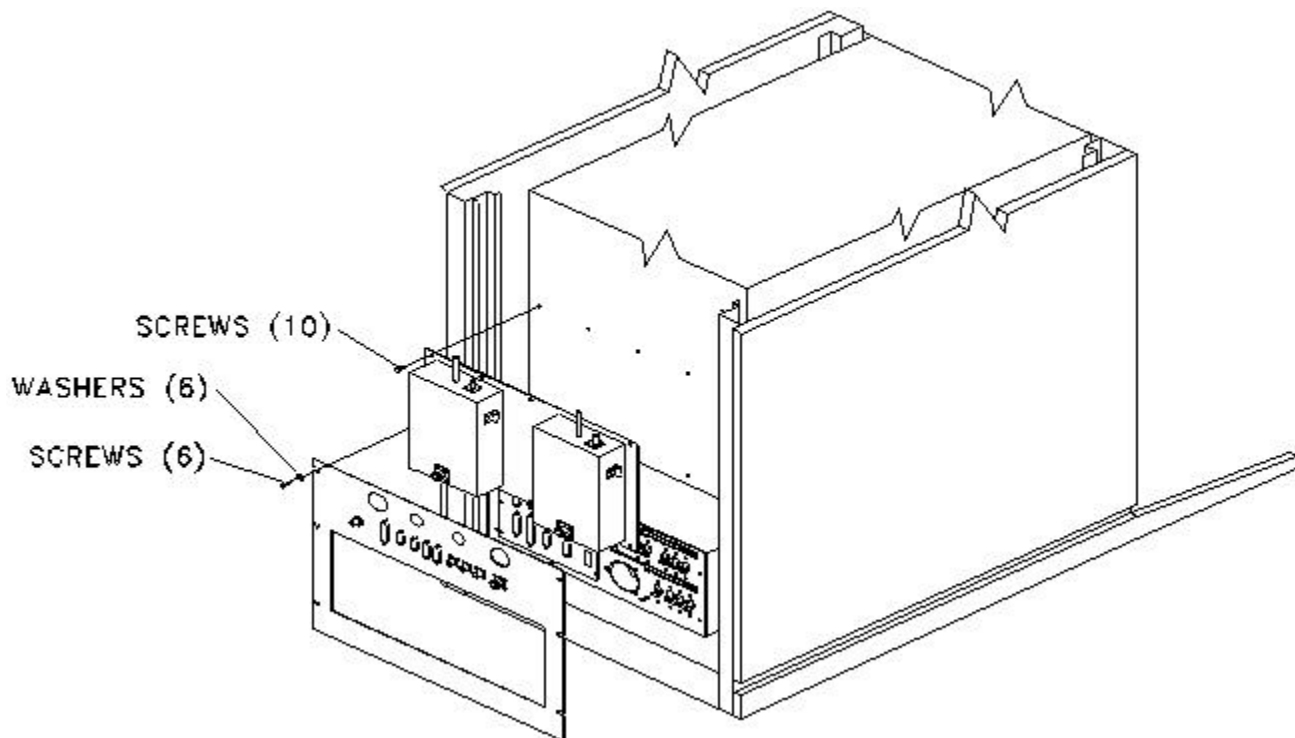

RF/PEN CABINET INTERFACE PANEL AND QUAD DIRECTIONAL COUPLER REMOVAL
ILLUSTRATION L3134A

4. Disconnect the optical cable and the RF power cables which run through the I/F panel.
5. Remove the six 10-32 X 1/2 screws and six #10 flat washers securing I/F panel to RF/Pen cabinet. See Illustration L3134a above.
6. Remove the I/F panel.

2-2 Removing the RF Amplifier

1. Turn off RF/Pen cabinet power circuit breakers on rear of RF/Pen cabinet. Lock out and tag out the RF/Pen cabinet. (Refer to *Procedure For Safety: Section 6*)
2. Verify that power to the RF/Pen Cabinet is off by checking the fans and LEDs on both the RF amplifier and the RF System Controller (RFSC).

3. Remove the eight 10-32 x 1/2 panhead screws and eight #10 flat washers securing the RF amplifier chassis to the RF/Pen cabinet.
3. Slide out the RF amplifier until there is adequate space to remove the Quad Directional Coupler.

2-3 Removing the Failed Quad Directional Coupler

1. Disconnect the eight cables attached to the Quad Directional Coupler.
2. Remove the ten 8-32 x 7/16 screws securing the Quad Directional Coupler. See Illustration L3134a in Section 2-1.
3. Remove the Quad Directional Coupler from the rear of the RF/Pen cabinet.

3- INSTALLATION OF THE NEW QUAD DIRECTIONAL COUPLER

3-1 Installing the New Quad Directional Coupler

1. Position the new Quad Directional Coupler on the rear of the RF/Pen cabinet.
2. Secure using ten 8-32 x 7/16 screws. See Illustration L3134a in Section 2-1
3. Connect the eight cables to the directional coupler, matching the labels on the cables to the connections.

3-2 Replacing the I/F Panel

1. Position the I/F panel on rear of RF/Pen cabinet.
2. Secure using six 10-32 x 1/2 screws and six #10 flat washers. See Illustration L3134a in Section 2-1
3. Connect the cables to the I/F panel and MEPS module, matching the labels on the cables to the appropriate connection.
4. Connect the optical cable and RF power cables through the I/F panel.
5. Remove lock out/tag out, and restore power to the RF/Pen cabinet.

3-3 Replacing the RF Amplifier

1. Slide the RF amplifier back into the RF/Pen cabinet.
2. Replace the eight 10-32 x 1/2 panhead screws and eight #10 flat washers securing the RF amplifier chassis to the RF/Pen cabinet.

3. Remove lock out/tag out devices, and restore power to the RF/Pen cabinet.

4- CALIBRATION REQUIREMENTS

1. Perform APB calibration, refer to procedure for APB Calibration.

5- FUNCTIONAL CHECK REQUIREMENTS

1. Perform one head or body scan.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	July 15, 1998	J. Saperstein	Initial conversion from Toolbook to Word.
1	May 21, 1999	SM Atladottir	Update Procedure References for New GUI