

TABLE OF CONTENTS


TABLE OF CONTENTS	1
1- SYSTEM CABINET AND TPS/ISE CHASSIS COMPONENT LOCATIONS	2
2- SYSTEM CABINET AND TPS/ISE CHASSIS INTERCONNECTS	6
3- POWER PANEL (MR2 A12)	8
4- TEMPERATURE SENSOR CONTROL	10
5- EPI FAST RECEIVER COMPONENT LOCATIONS.....	11
REVISION HISTORY	17

This information applies to 1.5T and 1.0T systems.

1- SYSTEM CABINET AND TPS/ISE CHASSIS COMPONENT LOCATIONS

These Illustrations show the locations of the subsystems that are part of the Transceiver Subsystems. Use these Illustrations when troubleshooting or performing procedures to locate specific component locations.


See Illustration L2959A, System Cabinet Component Locations.

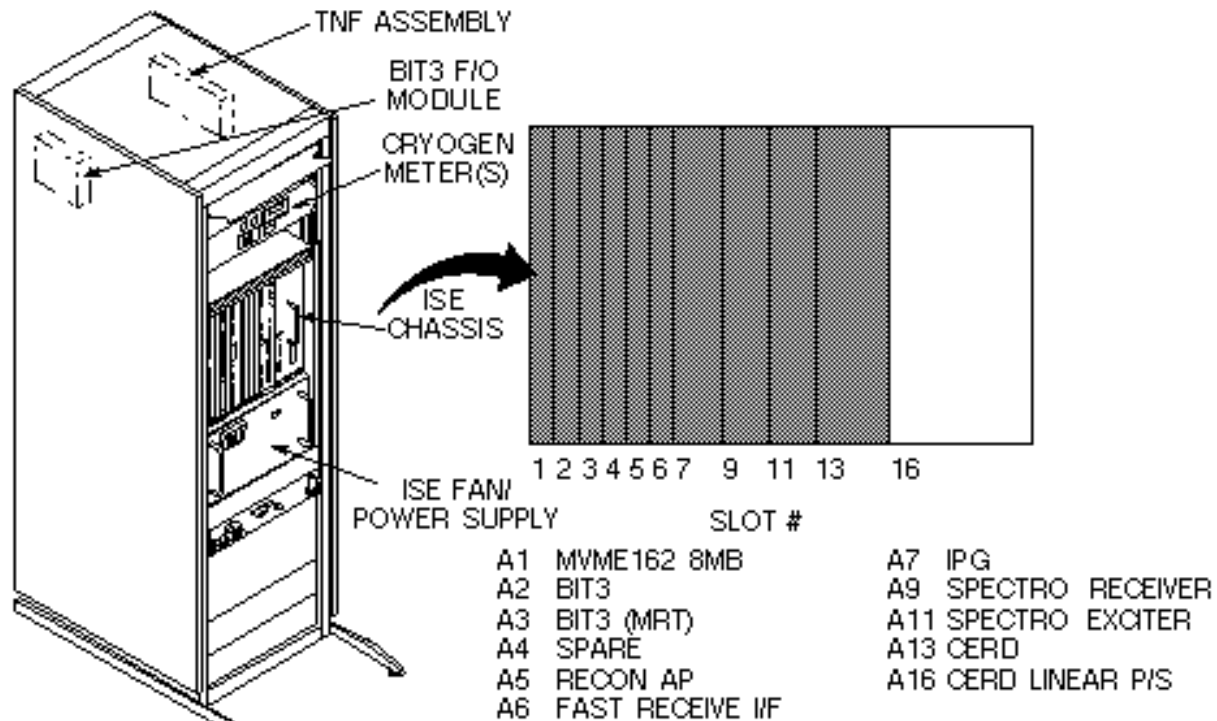

SYSTEM CABINET COMPONENT LOCATIONS
ILLUSTRATION L2959A

LXXXX


See Illustration L2960A, TPS/ISE Chassis Front.

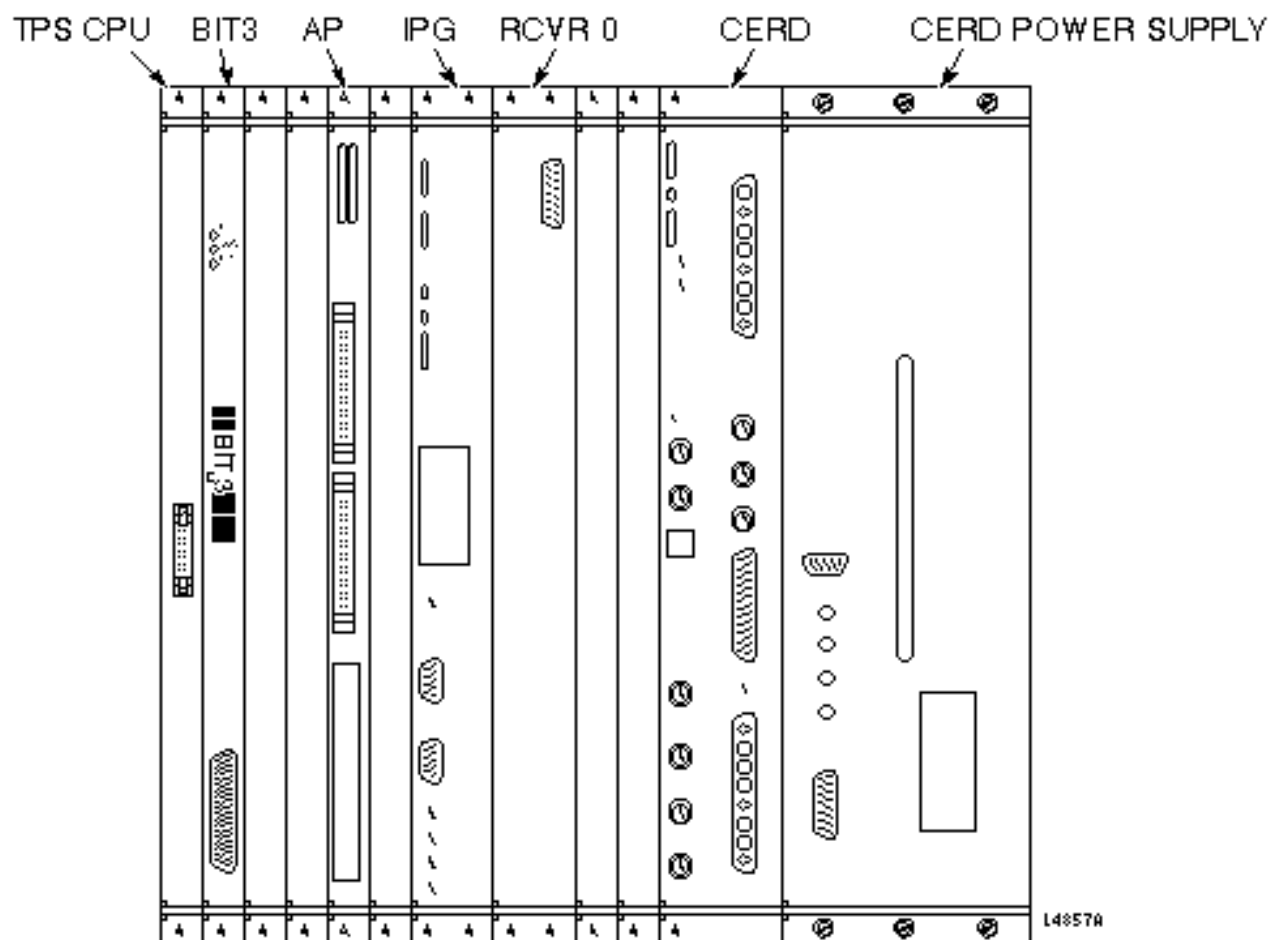

TPS/ISE CHASSIS FRONT

ILLUSTRATION L2960A


See Illustration L2961A, TPS/ISE Chassis (Rear View).

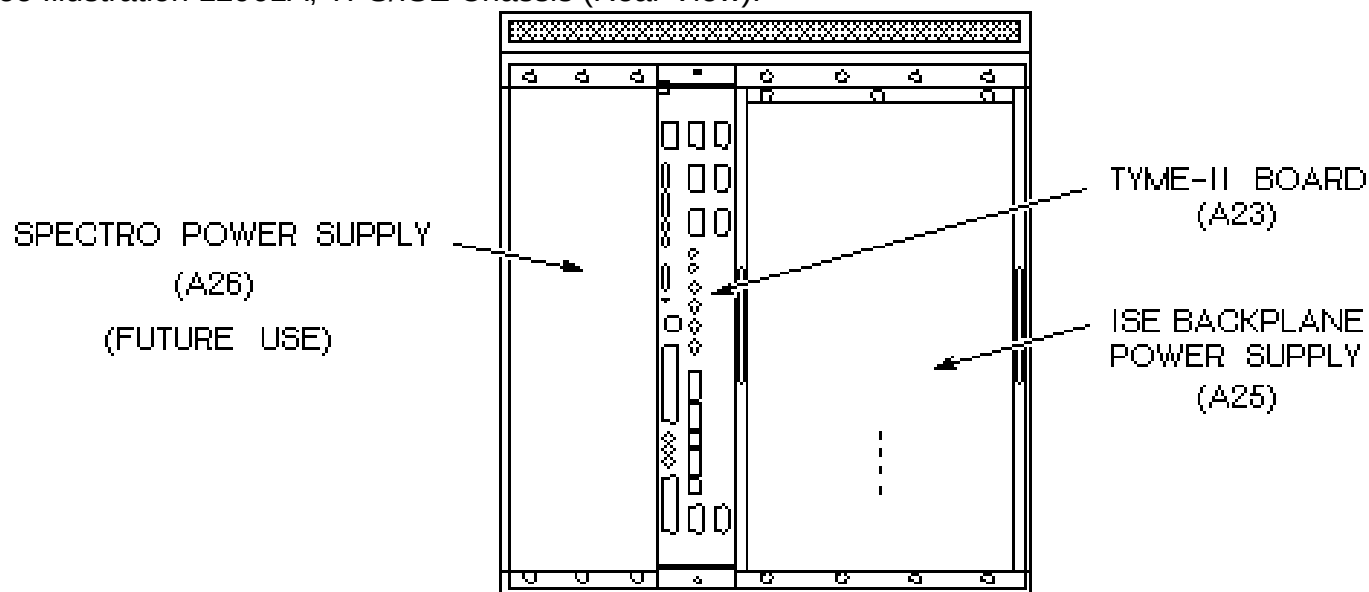

TPS/ISE CHASSIS (REAR VIEW)

ILLUSTRATION L2961A


See Illustration L2963A, TPS/ISE Power Supply.

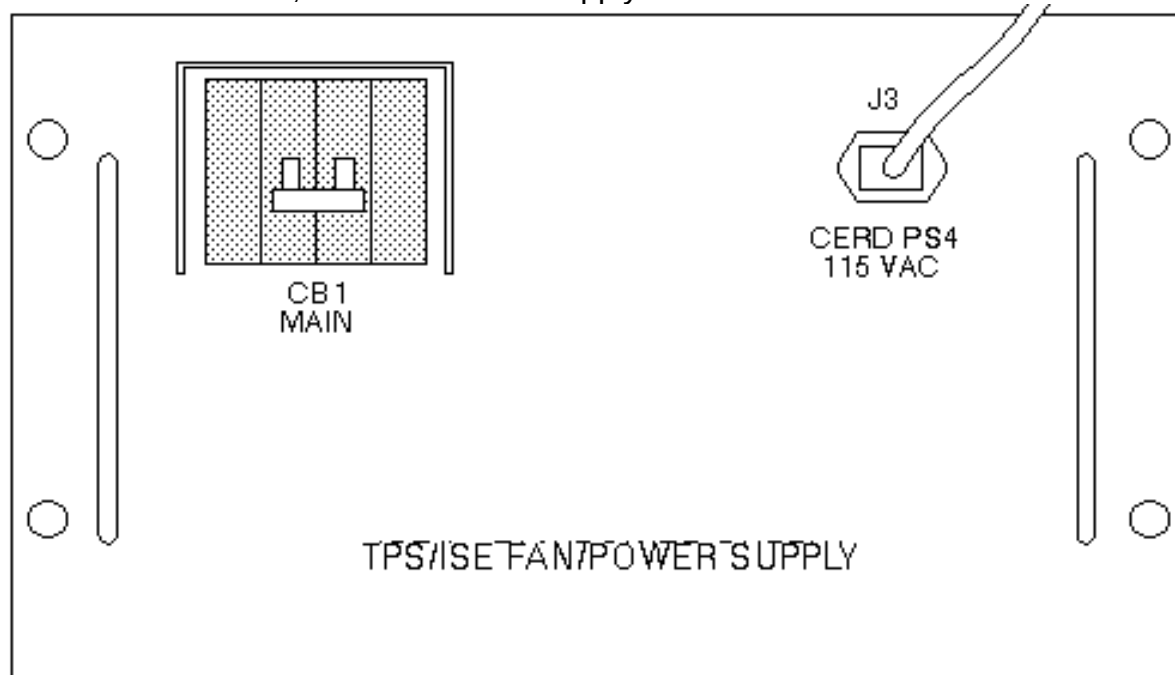

ISE FAN/POWER MODULE (FRONT VIEW)
TPS POWER SUPPLY
 ILLUSTRATION L2963A


See Illustration L2962B, TPS/ISE Power Supply/Fan module Rear View.

ISE/FAN₂ POWER MODULE

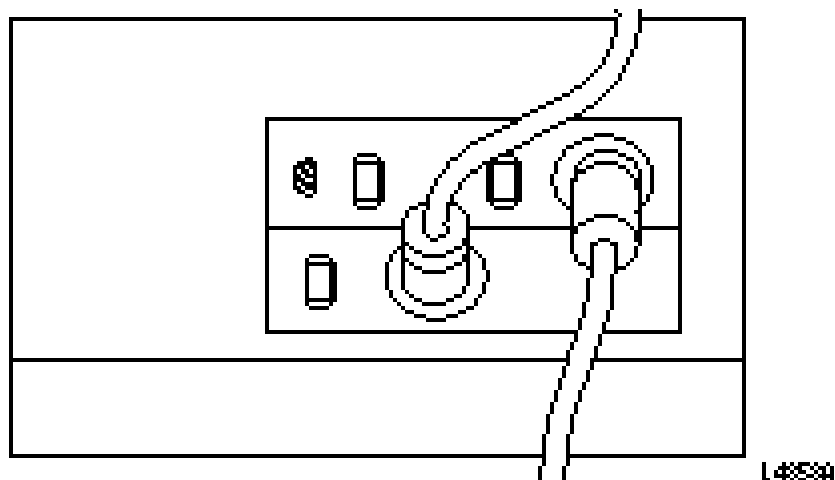


TPS/ISE POWER SUPPLY/FAN MODULE
 ILLUSTRATION L2962B

See Illustration L2531A, Cryogen Meter(s), TPS/ISE Fan Module, BIT3 F/O Module, TNF Assembly.

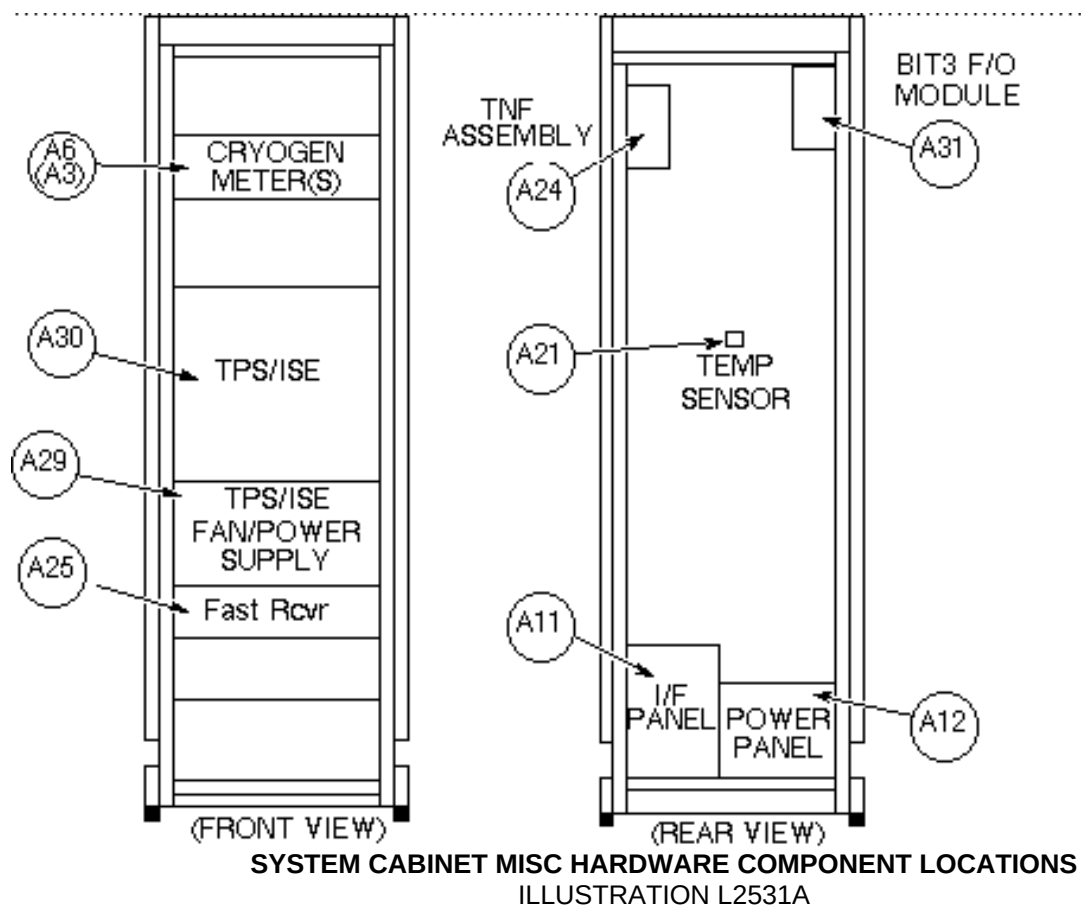

L253 1A

See Illustration L2532A, Cable connections at I/F Panel (MR2 A11).

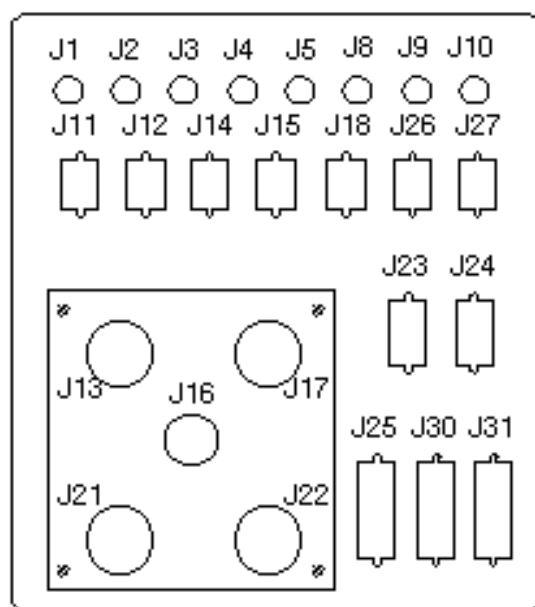

- * MULTICOIL OPTION ONLY
 ** SPECTROSCOPY OPTION ONLY
 *** COMPACT PDU ONLY


- J1 RUN 229 TO MR1 A7 J3
 J2 RUN 231 TO PP1 J8
 J3 TO PP1 J79**
 J4 SPECTRO**
 J5 RUN 233 TO PP1 J7 (OR RUN 499 TO PP1 A14 J84*)
 J8 RUN 488 TO PP1 J80*
 J9 RUN 489 TO PP1 J81*
 J10 RUN 490 TO PP1 J82*
 J11 RUN 605 TO PP1 J10
 J12 CRYOSTAT
 J13 RUN 711/712 TO MG2 A33/MG2 A11 A1 (THRU PP1 J91)
 J14 RUN 706 TO PD1 A1 A3 J2 (OR TO PD1 A14 A1 J3***)
 J15 RUN 701 TO RF DOOR SW.
 J16 RUN 708 TO MR1 A7 J27
 J17 RUN 710 TO MR3 AP J1
 J18 BLANK
 J21 FIBER OPTIC TO HOST COMPUTER
 J22 FIBER OPTIC (MRT)
 J23 RUN 703 TO PD1 A1 A2 J2 (OR TO PD1 A14 A1 J2***)
 J24 BLANK
 J25 RUN 774 TO PP2 A15 J19
 J26 RUN 707 TO OC1 A10 J8
 J27 BLANK
 J30 RUN 791 TO OW CAB
 J31 BLANK

L2532A


SYSTEM CABINET CABLE CONNECTIONS AT I/F PANEL
 ILLUSTRATION L2532A

2- SYSTEM CABINET AND TPS/ISE CHASSIS INTERCONNECTS

See Illustration L2964A, System Cabinet and TPS/ISE Interconnect.

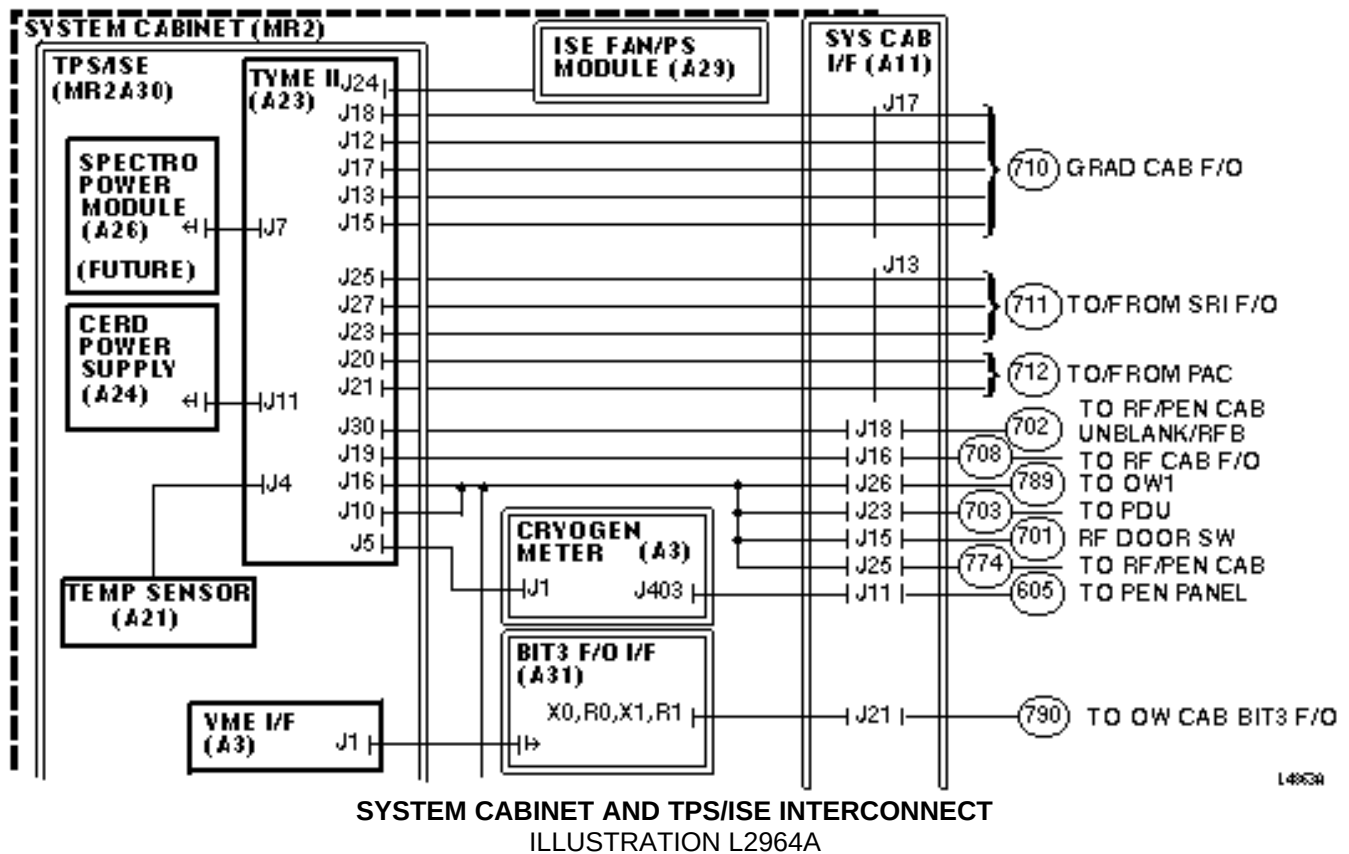

See Illustration L1371A. System Cabinet Power Panel Interconnect.

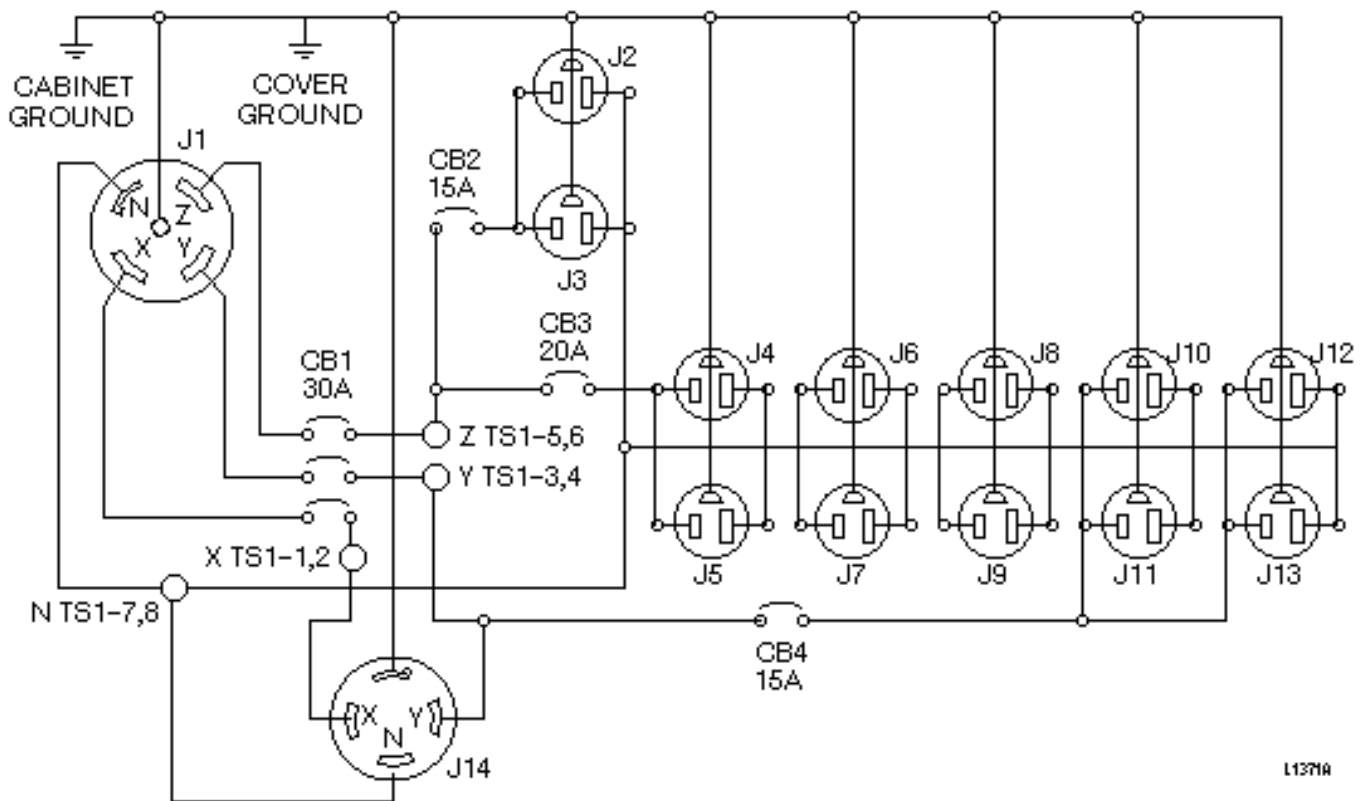

SYSTEM CABINET POWER PANEL INTERCONNECT

ILLUSTRATION L1371A

L1371A

3- POWER PANEL (MR2 A12)

Incoming System Cabinet AC power (3-phase 208VAC), Neutral, and Ground connects to Terminal Strip TS1. Power Panel distributes 115V, (or 3-phase 208V) to cabinet modules. Illustration L2533A shows location of plugs, terminal strips, and circuit breakers. The ground stud (GND) at the back of this panel is connected to Run 037 (ground cable to PDU) because System Cabinet leakage current exceeds 500 uA.


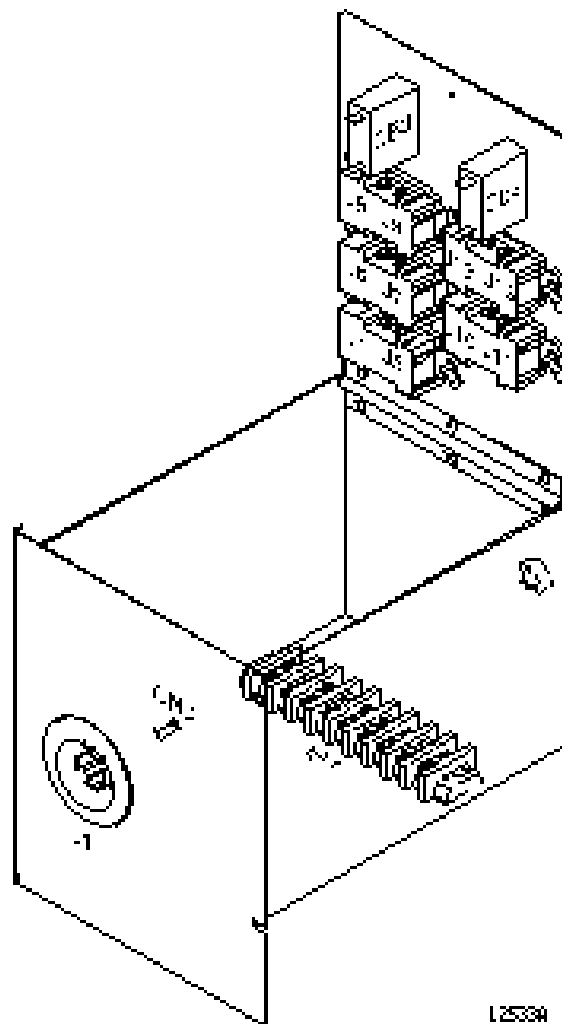
**POWER MODULE COMPONENT LOCATIONS**

ILLUSTRATION L2533A

Outlets on module cover provide 115VAC through CB2, CB3 and CB4 for cabinet module line cords at locations shown in Illustration L2534A. Service instruments connect to "J2" and "J3" outlets which are powered by a separate circuit breaker. System Cabinet power cord must be connected and energized and CB1 must be ON for the Service Outlet to be energized. Service of this module will require the System Cabinet Service power to be turned off or disconnected, locked out, and tagged.

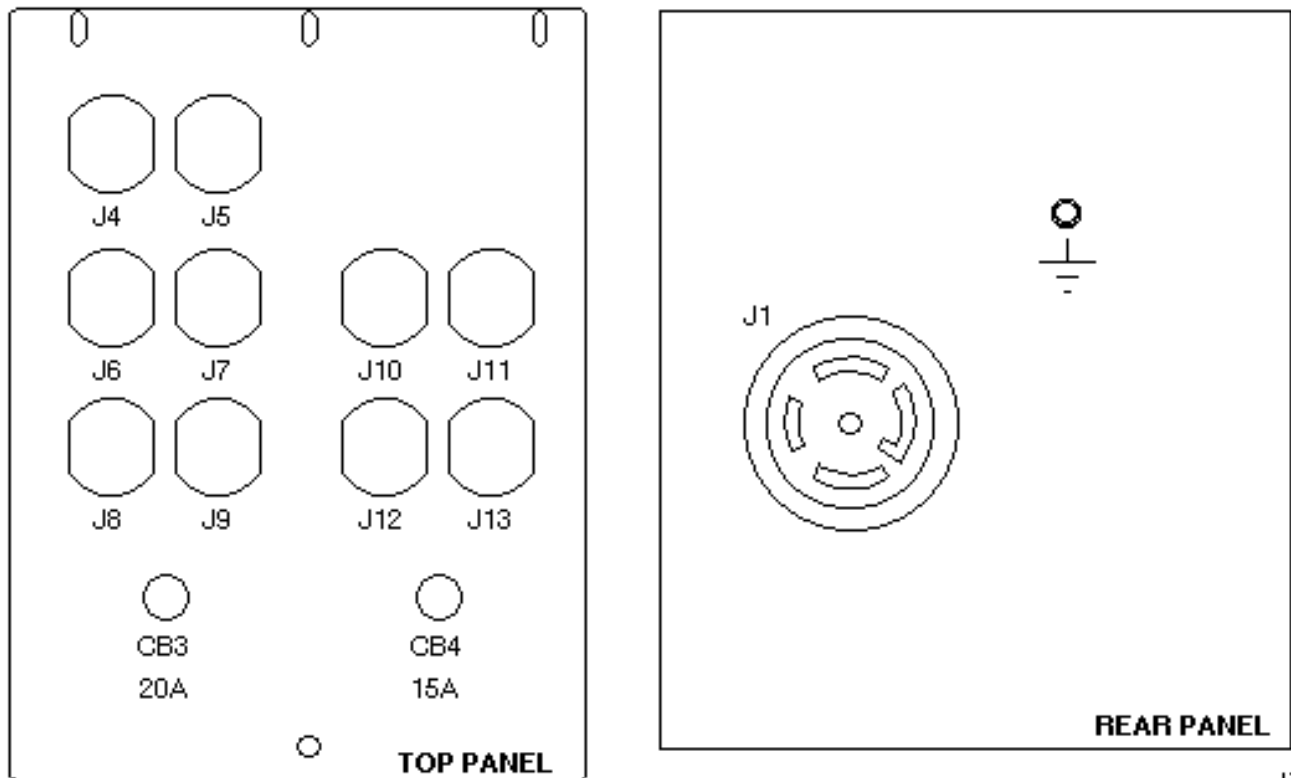

SYSTEM CABINET POWER OUTLET COMPONENT LOCATION
ILLUSTRATION L2534A

TPS/ISE 208VAC cord connects directly to CB4 and TS1 Terminal Strip. Refer to Table 1 for circuit breaker ratings.


TABLE 1
SYSTEM CABINET POWER MODULE CIRCUIT BREAKERS

CIRCUIT BREAKER	BREAKER RATING	CIRCUITS
CB1	3-POLE, 30A, 250V	INCOMING POWER FOR MODULE
CB2	1-POLE, 15A, 250V	J2 & J3 (SERVICE OUTLETS)
CB3	1-POLE, 20A, 250V	J4 & J5 (CRYO-METERS) J6 (TNF MODULE) J7 (FAST RCVR I/F) J8 & J9 (FAST RCVRS)
CB4	1-POLE, 15A, 250V	J10 & J11 (FAST RCVRS) J12 & J13 (BIT-3 & MRT F.O.)

4- TEMPERATURE SENSOR CONTROL

System Cabinet Temperature Sensor Control alarm sounds when temperature sensor (MR2 A21) reaches 94° Fahrenheit. After three minutes, time delay relay (K1) switches the PDU to FULL OFF which shuts down power completely.


System Cabinet Temperature Sensor Control interconnect is shown in Illustration L2536A.

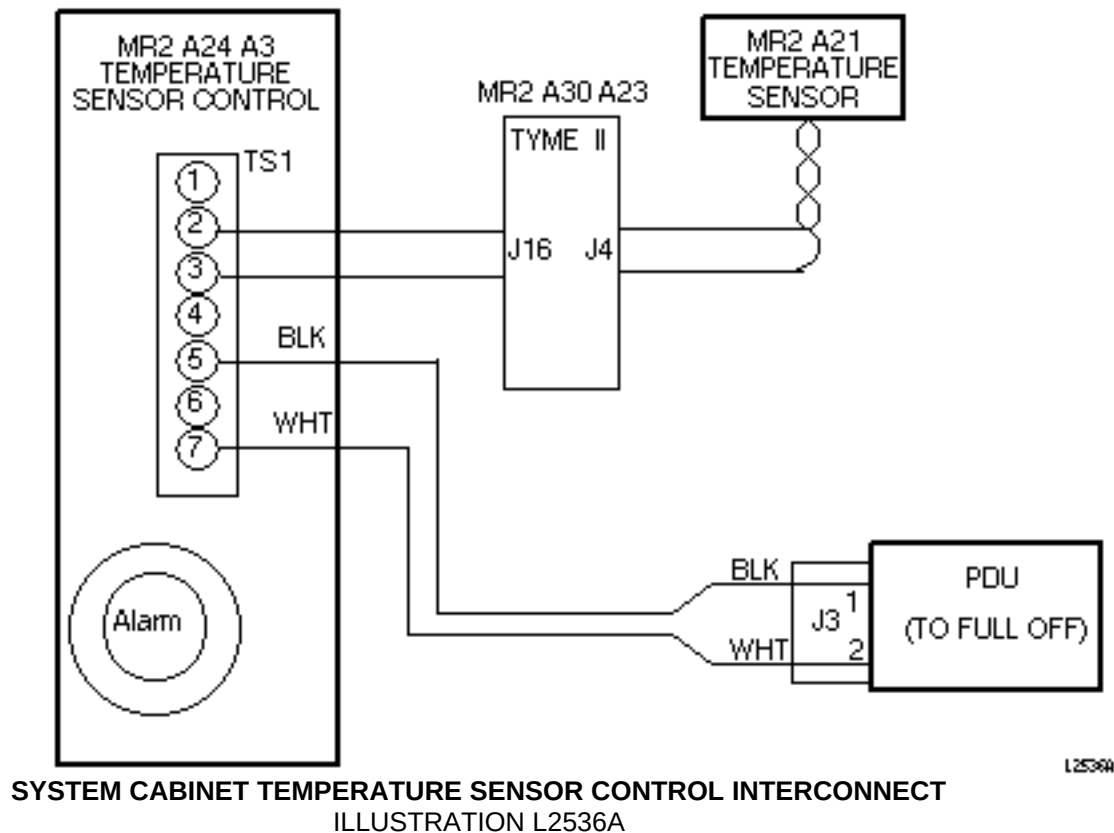

5- EPI FAST RECEIVER COMPONENT LOCATIONS


This section applies only to 1.5T systems.

The EPI Fast Receiver and its power supply are located in the Systems Cabinet. The EPI Fast Receiver is a remote receiver, and works with a modified Receiver 0 which is already installed in the systems cabinet. See Illustration L4771A for location and interconnects.

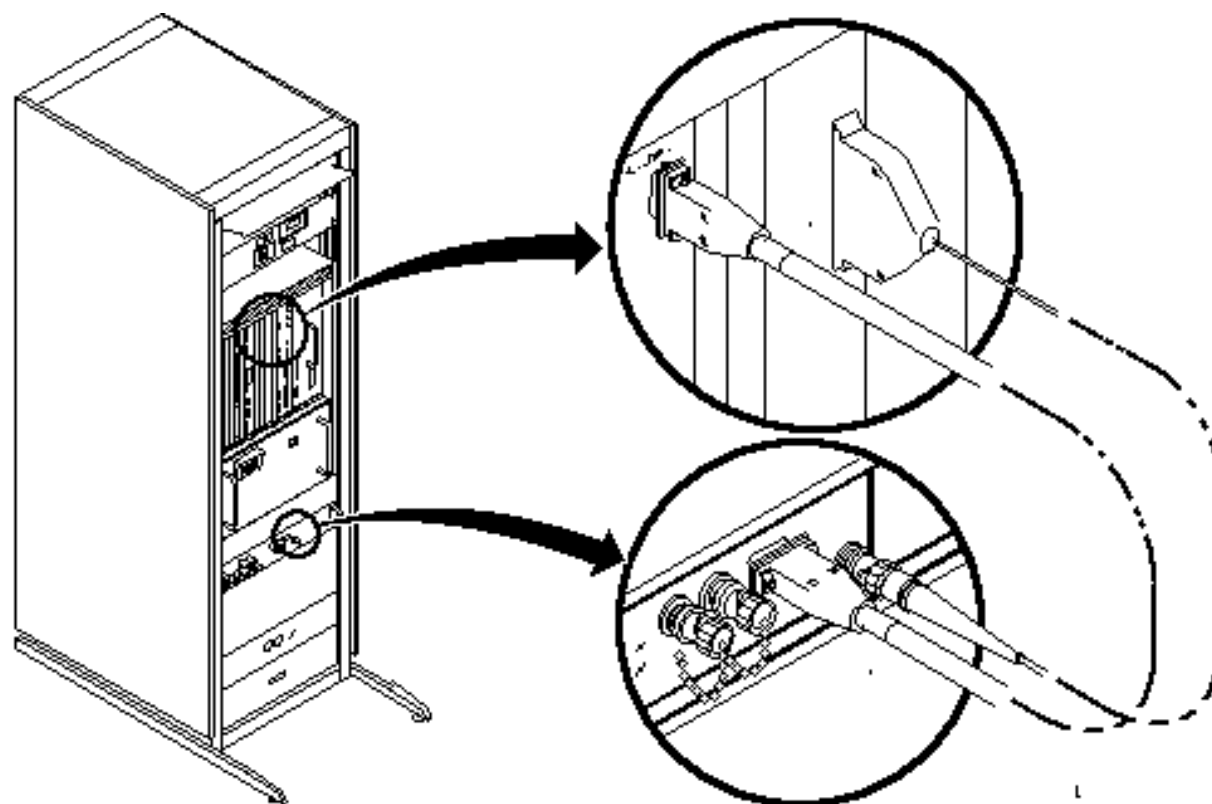

EPI FAST RECEIVER LOCATION AND INTERCONNECTS
ILLUSTRATION L4771A


Illustration L4760A - non-multicoil System location of RF Receiver assembly on CERD Board.

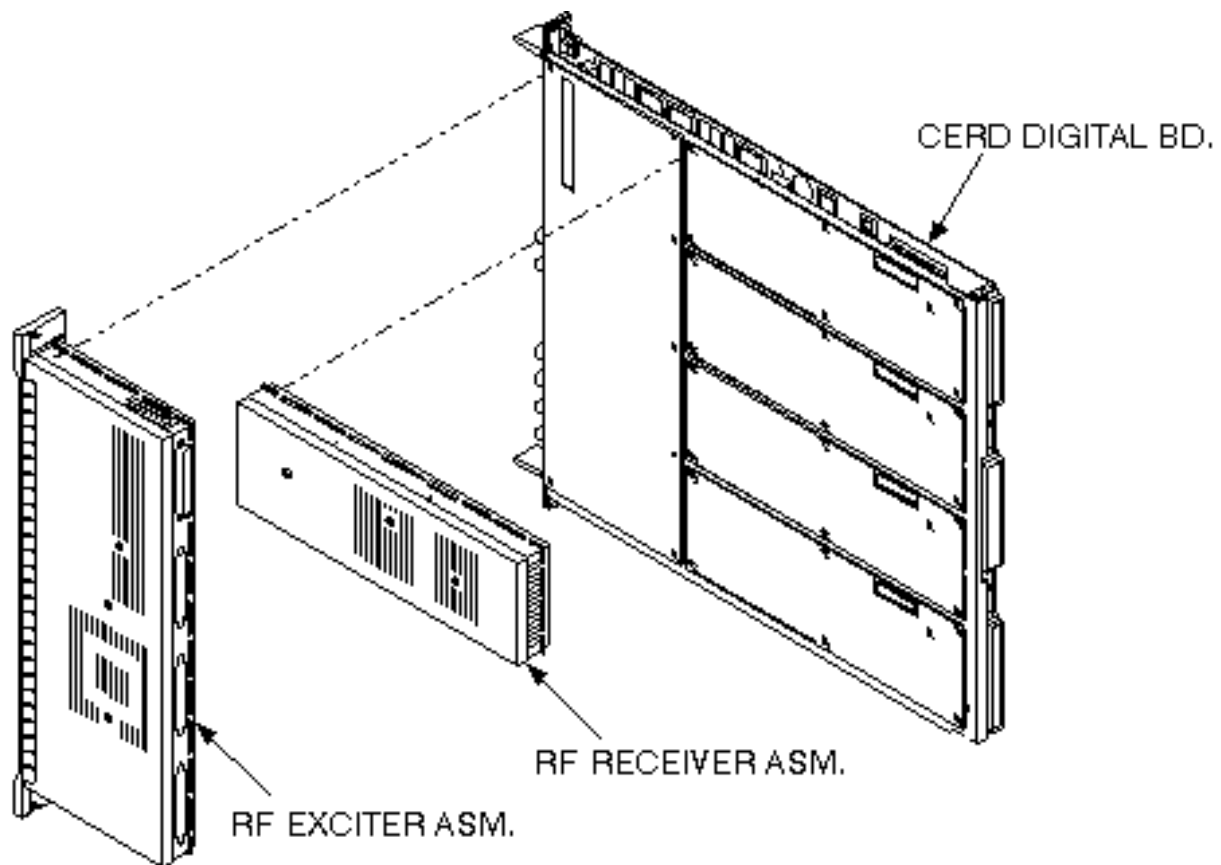

L4760A


LOCATION OF RF RECEIVER ON CERD BOARD
ILLUSTRATION L4760A

Illustration L4769A - non-multicoil System TNF Assembly Cabinet interconnects.

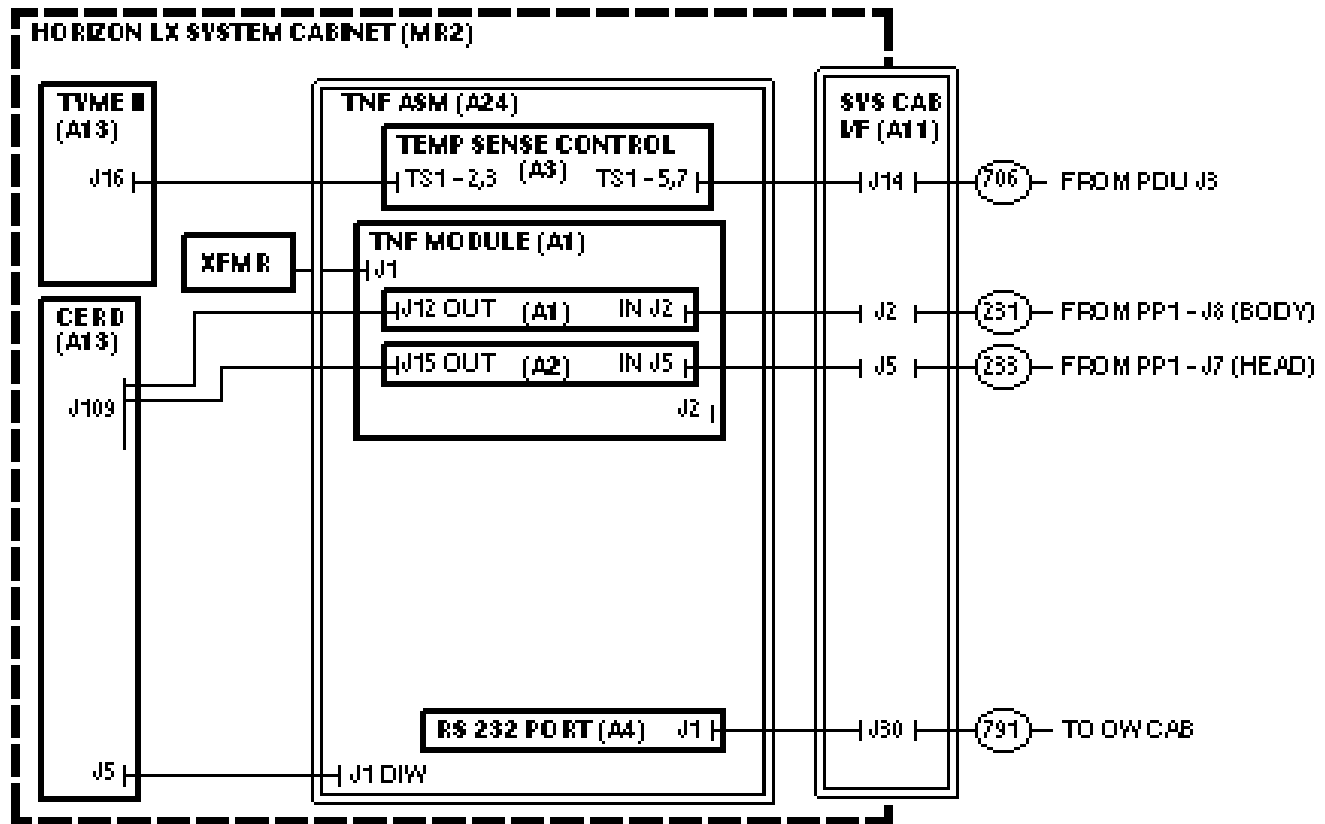

NON-MULTICOIL SYSTEM CABINET TNF ASSEMBLY INTERCONNECTS
ILLUSTRATION L4769A

Illustration L4761A1 - multicoil System Receiver locations on CERG board.

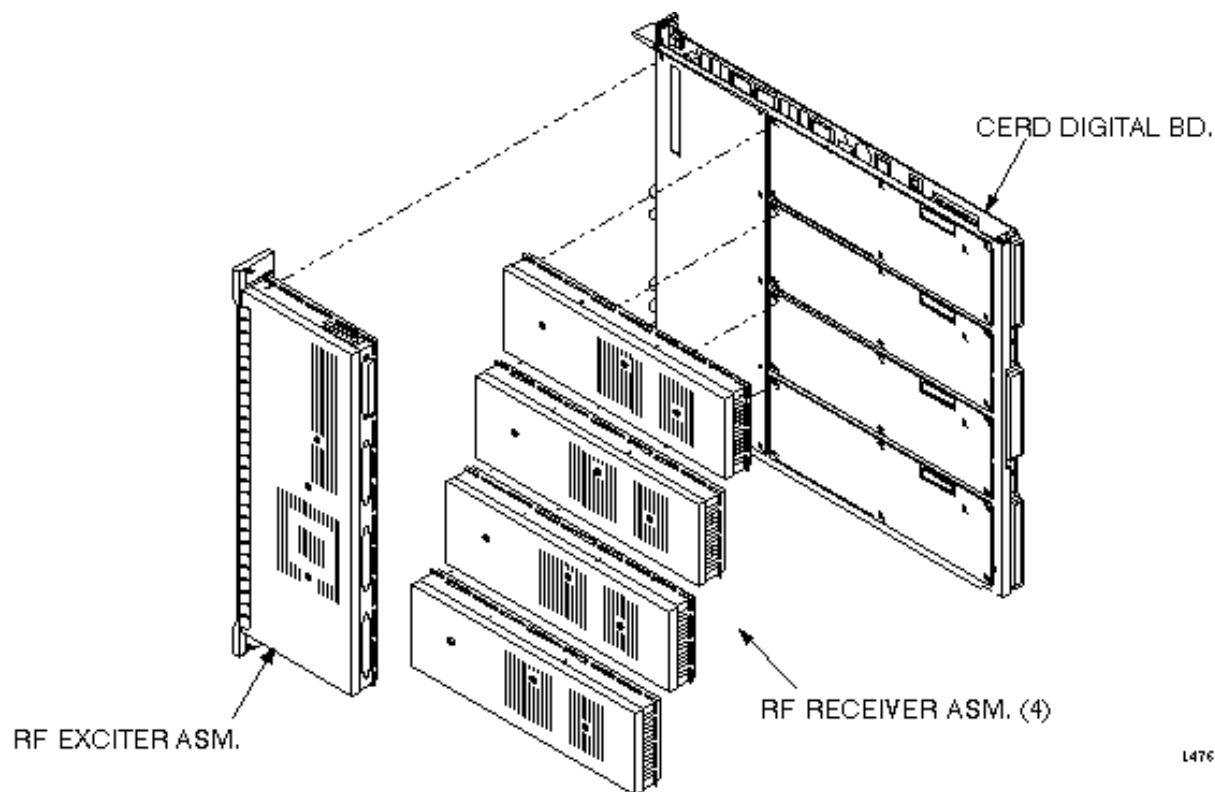


L476 1A 1

MULTI-COIL LOCATION OF RECEIVERS ON CERD BOARD

ILLUSTRATION L4761A1

Illustration L4770A - multicoil System Cabinet TNF Assembly with Expansion

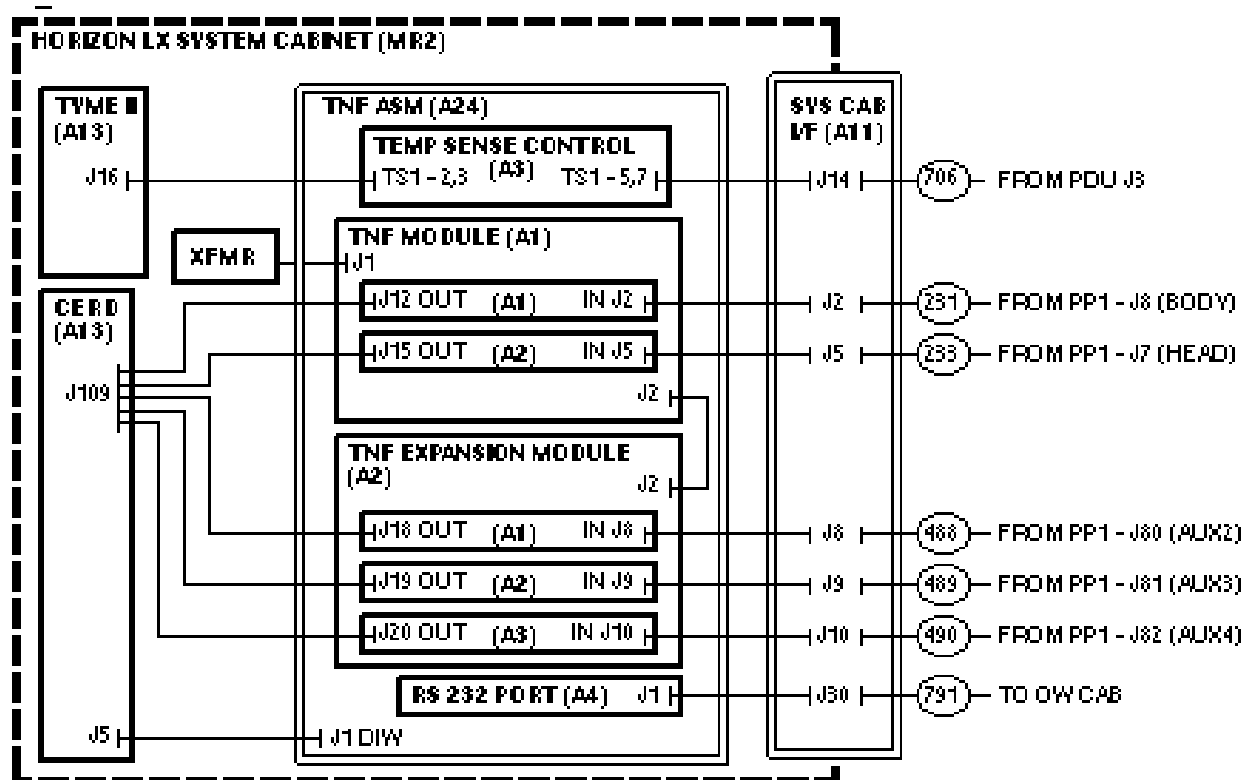

MULTICOIL SYSTEM CABINET TNF ASSEMBLY INTERCONNECTS

ILLUSTRATION L4770A

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 1, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.