


## TABLE OF CONTENTS

|                                            |   |
|--------------------------------------------|---|
| TABLE OF CONTENTS .....                    | 1 |
| 1- REMOVAL OF FAILED BOARD .....           | 2 |
| 2- BOARD SETUP .....                       | 3 |
| 3- INSTALLATION OF REPLACEMENT BOARD ..... | 4 |
| 4- FUNCTIONAL CHECKS REQUIRED .....        | 4 |
| REVISION HISTORY .....                     | 5 |


## 1- REMOVAL OF FAILED BOARD

1. Remove the Systems Cabinet front cover.
2. Turn OFF the TPS/ISE circuit breaker, CB1 (see Illustration 1-1).

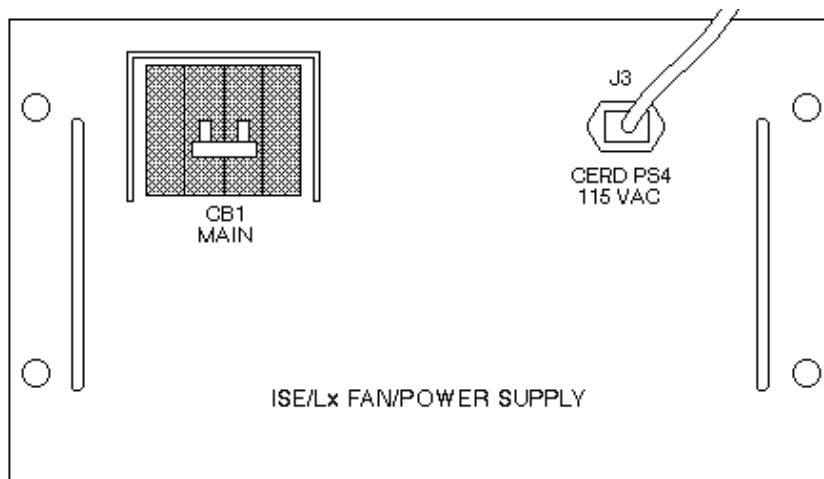

**TPS/ISE FAN/POWER ASSEMBLY - FRONT VIEW**  
ILLUSTRATION 1-1

3. Open the Systems Cabinet rear door.
4. Disconnect cables from the TYME-II panel (see Illustration 1-2).


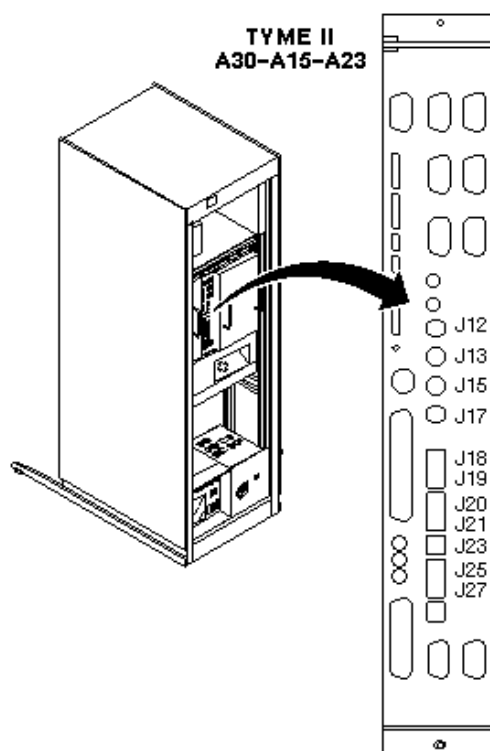


**ISE/TPS CHASSIS - FRONT VIEW**  
ILLUSTRATION 1-2

5. Push the top/bottom eject levers on the TYME-II Assembly apart (up/down) to loosen it from the chassis. Slowly remove the TYME-II Assembly from the TPS/ISE Chassis (see Illustration 2-1) to expose J4.
6. Disconnect J4 from the TYME II Board (see Illustration 2-1).
7. Remove the TYME II Assembly from the TPS/ISE Chassis.

## 2- BOARD SETUP

Illustration 2-1 shows the TYME II Board, along with its jumper locations and its test points. Illustration 2-2 shows TYME II Daughter Board.

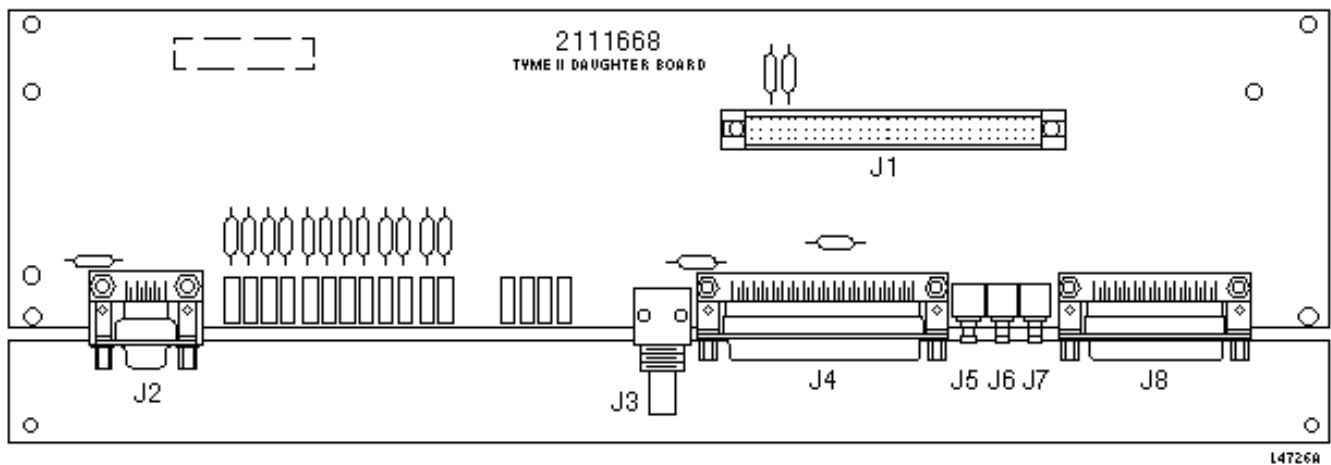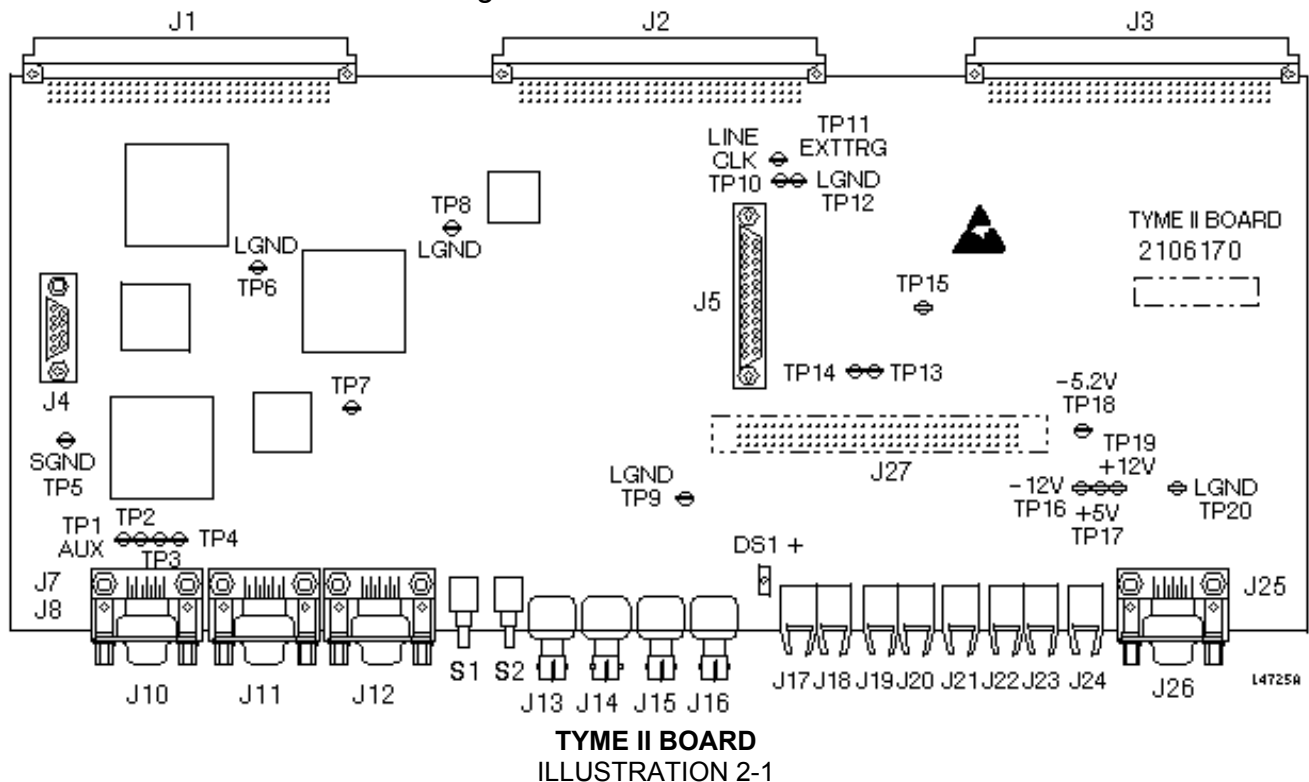

See Table 2-1 for test point information.

TABLE 2-1  
TEST POINT INFORMATION

| TEST POINT | NAME                 |
|------------|----------------------|
| TP1        | Aux                  |
| TP2        | Respiratory          |
| TP3        | ECG3                 |
| TP4        | ECG2                 |
| TP5        | SGND (signal ground) |
| TP6        | LGND (logic ground)  |
| TP7        | Aux Analog Reference |
| TP8        | LGND (logic ground)  |
| TP9        | LGND (logic ground)  |
| TP10       | Line CLK             |
| TP11       | EXTTRIG              |
| TP12       | LGND (logic ground)  |
| TP13       | Ext. Trigger RING    |
| TP14       | AC Clock Input       |
| TP15       | Ext. Trigger Control |
| TP16       | -12V                 |
| TP17       | +5V                  |
| TP18       | -5.2V                |
| TP19       | +12V                 |
| TP20       | LGND (logic ground)  |

### 3- INSTALLATION OF REPLACEMENT BOARD

1. Install the new TYME II Assembly in the rear of the TPS/ISE Chassis (see Illustration 2-2).
2. Reconnect the cables to the TYME-II panel.
3. Close the rear door.
4. Turn ON the TPS/ISE circuit breaker, CB1 (see Illustration 1-1).
5. Install the System Cabinet front cover.
6. Select **[Reset TPS]** from Service Desktop.

### 4- FUNCTIONAL CHECKS REQUIRED

1. Perform one head or body scan.

## REVISION HISTORY

| REV | DATE         | AUTHOR        | PRIMARY REASONS FOR CHANGE                                                          |
|-----|--------------|---------------|-------------------------------------------------------------------------------------|
| 0   | June 1, 1998 | J. Saperstein | Initial Conversion from Toolbook to Word.                                           |
| 1   | Nov. 9, 1999 | M. Keber      | Updated with correct TYME-II illustration, corrected CB #, updated per style guide. |
|     |              |               |                                                                                     |
|     |              |               |                                                                                     |
|     |              |               |                                                                                     |