


820-0233 – Install Instructions for Electrical Power Box (P/N: 205-0121-05) GE P/N: 5156319

Tools Required:

1. #2 Philips screwdriver
2. Flat bladed screwdriver
3. Hoist Assembly (Lytron P/N: 205-0121-17)

Removal Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Attach Hoist Assembly per Lytron Manual 820-0121-17.
4. Remove Electrical Box cover by loosening 4 thumb screws (Refer to photo 1).

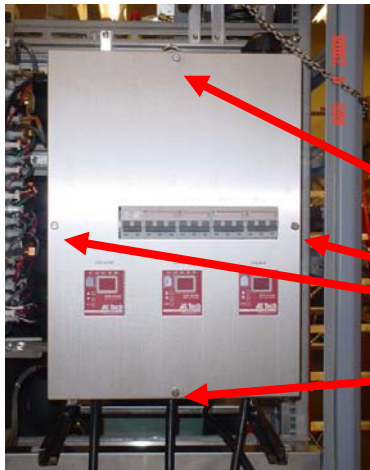

Loosen these 4 thumbscrews

Photo 1 Electrical Box exterior


5. Remove leads U, V, and W as well as GND connection from Blower Variable Frequency Drive (VFD), Gradient Coil (GC) VFD, and Power Electronics (PE) VFD.
6. Remove GC power cable, PE power cable, and the Blower power cable from the bottom of the Electrical Box (EB).



Leads U, V, and W as well as GND from all three VFDs.

Photo 2 Interior of the Electrical Box

7. From the left side of the EB, remove the following cables going to the Signal Box (SB):
 - a. P1 115V power to the Programmable Logic Controller (PLC)
 - b. P2 DI Kit
 - c. P19 GPMP (GC Pump)
 - d. P20 PPMP-VFD (PE Pump)
 - e. P7 Blower VFD
8. Remove the main power cables that feed the EB.
9. Attach Hoist Assembly chain hook to the lifting hook of the EB.

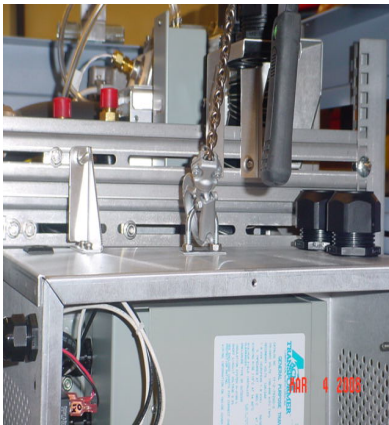


Picture 3 Hoist attachment to Electrical Box

10. Loosen upper & lower thumbscrews on the left side of the EB that secures it to the frame of the cabinet.
11. Pullout EB until it meets the stops on the rail.

CAUTION: Ensure hoist ratchet handle is selected to "UP" position.

12. Raise the EB up off of its hinges in order to facilitate removal.

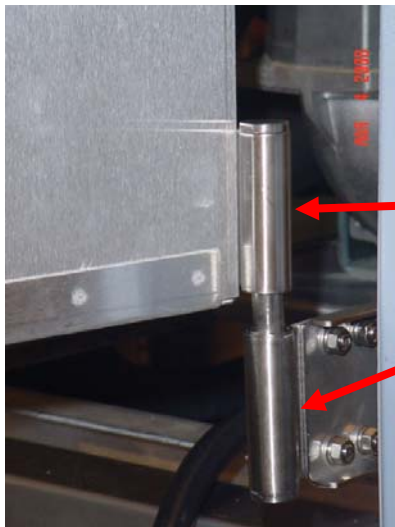

Lifting Electrical Box
off of the hinges

Photo 4 EB Hinge detail

13. While raising the EB, move it forward so that it clears the cabinet interior.

CAUTION: Ensure hoist ratchet handle is selected to "DOWN" position.

14. Lower EB until it rests on pallet or shipping container.



Photo 5 Lowering Electrical Box to floor

End of Procedure

Installing Electrical Power Box (P/N: 205-0121-06)

Tools Required:

- #2 Philips screwdriver
- Flat bladed screwdriver
- Hoist Assembly (Lytron P/N: 205-0121-17)

Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Place Hoist ratchet handle in "DOWN" position. Let out enough chain to reach the floor.
4. Attach Hoist chain eyelet to the hoist eyelet located on the top Electrical Box (EB).
5. Place Hoist ratchet handle into the "UP" position.
6. Slowly raise the EB up by taking out the slack in the chain and begin to raise the EB.
7. Pull out the EB mounting rail with exposed hinge sleeves forward until it stops.
8. Continue raising up the EB until it can be just above the exposed hinge sleeves on the rail.
9. Place the hoist ratchet handle in the "DOWN" position.
10. Lower the EB until the hinge pins on the EB are fully seated in the hinge sleeves.
11. Lower chain slightly to induce slack in the chain line.
12. Remove the Hoist chain eyelet from the EB eyelet located on the top of the EB
13. Push the EB back into the cabinet on the mounting rails.
14. Secure EB to machine frame in two places.

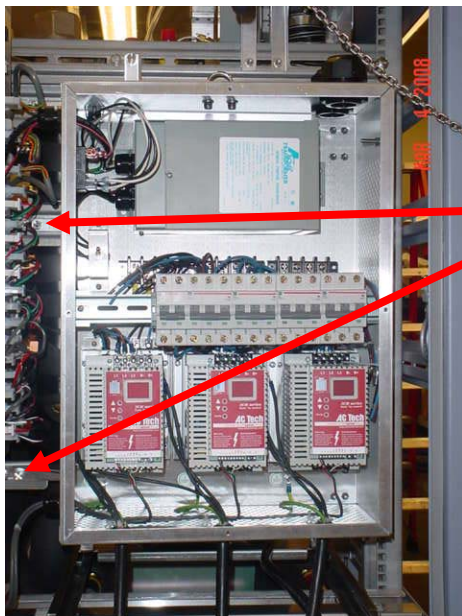


Photo 6

15. Install GC power cable, PE power cable, and the Blower power cable from the bottom of the Electrical Box (EB).

16. Install leads U, V, and W as well as GND connection from Blower Variable Frequency Drive (VFD), Gradient Coil (GC) VFD, and Power Electronics (PE) VFD.
17. From the left side of the EB, install the following cables going to the Signal Box (SB):
 - a. P1 115V power to the Programmable Logic Controller (PLC)
 - b. P2 DI Kit
 - c. P19 GPMP (GC Pump)
 - d. P20 PPMP-VFD (PE Pump)
 - e. P7 Blower VFD
18. Install main power leads through the top of the EB. Wire each breaker as required by electrical schematic Lytron PN 830-0185

CAUTION: OBSERVE PROPER SAFETY PROCEDURES WHEN INSIDE THE ELECTRICAL CABINET. HIGH VOLTAGE IS PRESENT WHEN COVER IS REMOVED.

19. Turn on power in accordance with Lytron manual #820-0190.
20. To check proper rotation of pumps & blowers, turn on each breaker momentarily to observe the direction of the individual motor or blower. To correct an opposite rotation, switch two of the three phases for the appropriate breaker. If all motors and/or blowers rotate opposite, switch two of the three incoming power feeds.
21. Replace the cover to the EB by securing the 4 thumbscrews.



Photo 7 Front Cover in place

End of Procedure