

[new...](#) | [new revision](#) | [page status](#) | [copy](#) | [move](#) | [delete](#)

welcome!
ct tech pubs web page
ct water cooler
ct tech pubs updates
surveys
9800/hla
highspeed family (us)
ct/i
lightspeed family
yms family
all ct products
index
old ct emails
communiques pending
approval
customize
members

search:

advanced search
news: daily | weekly

go offline | chat | notify |
print | tutorial | help

home> lightspeed family

Brush Block Placement

christopher hardiman (christopher c hardiman), 06/18/2002 - 09:10 pm



PROPRIETARY WARNING

This information is Property of GE - For GE Service Personnel Only.
Disclosure to third parties prohibited.

Communique Number

MQUE-5B3Q3Z

Equipment

LightSpeed Plus & Ultra

Hints/Tips

The brushes on the slipping brush block are susceptible to breakage if lateral force is applied during assembly back onto the gantry. Lately, consumption of the brush tip kits has dramatically increased due, in part, to damage caused during the cleaning process. Refer to below attachment for a tip on how to create and use a set of "guide pins" to ease this process. Thanks to Gary Juedes for supplying this valuable tip!

You can download any of the files below by dragging them to your Windows desktop.
To open a file for reading, double-click it.



Author

Christopher C Hardiman

Revision

06/18/2002 09:10 PM

[new...](#) | [new revision](#) | [page status](#) | [copy](#) | [move](#) | [delete](#)

Brush Block Guide Pin Tip

The brushes on the slipring brush block are susceptible to breakage if lateral force is applied during assembly back to the gantry. Lately, consumption of the brush tip kits has dramatically increased due, in part, to damage caused during the removal process required for cleaning.

Since no pins are provided to guide the placement, it is suggested that Field Engineers, from a local hardware store, obtain two 200 mm (8 in.) to 250 mm (10 in.) long carriage bolts (6 mm x 200 mm or 300 mm). The heads *may* be cut from these carriage bolts to enable complete removal of the brush block if deemed necessary; however, cleaning can be accomplished with the blocks resting on these long bolts.

Remove the top and bottom mounting bolts and insert these carriage bolts in their place (see Figure 1). Remove the other two bolts and slide the brush block out using the carriage bolts as guides. Perform the necessary cleaning and reverse the procedure to re-install the brush block.

Be sure to torque the (4) 6 mm cap screws to 7.9 N-m (70 in-lbs or 6 ft-lbs).

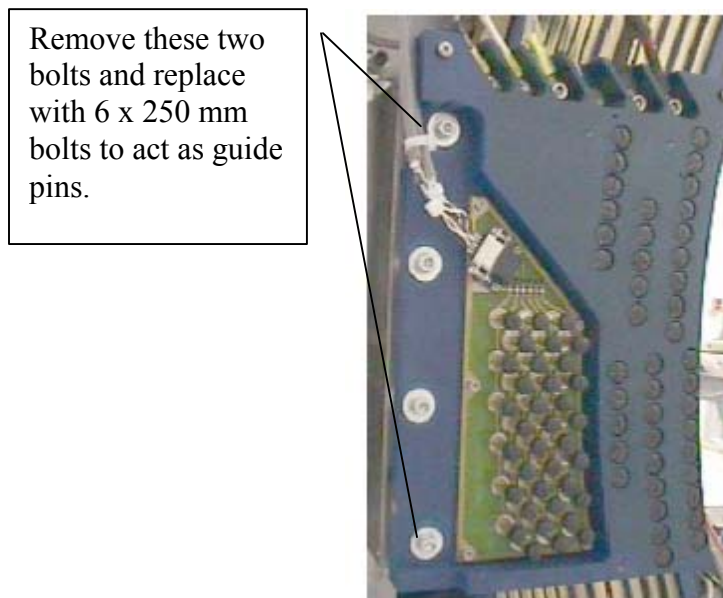


Figure 1. Brush Block

Thanks to Gary Juedes for providing this valuable tip!