


820-0236 – Install Instructions for Liquid Temperature Sensor (RTD) (P/N: 205-0121-08) GE P/N: 5268665

Tools Required:

- (2) 9/16" wrenches or slip wrench
- Loctite[™] 565
- Tie Wraps (Lytron P/N 101601-01)

Removal Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Drain system. Drain system in accordance with Lytron manual #820-0190.
4. Locate Liquid Temperature Sensor (RTD) to remove. There are temperature detectors located in the GC Supply, PE Supply, and Facility Water. (Refer to Photo 1)

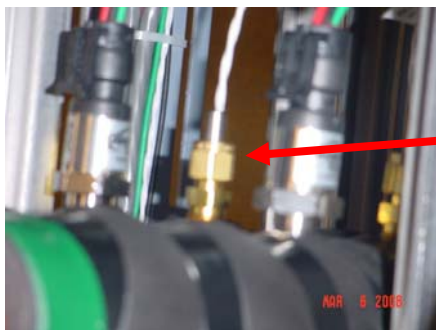

Liquid RTD
(Typical)

Photo 1

5. Disconnect the associated RTD from the Signal Box.
6. Cut tie wraps that secure the RTD from the Signal Box to the RTD position.
7. While holding the inner nut with a 9/16" wrench, remove RTD by loosening RTD outer nut with a second 9/16" wrench.
8. Remove nut and ferrule from temperature sensor by sliding off. Leave inner nut attached to manifold.

End of Procedure

Install Instructions for Liquid Temperature Sensor (RTD)

1. Install new ferrule and barrel connector by sliding them on over the temperature sensor.
2. Discard new bottom nut.
3. Prepare screw end of Liquid Temperature Sensor (RTD) with a moderate amount of Loctite 565 or equivalent.
4. Carefully screw RTD into manifold.
5. Using a 9/16" wrench, tighten to hand tight.
6. Route RTD cable along original path to the Signal Box. Tie wrap in place.
7. Connect signal harness to Signal Box.
8. Fill system in accordance with Lytron manual #820-0190.
9. Check for leaks around unit just installed.
10. Return machine to running condition per Lytron manual #820-0190.
11. Check reading associated with Liquid Temperature Sensor just replaced.

End of Procedure