

GE Healthcare

LightSpeed 3.X Illustrated Parts List



OPERATING DOCUMENTATION



2296442-100
Rev 16

The information contained in this manual applies to the following LightSpeed 3.X (4 and 8-slice MDAS equipped scanners) catalog numbers:

<u>LS Ultra (8-slice) Cat. #</u>		<u>LS Plus (4-slice, .5sec) Cat. #</u>	<u>LS QX/i (4-slice, .8 sec) Cat. #</u>
• B7852JA	• B7858JA	• B7854JA	• B7853JA
• B7852JB	• B7858JB	• B7854JB	• B7853JB
• B7852JC	• B7858JC	• B7854JC	• B7853JC
	• B7858JD	• B7854JD	
	• B7858JE	• B7854JE	
	• B7858JF	• B7854JF	
	• B7858MB	• B7854MB	

IMPORTANT PRECAUTIONS

LANGUAGE

Предупреждение

(BG)

- ТОВА УПЪТВАНЕ ЗА РАБОТА Е НАЛИЧНО САМО НА АНГЛИЙСКИ ЕЗИК.
- АКО ДОСТАВЧИКЪТ НА УСЛУГАТА НА КЛИЕНТА ИЗИСКА ЕЗИК, РАЗЛИЧЕН ОТ АНГЛИЙСКИ, ЗАДЪЛЖЕНИЕ НА КЛИЕНТА Е ДА ОСИГУРИ ПРЕВОД.
- НЕ ИЗПОЛЗВАЙТЕ ОБОРУДВАНЕТО ПРЕДИ ДА СТЕ СЕ КОНСУЛТИРАЛИ И РАЗБРАЛИ УПЪТВАНЕТО ЗА РАБОТА.
- НЕСПАЗВАНЕТО НА ТОВА ПРЕДУПРЕЖДЕНИЕ МОЖЕ ДА ДОВЕДЕ ДО НАРАНЯВАНЕ НА ДОСТАВЧИКА НА УСЛУГАТА, ОПЕРАТОРА
- ИЛИ ПАЦИЕНТ В РЕЗУЛТАТ НА ТОКОВ УДАР ИЛИ МЕХАНИЧНА ИЛИ ДРУГА ОПАСНОСТ.

警告

(ZH-CN)

- 本维修手册仅提供英文版本。
- 如果维修服务提供商需要非英文版本，客户需自行提供翻译服务。
- 未详细阅读和完全理解本维修手册之前，不得进行维修。
- 忽略本警告可能对维修人员，操作员或患者造成触电、机械伤害或其他形式的伤害。

VÝSTRAHA

(CS)

- Tento provozní návod existuje pouze v anglickém jazyce.
- V případě, že externí služba zákazníkům potřebuje návod v jiném jazyce, je zajištění překladu do odpovídajícího jazyka úkolem zákazníka.
- Nesnažte se o údržbu tohoto zařízení, aniž byste si přečetli tento provozní návod a pochopili jeho obsah.
- V případě nedodržování této výstrahy může dojít k poranění pracovníka prodejního servisu, obslužného personálu nebo pacientů vlivem elektrického proudu, respektive vlivem mechanických či jiných rizik.

ADVARSEL

(DA)

- Denne servicemanual findes kun på engelsk.
- Hvis en kundes tekniker har brug for et andet sprog end engelsk, er det kundens ansvar at sørge for oversættelse.
- Forsøg ikke at servicere udstyret medmindre denne servicemanual har været konsulteret og er forstået.
- Manglende overholdelse af denne advarsel kan medføre skade på grund af elektrisk, mekanisk eller anden fare for teknikeren, operatøren eller patienten.

WAARSCHUWING

(NL)

- Deze onderhoudshandleiding is enkel in het Engels verkrijgbaar.
- Als het onderhoudspersoneel een andere taal vereist, dan is de klant verantwoordelijk voor de vertaling ervan.
- Probeer de apparatuur niet te onderhouden voordat deze onderhoudshandleiding werd geraadpleegd en begrepen is.
- Indien deze waarschuwing niet wordt opgevolgd, zou het onderhoudspersoneel, de operator of een patiënt gewond kunnen raken als gevolg van een elektrische schok, mechanische of andere gevaren.

WARNING

(EN)

- This Service Manual is available in English only.
- If a customer's service provider requires a language other than English, it is the customer's responsibility to provide translation services.
- Do not attempt to service the equipment unless this service manual has been consulted and is understood.
- Failure to heed this warning may result in injury to the service provider, operator, or patient, from electric shock or from mechanical or other hazards.

HOIATUS

(ET)

- Käesolev teenindusjuhend on saadaval ainult inglise keeles.
- Kui klienditeeninduse osutaja nõuab juhendit inglise keelest erinevas keeles, vastutab klient tõlketeenuse osutamise eest.
- Ärge üritage seadmeid teenindada enne eelnevalt käesoleva teenindusjuhendiga tutvumist ja sellest aru saamist.
- Käesoleva hoiatuse eiramine võib põhjustada teenuseosutaja, operaatori või patsiendi vigastamist elektrilöögi, mehaanilise või muu ohu tagajärjel.

VAROITUS

(FI)

- Tämä huolto-ohje on saatavilla vain englanniksi.
- Jos asiakkaan huoltohenkilöstö vaatii muuta kuin englanninkielistä materiaalia, tarvittavan käännöksen hankkiminen on asiakkaan vastuulla.
- Älä yritä korjata laitteistoa ennen kuin olet varmasti lukenut ja ymmärtänyt tämän huolto-ohjeen.
- Mikäli tätä varoitusta ei noudateta, seurauksena voi olla huoltohenkilöstön, laitteiston käyttäjän tai potilaan vahingoittuminen sähköiskun, mekaanisen vian tai muun vaaratilanteen vuoksi.

ATTENTION

(FR)

- Ce manuel de service n'est disponible qu'en anglais.
- Si le technicien du client a besoin de ce manuel dans une autre langue que l'anglais, c'est au client qu'il incombe de le faire traduire.
- Ne pas tenter d'intervenir sur les équipements tant que le manuel service n'a pas été consulté et compris.
- Le non-respect de cet avertissement peut entraîner chez le technicien, l'opérateur ou le patient des blessures dues à des dangers électriques, mécaniques ou autres.

WARNUNG

(DE)

- Diese Serviceanleitung existiert nur in Englischer Sprache.
- Falls ein fremder Kundendienst eine andere Sprache benötigt, ist es Aufgabe des Kunden für eine Entsprechende Übersetzung zu sorgen.
- Versuchen Sie nicht diese Anlage zu warten, ohne diese Serviceanleitung gelesen und verstanden zu haben.
- Wird diese Warnung nicht beachtet, so kann es zu Verletzungen des Kundendiensttechnikers, des Bedieners oder des Patienten durch Stromschläge, Mechanische oder Sonstige gefahren kommen.

ΠΡΟΕΙΔΟΠΟΙΗΣΗ

(EL)

- Το παρόν εγχειρίδιο σέρβις διατίθεται στα αγγλικά μόνο.
- Εάν το άτομο παροχής σέρβις ενός πελάτη απαιτεί το παρόν εγχειρίδιο σε γλώσσα εκτός των αγγλικών, αποτελεί ευθύνη του πελάτη να παρέχει υπηρεσίες μετάφρασης.
- Μην επιχειρήσετε την εκτέλεση εργασιών σέρβις στον εξοπλισμό εκτός εάν έχετε συμβουλευτεί και έχετε κατανοήσει το παρόν εγχειρίδιο σέρβις.
- Εάν δε λάβετε υπόψη την προειδοποίηση αυτή, ενδέχεται να προκληθεί τραυματισμός στο άτομο παροχής σέρβις, στο χειριστή ή στον ασθενή από ηλεκτροπληξία, μηχανικούς ή άλλους κινδύνους.

FIGYELMEZTETÉS

(HU)

- Ezen karbantartási kézikönyv kizárólag angol nyelven érhető el.
- Ha a vevő szolgáltatója angoltól eltérő nyelvre tart igényt, akkor a vevő felelőssége a fordítás elkészítése.
- Ne próbálja elkezdni használni a berendezést, amíg a karbantartási kézikönyvben leírtakat nem értelmezték.
- Ezen figyelmeztetés figyelmen kívül hagyása a szolgáltató, működtető vagy a beteg áramütés, mechanikai vagy egyéb veszélyhelyzet miatti sérülését eredményezheti.

AÐVÖRUN

(IS)

- Þessi þjónustuhandbók er eingöngu áanleg á ensku.
- Ef að þjónustuveitandi viðskiptamanns þarfnast annas tungumáls en ensku, er það skylda viðskiptamanns að skaffa tungumálþjónustu.
- Reynið ekki að afgreiða tækið nema að þessi þjónustuhandbók hefur verið skoðuð og skilin.
- Brot á sinna þessari aðvörun getur leitt til meiðsla á þjónustuveitanda, stjórnaða eða sjúklings frá raflosti, vélrænu eða öðrum áhættum.

AVVERTENZA

(IT)

- Il presente manuale di manutenzione è disponibile soltanto in inglese.
- Se un addetto alla manutenzione richiede il manuale in una lingua diversa, il cliente è tenuto a provvedere direttamente alla traduzione.
- Si proceda alla manutenzione dell'apparecchiatura solo dopo aver consultato il presente manuale ed averne compreso il contenuto.
- Il non rispetto della presente avvertenza potrebbe far compiere operazioni da cui derivino lesioni all'addetto, alla manutenzione, all'utilizzatore ed al paziente per folgorazione elettrica, per urti meccanici od altri rischi.

警告

(JA)

- このサービスマニュアルには英語版しかありません。
- サービスを担当される業者が英語以外の言語を要求される場合、翻訳作業はその業者の責任で行うものとさせていただきます。
- このサービスマニュアルを熟読し理解せずに、装置のサービスを行わないでください。
- この警告に従わない場合、サービスを担当される方、操作員あるいは患者さんが、感電や機械的又はその他の危険により負傷する可能性があります。

경고
(KO)

- 본 서비스 지침서는 영어로만 이용하실 수 있습니다 .
- 고객의 서비스 제공자가 영어 이외의 언어를 요구할 경우 , 번역 서비스를 제공하는 것은 고객의 책임입니다 .
- 본 서비스 지침서를 참고했고 이해하지 않는 한은 해당 장비를 수리하려고 시도하지 마십시오 .
- 이 경고에 유의하지 않으면 전기 쇼크 , 기계상의 혹은 다른 위험으로부터 서비스 제공자 , 운영자 혹은 환자에게 위해를 가할 수 있습니다 .

BRDINJUMS
(LV)

- Šī apkalpes rokasgrāmata ir pieejama tikai angļu valodā.
- Ja klienta apkalpes sniedzējam nepieciešama informācija citā valodā, nevis angļu, klienta pienākums ir nodrošināt tulkošanu.
- Neveiciet aprīkojuma apkalpi bez apkalpes rokasgrāmatas izlasīšanas un saprašanas.
- Šī brīdinājuma neievērošana var radīt elektriskās strāvas trieciena, mehānisku vai citu risku izraisītu traumu apkalpes sniedzējam, operatoram vai pacientam.

ISPĒJIMAS
(LT)

- Šis eksploatavimo vadovas yra prieinamas tik anglų kalba.
- Jei kliento paslaugų tiekėjas reikalauja vadovo kita kalba – ne anglų, numatyti vertimo paslaugas yra kliento atsakomybė.
- Nemėginkite atlikti įrangos techninės priežiūros, nebent atsižvelgėte į šį eksploatavimo vadovą ir jį supratote.
- Jei neatkreipsite dėmesio į šį perspėjimą, galimi sužalojimai dėl elektros šoko, mechaninių ar kitų pavojų paslaugų tiekėjui, operatoriui ar pacientui.

ADVARSEL
(NO)

- Denne servicehåndboken finnes bare på engelsk.
- Hvis kundens serviceleverandør trenger et annet språk, er det kundens ansvar å sørge for oversettelse.
- Ikke forsøk å reparere utstyret uten at denne servicehåndboken er lest og forstått.
- Manglende hensyn til denne advarselen kan føre til at serviceleverandøren, operatøren eller pasienten skades på grunn av elektrisk støt, mekaniske eller andre farer.

OSTRZEŻENIE

(PL)

- Niniejszy podręcznik serwisowy dostępny jest jedynie w języku angielskim.
- Jeśli dostawca usług klienta wymaga języka innego niż angielski, zapewnienie usługi tłumaczenia jest obowiązkiem klienta.
- Nie próbować serwisować wyposażenia bez zapoznania się i zrozumienia niniejszego podręcznika serwisowego.
- Niezastosowanie się do tego ostrzeżenia może spowodować urazy dostawcy usług, operatora lub pacjenta w wyniku porażenia elektrycznego, zagrożenia mechanicznego bądź innego.

ATENÇÃO

(PT-BR)

- Este manual de assistência técnica só se encontra disponível em inglês.
- Se qualquer outro serviço de assistência técnica, que não a gems, solicitar estes manuais noutro idioma, é da responsabilidade do cliente fornecer os serviços de tradução.
- Não tente reparar o equipamento sem ter consultado e compreendido este manual de assistência técnica.
- O não cumprimento deste aviso pode por em perigo a segurança do técnico, operador ou paciente devido a choques elétricos, mecânicos ou outros.

ATENÇÃO

(PT-PT)

- Este manual de assistência técnica só se encontra disponível em inglês.
- Se qualquer outro serviço de assistência técnica, que não a gems, solicitar estes manuais noutro idioma, é da responsabilidade do cliente fornecer os serviços de tradução.
- Não tente reparar o equipamento sem ter consultado e compreendido este manual de assistência técnica.
- O não cumprimento deste aviso pode colocar em perigo a segurança do técnico, do operador ou do paciente devido a choques elétricos, mecânicos ou outros.

ATENȚIE

(RO)

- Acest manual de service este disponibil numai în limba engleză.
- Dacă un furnizor de servicii pentru clienți necesită o altă limbă decât cea engleză, este de datoria clientului să furnizeze o traducere.
- Nu încercați să reparați echipamentul decât ulterior consultării și înțelegerii acestui manual de service.
- Ignorarea acestui avertisment ar putea duce la rănirea depanatorului, operatorului sau pacientului în urma pericolelor de electrocutare, mecanice sau de altă natură.

ОСТОРОЖНО!

(RU)

- Данное руководство по обслуживанию предлагается только на английском языке.
- Если сервисному персоналу клиента необходимо руководство не на английском, а на каком-то другом языке, клиенту следует самостоятельно обеспечить перевод.
- Перед обслуживанием оборудования обязательно обратитесь к данному руководству и поймите изложенные в нем сведения.
- Несоблюдение требований данного предупреждения может привести к тому, что специалист по обслуживанию, оператор или пациент получат удар электрическим током, механическую травму или другое повреждение.

UPOZORENJE

(SR)

- Ovo servisno uputstvo je dostupno samo na engleskom jeziku.
- Ako klijentov serviser zahteva neki drugi jezik, klijent je dužan da obezbedi prevodilacke usluge.
- Ne pokušavajte da opravite uređaj ako niste procitali i razumeli ovo servisno uputstvo.
- Zanemarivanje ovog upozorenja može dovesti do povređivanja serviser, rukovaoca ili pacijenta usled strujnog udara ili mehanickih i drugih opasnosti.

UPOZORNENIE

(SK)

- Tento návod na obsluhu je k dispozícii len v angličtine.
- Ak zákazníkovi poskytovateľ služieb vyžaduje iný jazyk ako angličtinu, poskytnutie prekladateľských služieb je zodpovednosťou zákazníka.
- Nepokúšajte sa o obsluhu zariadenia skôr, ako si neprečítate návod na obsluhu a neporozumiete mu.
- Zanedbanie tohto upozornenia môže vyústiť do zranenia poskytovateľa služieb, obsluhujúcej osoby alebo pacienta elektrickým prúdom, do mechanického alebo iného nebezpečenstva.

ATENCION

(ES)

- Este manual de servicio sólo existe en inglés.
- Si el encargado de mantenimiento de un cliente necesita un idioma que no sea el inglés, el cliente deberá encargarse de la traducción del manual.
- No se deberá dar servicio técnico al equipo, sin haber consultado y comprendido este manual de servicio.
- La no observancia del presente aviso puede dar lugar a que el proveedor de servicios, el operador o el paciente sufran lesiones provocadas por causas eléctricas, mecánicas o de otra naturaleza.

VARNING

(SV)

- Den här servicehandboken finns bara tillgänglig på engelska.
- Om en kunds servicetekniker har behov av ett annat språk än engelska ansvarar kunden för att tillhandahålla översättningstjänster.
- Försök inte utföra service på utrustningen om du inte har läst och förstår den här servicehandboken.
- Om du inte tar hänsyn till den här varningen kan det resultera i skador på serviceteknikern, operatören eller patienten till följd av elektriska stötar, mekaniska faror eller andra faror.

DIKKAT

(TR)

- Bu servis kilavuzunun sadece ingilizcesi mevcuttur.
- Eğer müşteri teknisyeni bu kilavuzu ingilizce dışında bir başka lisandan talep ederse, bunu tercüme ettirmek müşteriye düşer.
- Servis kilavuzunu okuyup anlamadan ekipmanlara müdahale etmeyiniz.
- Bu uyariya uyulmaması, elektrik, mekanik veya diğer tehlikelerden dolayı teknisyen, operatör veya hastanın yaralanmasına yol açabilir.

DAMAGE IN TRANSPORTATION

All packages should be closely examined at time of delivery. If damage is apparent, have notation "damage in shipment" written on all copies of the freight or express bill before delivery is accepted or "signed for" by a General Electric representative or a hospital receiving agent. Whether noted or concealed, damage **MUST** be reported to the carrier immediately upon discovery, or in any event, within 14 days after receipt, and the contents and containers held for inspection by the carrier. A transportation company will not pay a claim for damage if an inspection is not requested within this 14 day period.

To file a report:

- Call 1-800-548-3366 and use option 8.
- Fill out a report on <http://egems.med.ge.com/edq/home.jsp>
- Contact your local service coordinator for more information on this process.

Rev. Jan. 5, 2005

CERTIFIED ELECTRICAL CONTRACTOR STATEMENT

All electrical Installations that are preliminary to positioning of the equipment at the site prepared for the equipment shall be performed by licensed electrical contractors. In addition, electrical feeds into the Power Distribution Unit shall be performed by licensed electrical contractors. Other connections between pieces of electrical equipment, calibrations and testing shall be performed by qualified GE Healthcare personnel. The products involved (and the accompanying electrical installations) are highly sophisticated, and special engineering competence is required. In performing all electrical work on these products, GE will use its own specially trained field engineers. All of GE's electrical work on these products will comply with the requirements of the applicable electrical codes.

The purchaser of GE equipment shall only utilize qualified personnel (i.e., GE's field engineers, personnel of third-party service companies with equivalent training, or licensed electricians) to perform electrical servicing on the equipment.

IMPORTANT...X-RAY PROTECTION

X-ray equipment if not properly used may cause injury. Accordingly, the instructions herein contained should be thoroughly read and understood by everyone who will use the equipment before you attempt to place this equipment in operation. The General Electric Company, Medical Systems Group, will be glad to assist and cooperate in placing this equipment in use.

Although this apparatus incorporates a high degree of protection against x-radiation other than the useful beam, no practical design of equipment can provide complete protection. Nor can any practical design compel the operator to take adequate precautions to prevent the possibility of any persons carelessly exposing themselves or others to radiation.

It is important that anyone having anything to do with x-radiation be properly trained and fully acquainted with the recommendations of the National Council on Radiation Protection and Measurements as published in NCRP Reports available from NCRP Publications, 7910 Woodmont Avenue, Room 1016, Bethesda, Maryland 20814, and of the International Commission on Radiation Protection, and take adequate steps to protect against injury.

The equipment is sold with the understanding that the General Electric Company, Medical Systems Group, its agents, and representatives have no responsibility for injury or damage which may result from improper use of the equipment.

Various protective materials and devices are available. It is urged that such materials or devices be used.

LITHIUM BATTERY CAUTIONARY STATEMENT



CAUTION

Risk of Explosion.

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

OMISSIONS & ERRORS

Customers, please contact your GE Sales or Service representatives.

GE personnel, please use the GE Healthcare PQR process to report all omissions, errors, and defects in this publication.

Revision History

Revision	Date	Reason for change
0	7/12/01	Initial Release of Document.
1	11/20/01	CQA 1015249 - Added "K78 Filament Relay" to Table 4-26 OBC Assembly (2231831 BOM, rev 8). CQA 1016271 - Added Items 2161307 & 2161206 to Table 4-22 2291276, -2 BOM, rev 11, 6 Chapter 5: Added new disk drive and CD-ROM drive.
2	12/13/01	Chapter 4: Updated Tilting Frame BOM to reflect new Gantry Intercom Bd. Chapter 5: Added Octane2 information.
3	02/05/02	Changed name to "LightSpeed Ultra & Plus Illustrated Parts List" to reflect support for Plus product (a.k.a. Ultra 4-slice). Updated various BOMs & Drawings to support Plus product (a.k.a. Ultra 4-slice). Chapter 4: - Updated Tilting Frame BOM & Drawings. - Replaced Gantry Fan Assemblies with new Assemblies (2315618 & 2315619). Chapter 5: - Added Section 2.2 LCD Monitor & Cable (2309592). - Updated Table 5-5 Console User Drive Assembly (2174061-2 BOM, rev 6) to reflect new Sony MOD.
4	03/22/02	CQA 1021702 - Added Section 2.11.4.4 Detector Assembly, Single Zone Heater (2280784) to Chapter 4 Gantry. Chapter 4: - Added Section 13.0 — Cover Dollies. - Added "Detector Memory Board Assembly (2296076)" to Chapter 4 Gantry. Chapter 5: Added other language SCIMs & Keyboards to "Keyboard w/SCIM, Collectors."
5	06/11/02	Updated BOMs throughout manual to reflect change in FRU strategy. Updated drawings throughout manual to current revisions Chapter 2: Added LCC Table information. Added Chapter 6 - GOC1 (w/Octane2).
6	08/30/02	CQA 1027814: Change Octane1 from FRU=1 to FRU=NO. Chapter 4: Updated Section 2.7 Drive Assembly, Axial (2217930) Chapter 6: Added Service Kits for GOC1; updated BOM for 2341104 and 2341104-2

Revision	Date	Reason for change
7	11/21/02	CQA 1029273: Added missing Octane2 FRU information to Chapter 6 Chapter 2: Updated various FRU codes Chapter 4: Added Section 15.0 — Gantry Service Items
8	04/15/03	Changed Manual name to "LightSpeed 3.X Illustrated Parts List" to more accurately reflect supported products. Updated BOMs & Drawings throughout. Added Chapter 7 - GOC2 (w/Linux PC)
9	05/30/03	Chapter 3: Added NGPDU information. Chapter 4: Changed FRU codes for DAS convertor cards Added Chapter 8 - Misc. Kits & Accessories.
10	01/20/04	CQA 13008535: Added Section 16.0 — DAS Fiber Optic Cables to Chapter 4 CTCge 85160: Changed Performix Tube (D3182T) FRU Code to "1" Chapter 4: - Updated Table 4-1 (Gantry 2281177/2281177-2 BOM) - Updated Table 4-52 (Slipring Assembly 2295213 BOM) - Added Section 4.0 — Slipring Cover Collector (2369443)
11	06/21/04	PQR 13018506: Incorrect part number for Helios IQ Cal 35 Poly (Phantom of 35 cm). Chapter 4: New Tube P/N.
12	09/24/04	PQR 13024287: Added References to Dir 2394950-100, for GOC3 (GRE Xtream) Info.
13	10/04/05	Added References to Dir 5134893-100, for GOC4 Info. General updates.
14	7/17/06	PQR 13018753: Updated drawing 2293764 in Chapter 4 (Gantry).
15	6/6/07	PQR 13081174: Updated replacement disk drive for Octane2 computer.
16	11/7/08	Important Precautions: Add new languages. SPR FCTge35661: - Replaced BOM 2291276, -2 with updated Rev. 11, 6 - Replaced 2291276ADW, Rev 3 with updated Rev. 7 - Added BOM 5140001-3, Rev. 7 - Added 5140001ADW, Rev. 1 - Replaced BOM 2120100-3 Rev. 5 (Obsolete) with new BOM 5140000-3, Rev. 8 - Added 5140000ADW, Rev. 2 - Added 2273645ADW, Rev. 2

Table of Contents

Chapter 1

System Matrices & Manual Conventions	41
Section 1.0 — Page Layout, Including Finger Tabs	41
Section 2.0 — Manual Organization.....	42
Section 3.0 — System Matrices.....	42
3.1 LightSpeed 3.X Ultra System Matrix.....	43
Ultra System Catalog Tree	43
3.2 LightSpeed 3.X Plus (Ultra 4-slice) System Matrix.....	44
Plus System Catalog Tree.....	44
3.3 Table Sub-System Matrix.....	45
Table BOM Tree.....	45
3.4 Gantry Sub-System Matrix	46
Gantry BOM Tree	46
3.5 Console Sub-System Matrices.....	47
3.5.1 – H3 Console.....	47
H3 Console BOM Tree	47
3.5.2 – Global Console - Octane2 (GOC1)	48
Global Console - Octane2 (GOC1) BOM Tree	48
3.5.3 – Global Console - Linux (GOC2).....	49
Global Console - Linux (GOC2) BOM Tree.....	49
3.5.4 – GRE Xstream Console (GOC3 or GOC4).....	50

Chapter 2

Table.....	51
Table BOM Tree.....	52
Table w/ Footswitch (2276776-2 BOM, rev 31).....	53
Section 1.0 — Table Assembly - LCC (2269165).....	54
Table Assembly - LCC (2269165, sheet 1, rev 3)	54

	Table Assembly - LCC (2269165, sheet 2, rev 3)	55
	Table Assembly - LCC (2269165, sheet 3, rev 0)	56
	Table Assembly - LCC (2269165 BOM, rev 13)	57
1.1	Side Panel Kit (2269167-2)	61
	Side Panel Kit (2269167-2 BOM, rev 0)	61
1.2	Right Base Cover Assembly (2271244)	62
	Right Base Cover Assembly (2271244, sheet 1, rev1)	62
	Right Base Cover Assembly (2271244 BOM, rev 3)	63
1.3	Left Base Cover Assembly (2271247)	64
	Left Base Cover Assembly (2271247, sheet 1, rev 1)	64
	Left Base Cover Assembly (2271247 BOM, rev 3)	65
1.4	Cover Table Top Left (2372371)	66
	Cover Table Top Left (2372371 BOM, rev 1)	66
1.5	Cover Table Top Right (2372372)	67
	Cover Table Top Left (2372372 BOM, rev 1)	67
1.6	Metalless Cradle (2115992-2)	68
	Metalless Cradle (2115992-2 BOM, rev 0)	68
1.7	Table Subassembly (2269166)	70
	Table Subassembly (2269166, sheet 1, rev 0)	70
	Table Subassembly (2269166, sheet 2, rev 0)	71
	Table Subassembly (2269166, sheet 3, rev 0)	72
	Table Subassembly (2269166, sheet 4, rev 0)	73
	Table Subassembly (2269166 BOM, rev 2)	74
	1.7.1 – Carriage Assembly (2269168)	76
	Carriage Assembly (2269168, sheet 1, rev 1)	76
	Carriage Assembly (2269168 BOM, rev 1)	77
	1.7.2 – Latch Assembly (2269177)	78
	Latch Assembly (2269177, sheet 1, rev 0)	78
	Latch Assembly (2269177 BOM, rev 0)	79
	1.7.3 – Cradle Drive Assembly (2269169)	80
	Cradle Drive Assembly (2269169 sheet 1, rev 0)	80
	Cradle Drive Assembly (2269169 sheet 2, rev 0)	81
	Cradle Drive Assembly (2269169 BOM, rev 3)	82

1.7.4 – Longitudinal Encoder Asm (2269175)	86
Longitudinal Encoder Asm (2269175, sheet 1, rev 0)	86
Longitudinal Encoder Asm (2269175, sheet 2, rev 0)	87
Longitudinal Encoder Asm (2269175 BOM, rev 1)	88
1.7.5 – Servo Assembly (46-297059G1)	90
Servo Assembly (46-297059, sheet 1, rev 2)	90
Servo Assembly (46-297059G1 BOM, rev 9)	91
1.7.6 – Power Supply Assembly (2269172)	92
Power Supply Assembly (2269172, sheet 1, rev 0)	92
Power Supply Assembly (2269172, sheet 2, rev 0)	93
Power Supply Assembly (2269172 BOM, rev 0)	94
1.7.7 – Elevation Encoder Assembly (2269173)	96
Elevation Encoder Assembly (2269173, sheet 1, rev 1)	96
Elevation Encoder Assembly (2269173, sheet 2, rev 1)	97
Elevation Encoder Assembly (2269173 BOM, rev 1)	98
1.7.8 – Frame Assembly (2269174)	100
Frame Assembly (2269174, sheet 1, rev 0)	100
Frame Assembly (2269174, sheet 2, rev 0)	101
Frame Assembly (2269174, sheet 3, rev 0)	102
Frame Assembly (2269174, sheet 4, rev 0)	103
Frame Assembly (2269174, sheet 5, rev 0)	104
Frame Assembly (2269174 BOM, rev 5)	105
Section 2.0 — Table Assembly (2271242)	110
Table Assembly (2271242, sheet 1, rev 1)	110
Table Assembly (2271242, sheet 2, rev 1)	111
Table Assembly (2271242, sheet 3, rev 0)	112
Table Assembly (2271242 BOM, rev 5)	113
2.1 Side Panel Kit (2169596-2)	118
Side Panel Kit (2169596-2 BOM, rev 1)	118
2.2 Cover Assembly Table Top - Left (2236720)	120
Cover Assembly Table Top - Left (2236720, sheet 1, rev 0)	120
Cover Assembly Table Top - Left (2236720 BOM, rev 2)	121
2.3 Cover Assembly Table Top - Right (2236720-2)	122
Cover Assembly Table Top - Right (2236720-2, sheet 1, rev 0)	122

	Cover Assembly Table Top - Right (2236720-2 BOM, rev 2).....	123
2.4	Subassembly For H2 HCC Cathay Table (2271241)	124
	Subassembly For H2 HCC Cathay Table (2271241, sheet 1, rev 1).....	124
	Subassembly For H2 HCC Cathay Table (2271241, sheet 2, rev 1).....	125
	Subassembly For H2 HCC Cathay Table (2271241, sheet 3, rev 1).....	126
	Subassembly For H2 HCC Cathay Table (2271241, sheet 4, rev 1).....	127
	Subassembly For H2 HCC Cathay Table (2271241 BOM, rev 3).....	128
	2.4.1 – 3 Point Carriage Assembly (2137940)	130
	3 Point Carriage Assembly (2137940, sheet 1, rev 2).....	130
	3 Point Carriage Assembly (2137940 BOM, rev 3)	131
	2.4.2 – Latch Assembly (46-296233G2)	132
	Latch Assembly (46-296233, sheet 1, rev 1).....	132
	Latch Assembly (46-296233G2 BOM, rev 1)	133
	2.4.3 – Zeus Table, w/Hiawatha (46-296235G2).....	134
	Zeus Table, w/Hiawatha (46-296235, sheet 1, rev 9)	134
	Zeus Table, w/Hiawatha (46-296235, sheet 2, rev 9)	135
	Zeus Table, w/Hiawatha (46-296235G2 BOM, rev 6)	136
	2.4.4 – Table Encoder Assembly (46-296234G1)	138
	Table Encoder Assembly (46-296234, sheet 1, rev 6)	138
	Table Encoder Assembly (46-296234, sheet 2, rev 2)	139
	Table Encoder Assembly (46-296234G1 BOM, rev 9).....	140
	2.4.5 – Power Assembly (46-296791G2)	142
	Power Assembly (46-296791, sheet 1, rev 8)	142
	Power Assembly (46-296791, sheet 2, rev 8)	143
	Power Assembly (46-296791G2 BOM, rev 2)	144
	2.4.6 – Elevation Encoder Assembly (46-296633G3).....	146
	Elevation Encoder Assembly (46-296633G3, sheet 1, rev 8)	146
	Elevation Encoder Assembly (46-296633G3, sheet 2, rev 8)	147
	Elevation Encoder Assembly (46-296633G3 BOM, rev 2)	148
	2.4.7 – Table Frame Assembly (2271240).....	150
	Frame Assembly, Table (2271240, sheet 1, rev 1)	150
	Frame Assembly, Table (2271240, sheet 2, rev 0)	151
	Frame Assembly, Table (2271240, sheet 3, rev 1)	152
	Frame Assembly, Table (2271240, sheet 4, rev 1)	153

Frame Assembly, Table (2271240, sheet 5, rev 0)	154
Frame Assembly (2271240 BOM, rev 6)	155
Section 3.0 — Footswitch Assembly (2330508)	160
Footswitch Assembly (2330508 sheet 1, rev 2)	160
Footswitch Assembly (2330508 BOM, rev 5)	161
Section 4.0 — Foot Switch Cover Asm (46-296790G3)	162
Foot Switch Cover Assembly (46-296790, sheet 1, rev 7)	162
Foot Switch Cover Assembly (46-296790G3 BOM, rev 1)	163

Chapter 3

Power Distribution Unit (PDU) 165

Section 1.0 — CPDU (2269902)	166
Compact PDU (2269902, front view)	166
Compact PDU (2269902, rear view)	167
Compact PDU (2269902)	168
Section 2.0 — NGPDU (2326492-2)	170
NGPDU (2326492-2, sheet 1, rev 0)	170
NGPDU - 90kVA (2326492-2 BOM, Rev 3)	171
NGPDU Assembly2 (2348075, sheet 1, rev 0)	172
NGPDU Assembly2 (2348075, sheet 2, rev 0)	173
NGPDU Assembly2 (2348075, sheet 3, rev 0)	174
NGPDU ASSEMBLY2 (2348075 BOM, Rev 18)	175

Chapter 4

Gantry 183

Gantry BOM Tree	184
Gantry (2281177, sheet 1, rev 6)	185
Gantry (2281177, sheet 2, rev 4)	186
Gantry (2281177, sheet 3, rev 4)	187
Gantry (2281177, sheet 4, rev 6)	188
Gantry (2281177, sheet 5, rev 4)	189
Gantry (2281177, sheet 6, rev 4)	190

Gantry (2281177, -2 BOM, rev 7, 5)	191
Section 1.0 — Stationary Base Assembly (2260616).....	194
Stationary Base Assembly (2260616, sheet 1, rev 6)	194
Stationary Base Assembly (2260616, sheet 2, rev 6)	195
Stationary Base Assembly (2260616, sheet 3, rev 5)	196
Stationary Base Assembly (2260616 BOM, rev 10)	197
1.1 STC Assembly (2266927)	200
STC Assembly (2266927, sheet 1, rev 3)	200
STC Assembly (2266927 BOM, rev 6)	201
1.2 Hydraulic Tilt Motor Assembly (2219018)	204
Hydraulic Tilt Motor Assembly (2219018, sheet 1, rev 2)	204
Hydraulic Tilt Motor Assembly (2219018, sheet 2, rev 2)	205
Hydraulic Tilt Motor Assembly (2219018, sheet 3, rev 2)	206
Hydraulic Tilt Motor Assembly (2219018 BOM, rev 8)	207
<i>Hydraulic Tilt Parts (2225778)</i>	<i>208</i>
Collector Hydraulic Tilt Parts (2225778 BOM, rev 0)	208
<i>Hydraulic Pump (2262276)</i>	<i>210</i>
Hydraulic Pump (2262276, sheet 1, rev 0)	210
Tilt (2262276 BOM, rev 1)	211
1.3 E-Stop Assembly (2266187)	212
E-Stop Assembly (2266187, sheet 1, rev 0)	212
E-Stop Assembly (2266187 BOM, rev 2)	213
1.4 Power Pan (2275608-3)	214
Power Pan (2275608, sheet 1, rev 4)	214
Power Pan (2275608, sheet 2, rev 4)	215
Power Pan (2275608-3 BOM, rev 7)	216
Section 2.0 — Tilting Frame (2260617-2, -4)	218
Tilting Frame (2260617, sheet 1, rev 17)	218
Tilting Frame (2260617, sheet 2, rev 17)	219
Tilting Frame (2260617-2, -4 BOM, rev 17, 7)	220
2.1 Indexer/Rotating Lock Assembly (2181221)	224
Indexer/Rotating Lock Assembly (2181221, sheet 1, rev 0)	224
Indexer/Rotating Lock Assembly (2181221 BOM, rev 0)	225

2.2	Home Flag Assembly (2227378).....	226
	Home Flag Assembly (2227378, sheet 1, rev 0)	226
	Home Flag (2227378 BOM, rev 1)	227
2.3	Gantry Fan Assembly - RH (2315618).....	228
	Gantry Fan Assembly - RH (2315618, sheet 1, rev 1)	228
	Fan Assembly - Gantry, H3 RH (2315618 BOM, rev 1)	229
2.4	Motor Mount/Belt Tensioner (2217928-2)	230
	Motor Mount/Belt Tensioner (2217928, sheet 1, rev 1)	230
	Motor Mount/Belt Tensioner (2217928-2 BOM, rev 3S)	231
2.5	Axial Dynamic Braking Module (2266934-2)	232
	Axial Dynamic Braking Module (2266934, sheet 1, rev 3)	232
	Axial Dynamic Braking Module (2266934, sheet 2, rev 1)	233
	Axial Dynamic Brake Module, w/cvr mnt hls (2266934-2 BOM, rev 3)	234
2.6	Gantry Fan Assembly - LH (2315619)	236
	Gantry Fan Assembly - LH (2315619, sheet 1, rev 2)	236
	Fan Assembly - Gantry, H3 LH (2315619 BOM, rev 1)	237
2.7	Drive Assembly, Axial (2217930)	238
	Drive Assembly, Axial (2217930, sheet 1, rev 3)	238
	Drive Assembly, Axial (2217930, sheet 2, rev 2)	239
	Drive Assembly, Axial (2217930 BOM, rev 6)	240
	2.7.1 – Axial Drive Motor Brake Assembly (2277225)	242
	Axial Drive Motor Brake Assembly (2277225, sheet 1, rev 0)	242
	Brake Assembly, Axial Drive Motor (2277225 BOM, rev 2)	243
	2.7.2 – Axial Drive Motor Controller w/Corers Assembly (2233402)	244
	Axial Drive Motor Controller w/Corers Assembly (2233402, sheet 1, rev 1)	244
	Axial Drive Motor Controller w/Corers Assembly (2233402, sheet 2, rev 1)	245
	Axial Drive Motor Controller w/Corers Assembly (2233402 BOM, rev 2)	246
2.8	Encoder Assembly w/Pivot (2328307)	248
	Encoder Assembly w/Pivot (2328307, sheet 1, rev 1)	248
	Encoder Mount Assembly (2328307 BOM, rev 3)	249
2.9	Brace Assembly, Upper (2273029).....	250
	Brace Assembly, Upper (2273029, sheet 1, rev 1)	250
	Brace, Gantry Cover Upper (2273029 BOM, rev 0)	251

2.10	Brace Assembly, Lower (2273030)	252
	Brace Assembly, Lower (2273030, sheet 1, rev 1)	252
	Brace, Gantry Cover Lower (2273030 BOM, rev 0)	253
2.11	Rotating Base Assembly (2291276, -2)	254
	Rotating Base Assembly (2291276, sheet 1, rev 7)	254
	Rotating Base Assembly (2291276, sheet 2, rev 7)	255
	Rotating Base Assembly (2291276, sheet 3, rev 7)	256
	Rotating Base Assembly (2291276, sheet 4, rev 7)	257
	Rotating Base Assembly (2291276, sheet 5, rev 7)	258
	2291276, -2 BOM, rev 11, 6	259
	2.11.1 – Collimator w/Plate (2214768-3)	264
	Collimator w/Plate (5140001-3, sheet 3, rev 1)	264
	Collimator w/Plate 5140001-3, Rev. 7	265
	<i>Collimator (540000-3)</i>	266
	Collimator (540000-3, sheet 1, rev 2)	266
	Collimator (54000-3, sheet 2 rev 2)	267
	Collimator (54000-3, sheet 3 rev 2)	268
	Collimator (54000-3, sheet 4 rev 2)	269
	Collimator (54000-3, sheet 5 rev 2)	270
	(54000-3, sheet 6 rev 2)	271
	(54000-3, sheet 7 rev 2)	272
	(54000-3, sheet 8 rev 2)	273
	5140000-3, BOM Rev. 8	274
	<i>H3 Collimator Base Assembly (2773645-2)</i>	276
	H3 Collimator Base Assm (2773645-2, sheet 1 rev2)	276
	H3 Collimator Base Assm (2773645-2, sheet 2 rev2)	277
	2773645-2, BOM Rev. 1	278
	2.11.2 – OBC Assembly (2231831)	280
	OBC Assembly (2231831, sheet 1, rev 1)	280
	OBC Assembly (2231831 BOM, rev 8)	281
	<i>OBC Chassis Assembly (2232299)</i>	284
	OBC Chassis Assembly (2232299, sheet 1, rev 3)	284
	OBC Chassis Assembly (2232299 BOM, rev 4)	285

2.11.3 – HEMRC Assembly (2208043)	288
HEMRC Assembly (2208043, sheet 1, rev 4)	288
HEMRC Assembly (2208043, sheet 2, rev 1)	289
HEMRC Assembly (2208043, sheet 3, rev 1)	290
HEMRC Assembly (2208043 BOM, rev 5)	291
2.11.4 – Detector Plate Assembly (2286241, -2)	294
Detector Plate Assembly (2286241, sheet 1, rev 4).....	294
Detector Plate Assembly (2286241, sheet 2, rev 2).....	295
Detector Plate Assembly (2286241, -2 BOM, rev 5, 2)	296
<i>2.11.4.1 – MDAS Assembly, 8-Slice (2272768)</i>	<i>298</i>
MDAS Collector (2272768, sheet 1, rev 5).....	298
MDAS Assembly, 8-Slice (2272768 BOM, rev 4).....	299
<i>2.11.4.2 – 4-Slice to 8-Slice MFG Upgrade (2330482)</i>	<i>299</i>
4-Slice to 8-Slice MFG Upgrade (2330482 BOM, rev 6)	299
<i>2.11.4.3 – MDAS Assembly, 4-Slice (2272768-2)</i>	<i>300</i>
MDAS Collector (2272768, sheet 1, rev 5).....	300
MDAS Collector Assembly (2272768-2 BOM, rev 6).....	301
<i>MDAS Backplane/Chassis, Left Assembly (2289343)</i>	<i>302</i>
MDAS Backplane/ Chassis Assembly, Left (2289343, sheet 1, rev 0).....	302
MDAS Backplane/Chassis, Left Assembly (2289343 BOM, rev 2)	303
<i>MDAS Backplane/Chassis, Center Assembly (2289548)</i>	<i>304</i>
MDAS Backplane/Chassis, Center Assembly (2289548, sheet 1, rev 0).....	304
MDAS Backplane/Chassis, Center Assembly (2289548 BOM, rev 2).....	305
<i>MDAS Backplane/Chassis, Right Assembly (2289460)</i>	<i>306</i>
MDAS Backplane/Chassis, Right Assembly (2289460, sheet 1, rev 0)	306
MDAS Backplane/Chassis, Right Assembly (2289460 BOM, rev 2).....	307
<i>2.11.4.4 – Detector Assembly, Single Zone Heater (2280784)</i>	<i>308</i>
Detector Assembly, Single Zone Heater (2280784, sheet 1, rev 2)	308
Detector Assembly, Single Zone Heater (2280784 BOM, rev 6).....	309
<i>Detector Memory Board Assembly (2296076)</i>	<i>312</i>
Detector Memory Board Assembly (2296076, sheet 1, rev 1)	312
Detector Memory Board Assembly (2296076 BOM, rev 3)	313
<i>2.11.4.5 – Detector Assembly (2282649)</i>	<i>314</i>
Detector Assembly (2282649, sheet 1, rev 3)	314
Detector Assembly (2282649 BOM, rev 5)	315

2.11.4.6 – MDAS Duct/Fan Assembly (2277359)	317
MDAS Duct/Fan Assembly (2277359, sheet 1, rev 0).....	317
MDAS Duct/Fan Assembly (2277359 BOM, rev 2)	318
2.11.4.7 – Power Supply, +5VDC (2285697)	319
Power Supply Assembly, +5VDC, D-Case (2285697, sheet 1, rev 0).....	319
Power Supply Assembly, +5VDC, D-Case (2285697 BOM, rev 0)	320
2.11.5 – Power Supply, D-Case (2285898)	322
Power Supply Assembly, D-Case (2285898, sheet 1, rev 0)	322
Power Supply Assembly, D-Case (2285898 BOM, rev 0).....	323
2.11.6 – Fuse Box/Switch Box Assembly (2293396)	324
Fuse Box/Switch Box Assembly (2293396, sheet 1, rev 3).....	324
Fuse Box/Switch Box Assembly (2293396, sheet 2, rev 3).....	325
Fuse Box/Switch Box Assembly (2293396 BOM, rev 3)	326
<i>Harness (2293764)</i>	328
Harness (2293764, sheet 1, rev 2).....	328
Harness (2293764 BOM)	329
2.11.7 – Power Supply, Right Side (2225209)	330
DAS Power Supply, Right Side (2225209, sheet 1, rev 2)	330
DAS Power Supply, Right Side (2225209 BOM, rev 2).....	331
2.11.7.1 – Power Supply 12VDC Assembly, E Case (2225217)	332
Power Supply Assembly, E Case (2225217, sheet 1, rev 0).....	332
Power Supply 12VDC Assembly, E-Case (2225217 BOM, rev 1).....	333
2.11.7.2 – Power Supply Assembly, 24V F Case W/ Bracket (2225212-4)	334
Power Supply Assembly, F Case W/ Bracket (2225212-3, sheet 1, rev 1)	334
Power Supply Assembly, 24V F Case W/ Bracket (2225212-4 BOM, rev 1)	335
2.11.8 – Power Supply, Left Side (2285907)	336
Power Supply Assembly, E & F-CASE, Left Side (2285907, sheet 1, rev 0)	336
Power Supply Assembly, E & F-CASE, Left Side (2285907 BOM, rev 0).....	337
<i>Power Supply 5VDC Assembly, F Case (2225212-3)</i>	338
Power Supply 5VDC Assembly, F Case (2225212-3, sheet 1, rev 1)	338
Power Supply 5VDC Assembly, F Case (2225212-3 BOM, rev 1).....	339
2.11.9 – DHCB Assembly (2294856)	340
DHCB Assembly (2294856, sheet 1, rev 1)	340
DHCB Assembly (2294856 BOM, rev 1)	341

2.11.10 – Anode Inverter Harness (2240779)	342
Anode Inverter Harness (2240779, sheet 1, rev 1)	342
Anode Inverter Harness (2240779 BOM, rev 1)	343
2.11.11 – Cathode Inv/OBC Harness (2253952)	344
Cathode Inv/OBC Harness (2253952, sheet 1, rev 1)	344
Cathode Inv/OBC Harness (2253952 BOM, rev 3)	345
Section 3.0 — Slipring Assembly (2295213)	346
Slipring Assembly (2295213, sheet 1, rev 1)	346
Slipring Assembly (2295213, sheet 2, rev 0)	347
Slipring Assembly (2295213 BOM, rev 7)	348
3.1 400MB Slipring Assembly (2285090)	350
400MB Slipring Assembly (2285090, sheet 1, rev 0)	350
400MB Platter HSDCD Slipring System (2285090 BOM, rev 0)	351
3.1.1 – 400MB Receiver/Antenna Assembly (2285087)	352
400MB Receiver/Antenna Assembly (2285087, sheet 1, rev 0)	352
Receiver/Antenna Assembly (2285087 BOM, rev 1)	353
3.1.2 – Brushblock Assembly (2240267)	354
Brushblock Assembly (2240267, sheet 1, rev 1)	354
Brushblock Assembly (2240267 BOM, rev 1)	355
3.1.3 – Slipring Assembly (2285089)	356
Slipring Assembly (2285089, sheet 1, rev 0)	356
Slipring Assembly, HSDCD Platter (2285089 BOM, rev 1)	357
Section 4.0 — Slipring Cover Collector (2369443)	358
Slipring Cover Collector (2369443 BOM, rev 0)	358
Section 5.0 — S/R Cover Collector (2282516)	358
S/R Cover Collector (2282516 BOM, rev 0)	358
Section 6.0 — Gantry Scan Window Assembly (2101967-4)	359
Scan Win Assembly - Gantry (2101967-4 BOM, rev 0)	359
Section 7.0 — Cover Assembly - Front (2272939)	360
Cover Assembly - Front Gantry (2272939, sheet 1, rev 2)	360
Cover Assembly - Front Gantry (2272939 BOM, rev 4)	361

7.1	Cover Sub Assembly, Front (2273017)	362
	Cover Sub Assembly, Gantry Front (2273017, sheet 1, rev 6)	362
	Cover Sub Assembly, Gantry Front (2273017, sheet 2, rev 5)	363
	Cover Sub Assembly, Gantry Front (2273017 BOM, rev 7)	364
7.2	Mic Assembly (2111955)	366
	Mic Assembly (2111955 BOM, rev 0)	366
7.3	Patient Sensor (2277405)	368
	Front Sensor Tilt Assembly (2277405, sheet 1, rev 0)	368
	Patient Sensor, Small (2277405 BOM, rev 0)	369
	Section 8.0 — Cover Assembly - Rear (2273016)	370
	Cover Assembly, Rear Gantry (2273016 sheet 1, rev 3)	370
	Cover Assembly, Rear Gantry (2273016 BOM, rev 3)	371
8.1	Cover Sub Assembly, Rear (2273018)	372
	Cover Sub Assembly, Rear Gantry (2273018, sheet 1, rev 5)	372
	Cover Sub Assembly, Rear Gantry (2273018, sheet 2, rev 3)	373
	Cover Sub Assembly, Rear Gantry (2273018 BOM, rev 6)	374
8.2	Cover Sub-Assy, Rear Gantry - FRP (2291369)	376
	Cover Sub-Assy, Rear Gantry - FRP (2291369 sheet 1, rev 0)	376
	Cover Sub-Assy, Rear Gantry - FRP (2291369 sheet 2, rev 0)	377
	Cover Sub-Assy, Rear Gantry - FRP (2291369 BOM, rev 3)	378
8.3	Patient Sensor, Large (2277404)	380
	Patient Sensor, Large (2277404 sheet 1, rev 0)	380
	Patient Sensor, Large (2277404 BOM, rev 0)	381
	Section 9.0 — Gantry Top Covers Kit - RIM (2292881)	382
	Gantry Top Covers Kit - RIM (2292881, sheet 1, rev 1)	382
	Gantry Top Covers Kit - RIM (2292881 BOM, rev 2)	383
9.1	Cover Assembly, Top RH (2273013)	384
	Cover Assembly, Top RH (2273013, sheet 1, rev 2)	384
	Cover Assembly, Gantry Top RH (2273013 BOM, rev 5)	385
9.2	Cover Assembly, Top LH (2273014)	386
	Cover Assembly, Gantry Top LH (2273014, sheet 1, rev 2)	386
	Cover Assembly, Gantry Top LH (2273014 BOM, rev 4)	387

9.3	Cover Assembly, Right Side (2276690)	388
	Cover Assembly, Right Side (2276690, sheet 1, rev 2)	388
	Cover Assembly, Side Gantry Right (2276690 BOM, rev 3)	389
9.4	Cover Assembly, Left Side (2276691)	390
	Cover Assembly, Left Side (2276691, sheet 1, rev 2)	390
	Cover Assembly, Side Gantry Left (2276691 BOM, rev 2)	391
	Section 10.0 — Gantry Top Covers Kit - FRP (2292882)	392
	Gantry Top Covers Kit - FRP (2292882, sheet 1, rev 0)	392
	Gantry Top Covers Kit - FRP (2292882 BOM, rev 1)	393
10.1	Cover Assembly, Top RH - FRP (2290538)	394
	Top Cover Assembly, RH - FRP (2290538, sheet 1, rev 0)	394
	Cover Assembly, Top RH - FRP (2290538 BOM, rev 1)	395
10.2	Cover Assembly, Top LH - FRP (2290539)	396
	Top Cover Assembly, LH - FRP (2290539, sheet 1, rev 0)	396
	Cover Assembly, Top LH - FRP (2290539 BOM, rev 0)	397
10.3	Cover Assembly, Side RH - FRP (2290540)	398
	Side Cover Assembly, RH - FRP (2290540, sheet 1, rev 0)	398
	Cover Assembly, Side RH - FRP (2290540 BOM, rev 0)	399
10.4	Cover Assembly, Side LH - FRP (2290541)	400
	Side Cover Assembly, LH - FRP (2290541, sheet 1, rev 0)	400
	Cover Assembly, Side LH - FRP (2290541 BOM, rev 1)	401
	Section 11.0 — Tilt Pot Assembly (2178677)	402
	Tilt Pot Assembly (2178677, sheet 1, rev 1)	402
	Tilt Pot Assembly (2178677 BOM, rev 4)	403
11.1	Tilt Pot Harness Assembly (46-297036G1)	404
	Tilt Pot Harness Assembly (46-297036, sheet 1, rev 1)	404
	Tilt Pot Harness Assembly (46-297036G1 BOM, rev 0)	405
11.2	Tilt Switch Assembly Harness (2277131)	406
	Switch Harness Assembly (2277131, sheet 1, rev 1)	406
	Switch Harness Assembly (2277131, sheet 2, rev 1)	407
	Switch Harness Assembly (2277131 BOM, rev 1)	408
	Section 12.0 — Base Cover Collector (2290278, -2)	410
	Gantry Base Covers (2290278, sheet 1, rev 2)	410

	Base Covers, Gantry (2290278, -2 BOM, rev 1)	411
12.1	Cover Assembly, Base Rear - LH (2275686, -2)	412
	Cover Assembly, Base Rear - LH (2275686, sheet 1, rev 2)	412
	Cover Assembly, Base Rear - LH (2275686 BOM, rev 2)	413
	Cover Assembly, Base Rear - LH (FRP) (2275686-2 BOM, rev 0)	413
12.2	Cover Assembly, Base Rear - RH (2275685, -2)	414
	Cover Assembly, Base Rear - RH (2275685, sheet 1, rev 2)	414
	Cover Assembly, Base Rear - RH (2275685 BOM, rev 2)	415
	Cover Assembly, Base Rear - RH (2275685-2 BOM, rev 0)	415
	Section 13.0 — Cover Dollies	416
	Cover Dollies (rev 03/19/02)	416
	Section 14.0 — Phantoms (2180544)	417
	Phantoms (2180544 BOM, rev 0)	417
	Section 15.0 — Gantry Service Items	418
	Gantry Service Items	418
	Section 16.0 — DAS Fiber Optic Cables	418
	DAS Fiber Optic Cables	418

Chapter 5

H3 Console	419
Console BOM Tree.....	420
Console w/Monitor, Octane1 (B7858NC BOM, rev 1).....	421
Octane 2 Console (B7858CC BOM, rev 0)	421
Section 1.0 — Console Assembly (2266832-3, 2304732-3)	422
Console Assembly (2266832-3, sheet 1, rev 5)	422
Console Assembly (2266832-3, sheet 2, rev 5)	423
Console Assembly (2266832-3, sheet 3, rev 5)	424
Console Assembly (2266832-3, sheet 4, rev 0)	425
Console Assembly (2266832-3, sheet 5, rev 0)	426
Console Assembly (2266832-3, sheet 6, rev 0)	427
Console Assembly (2266832-3, -4 BOM, rev 7).....	428

	Console Assembly, w/Octane2 (2304732, sheet 1, rev 4)	432
	Console Assembly, w/Octane2 (2304732, sheet 2, rev 4)	433
	Console Assembly, w/Octane2 (2304732, sheet 3, rev 4)	434
	Console Assembly, w/Octane2 (2304732, sheet 4, rev 3)	435
	Console Assembly, w/Octane2 (2304732, sheet 5, rev 0)	436
	Console Assembly, w/Octane2 (2304732, sheet 6, rev 2)	437
	Console Assembly, w/Octane2 (2304732-3, -4 BOM, rev 6)	438
1.1	Console User Drive Assembly (2174061-2).....	442
	Console User Drive Assembly (2174061-2, sheet 1, rev 2)	442
	Console User Drive Assembly (2174061-2, sheet 2, rev 1)	443
	Console User Drive Assembly (2174061-2 BOM, rev 6)	444
1.2	Octane Computer Assembly	446
	Octane Computer Assembly (2205488, sheet 4, rev 7)	446
	Octane Computer Assembly (2205488-4 BOM, rev 2).....	447
	Octane Computer Assembly w/D3D (2205488, sheet 5, rev 7)	448
	Octane Computer Assembly w/D3D (2205488-5 BOM, rev 0).....	449
	<i>Octane Computer</i>	450
	Octane Computer, (sheet 1, rev 11/14/00).....	450
	Octane Computer, (sheet 2, rev 10/27/99).....	451
	OCTANE Computer Parts	452
	OCTANE Computer (270 MHz R12K and Dual Processor)	452
	OCTANE Computer (300 MHz D3D Option)	453
1.3	Octane2 Computer Assembly	454
	Octane2 Computer Assembly (2295618, sheet 1, rev 0)	454
	Octane2 Computer Assembly (2295618 BOM, rev 1).....	455
	Octane2 Computer Assembly (2295618-2 BOM, rev 1).....	455
1.4	Octane2 Replacement Parts	456
	Octane2 Replacement Parts (sheet 1, rev 10/09/01)	456
	Octane2 Replacement Parts	457
1.5	Rear Cover W/Fan (2297734)	458
	Rear Cover w/Fan (2297734, sheet 1, rev 1)	458
	Rear EMC Cover w/Fan Assembly (2297734 BOM, rev 1)	459
1.6	Nexgen/Helios Console Sub-Assy (2169998)	460
	Nexgen/Helios Console Sub-Assy (2169998, sheet 1, rev 9)	460

	Nexgen/Helios Console Sub-Assy (2169998, sheet 2, rev 7)	461
	Nexgen/Helios Console Sub-Assy (2169998, sheet 3, rev 6)	462
	Nexgen/Helios Console Sub-Assy (2169998, sheet 4, rev 7)	463
	Nexgen/Helios Console Sub-Assy (2169998 BOM, rev 20)	464
	1.6.1 – Cabinet Assembly (2169588)	466
	Cabinet Assembly (2169588, sheet 1, rev 2)	466
	Cabinet Assembly (2169588, sheet 2, rev 1)	467
	Cabinet Assembly (2169588 BOM, rev 2)	468
	1.6.2 – Outlet Box Assembly (2174159)	470
	Outlet Box Assembly (2174159, sheet 1, rev 1)	470
	Outlet Box Assembly (2174159 BOM, rev 1)	471
	Breaker Box Assembly (2190750)	474
	Breaker Box Assembly (2190750, Sheet 1, rev 2)	474
	Breaker Box Assembly (2190750 BOM, rev 3)	475
1.7	Removable Card Cage Assembly (2190506)	476
	Removable Card Cage Assembly (2190506, sheet 1, rev 4)	476
	Removable Card Cage Assembly (2190506 BOM, rev 5)	477
	1.7.1 – NexGen Fan Assembly (2190504)	478
	NexGen Fan Assembly (2190504, Sheet 1, rev 0)	478
	NexGen Fan Assembly (2190504 BOM, rev 1)	479
1.8	CR Intercom/Prescribed Tilt Circuit (2169590-2)	480
	CR Intercom/Prescribed Tilt Circuit (2169590-2, sheet 1, rev 1)	480
	CR Intercom/Prescribed Tilt Circuit (2169590-2 BOM, rev 1)	481
1.9	Box Assy - Fan and Cables (2294357)	482
	Box Assy - Fan and Cables (2294357, sheet 1, rev 0)	482
	Box Assy - Fan and Cables (2294357 BOM, rev 0)	483
1.10	Side Bulkhead Assy (2174056-5)	484
	Bulkhead Assembly, Side (2174056-5, sheet 1, rev 1)	484
	Side Bulkhead Assembly - Helios 2 (2174056-5 BOM, rev 1)	485
1.11	VME Console Power Supply Assembly (2260421)	486
	VME Console Power Supply Assembly (2260421, sheet 1, rev 1)	486
	VME Console Power Supply Assembly (2260421 BOM, rev 0)	487

1.12	Global Modem Kit (2245794)	488
	Global Modem Kit (2245794 BOM, rev 3)	488
Section 2.0 — Console Display Monitors		489
2.1	CRT Monitors	489
	Console Display Monitors	489
2.2	LCD Monitor & Cable (2309592)	489
	LCD Monitor & Cable (2309592 BOM, rev 1)	489
Section 3.0 — DASMs		489
	DASMs	489
Section 4.0 — Keyboard w/SCIM, Collectors		490
	Keyboard & SCIM Assembly (Rev 11/15/00 - English shown)	490
4.1	English (2275758)	491
	Keyboard w/SCIM Collector - English (2275758 BOM, rev 1)	491
	<i>SCIM Collector – English (2275752)</i>	491
	SCIM Collector - English (2275752 BOM, rev 0)	491
4.2	French (2275758-2)	492
	Keyboard w/SCIM Collector - French (2275758-2 BOM, rev 1)	492
	<i>SCIM Collector - French (2275752-2)</i>	492
	SCIM Collector - French (2275752-2 BOM, rev 0)	492
4.3	German (2275758-3)	493
	Keyboard w/SCIM Collector - German (2275758-3 BOM, rev 1)	493
	<i>SCIM Collector - German (2275752-3)</i>	493
	SCIM Collector - German (2275752-3 BOM, rev 0)	493
4.4	Swedish (2275758-4)	493
	Keyboard w/SCIM Collector - Swedish (2275758-4 BOM, rev 1)	493
4.5	International (2275758-5)	494
	Keyboard w/SCIM Collector - Swedish (2275758-5 BOM, rev 1)	494
	<i>SCIM Collector - International (2275752-4)</i>	494
	SCIM Collector - International (2275752-4 BOM, rev 0)	494

Chapter 6

GOC1 (w/Octane2)	495
Global Console - Octane2 (GOC1), BOM Tree	495
Section 1.0 — Console, GOC1-Octane2 (2341104, -2)	496
Console, GOC1-Octane2 (2341104, sheet 1, rev 2)	496
Console GOC1-Octane2 (2341104, sheet 2, rev 0)	497
Console GOC1-Octane2 (2341104, sheet 3, rev 1)	498
Console GOC1-Octane2 (2341104, sheet 4, rev 0)	499
Console Assembly (2341104, 2341104-2 BOMs, rev 5, 4)	500
1.1 Console Table Top Collector (2330564)	502
Console Table Top Collector (2330564 BOM, rev 0)	502
1.1.1 – Table Top Assembly, Monitor (2315657)	504
Table Top Assembly, Monitor (2315657, sheet 1, rev 0)	504
Table Top Assembly, Monitor (2315657 BOM, rev 0)	505
1.1.2 – Table Top Assembly, Keyboard (2330566)	506
Table Top Assembly, Keyboard (2330566, sheet 1, rev 0)	506
Table Top Assembly, Keyboard (2330566 BOM, Rev 0)	507
1.2 Host Computer - Octane2 (2295618, -2)	508
Octane2 Computer Assembly (2295618, sheet 1, rev 0)	508
Octane2 Computer Assembly (2295618 BOM, rev 1)	509
Octane2 Computer w/D3D (2295618-2 BOM, rev 1)	509
1.3 Octane2 Replacement Parts	510
Octane2 Replacement Parts (sheet 1, rev 10/09/01)	510
Octane2 Replacement Parts	511
1.4 VME Recon Engine Assembly (2341622)	512
VME Recon Engine Assembly (2341622, sheet 1, rev 1)	512
VME Recon Engine Assembly (2341622, sheet 2, rev 0)	513
VME Recon Engine Assembly (2341622, sheet 3, rev 1)	514
VME Recon Engine Assembly (2341622, sheet 4, rev 0)	515
VME Chassis Assembly (2341622 BOM, rev 3).....	516
1.4.1 – VME Recon Box Chassis (2333179)	518
VME Recon Box Chassis (2333179, sheet 1, rev 1)	518
VME Recon Box Chassis (2333179, sheet 2, rev 1)	519

	VME Recon Box Chassis (2333179, sheet 3, rev 1)	520
	VME Recon Box Chassis (2333179 BOM, rev 4)	521
	1.4.2 – VME Chassis Assembly (2307794)	524
	VME Chassis Assembly (2307794, sheet 1, rev 2)	524
	VME Chassis Assembly (2307794, sheet 2, rev 2)	525
	VME Chassis Assembly (2307794, sheet 3, rev 0)	526
	VME Chassis Assembly (2307794 BOM, rev 0)	527
	<i>1.4.2.1 – Fan Assembly, VME Chassis (2324186)</i>	<i>530</i>
	Fan Assembly, VME Chassis (2324186, sheet 1, rev 0)	530
	Fan Assembly, VME Chassis (2324186 BOM, Rev 0)	531
	<i>1.4.2.2 – VME Console Power Supply (2260421-2)</i>	<i>532</i>
	VME Console Power Supply (2260421, sheet 1, rev 1)	532
	VME Console Power Supply (2260421-2 BOM, rev 1)	533
1.5	Console Chassis Assembly (2341851)	534
	Console Chassis Assembly (2341851, sheet 1, rev 0)	534
	Console Chassis Assembly (2341851, sheet 2, rev 0)	535
	Console Chassis Assembly (2341851 BOM, rev 0)	536
1.6	Console Chassis Assembly (2341103)	538
	Console Chassis Assembly (2341103, sheet 1, rev 1)	538
	Console Chassis Assembly (2341103, sheet 2, rev 1)	539
	Chassis Assembly (2341103 BOM, rev 1)	540
	1.6.1 – Outlet Box Assembly (2341413)	542
	Outlet Box Assembly (2341413, sheet 1, rev 1)	542
	Outlet Box Assembly (2341413 BOM, rev 0)	543
	<i>Breaker Assembly (2341432)</i>	<i>544</i>
	Breaker Assembly (2341432, sheet 1, rev 0)	544
	Breaker Assembly (2341432 BOM, rev 1)	545
	1.6.2 – Fan Assembly, Global Console Chassis (2323943)	546
	Fan Assembly, Console Chassis (2323943, sheet 1, rev 0)	546
	Fan Assembly, Global Console Chassis (2323943 BOM, rev 0)	547
1.7	SCSI Tower Assembly, MOD/CD-ROM (2351055)	548
	SCSI Tower Assembly, MOD/CD-ROM (2351055, sheet 1, rev 0)	548
	SCSI Tower Assembly (2351055 BOM, rev 2)	549

1.8	Global Modem Kit (2245794)	550
	Global Modem Kit (2245794 BOM, rev 3)	550
1.9	Side Covers (2337534)	550
	Side Covers (2337534 BOM, rev 0)	550
1.10	Seismic Kit (2336557)	551
	Seismic Kit (2336557 BOM, rev 1)	551
Section 2.0 — Console Display Monitors		552
2.1	21" Color CRT Monitors (B7850MM)	552
	Console Display Monitors (B7850MM BOM, rev 1).....	552
2.2	LCD Monitor & Cable (2309592)	552
	LCD Monitor & Cable (2309592 BOM, rev 1).....	552
Section 3.0 — DASMs		552
	DASMs	552
Section 4.0 — Service Kits (Associated Items)		553
	Associated Items (2341104 AILs, rev. 2003-04-14)	553
4.1	SCSI Cable Kit (2333829)	554
	SCSI Cable Kit (2333829 BOM, rev 2)	554
4.2	Communication Cable Kit (2333831)	554
	Communication Cable Kit (2333831 BOM, rev 0)	554
4.3	Video/Power Cables (2333832)	555
	Video/Power Cables (2333832 BOM, rev 0)	555
4.4	Electrical Components (2333833)	555
	Electrical Components (2333833 BOM, rev 1)	555
4.5	Brackets & Straps (2333834)	555
	Brackets & Straps (2333834 BOM, rev 0)	555
4.6	Miscellaneous PM Hardware (2333835)	556
	Miscellaneous PM Hardware (2333835 BOM, rev 0)	556
4.7	Hardware Kit (2333836)	556
	Hardware Kit (2333836 BOM, rev 0)	556

4.8	Power Switch & Cables (23333837)	558
	Power Switch & Cables (23333837 BOM, rev 0)	558
4.9	Slide Service Kit (2336912)	558
	Slide Service Kit (2336912 BOM, rev 0)	558
	Section 5.0 — Keyboard w/SCIM Collector (2275758)	560
	Keyboard & SCIM Assembly (Rev 11/15/00)	560
	Keyboard w/SCIM Collector - English (2275758 BOM, rev 1)	561
	SCIM Collector – English (2275752)	561
	SCIM Collector - English (2275752 BOM, rev 0)	561

Chapter 7

GOC2 (w/Linux PC)	563
Global Console - Linux (GOC2) BOM Tree	563
Global Console Assembly (2337535, sheet 1, rev 1)	564
Global Console Collector (2337535 BOM, rev 1)	565
Section 1.0 — Console Assembly (2315653)	566
Console Assembly (2315653, sheet 1, rev 2)	566
Console Assembly (2315653, sheet 2, rev 0)	567
Console Assembly (2315653, sheet 3, rev 2)	568
Console Assembly (2315653, sheet 4, rev 2)	569
Console Assembly (2315653 BOM, rev 4)	570
1.1 Console Table Top Collector (2330564)	572
Console Table Top Collector (2330564 BOM, rev 0)	572
1.1.1 – Table Top Assembly, Monitor (2315657)	574
Table Top Assembly, Monitor (2315657, sheet 1, rev 0)	574
Table Top Assembly, Monitor (2315657 BOM, rev 0)	575
1.1.2 – Table Top Assembly, Keyboard (2330566)	576
Table Top Assembly, Keyboard (2330566, sheet 1, rev 0)	576
Table Top Assembly, Keyboard (2330566 BOM, Rev 0)	577
1.2 VME Recon Engine Assembly (2318303)	578
VME Recon Engine Assembly (2318303, sheet 1, rev 2)	578
VME Recon Engine Assembly (2318303, sheet 2, rev 0)	579
VME Recon Engine Assembly (2318303, sheet 3, rev 2)	580

	VME Recon Engine Assembly (2318303, sheet 4, rev 1)	581
	VME Recon Engine Assembly (2318303 BOM, Rev 4)	582
	1.2.1 – Chassis, VME Recon Box (2333179).....	584
	Chassis, VME Recon Box (2333179 sheet 1, rev 1)	584
	Chassis, VME Recon Box (2333179 sheet 2, rev 1)	585
	Chassis, VME Recon Box (2333179 sheet 3, rev 1)	586
	VME Recon Box Chassis (2333179 BOM, rev 4).....	587
	<i>1.2.1.1 – Fan Assembly, VME Chassis (2324186).....</i>	<i>590</i>
	Fan Assembly, VME Chassis (2324186, sheet 1, rev 0)	590
	Fan Assembly, VME Chassis (2324186 BOM, Rev 0)	591
	<i>1.2.1.2 – VME Console Power Supply (2260421-2).....</i>	<i>592</i>
	VME Console Power Supply (2260421, sheet 1, rev 1)	592
	VME Console Power Supply (2260421-2 BOM, rev 1)	593
	1.2.2 – VME Chassis Assembly (2307794)	594
	VME Chassis Assembly (2307794, sheet 1, rev 2)	594
	VME Chassis Assembly (2307794, sheet 2, rev 2)	595
	VME Chassis Assembly (2307794, sheet 3, rev 0)	596
	VME Chassis Assembly (2307794 BOM, rev 0).....	597
1.3	Console Chassis Assembly (2333194)	600
	Console Chassis Assembly (2333194 sheet 1, rev 1).....	600
	Console Chassis Assembly (2333194 sheet 2, rev 1).....	601
	Chassis Assembly (2333194 BOM, rev 2)	602
	1.3.1 – Outlet Box Assembly (2174159-2).....	604
	Outlet Box Assembly (2174159-2, sheet 1, rev 1).....	604
	Outlet Box Assembly (2174159-2 BOM, rev 0)	605
	<i>Power Switch Box (2190750-2)</i>	<i>606</i>
	Power Switch Box (2190750-2, sheet 1, rev 1).....	606
	Power Switch Box (2190750-2 BOM, rev 2).....	607
	1.3.2 – Fan Assembly, Global Console Chassis (2323943)	608
	Fan Assembly, Console Chassis (2323943, sheet 1, rev 0)	608
	Fan Assembly, Global Console Chassis (2323943 BOM, rev 0).....	609
1.4	Console Chassis Assembly (2317687)	610
	Console Chassis Assembly (2317687, sheet 1, rev 1).....	610
	Console Chassis Assembly (2317687, sheet 2, rev 1).....	611

	Console Chassis Assembly (2317687 BOM, rev 1)	612
1.5	SCSI Tower, DVD-RAM, MOD (2368838)	614
	SCSI Tower Assembly (2368838, sheet 1, rev 0)	614
	SCSI Tower, DVD-RAM, MOD (2368838 BOM, rev 0)	615
1.6	Global Modem Kit (2245794)	616
	Global Modem Kit (2245794 BOM, rev 3)	616
1.7	Seismic Kit (2336557)	616
	Seismic Kit (2336557 BOM, rev 0)	616
	Section 2.0 — Side Covers (2337534)	617
	Side Covers (2337534 BOM, rev 0)	617
	Section 3.0 — Console Display Monitors	617
3.1	CRT Monitors	617
	Console Display Monitors.....	617
3.2	LCD Monitor & Cable (2309592)	617
	LCD Monitor & Cable (2309592 BOM, rev 1).....	617
	Section 4.0 — DASMs	618
	DASMs	618
	Section 5.0 — Kits (Associated Items)	618
	Associated Items (2315653 AILs, rev. 2003-04-14)	618
5.1	SCSI Cable Kit (2333829)	619
	SCSI Cable Kit (2333829 BOM, rev 2).....	619
5.2	Ethernet / Communication Cable Kit (2333831)	619
	Communication Cable Kit (2333831 BOM, rev 0)	619
5.3	Video / Power Cables (2333832)	620
	Video/Power Cables (2333832 BOM, rev 0)	620
5.4	Electrical Components Kit (2333833)	620
	Electrical Components (2333833 BOM, rev 1).....	620
5.5	Brackets and Straps (2333834)	620
	Brackets & Straps (2333834 BOM, rev 0)	620
5.6	Miscellaneous PM Hardware (2333835)	621
	Miscellaneous PM Hardware (2333835 BOM, rev 0)	621

5.7	Console Hardware Kit (2333836)	621
	Hardware Kit (2333836 BOM, rev 0)	621
5.8	Power Switch & Cables (2333837)	623
	Power Switch & Cables (2333837 BOM, rev 0)	623
5.9	Slide Service Kit (2336912)	623
	Slide Service Kit (2336912 BOM, rev 0).....	623
5.10	SCSI Cable Kit, GOC-Linux (2333829-2)	624
	SCSI Cable Kit, GOC-Linux (2333829-2 BOM, rev 0).....	624
	Section 6.0 — Keyboard w/SCIM Collector (2275758)	626
	Keyboard & SCIM Assembly (Rev 11/15/00)	626
	Keyboard w/SCIM Collector - English (2275758 BOM, rev 1).....	627
	<i>SCIM Collector – English (2275752)</i>	627
	SCIM Collector - English (2275752 BOM, rev 0).....	627

Chapter 8

Misc. Kits & Accessories	629
Section 1.0 — System Shipping Collector (2281302)	630
System Shipping Collector (2281302 BOM, Rev 20)	630
Section 2.0 — Gantry/Table Fuse Kit (2218570)	632
Gantry/Table Fuse Kit (2218570 BOM, Rev 1)	632
Section 3.0 — Installation Support Kit (2319891)	633
Installation Support Kit (2319891 BOM, Rev 1)	633
3.1 DAS/Detector Service Kit (2227089-2)	635
DAS/Detector Service Kit (2227089-2 BOM, Rev 0)	635
3.2 Service Tool Collector (2284023)	636
Service Tool Collector (2284023 BOM, Rev 2)	636

Chapter 1

System Matrices & Manual Conventions

Section 1.0 — Page Layout, Including Finger Tabs

Headers and footers in this publication are designed to allow you to quickly identify your location. The document's part number, revision number and title appear in the header on every page. All page footers display the current page number, at left (when viewed landscape). Odd numbered page footers include a reversed "finger tab" (new with document revision 03) to help the user quickly flip through this manual. These tabs include chapter number and name, plus the name of the current major (level one) section heading. Where applicable, even page footers will show the current minor (level two) section number and name (e.g., 3.4 Gantry Sub-System Matrix) - otherwise, they repeat the current major (level one) section heading and name (e.g., Section 1.0 — Page Layout, Including Finger Tabs).

Section 2.0 — Manual Organization

This document is organized according to product structure. That is, the order in which the contents appear is based on the BOMs (Bills of Material) used herein. This means that the user may be required to “dig down” through the product structure in order to find the part they are looking for. [For pdf users, hyperlinks are provided for quick navigation downward (the “back” arrow may be used to move back up)].

For example:

Knowing that the DAS Control Board is on the Rotating Base, a user might look up “Rotating Base” in the table of contents. According to the TOC, information on the Rotating Base begins on [Page 254](#). But, because this manual follows the product structure defined by the BOMs, the DAS Control Board will not be found anywhere near [Page 254](#). The user will find, instead, a reference in the Rotating Base BOM to further detail on the Detector Plate Assembly. Turning to the directed page ([Page 294](#)), the user will find a further reference to detail on the MDAS Assembly. Digging down this one more level brings the user to the MDAS Assembly drawing and BOM (beginning on [Page 298](#)), and there the user will find the DAS Control Board (mark 6).

WHAT IS A BOM?

A BOM is a Bill (list) Of Materials (parts) used to produce an item. The Parent Item is the thing that is made from the parts listed on the BOM. Because BOMs describe the materials required for a specific manufacturing process, they may not necessarily list every single item used to produce the parent item. The parts on a BOM themselves may be the result of a separate process, and thus have their own BOMs, listing the secondary items required to produce these primary parts.

BOM TREES

As indicated above, this manual is organized according to the overall Product Structure of the LightSpeed 3.X CT System’s major components: Gantry, Table, Console and PDU. The many levels of BOMs contained in the Product Structures for the Gantry, Table and Console (including H3, GOC1 & GOC2 varieties) are represented on the next few pages in Tree form, revealing which BOM parts are themselves parent items to secondary BOMs. The trees list only key items, providing the Mark number (in parentheses) from the BOM of its parent item.

FRUs

Items that are “FRU=Yes” are presented in **bold**, on the BOMs on which they are listed, for easy spotting. They are also “floated” to the top of the BOM. A double line separates the “FRU=Yes” from the “FRU=No” items.

Section 3.0 — System Matrices

The BOM Trees shown on the following pages act as **SYSTEM MATRICES**, providing visual cues to this manual’s organization. No BOM tree is shown for the Compact PDU.

Note: As you use these trees, keep in mind that BOMs are not necessarily organized by function, but rather by manufacturing process.

3.1 LightSpeed 3.X Ultra System Matrix

The information in this manual applies to LightSpeed Ultra systems with the following catalog numbers: B7852JA, B7852JB, B7852JC, B7858JA, B7858JB, B7858JC, B7858JD, B7858JE, B7858JF and B7858MB. The matrix shown below shows the catalog structure of these systems, and includes page numbers to point the user to the relevant portions of this manual. Please note that not all catalog items are shown in this tree, only those that are relevant to this document. Furthermore, not every catalog item applies to every system — applicability notes indicate inclusions and exclusions (e.g., “Cat: ALL” indicates that this item applies to all of the listed LightSpeed Ultra system catalogs).

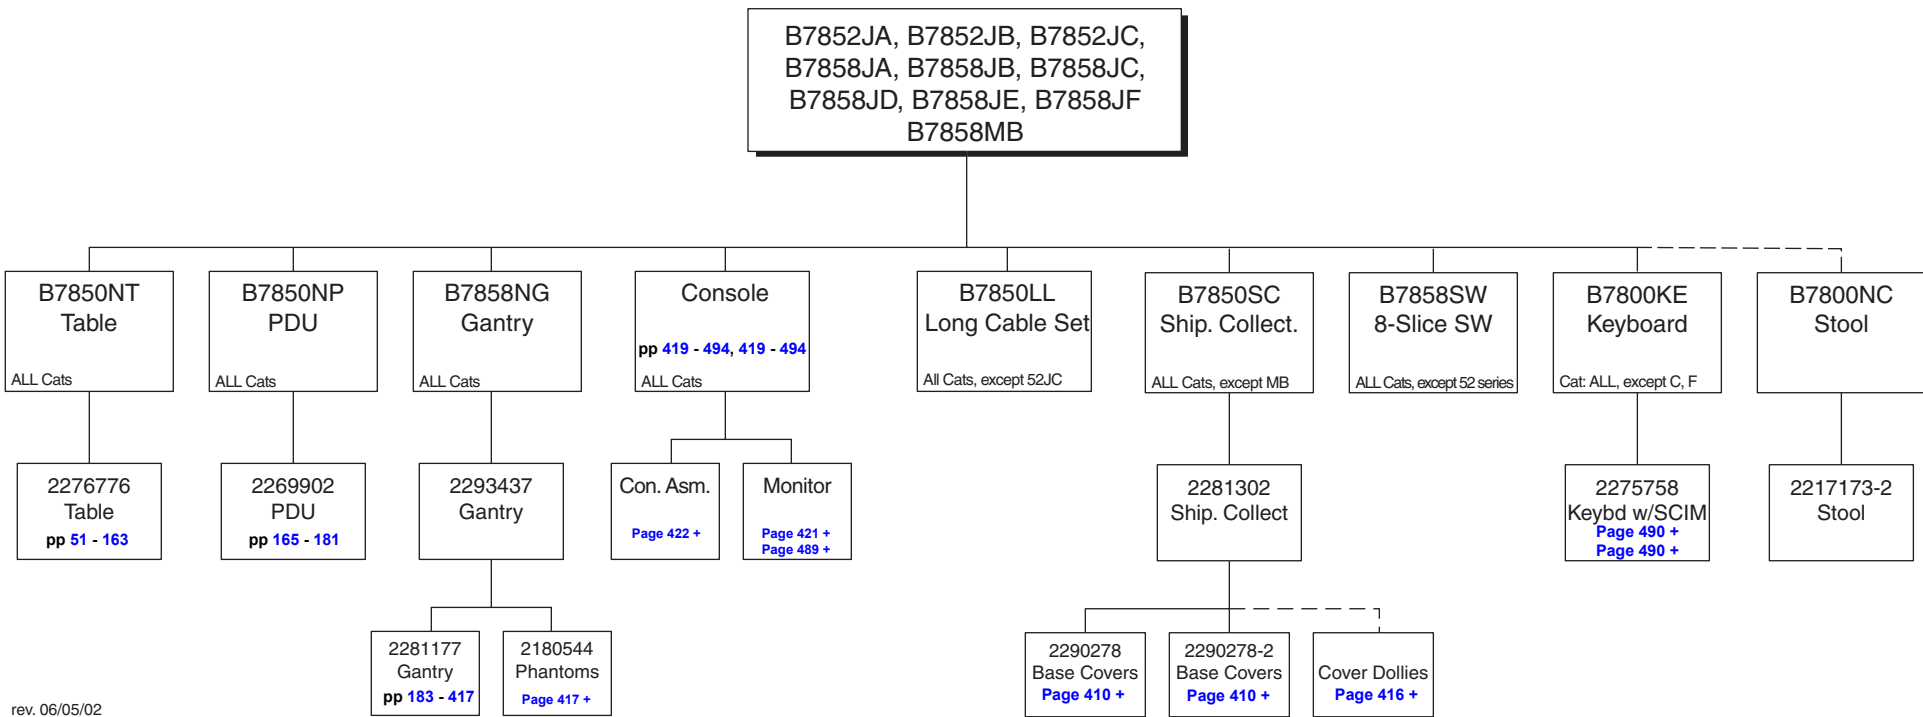


Figure 1-1 Ultra System Catalog Tree

3.2 LightSpeed 3.X Plus (Ultra 4-slice) System Matrix

The information in this manual applies to LightSpeed Plus systems with the following catalog numbers: B7854JA & B7854JD (Americas); B7854JB & J7854JE (Asia); B7854JC & B7854JF (Europe); and B7854MB (Mobile). The matrix shown below shows the catalog structure of these systems, and includes page numbers to point the user to the relevant portions of this manual. Please note that not all catalog items are shown in this tree, only those that are relevant to this document. Furthermore, not every catalog item applies to every system — applicability notes indicate inclusions and exclusions (e.g., “Cat: ALL” indicates that this item applies to all of the listed LightSpeed Plus system catalogs).

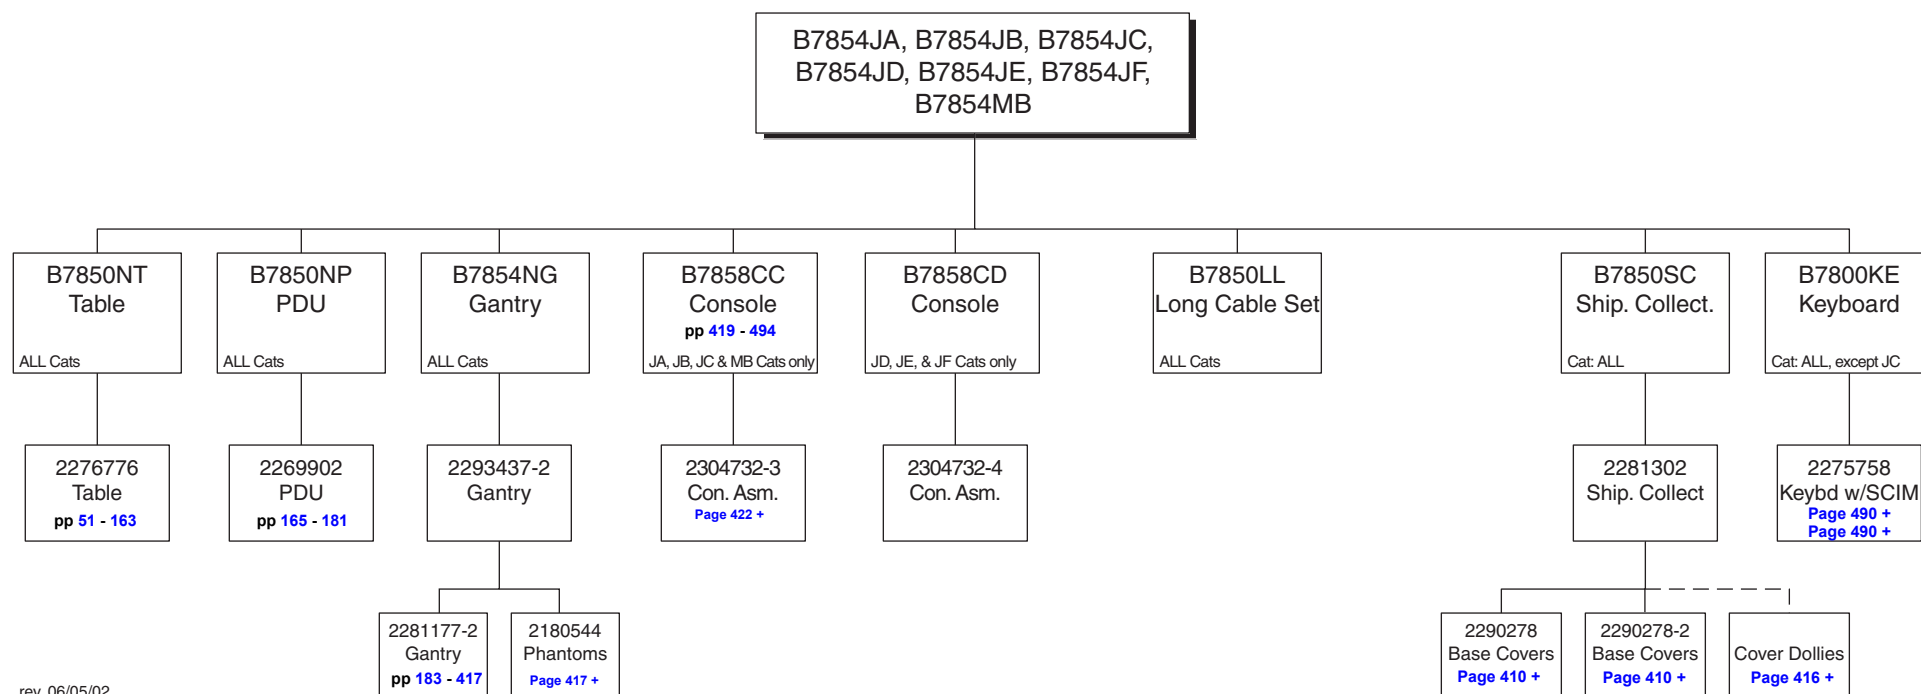


Figure 1-2 Plus System Catalog Tree

3.3 Table Sub-System Matrix

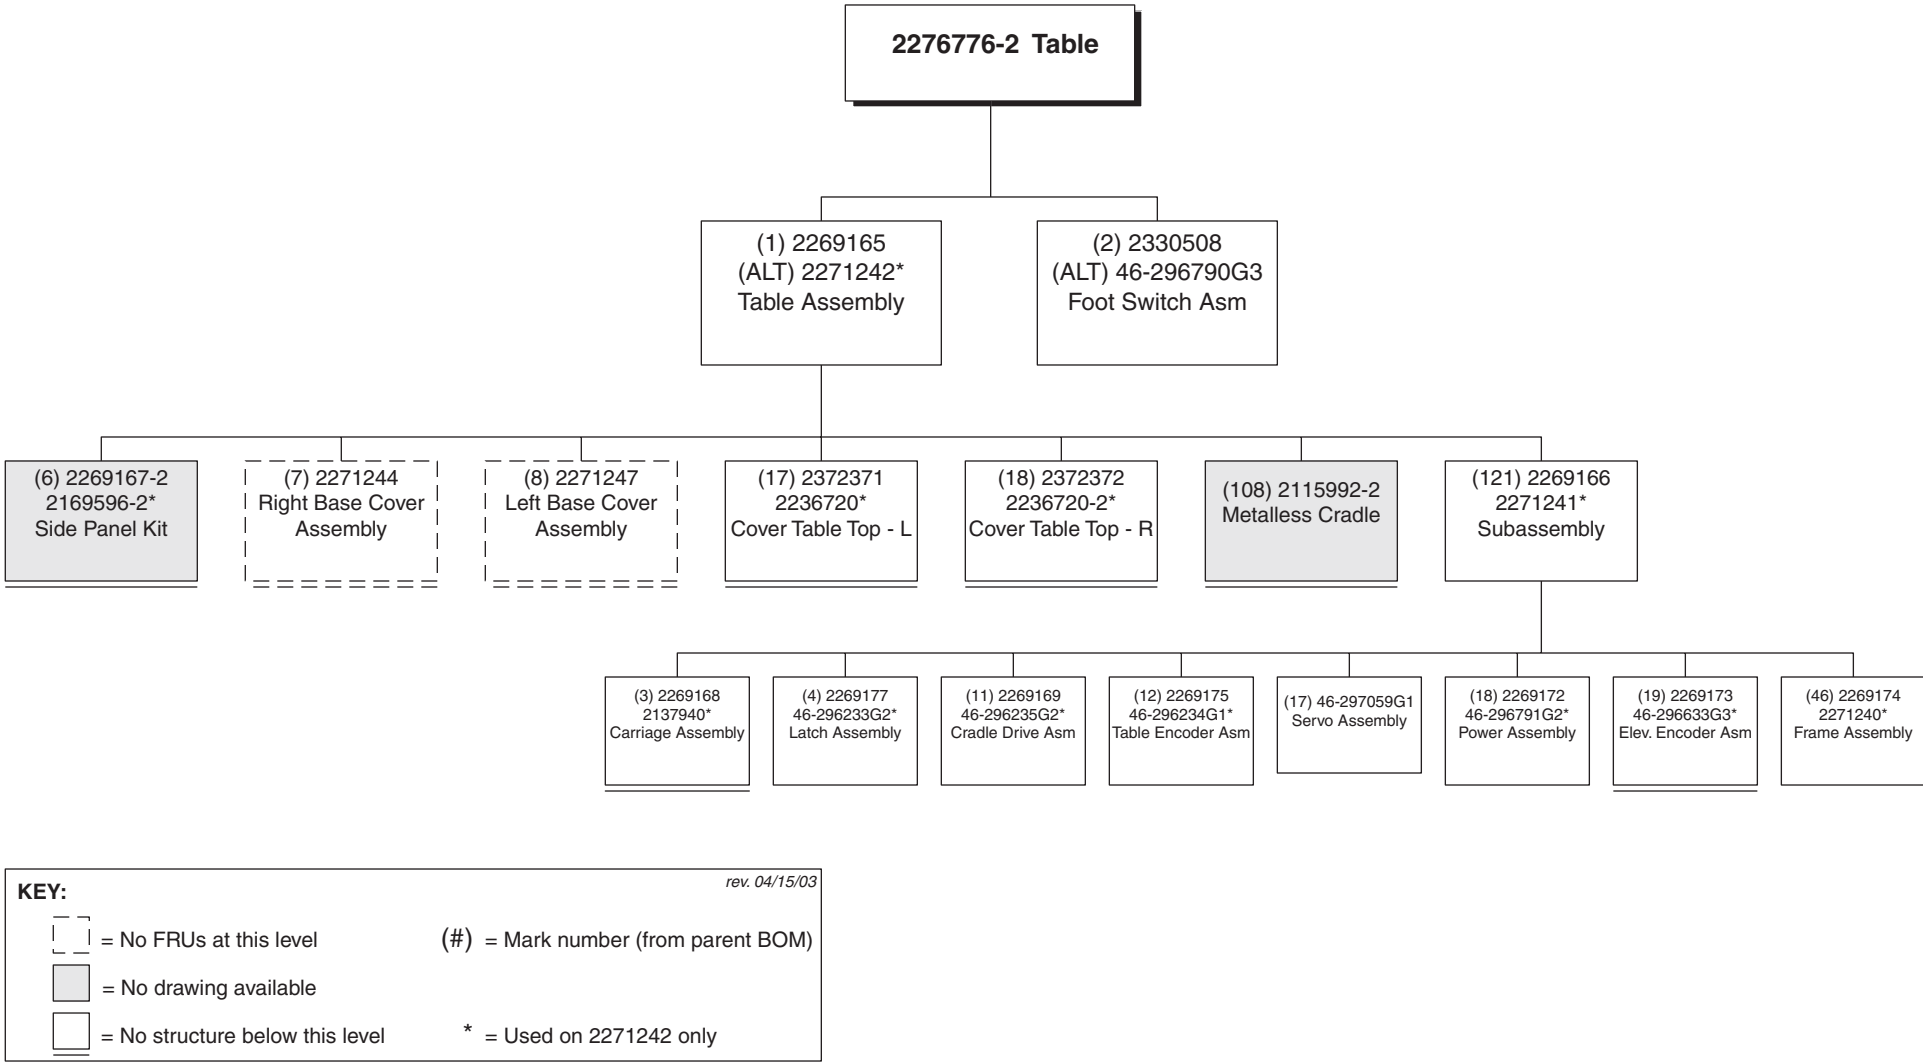


Figure 1-3 Table BOM Tree

3.4 Gantry Sub-System Matrix


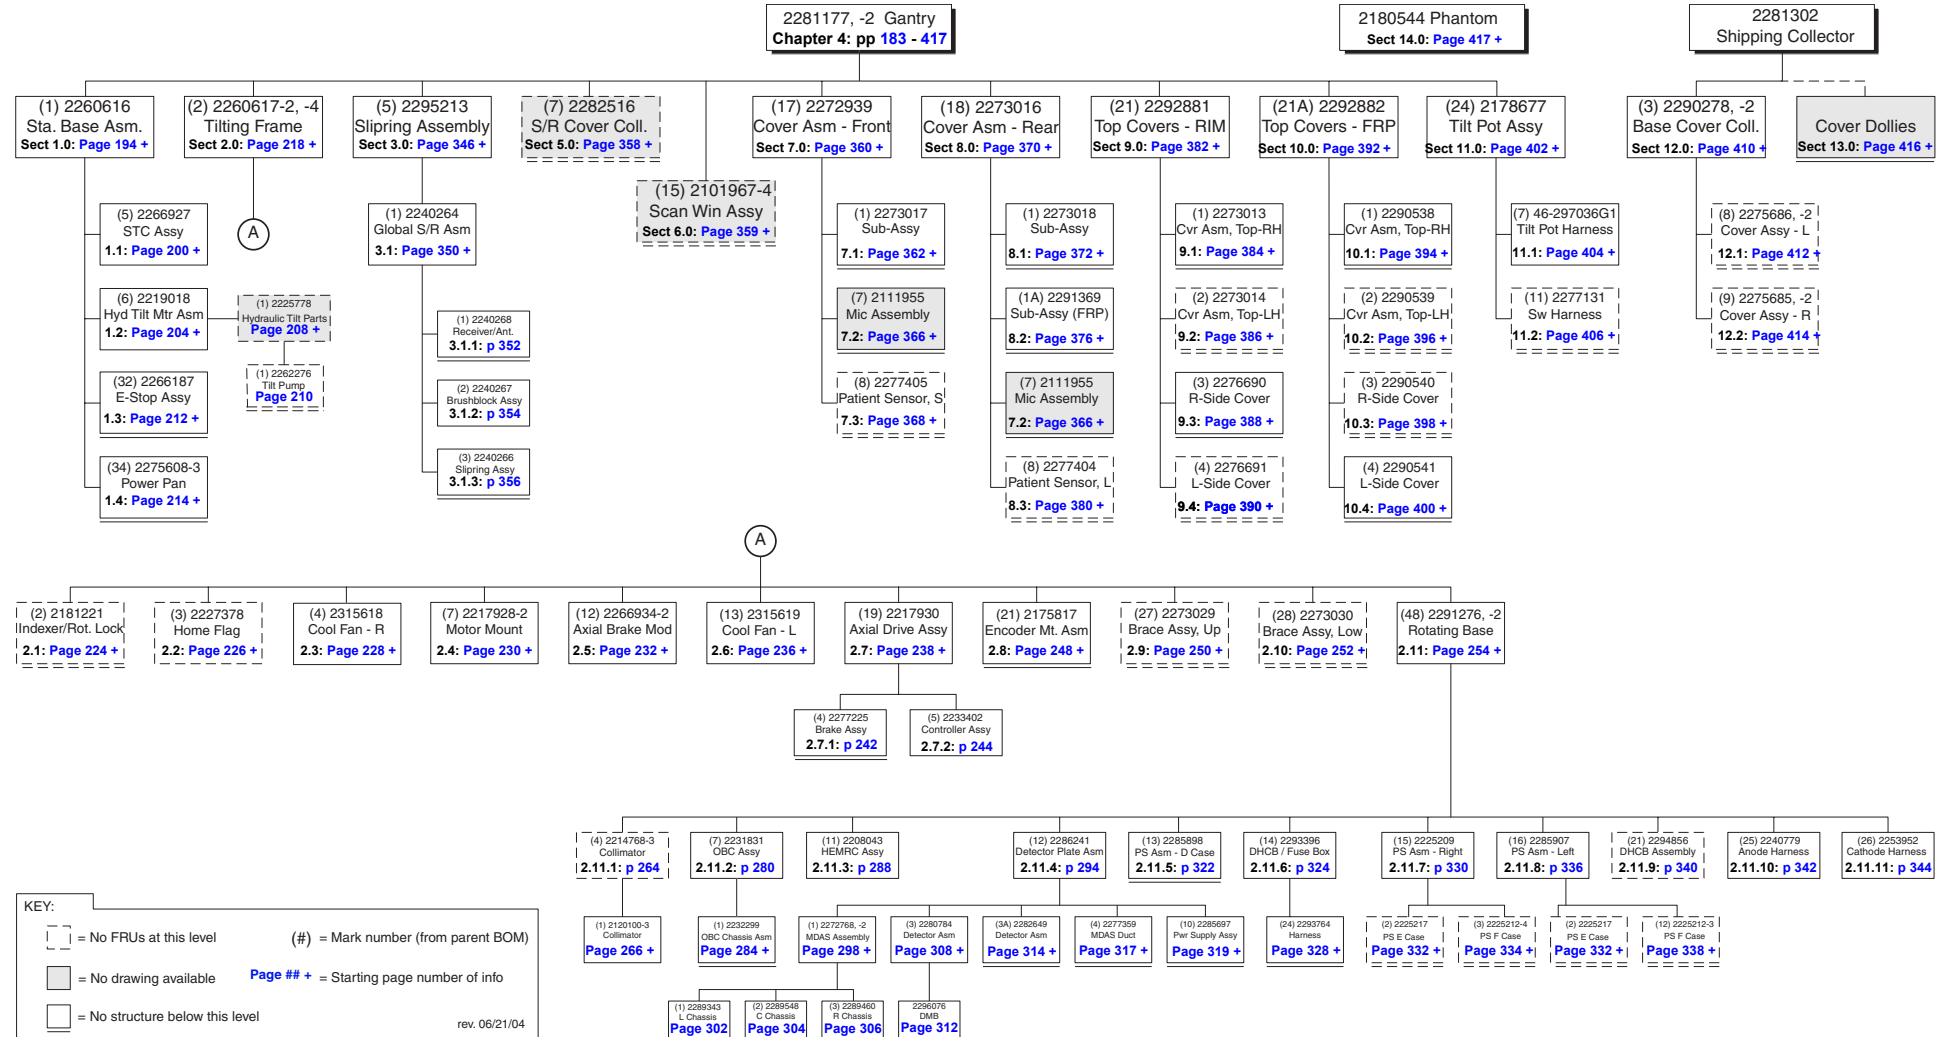


Figure 1-4 Gantry BOM Tree

3.5 Console Sub-System Matrices

3.5.1 H3 Console

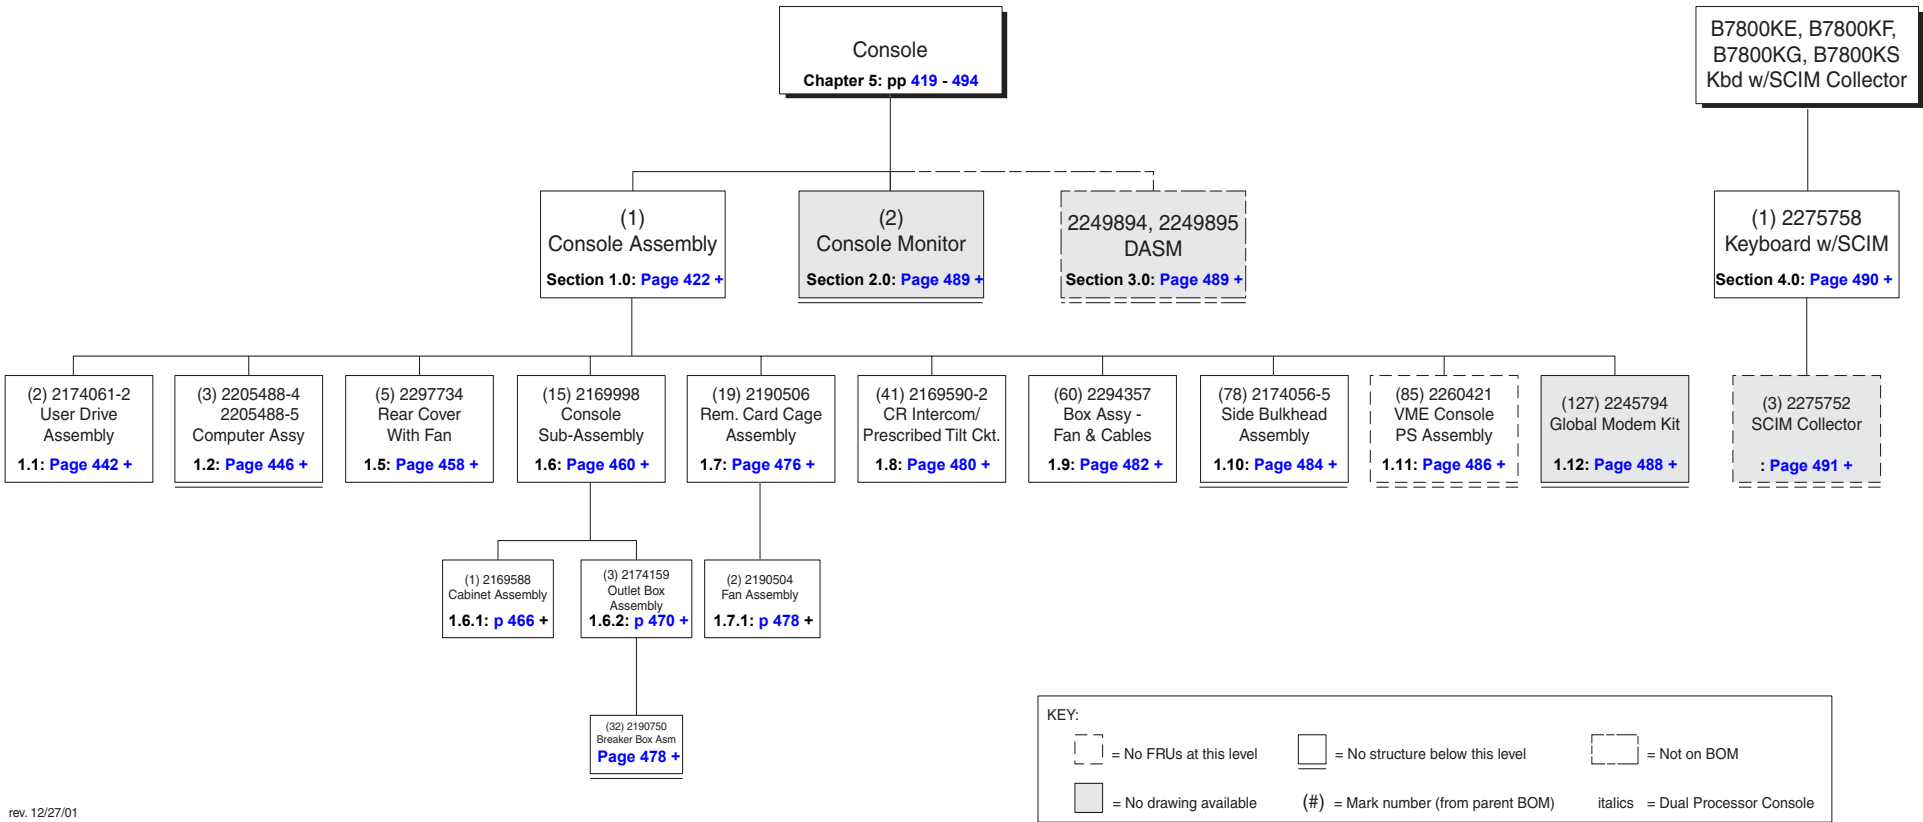

rev. 12/27/01

Figure 1-5 H3 Console BOM Tree

3.5.2 Global Console - Octane2 (GOC1)

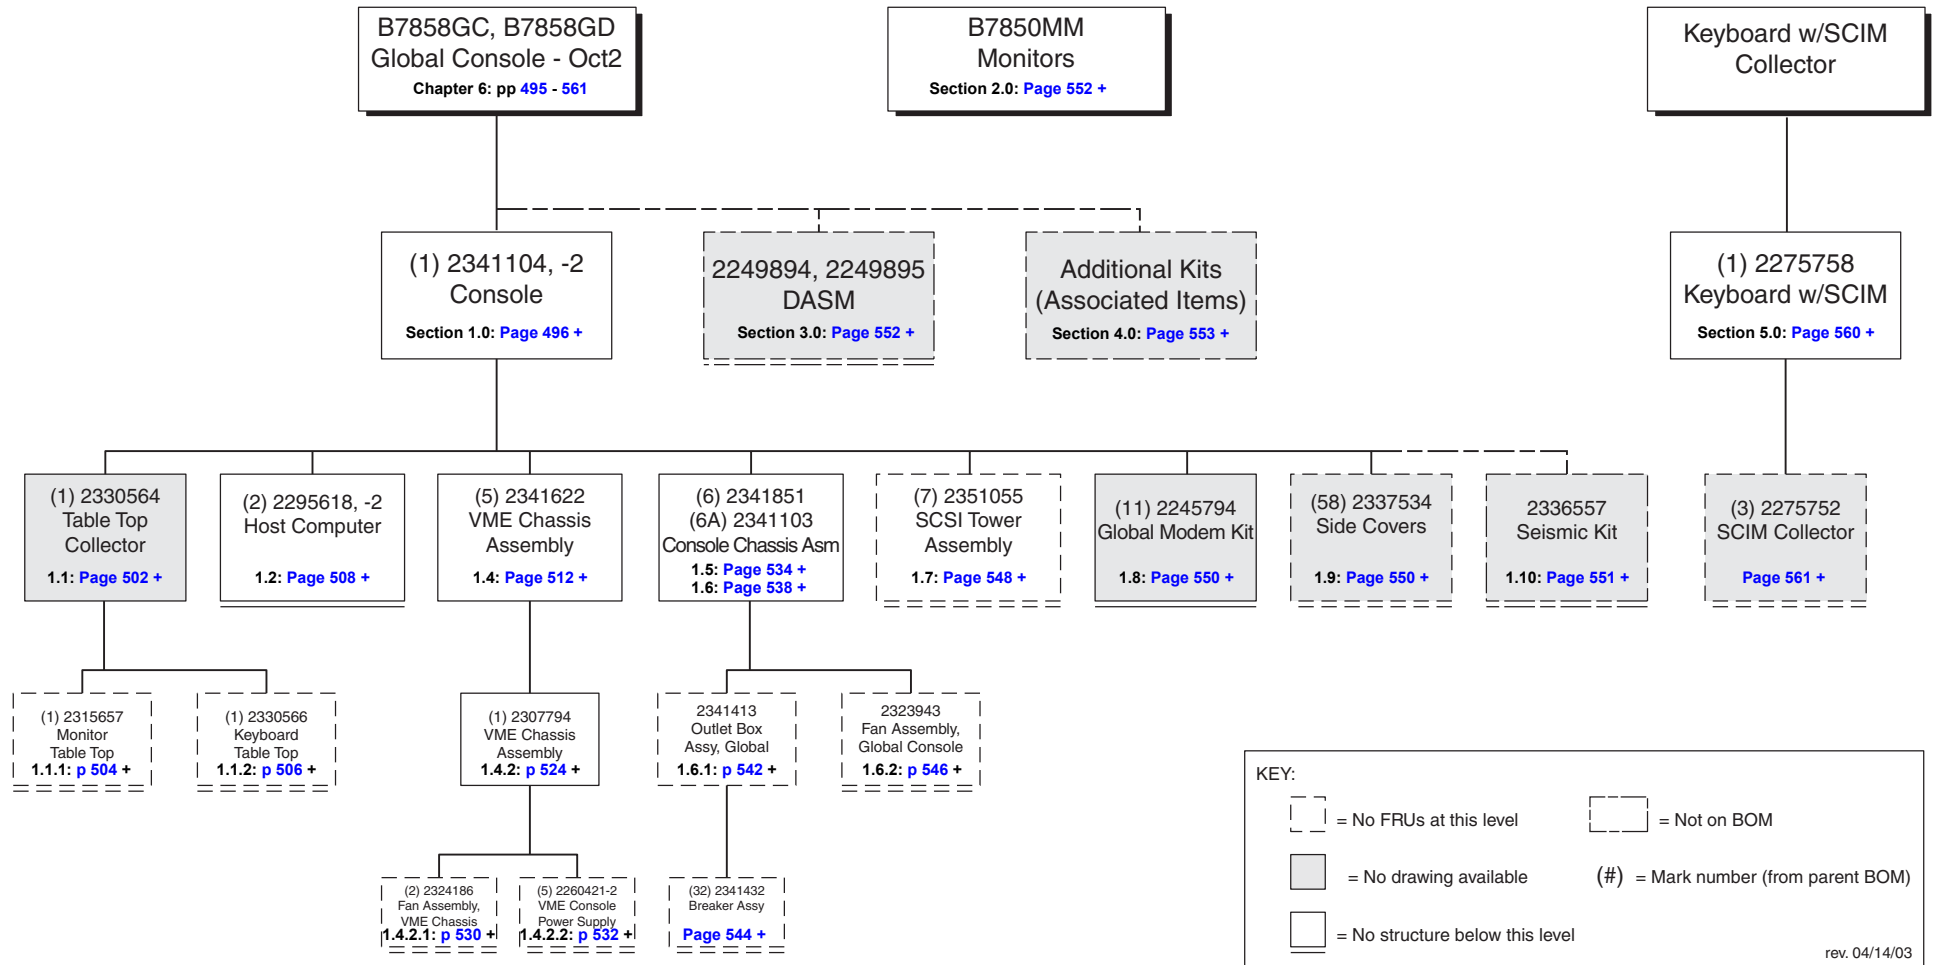


Figure 1-6 Global Console - Octane2 (GOC1) BOM Tree

3.5.3 Global Console - Linux (GOC2)

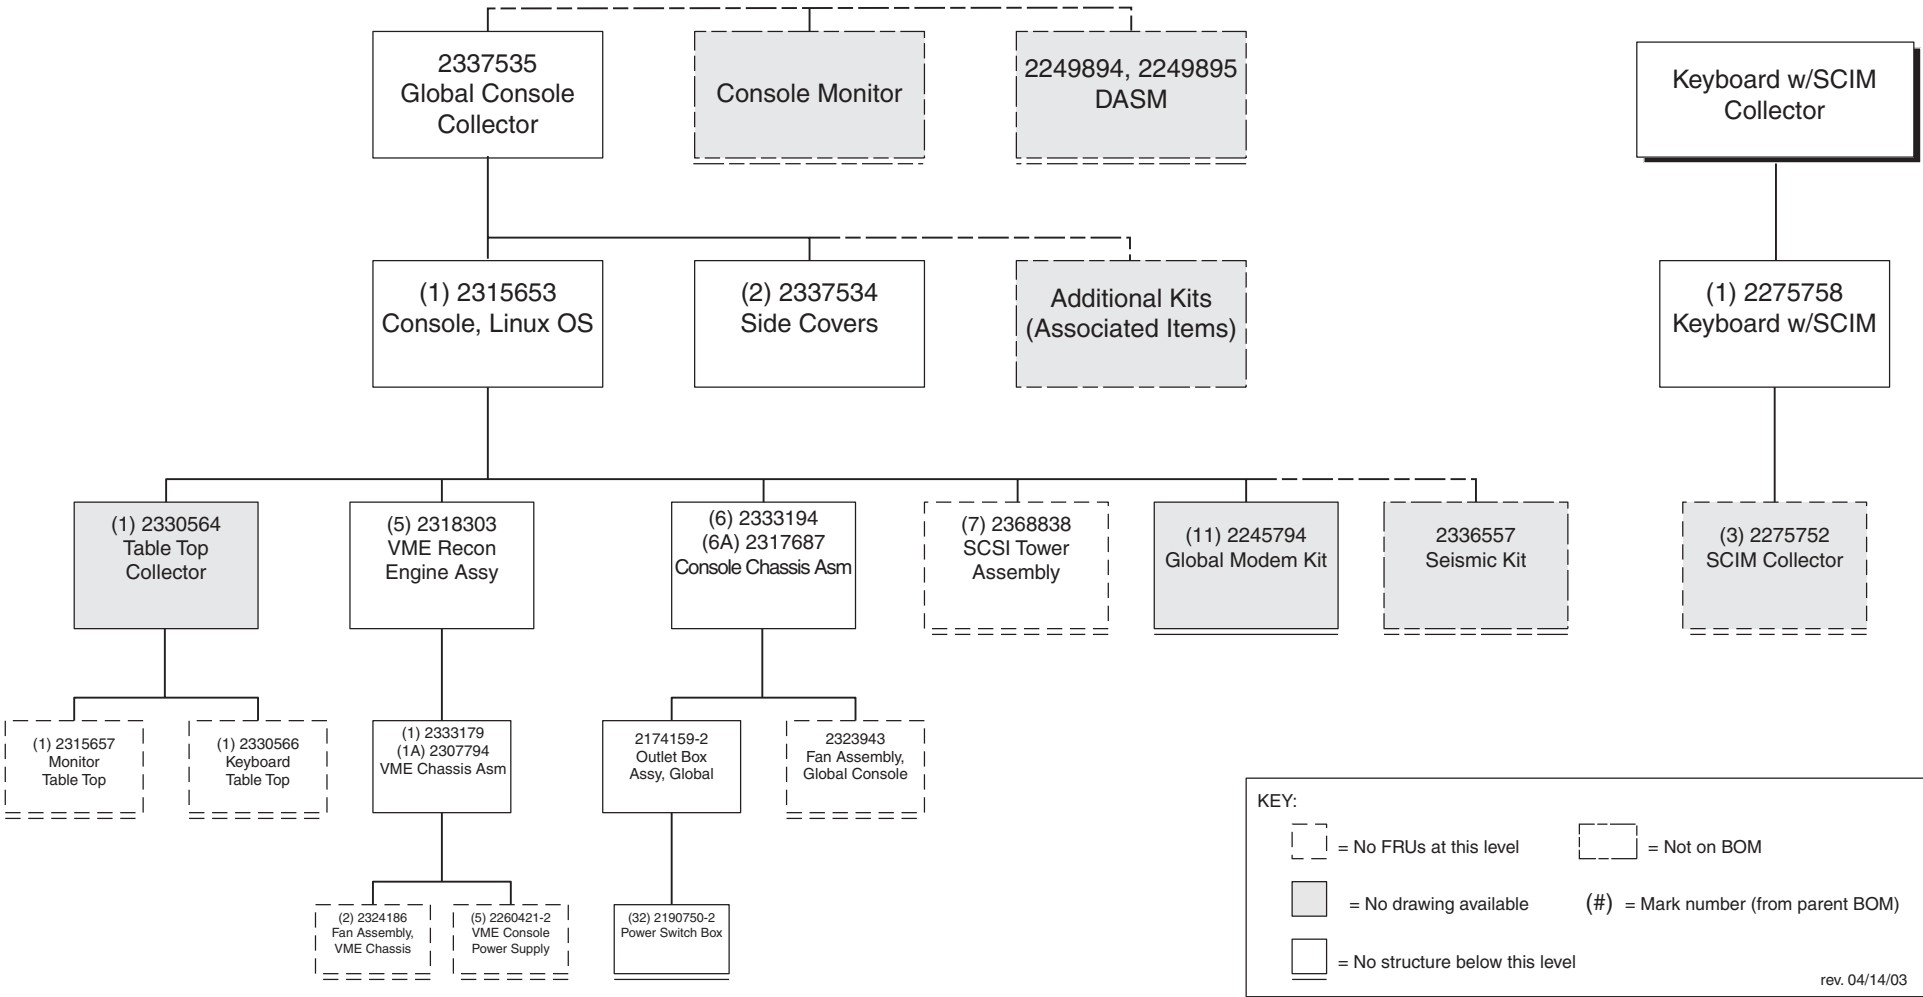


Figure 1-7 Global Console - Linux (GOC2) BOM Tree

3.5.4 GRE Xstream Console (GOC3 or GOC4)

For GOC3 Parts Information: Please refer to the *GOC3 Illustrated Parts List*, Direction 2394950-100. This IPL is available for order in paper, or may be found in PDF form on the *GOC3 Installation and Service Information* CD-ROM (2384451-200) that came with the GOC3 Console. The PDF may also be found on Revision 12 or later of the *LightSpeed 3.X Service Information* CD-ROM (2330551-200) and on GE's Common Documentation Library.

For GOC4 Parts Information: Please refer to the *GOC4 Illustrated Parts List*, Direction 5134893-100. This IPL is available for order in paper, or may be found in PDF form on the *GOC4 Installation and Service Information* CD-ROM (5134894-200) that came with the GOC4 Console. The PDF may also be found on Revision 14 or later of the *LightSpeed 3.X Service Information* CD-ROM (2330551-200) and on GE's Common Documentation Library.