


SYSTEM

TABLE OF CONTENTS


<u>SECTION</u>	<u>PAGE</u>
1 – SYSTEM	
Incoming Connection to Cabinets.....	1-1
Main Communication Lines (for 16 and 32 Channel Systems).....	1-2
1-Wire Network.....	1-3
Leak Sensors.....	1-4
Coil Datapath (MCRV) Tool.....	1-5


Signa MR750 3.0T

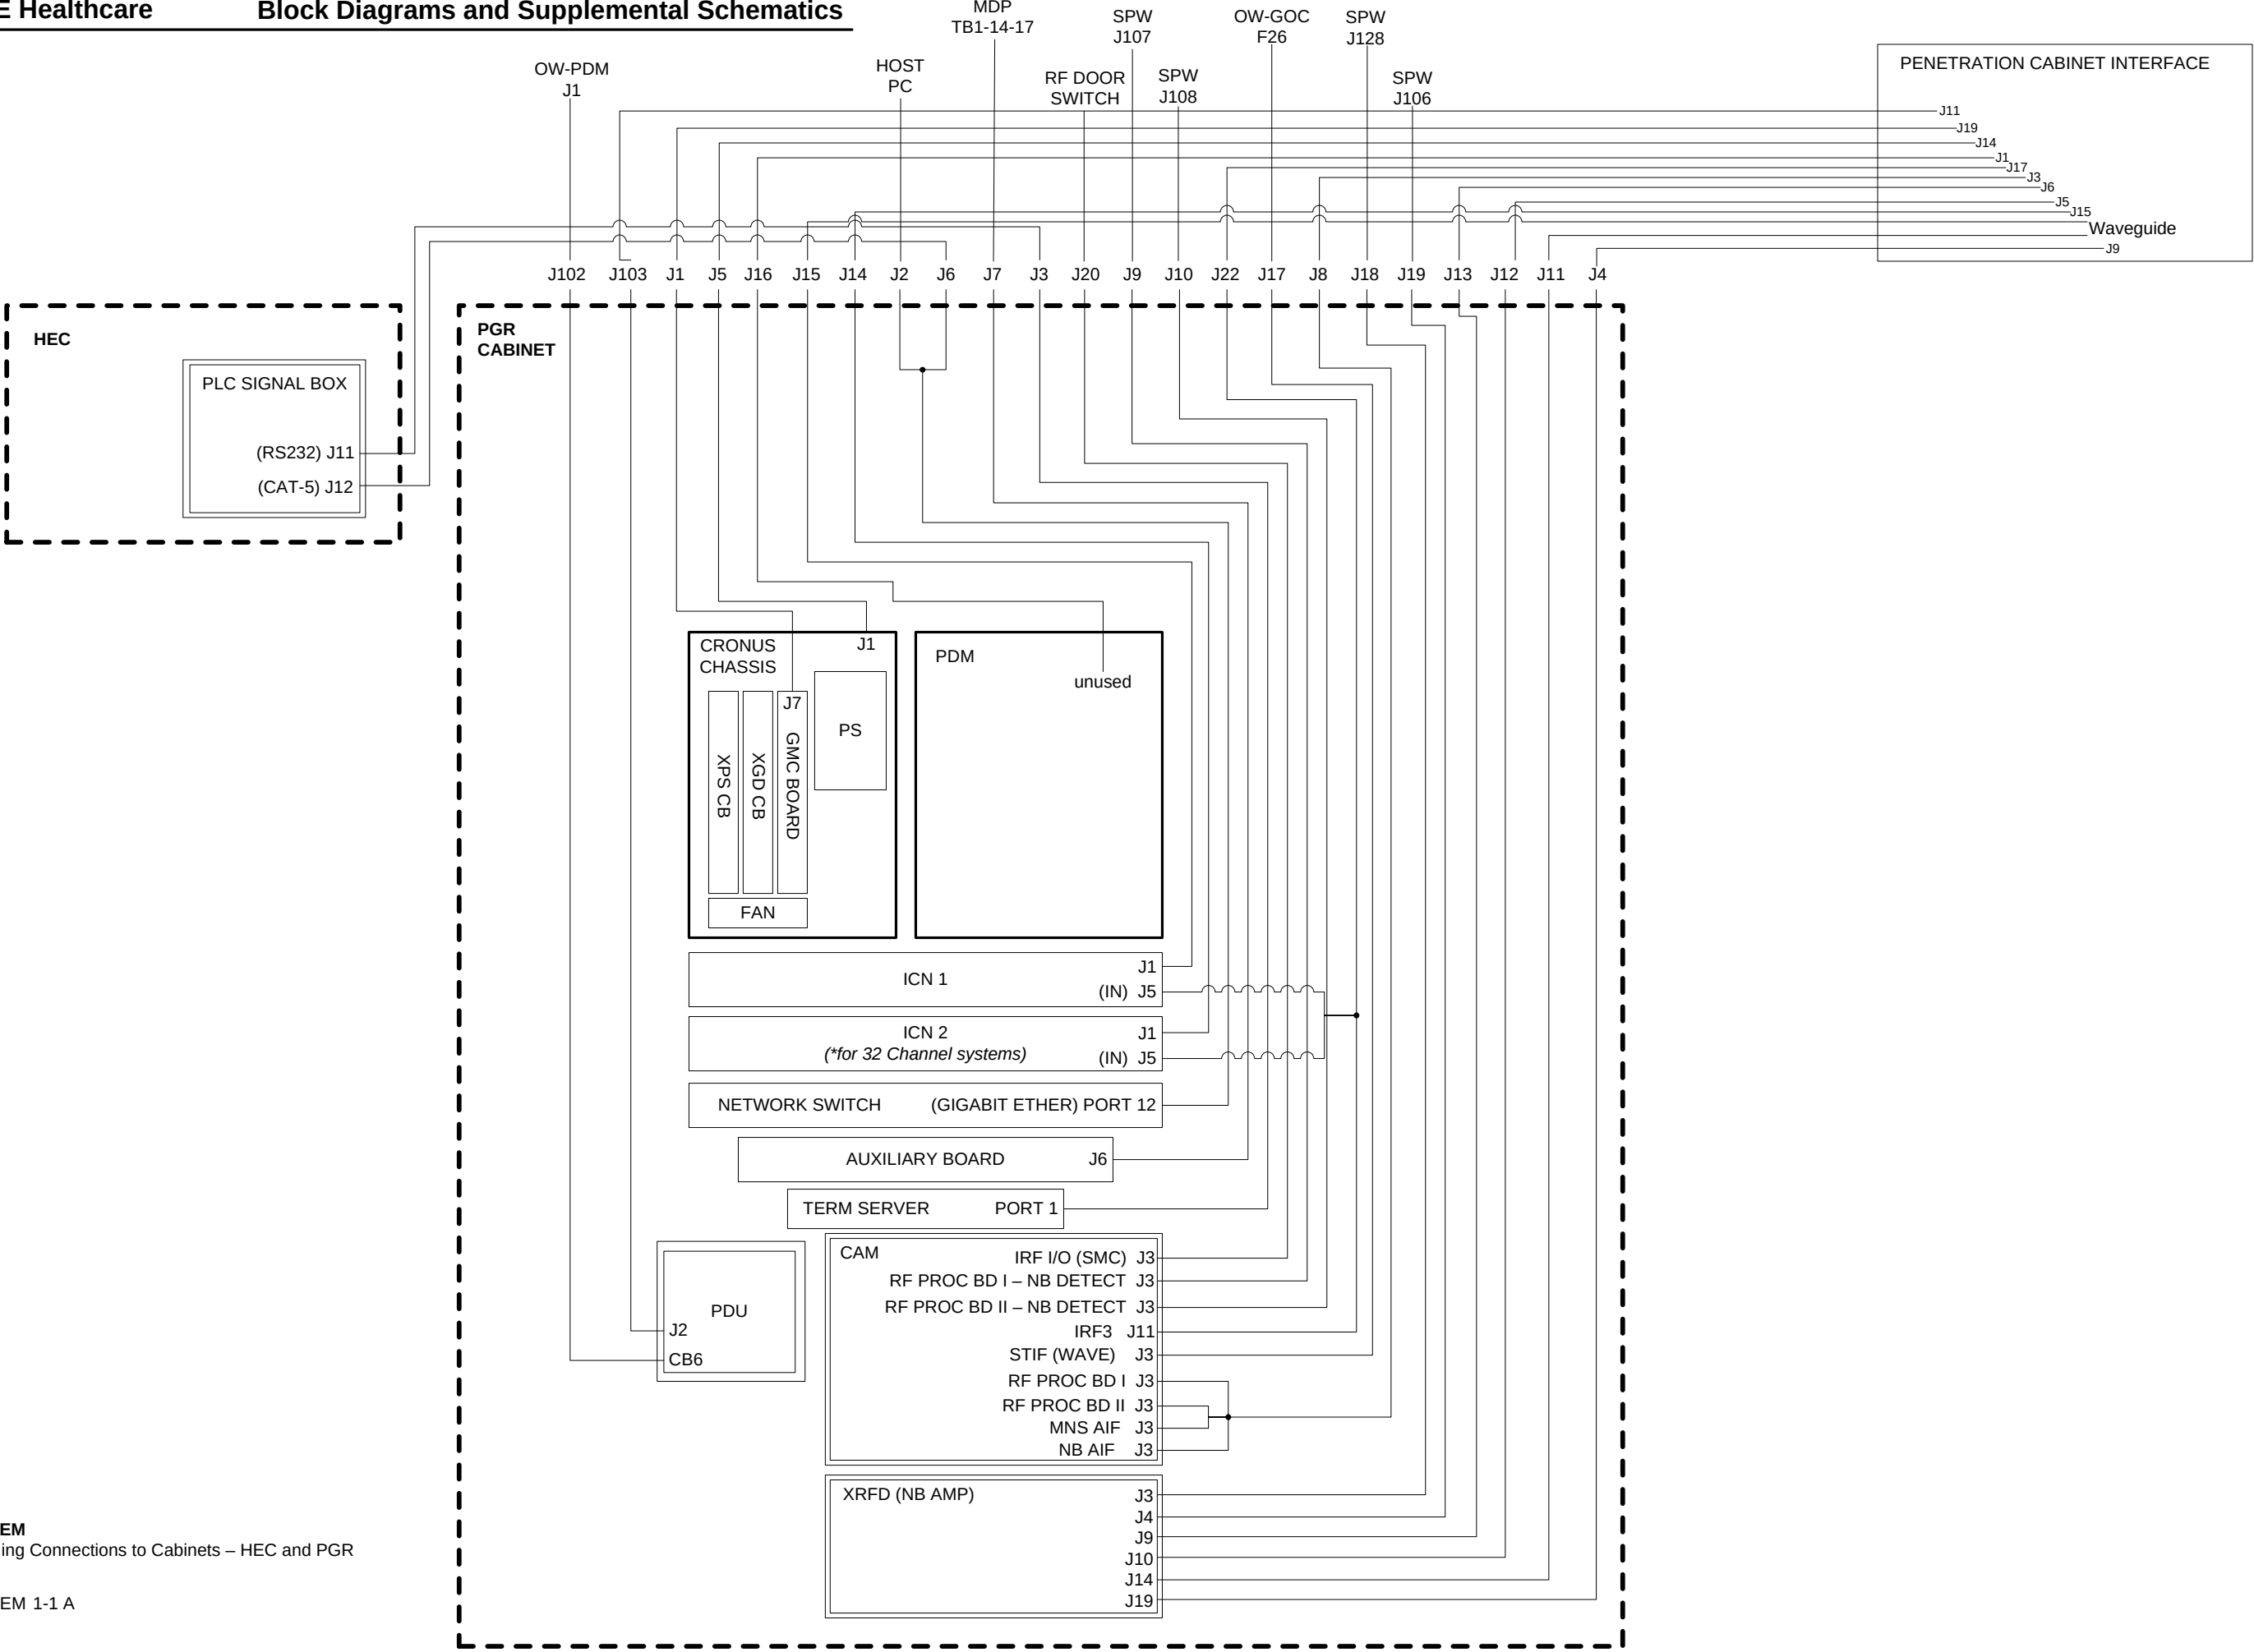

See Sheet System 1-1 B
for connections to the
Penetration Cabinet.

**See Sheet System 1-1 A
for connections to the
PGR and HEC Cabinets.**

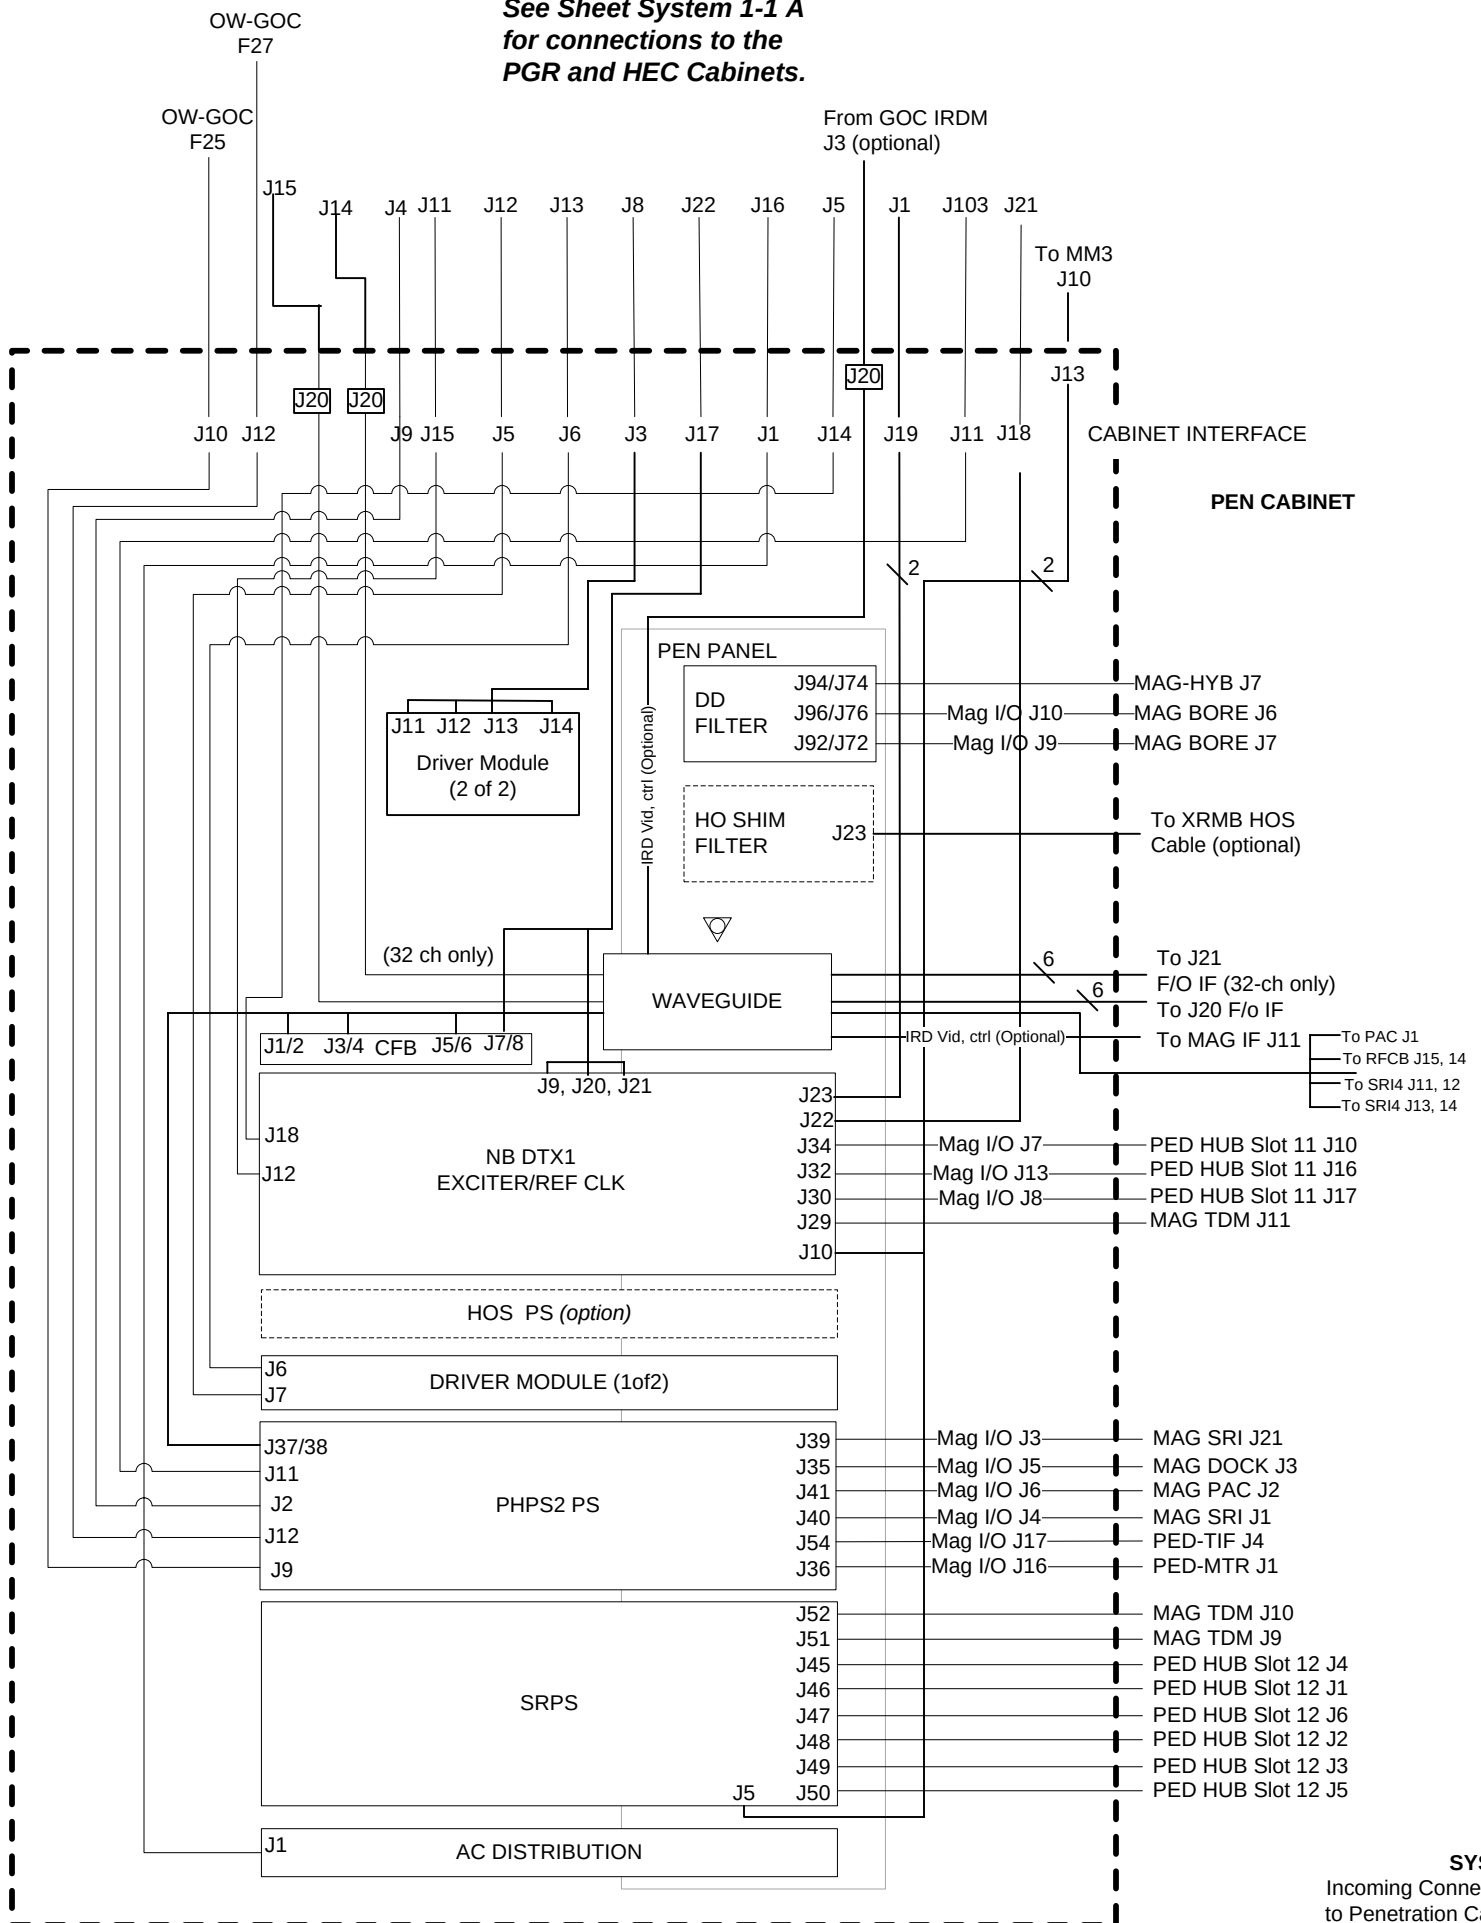


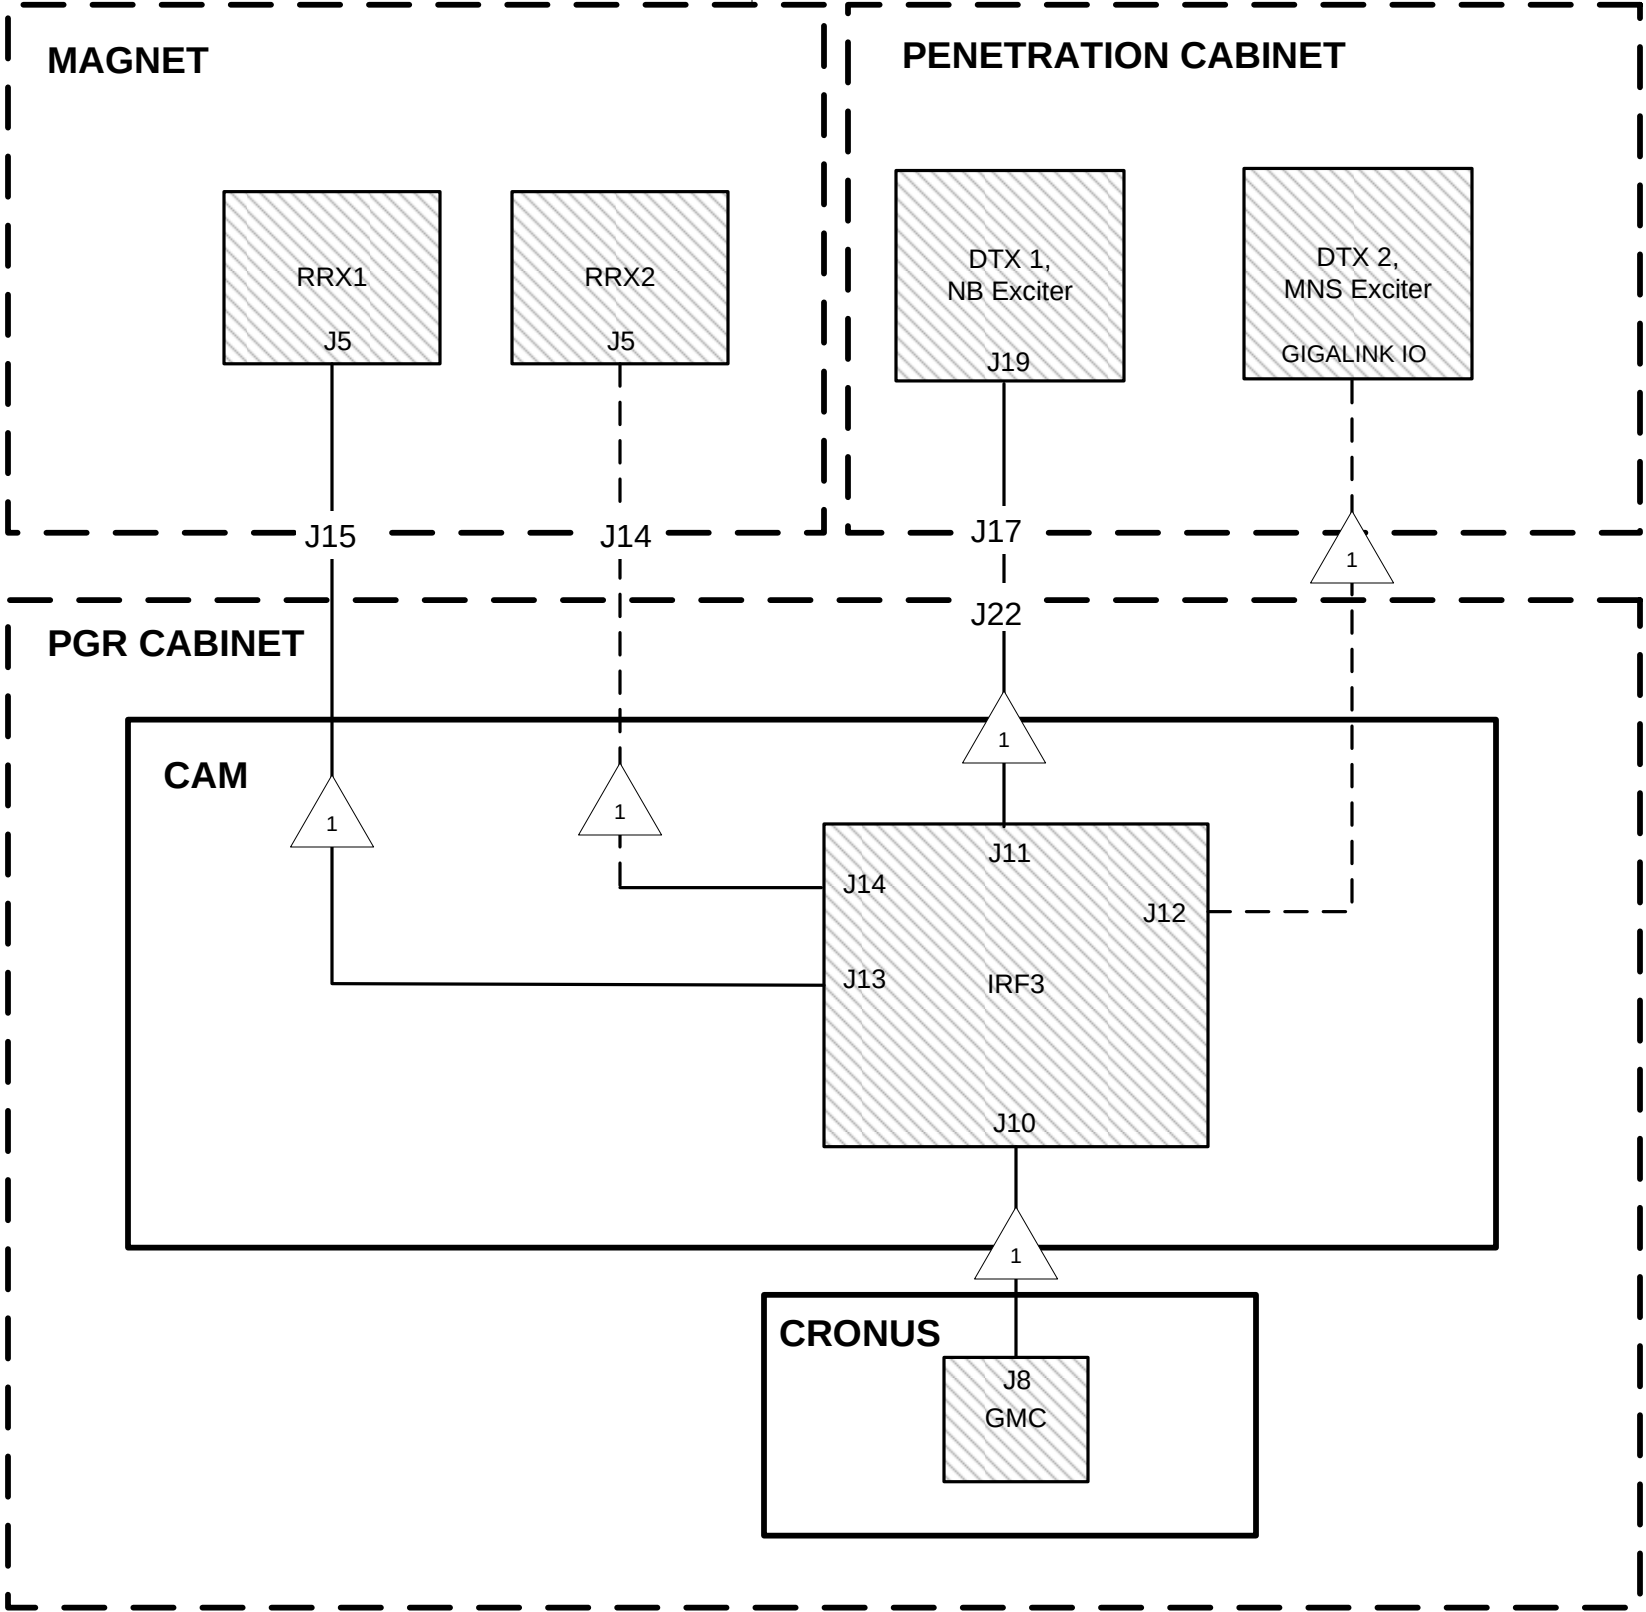

IRF3 BOARD LEDs

Mnemonic	Function
J10 RDY	Link-1 Status
J11 RDY	Link-2 Status
J12 RDY	Link-3 Status
J13 RDY	Link-4 Status
J14 RDY	Link-5 Status
REF OK	Reference Clock Detected
PWR OK	Voltage OK
RST REQ	System Reset Request


 FIBER OPTIC TRANSCEIVER, DVMRLINK SEQUENCE BUS DATA

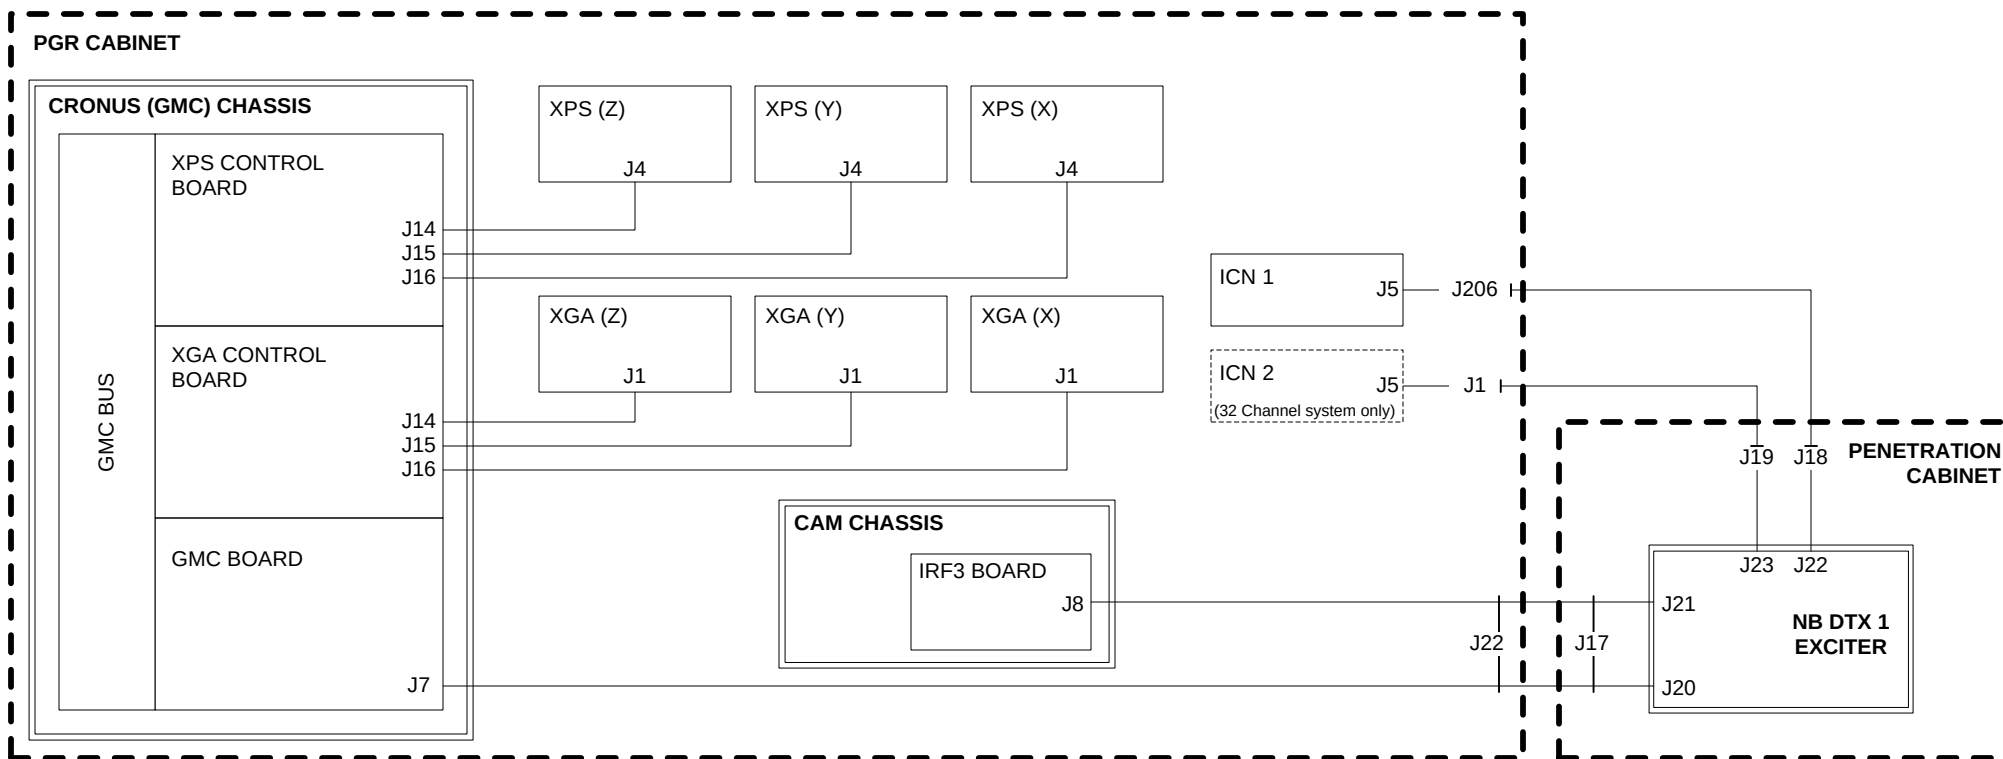

SYSTEM

Main Communication Links
Clock Synchronization Fibers

SYSTEM 1-2 B

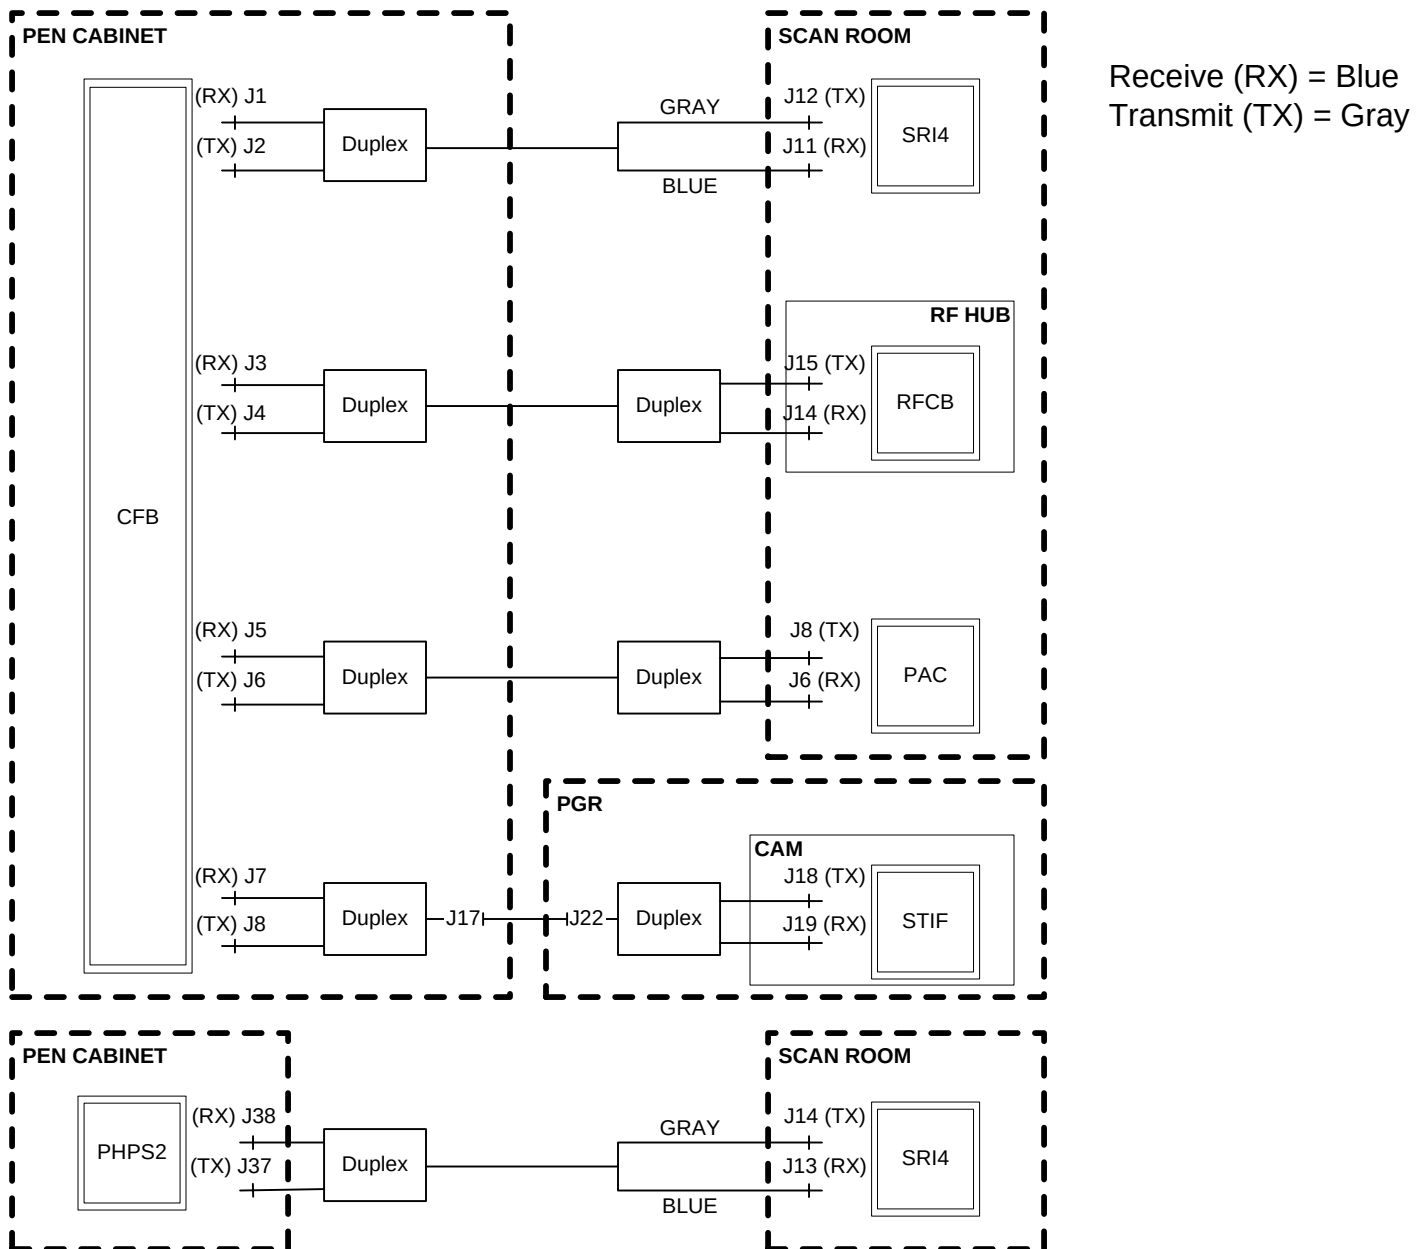


SYSTEM


Main Communication Links

CAN Fiber Optic Connections Block Diagrams


PENETRATION CABINET to SCAN ROOM and RECON

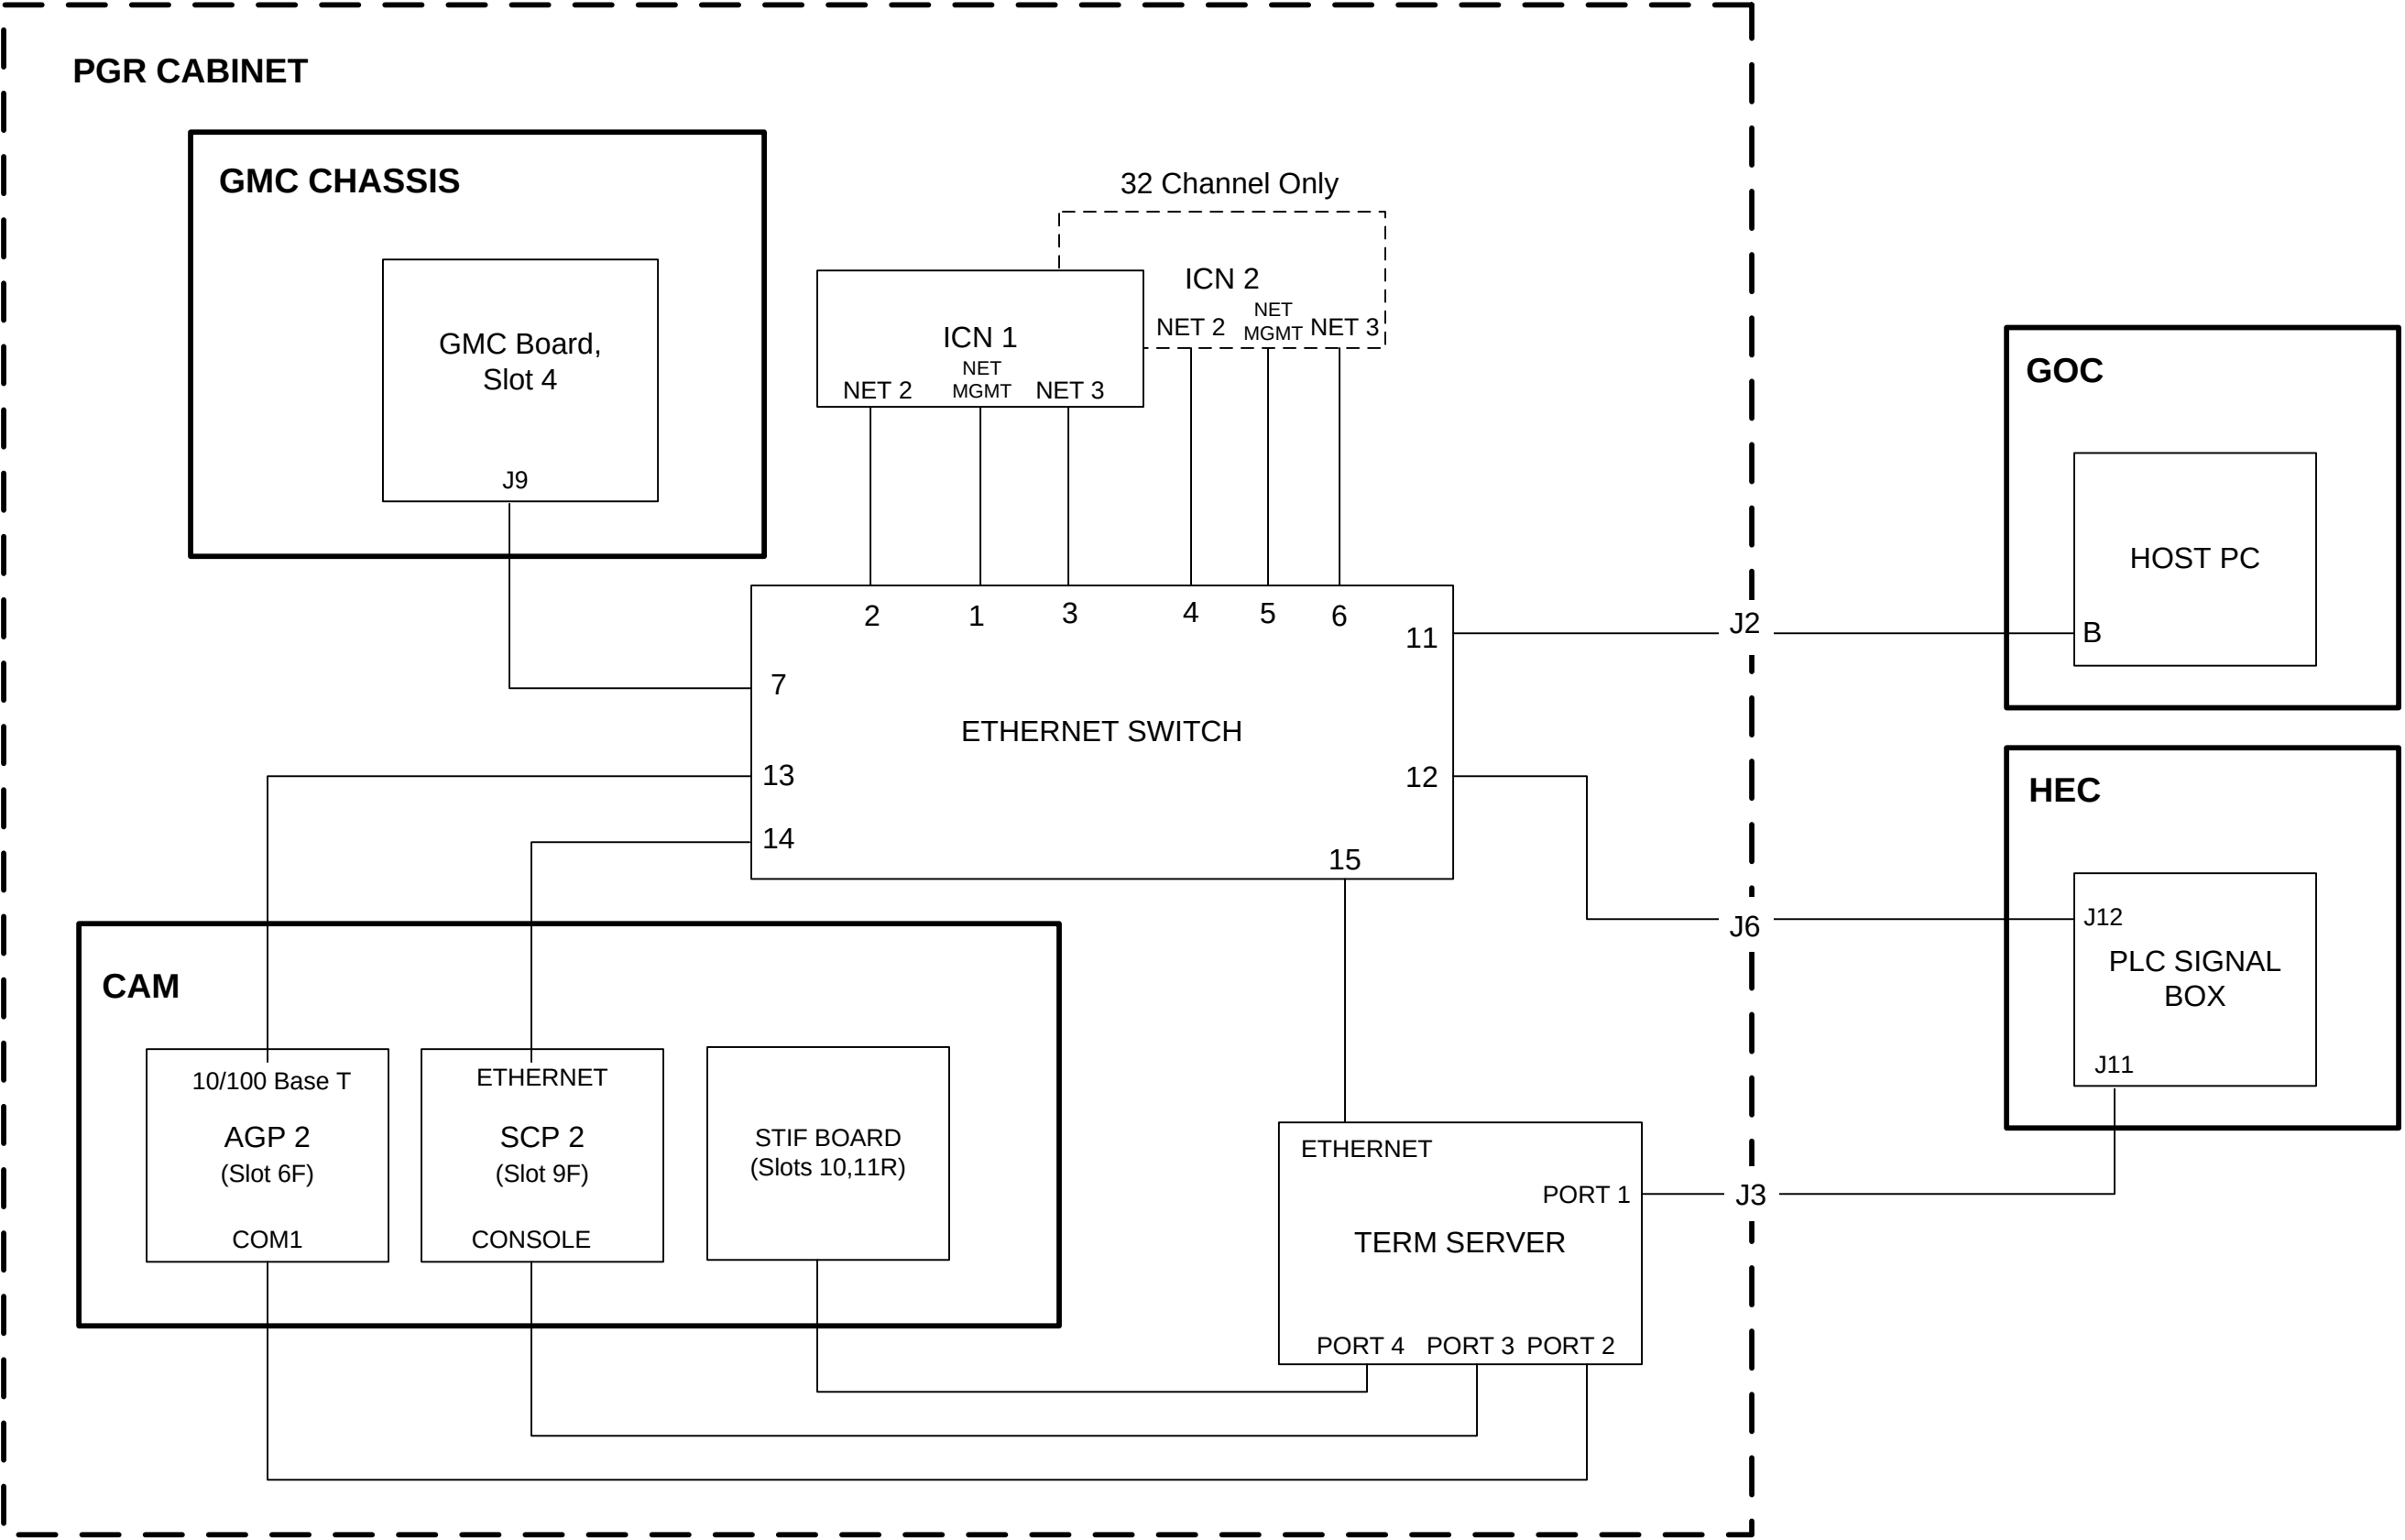



SYSTEM
Main Communication Links
Ethernet & Serial Communication – Terminal Server and E-Switch

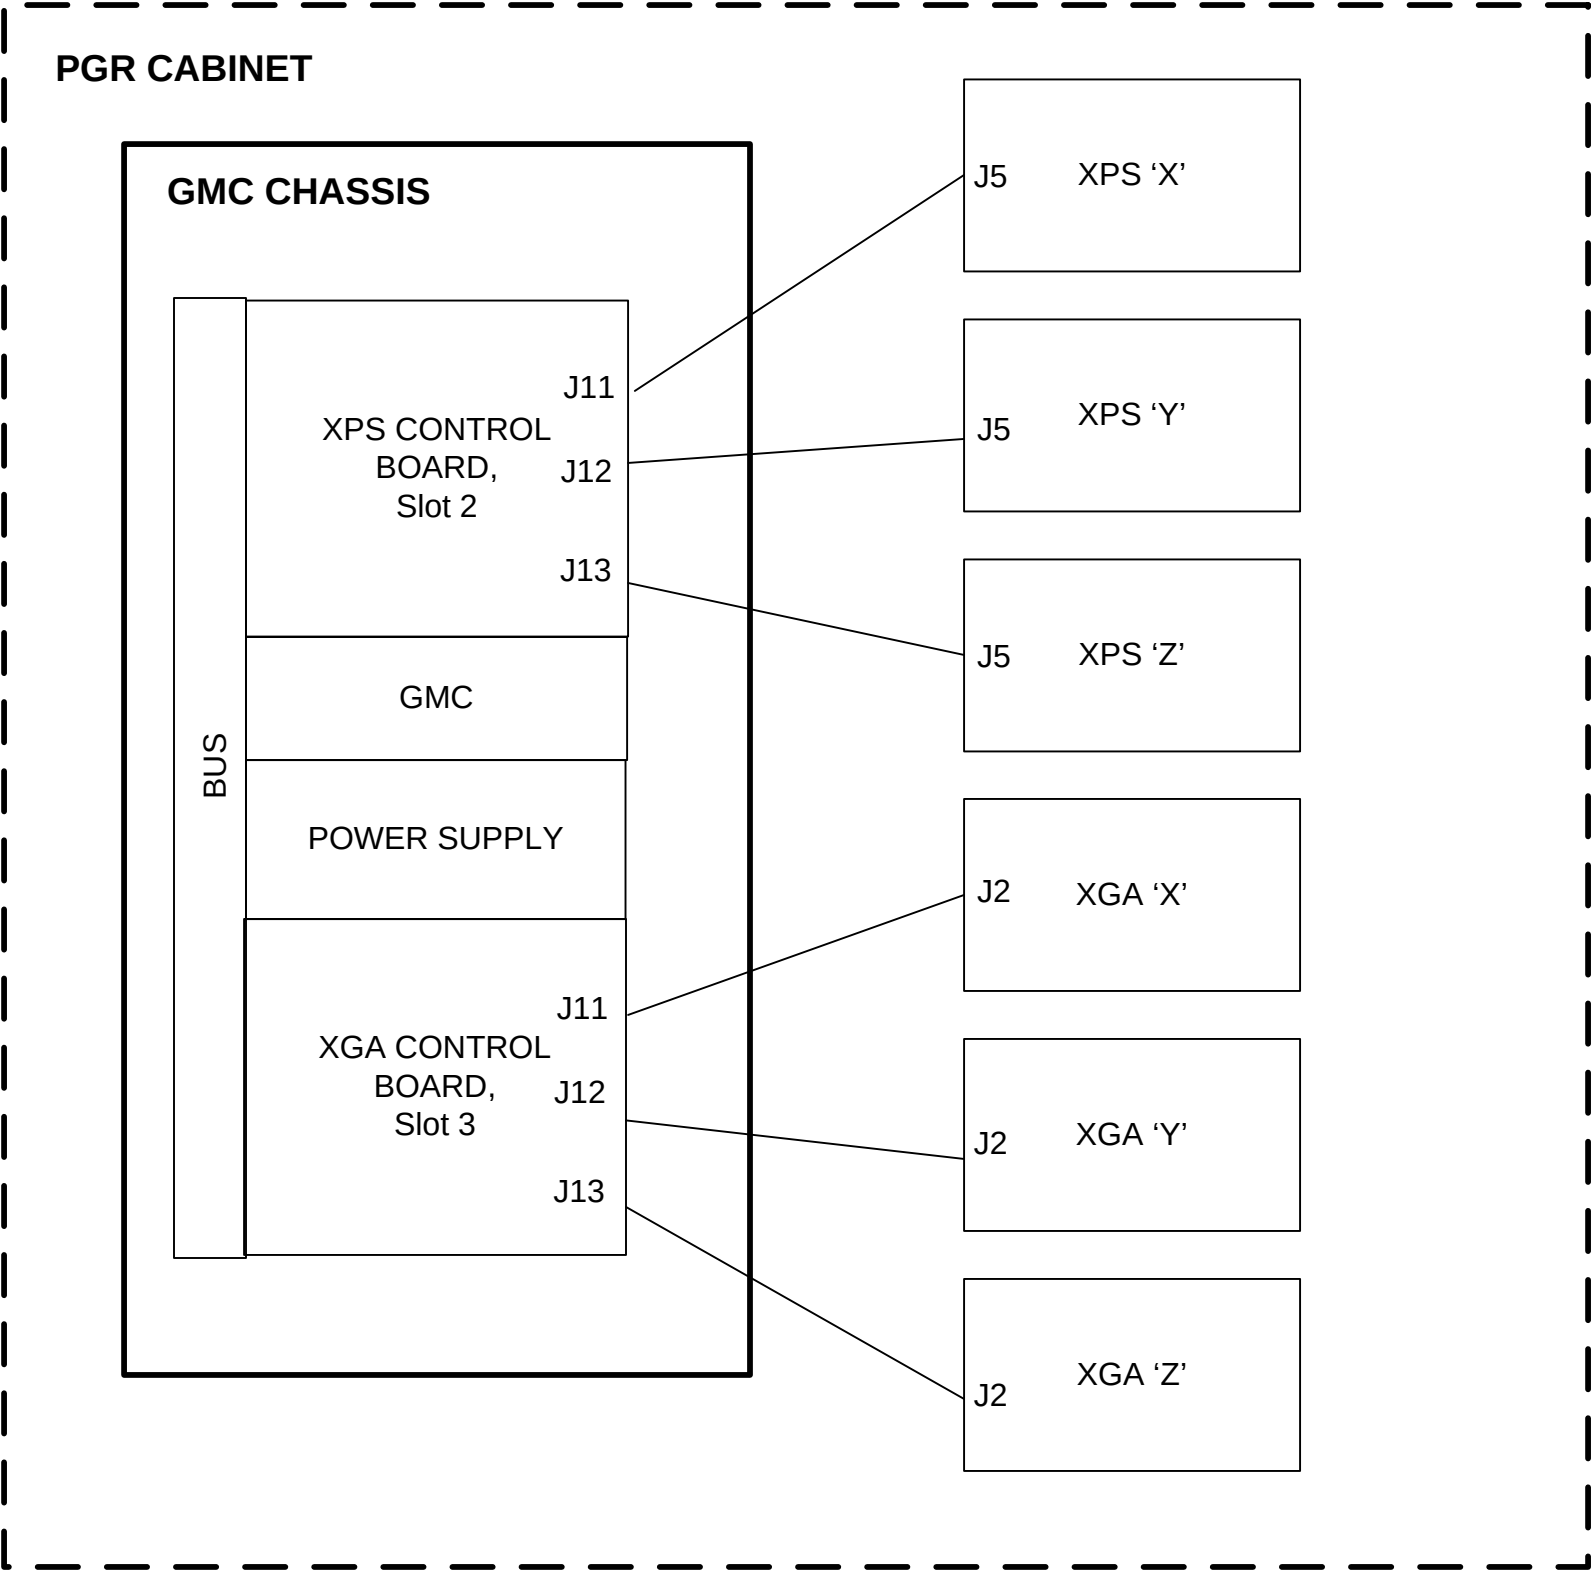

SYSTEM
Main Communication Links
XGA Data Fiber Link Block Diagram

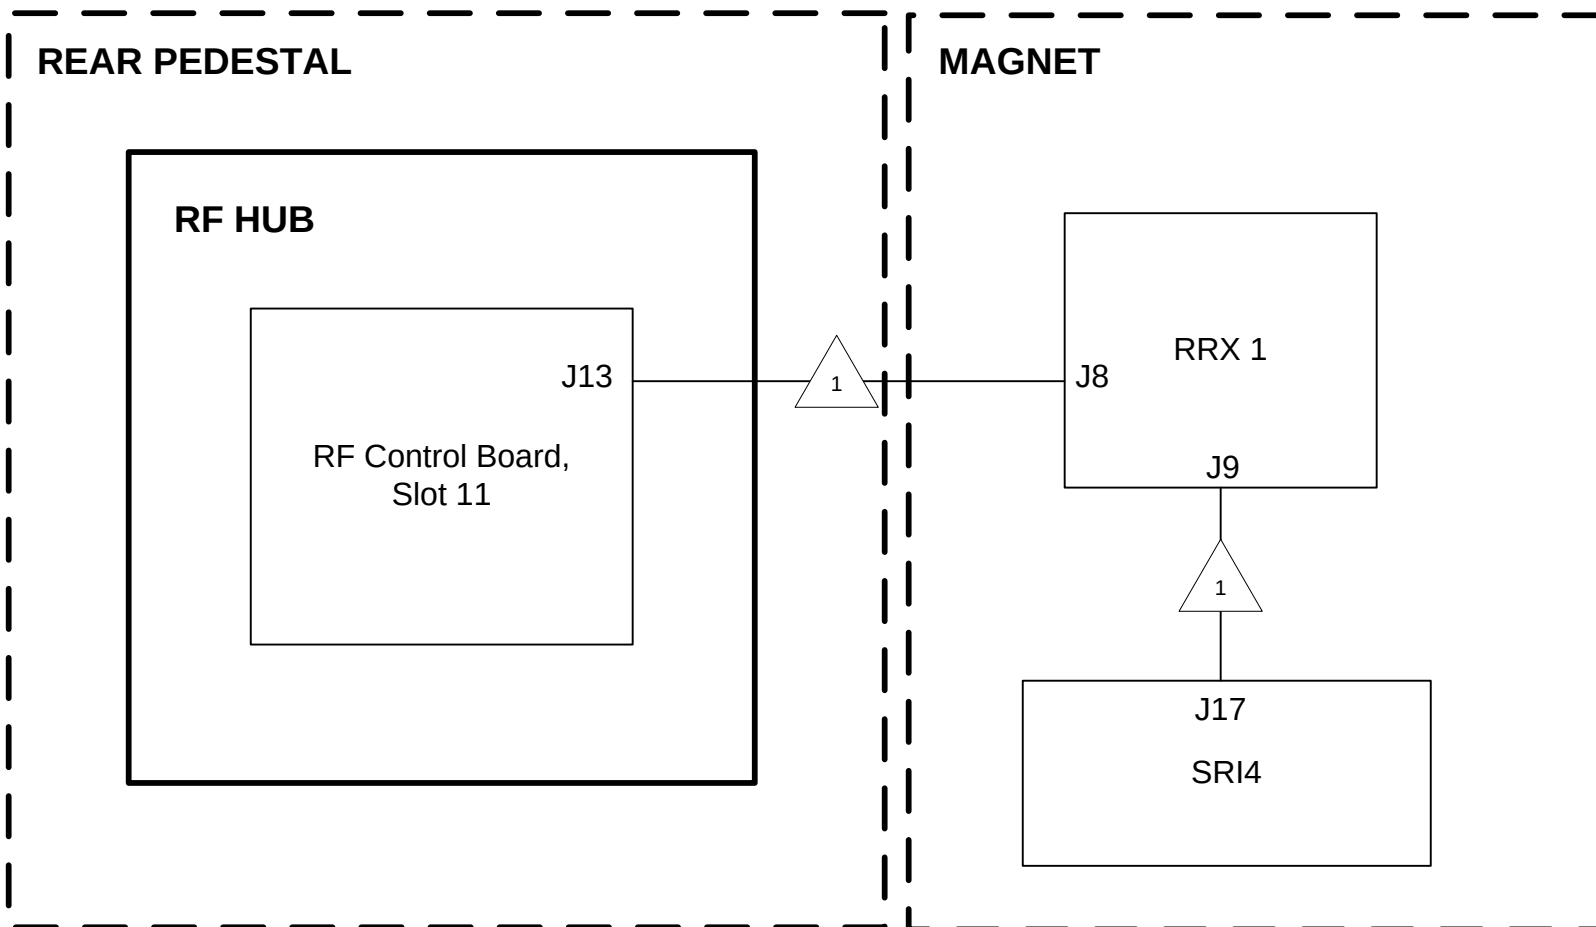**SYSTEM**


Main Communication Links
Strobe Link Block Diagram

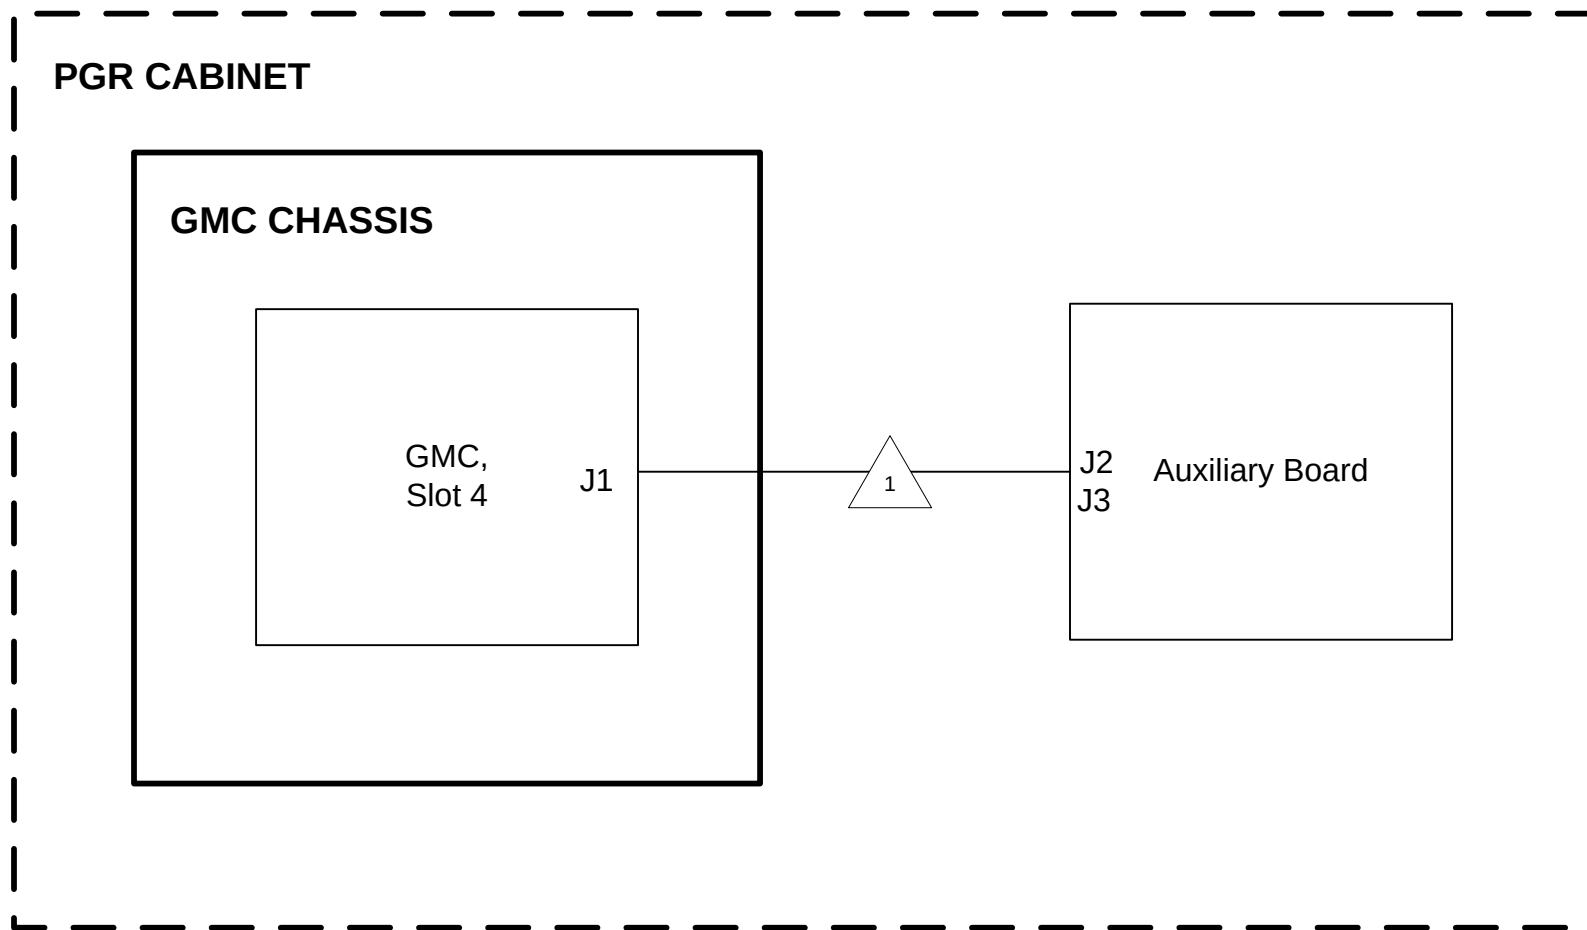**SYSTEM**


Main Communication Links

Auxiliary Board Link Block Diagram


SYSTEM 1-2 G

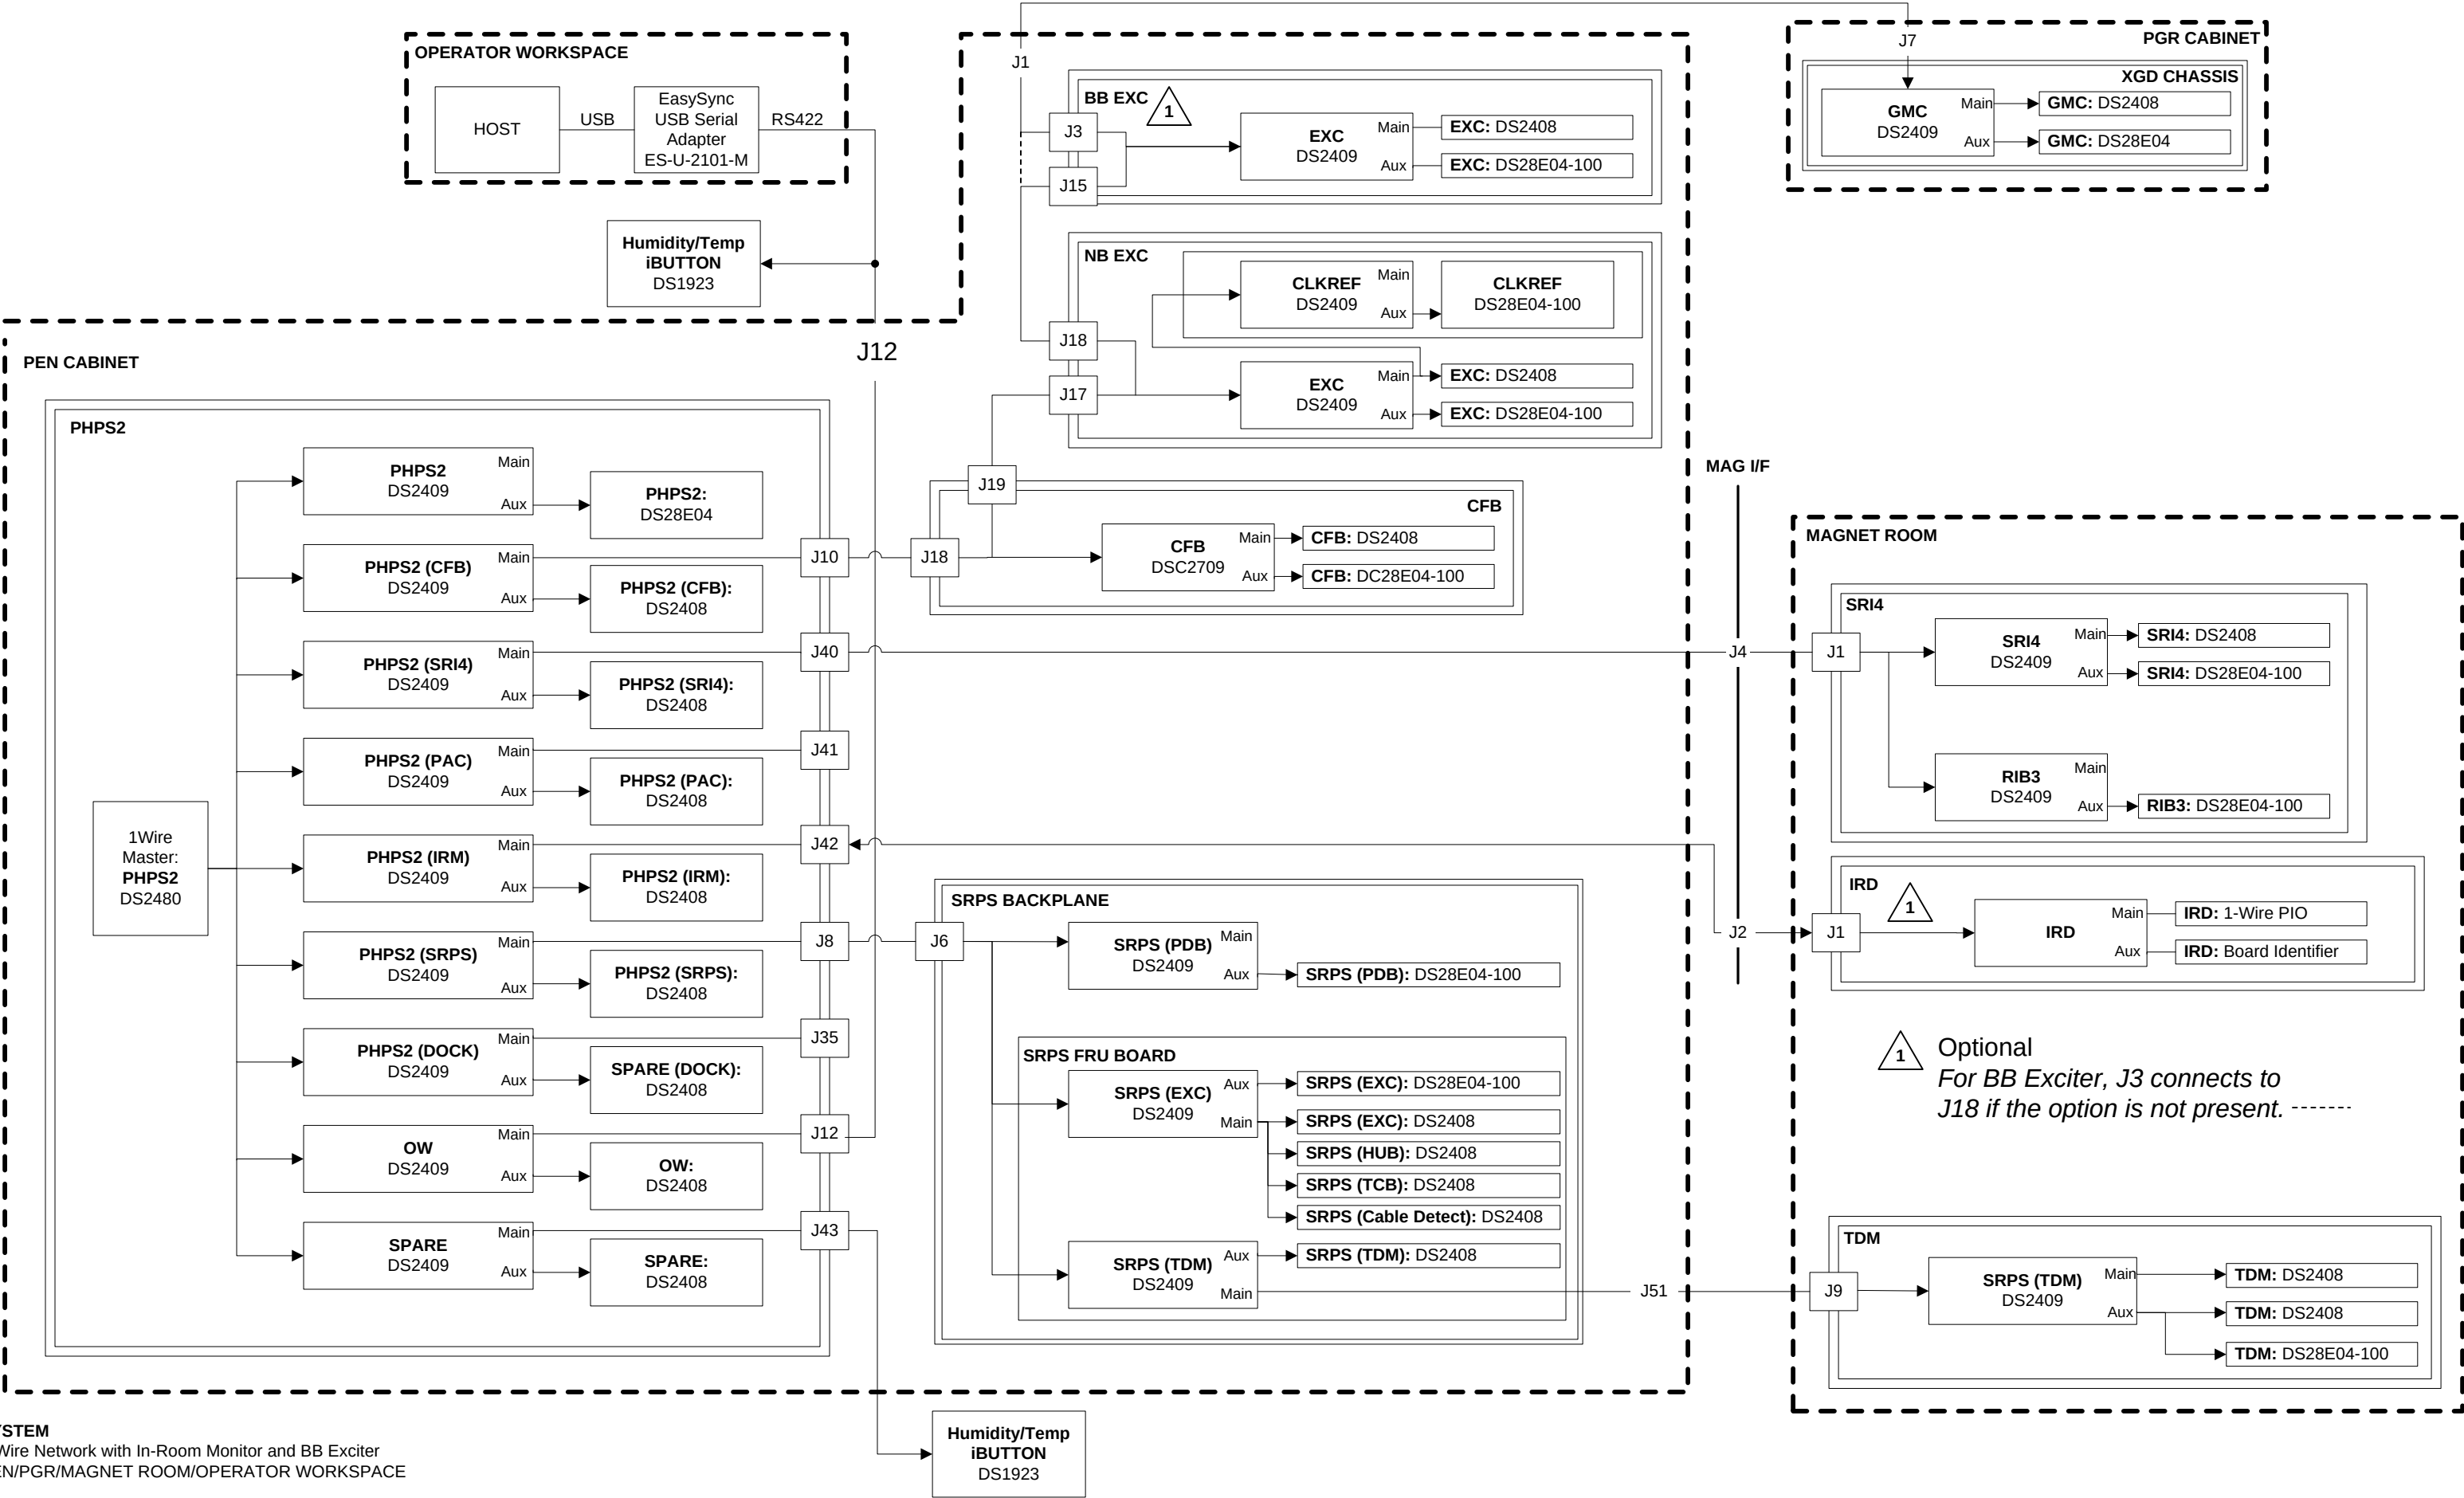


SYSTEM
1-Wire Network with In-Room Monitor and BB Exciter
PEN/PGR/MAGNET ROOM/OPERATOR WORKSPACE

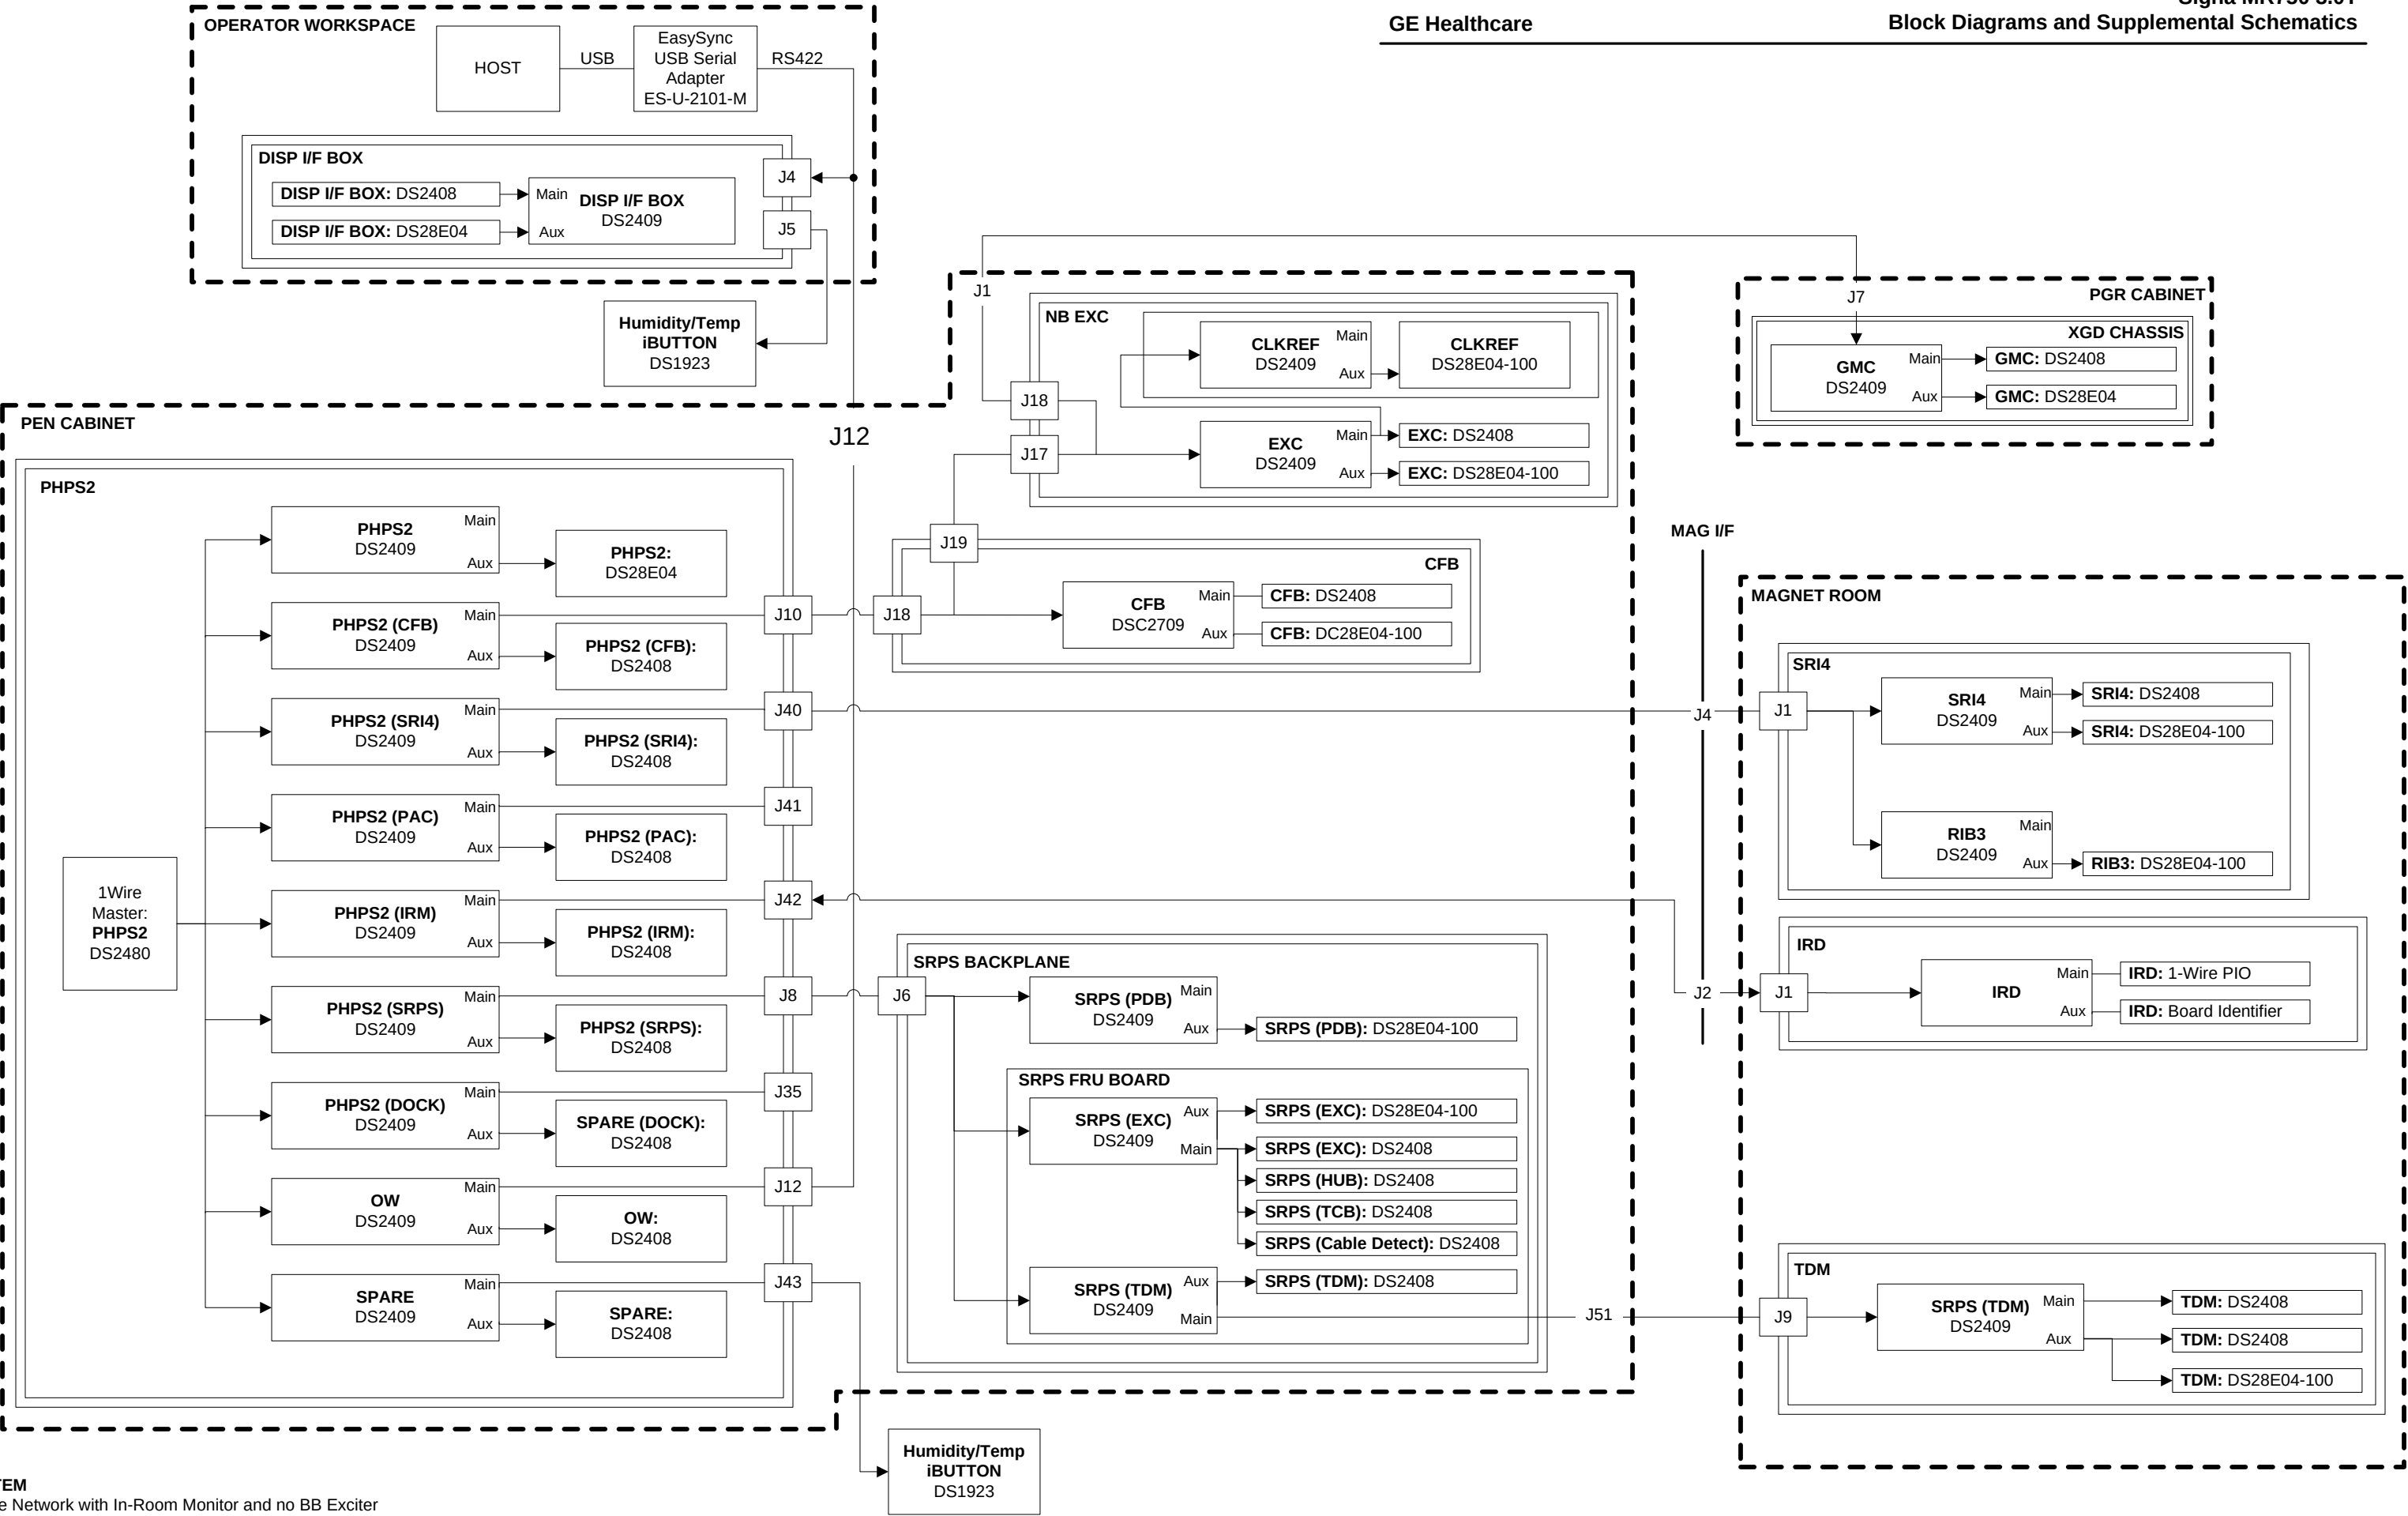


SYSTEM
1-Wire Network with In-Room Monitor and no BB Exciter
PEN/PGR/MAGNET ROOM/OPERATOR WORKSPACE

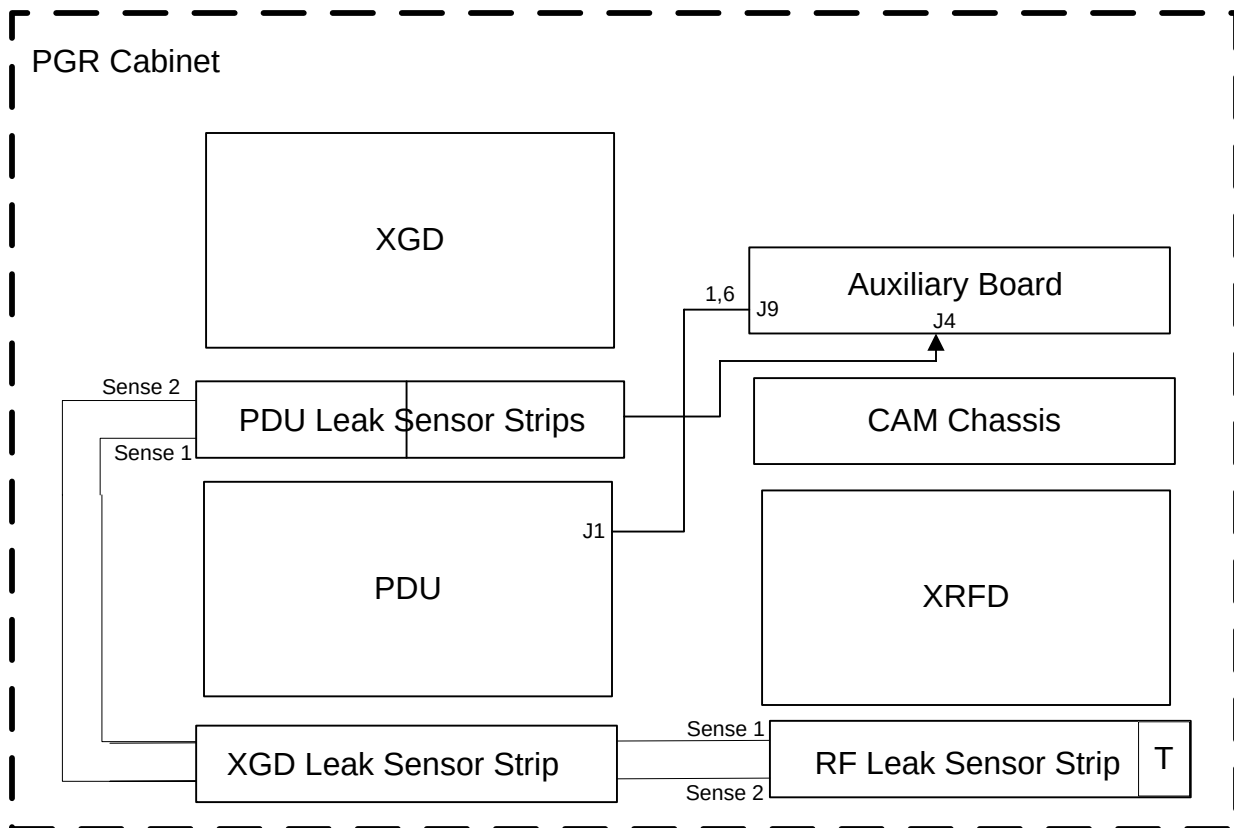**SYSTEM**

Leak Sensors
PGR CABINET

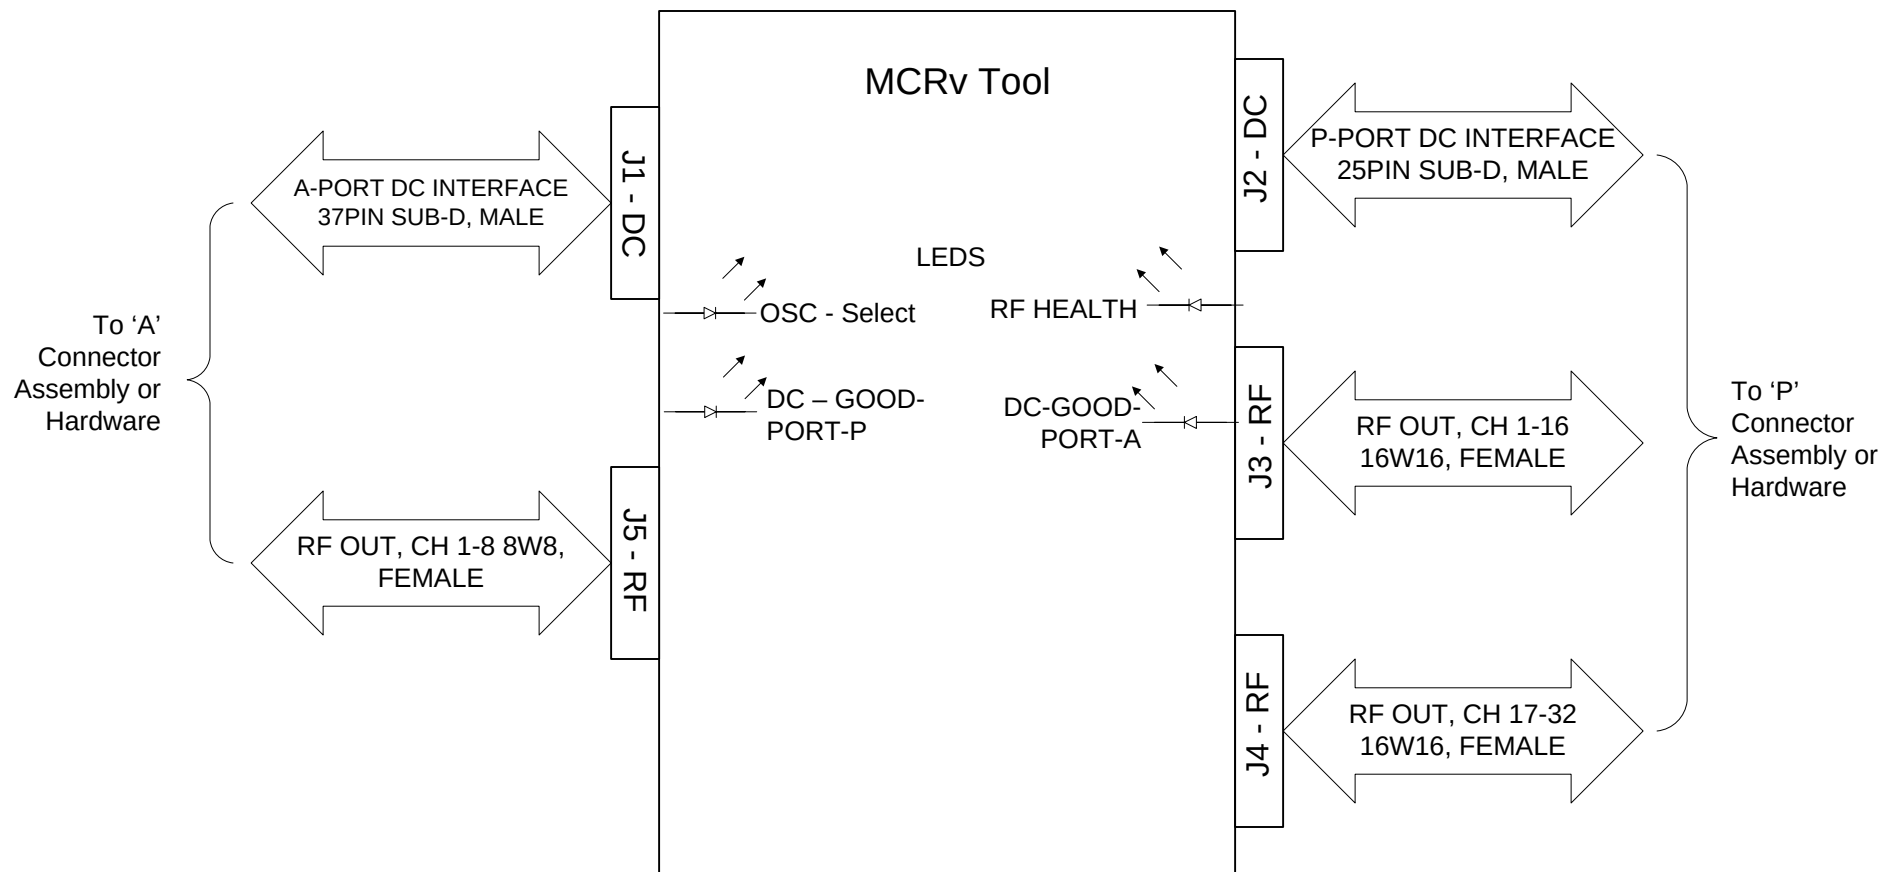

SYSTEM
Coil Datapath (MCRV) Tool

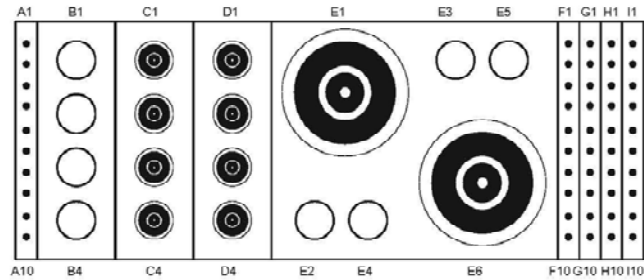

Pin	Twisted with	Description	Comments
A1	A2	coil present	
A2	A1	coil present return	
A3	A4	multiplexerSelect0	RS-422+
A4	A3	multiplexerSelect0 return	RS-422-
A5	A6	multiplexerSelect1	RS-422+
A6	A5	multiplexerSelect1 return	RS-422-
A7	A8	multiplexerSelect2	RS-422+
A8	A7	multiplexerSelect2 return	RS-422-
A9	A10	multiplexerSelect3	RS-422+
A10	A9	multiplexerSelect3 return	RS-422-
B1	n/a		Not used
B2	n/a		Not used
B3	n/a		Not used
B4	n/a		Not used
C1	n/a	MC-1A,B or MC-9B	Preamp out 1, no bias, DC blocked
C2	n/a	MC-2A,B or MC-10B	Preamp out 2, no bias, DC blocked
C3	n/a	MC-3A,B or MC-11B	Preamp out 3, no bias, DC blocked
C4	n/a	MC-4A,B or MC-12B	Preamp out 4, no bias, DC blocked
D1	n/a	MC-5A,B or MC-13B	Preamp out 5, no bias, DC blocked
D2	n/a	MC-6A,B or MC-14B	Preamp out 6, no bias, DC blocked
D3	n/a	MC-7A,B or MC-15B	Preamp out 7, no bias, DC blocked
D4	n/a	MC-8A,B or MC-16B	Preamp out 8, no bias, DC blocked

Pin	Twisted with	Description	Comments
E1	n/a	Open	Not used
E2	n/a	Open	Not used
E3	n/a	Open	Not used
E4	n/a	Open	Not used
E5	n/a	Open	Not used
E6	n/a	Open	Not used
F1	G1	MC bias 1	MC T/R Bias Line 17 for "A", 26 for "B"
F2	G2	MC bias 2	MC T/R Bias Line 18 for "A", 26 for "B"
F3	G3	MC bias 3	MC T/R Bias Line 19 for "A", 27 for "B"
F4	G4	MC bias 4	MC T/R Bias Line 20 for "A", 28 for "B"
F5	G5	MC bias 5	MC T/R Bias Line 21 for "A", 29 for "B"
F6	G6	MC bias 6	MC T/R Bias Line 22 for "A", 30 for "B"
F7	G7	MC bias 7	MC T/R Bias Line 23 for "A", 31 for "B"
F8	G8	MC bias 8	MC T/R Bias Line 24 for "A", 32 for "B"
F9	F10	body transmit enable	
F10	F9	body transmit enable return	
G1	F1	MC bias return 1	MC T/R Bias Line 17 for "A", 26 for "B"
G2	F2	MC bias return 2	MC T/R Bias Line 18 for "A", 26 for "B"
G3	F3	MC bias return 3	MC T/R Bias Line 19 for "A", 27 for "B"
G4	F4	MC bias return 4	MC T/R Bias Line 20 for "A", 28 for "B"
G5	F5	MC bias return 5	MC T/R Bias Line 21 for "A", 29 for "B"
G6	F6	MC bias return 6	MC T/R Bias Line 22 for "A", 30 for "B"
G7	F7	MC bias return 7	MC T/R Bias Line 23 for "A", 31 for "B"
G8	F8	MC bias return 8	MC T/R Bias Line 24 for "A", 32 for "B"
G9	G10	Preamp Enable	
G10	G9	Preamp Enable Return	
H1	n/a	Reserved	
H2	n/a	Reserved	
H3	n/a	Reserved	
H4	n/a	Reserved	
H5	n/a	Reserved	
H6	n/a	Reserved	
H7	n/a	Reserved	
H8	n/a	Reserved	
H9	n/a	Reserved	
H10	n/a	Reserved	
I1	n/a	Reserved	
I2	I5	+15Vdc (auxiliary & preamp power)	
I3	I6	+10Vdc (auxiliary & preamp power)	
I4	n/a	-15Vdc (auxiliary power)	
I5	I2	Return for aux power	
I6	I3	Return for aux power	
I7	I8	coil ID (Dallas OneWire protocol)	All coils MUST have coil ID.
I8	I7	coil ID return (Dallas OneWire protocol)	All coils MUST have coil ID.
I9	I10	coil present	
I10	I9	coil present return	

SYSTEM

Coil Datapath (MCRV) Tool – Coil Connector “A”

J1	
PINS	SIGNAL
1	MC Bias 1
2	MC Bias 2
3	MC Bias 3
4	MC Bias 4
5	MC Bias 5
6	MC Bias 6
7	MC Bias 7
8	MC Bias 8
9	MC Select 0
10	MC Select 1
11	MC Select 2
12	MC Select 3
13	Body Transmit Enable
14	Coil ID
15	Coil Present 15
16	Coil Present 2
17	+15VDC (Auxiliary Power)
18	+10VDC (Auxiliary Power)
19	-15VDC (Auxiliary Power)
20	MC Bias Return 1
21	MC Bias Return 2
22	MC Bias Return 3
23	MC Bias Return 4
24	MC Bias Return 5
25	MC Bias Return 6
26	MC Bias Return 7
27	MC Bias Return 8
28	MC Select 0 Return
29	MC Select 1 Return
30	MC Select 2 Return
31	MC Select 3 Return
32	Body Transmit Enable Return
33	Coil ID Return
34	Coil Present Return 1
35	Coil Present Return 2
36	Auxiliary Power Return
37	Auxiliary Power Return

J4	
PINS	SIGNAL
1	Preamp Enable
2	Preamp Enable RTN

SYSTEM
Coil Datapath (MCRV) Tool – Coil Connector “A” Signals