

Effectivity

The following CT Equipment is affected:

2260619 LightSpeed Plus Gantry Assembly

Purpose

The purpose of this FMI is to install protective (secondary) covers over the CT gantry slip rings, for systems that do not already have them.

Furnished Materials

FMI Kit Part Number 2299387 includes the items listed below.

Qty	Description	Part #
1	FMI Document	2299189-100
1	Slip ring covers	2282516

Required Tools and Test Equipment

Qty	Description	Part #
1	8 mm hex wrench	
1	Flat-blade screwdriver	

Disposal

U.S. ONLY

- 1.) Return all obsolete parts to:
GEMS Recycling Center
c/o ACE Warehouse, Bldg. 11
2200 College Avenue
Cudahy, WI 53110
- 2.) Destroy and/or dispose of all obsolete software and documentation according to GE policy.

INTERNATIONAL SITES (OUTSIDE THE U.S.)

Destroy and/or dispose of all obsolete hardware, software and documentation according to GE policy.

People Power

Allow 0.75 hours of labor for the completion of this FMI.

This page is blank intentionally.

Procedure

1 Gantry Preparation

1.1 Side Cover Removal

CAUTION
Potential for
injury if covers
removed and
power is left
"ON".

- 1.) Lower table to home (lowest) position.

Always remove the right side cover first, and turn "OFF" power at the STC.

- 2.) Use an 8mm Hex wrench to unlatch the side cover from the front cover. See Figure 1.

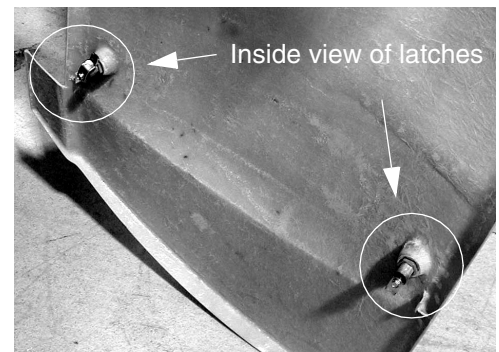
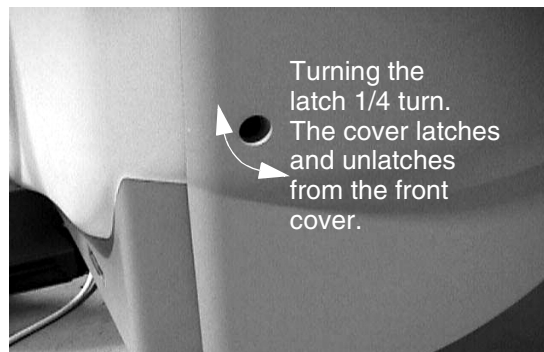


Figure 1 Side Cover Latches

- 3.) Remove the right side cover by lifting it upward to release the two (2) latches, located on the top edge of the cover. Once removed, the STC backplane should be exposed.

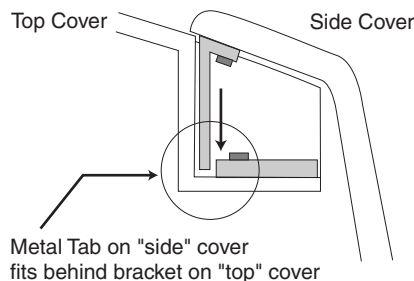


Figure 2 Side and Top Cover Clasp

- 4.) Turn off all three (3) power switches on the STC backplane.

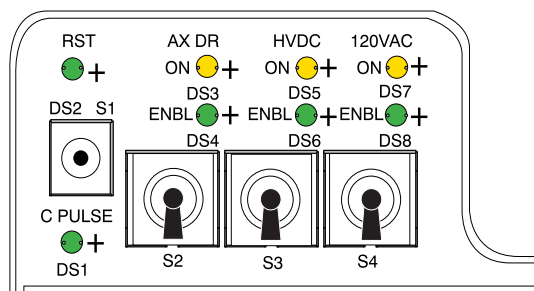


Figure 3 STC Power Switches

- 5.) Repeat steps 1-3 for the left side cover.

1.2 Top Cover Removal

- 1.) Take the end of the top cover nearest to the side cover and tilt upwards.
- 2.) Slide the cover down 75 millimeters. This allows the cover's tab to disengage from the mounting bracket. See Figure 4.



Figure 4 Top cover tabs and bracket, plus fan interlock switch.

- 3.) Lift the cover clear and repeat the above steps for the other cover.

1.3 Rear Cover Removal

- 1.) Assemble the rear cover dolly.
 - a.) Tighten the two (2) shoulder bolts to the rear cover.

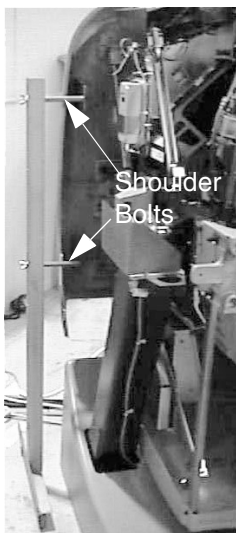


Figure 5 One side of the Rear cover dolly

- b.) Fit side dolly through the shoulder bolts and secure assembly with two (2) wing nuts. See Figure 5.
 - c.) Repeat steps a and b for the other side dolly.



CAUTION
Potential for
injury with
covers removed
and power ON.

- 2.) Disconnect cables on the right side of the rear cover.
- 3.) Remove rear cover.
 - a.) Disengage upper and lower cantrell brackets on both sides of the rear cover.
 - 1.) Using steady but firm pressure, lift each of the lower cantrell brackets from their associated retainers. See Figure 6.

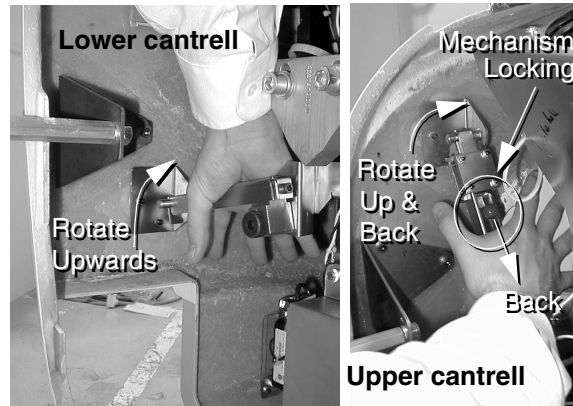


Figure 6 Releasing cover brackets

- 2.) Disengage the locking mechanism on the upper cantrell brackets by using your thumb to slide the trigger (red lever) back. This will release the locking mechanism and allow the cantrell to be rotated upwards with steady and firm pressure.
- b.) Disengage the rubber retaining straps on both sides.

2 Slip Ring Cover Installation

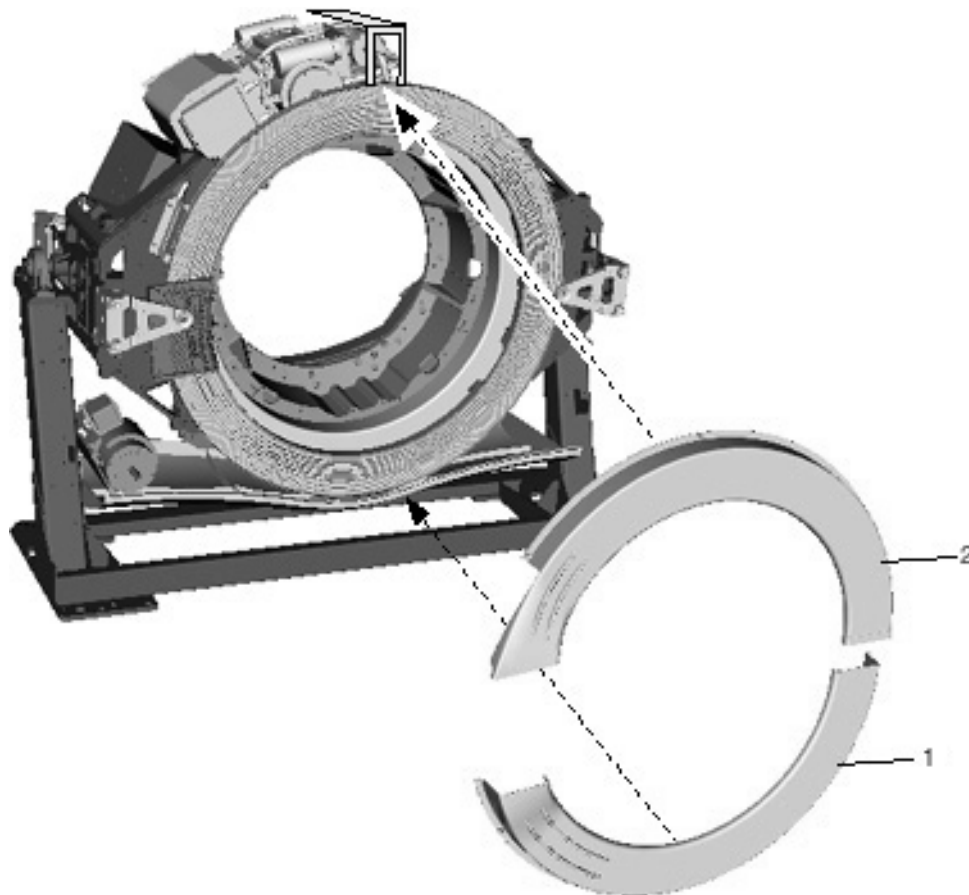


Figure 7 Install lower (1) and upper (2) slip ring covers

- 1.) Position the lower cover over the slip ring. Tighten the four (4) captive screws with a flat-blade screwdriver.

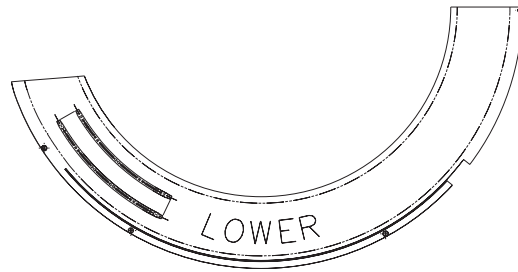


Figure 8 Lower Slip Ring Cover

- 2.) Position the upper slip ring cover over the slip ring, so that it overlaps the lower cover. Tighten the four (4) captive screws with a flat-blade screwdriver.

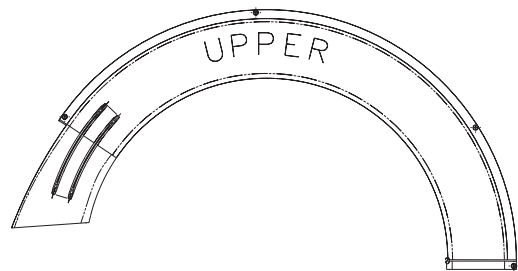


Figure 9 Upper Slip Ring Cover

3 Gantry Reassembly

Reverse the steps outlined in *1 Gantry Preparation*, to reassemble the gantry.

End of Document