


3—7 PDU CONTROL BOARD

PD1 A14 A1

PDU CONTROL BOARD

46—307819P46

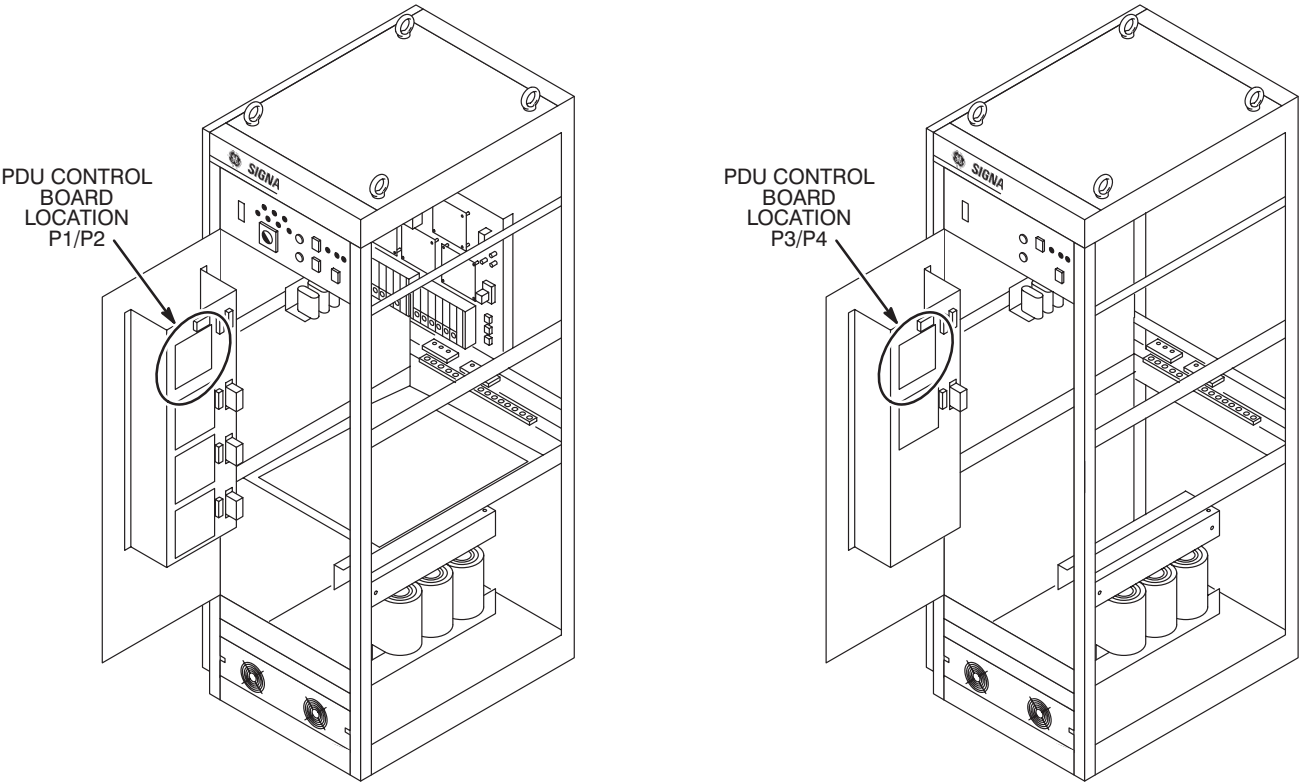

Description

The PDU Control Board allows Emergency Stop and overtemperature controls to shunt trip load panel circuit breakers. Activation of the Emergency Stop function from the Magnet Enclosure, Console, or the PDU Remote Control Panel located on the System Cabinet, trips the Gradient Amplifier Cabinet, RF Amplifier Cabinet, and Penetration Cabinet load panel circuit breakers. It also trips any option circuit breakers which have shunt trips, such as Broadband RF Amplifier Cabinet and Resistive Shim Power Supply. An overtemperature condition at the Compact PDU transformer or in the Systems Cabinet will shunt trip the Main Circuit Breaker. The connection points are J1 (transformer coil), J2 (System Cabinet status), and J3 (System Cabinet PDU Remote Control).

PD1 A14A1

