

APPENDIX A -- SPECIFICATIONS

TABLE A- -1
SPECIFICATIONS

PART NO. 46--317099 >	P20	P21
NOMINAL INPUT VOLTAGE	480	380/400/415
INPUT VOLTAGE RANGE	418- -504	331- -399 348- -420 361- -436
MAXIMUM INPUT VOLTAGE	504	436
NOMINAL RATED CURRENT (A)	66	80
MAXIMUM RATED CURRENT (A)	80	
FREQUENCY (Hz)	60	50/60
OUTPUT VOLTAGE REGULATION	2%	
LINE- -TO- -LINE VARIATION	LESS THAN 2%	
RESPONSE TIME	1 CYCLE	
FILTERS: INPUT OUTPUT	YES YES	
COOLING REQUIREMENT (BTU/hr)	7000	
WEIGHT lbs (kg)	970 (440)	
OUTPUT VOLTAGE	208Y120	
CAPACITY (KVA)	50	
NUMBER OF PHASES	3	
SURGE RATING	300% FOR 10 SECONDS	
HARMONICS ADDED	LESS THAN 1%	
POWER FACTOR	GREATER THAN 95%	
AMBIENT TEMPERATURE F (C)	80 (26.7)	
SIZE H X W X D in. (cm)	70 X 22.1 X 30 (1779 X 56 X 76)	


APPENDIX B -- SYSTEM OPTIONS

Options to the imaging system may require additional circuit breakers for MRT PDU. Refer to Section 3- -5- -2, Circuit Breaker Panel, for circuit breaker locations and part identifications.

APPENDIX C -- ADDED FEATURES

DYNAMIC DISABLE DRIVER CURRENT ADJUSTMENT

A modification was added to all PDU S being shipped after March 1996 and has been applied as an FRU in some earlier units in the field. The modification is mounted on load center bracket assembly (A14) next to the PDU control board. The circuit contains a circuit breaker, a current limiting resistor and a capacitor. See directly below for schematic.

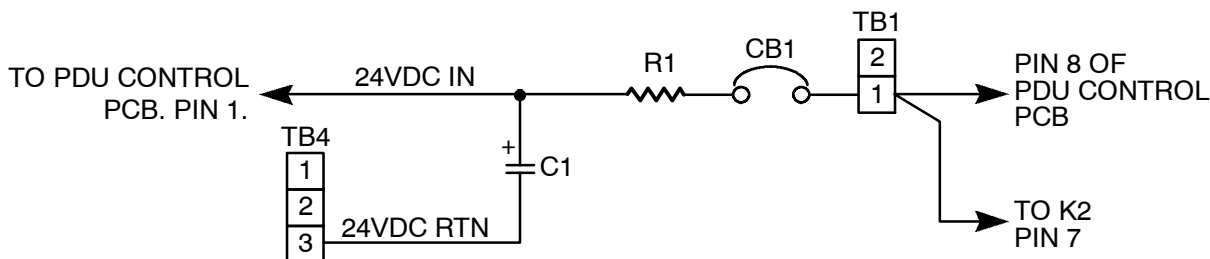

The D.C. voltage is supplied to C1 (+) from the PDU control PCB PIN 1. R1 is in the circuit to provide current limiting to the D.C. power supply located on the SCR Failure Sensing PCB. If excessive current is experienced, CB1 will trip (pop out). The only thing that can cause this is if one of the output distributor circuit breakers has failed to disconnect the shunt trip coil after the circuit breaker has been shunt tripped by the system.

If the CB1 has tripped, the following procedure should be used:



FATAL ELECTRIC SHOCK HAZARD!!!

To prevent Fatal Electric Shock, disconnect power from PDU and lock off before you perform the following procedures.

1. Turn facility circuit breaker off, lock, and tag.
2. Open outer door to PDU.
3. Turn main circuit breaker OFF.
4. Measure at power input test points and reading must be 0 VAC. If not, recheck steps 1 & 3.
5. Loosen load panel door with a 90° turn of two assembly screws on right. For Mobile installation: Remove and keep the 1/4 – 20 screw in the center of right edge of door. Raise load panel slightly to disengage notched guides. Open hinged door and swing out. Remove and keep all screws holding the dead front panel. Locate all output circuit breakers with shunt coils. Disconnect 2 pin Molex connectors for shunt-trip and measure resistance of the shunt trip coil. With circuit breaker tripped, the resistance of the coil at the connector must be open or a very high resistance > 1 megohm. If the coil measures less than 10 ohms, the circuit breaker is defective and must be replaced. After replacing the defective breaker, do the reverse steps of the procedure and install the dead front panel. Turn all power on and reset CB1 of the shunt trip protection circuit. Have the system shunt trip all output circuit breakers and measure the 24VDC at C1 and note that CB1 is not tripped.