

TABLE OF CONTENTS

TABLE OF CONTENTS 1

1- BORE LIGHT BULB REPLACEMENT 2

2- HALOGEN BULB REPLACEMENT 3

REVISION HISTORY 6

Description - Procedure for replacing the bore light and halogen light bulbs.

1- BORE LIGHT BULB REPLACEMENT

1. **RF/Pen Cabinet:** Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet.

RF/Pen II Cabinet: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II Cabinet. 1.


(Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)

2. **RF/Pen Cabinet:** Verify that voltage between +12V BL and Dock/Light RTN is 0 Vdc.

RF/Pen II Cabinet: Verify that voltage between +12V BL and Dock/Light RTN is 0 Vdc.

3. Gain access to light source by sliding magnet enclosure back cover backward (see procedure for Enclosure Covers section 1, Enclosure, MG2, if needed).

4. Locate light system at rear of magnet enclosure (see Illustration L2635A).

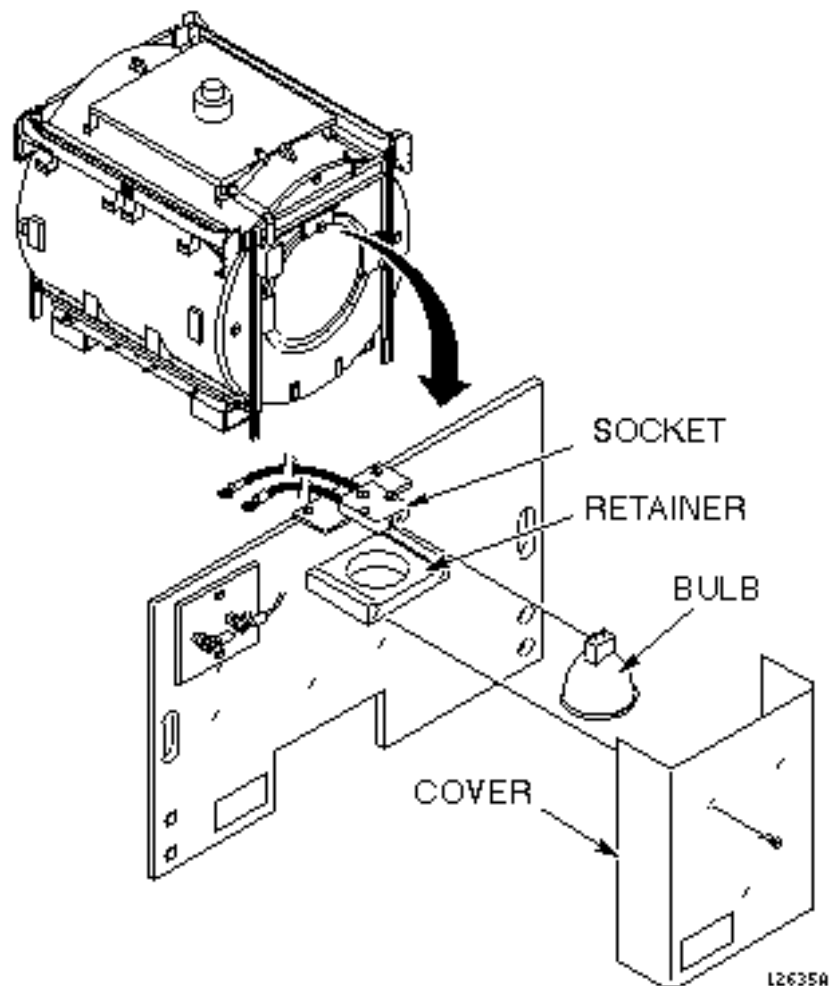


BORE LIGHT SYSTEM
ILLUSTRATION L2635A

Aside: Location and mounting scheme of bore light systems vary with different magnet enclosure configurations. Use Illustration L2635A, above, as a guide.

5. Remove three screws from cover.
6. Slide bulb horizontally away from magnet, and out of retainer so pins slip out of slots in socket.
7. Install replacement bulb and install cover with three screws.
8. Remove tag-out tag from circuit breaker MR1 A14 CB6 at the rear of the **RF/Pen Cabinet** or MR1 A20 CB4 at the rear of the **RF/Pen II Cabinet**.
9. Switch on circuit breaker MR1 A14 CB6 at the rear of the **RF/Pen Cabinet** or MR1 A20 CB4 at the rear of the **RF/Pen II Cabinet**.

2- HALOGEN BULB REPLACEMENT

The halogen bulbs are mounted in the Halogen Light Assemblies, as shown in Illustration L2648A. Before performing this procedure, observe the DANGER sign on the top halogen assembly bracket, and observe the following precautions:

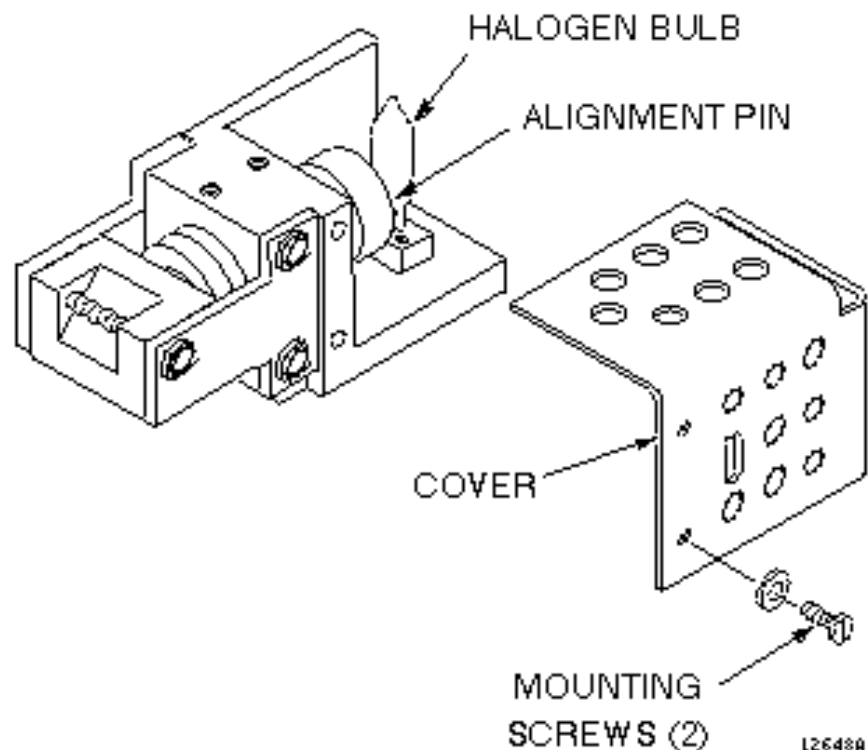

LOCATION OF HALOGEN BULBS
ILLUSTRATION L2648A

DANGER!!

PHYSICAL INJURY HAZARD!! THE HALOGEN CYCLE BULB CAN EASILY SHATTER IF SCRATCHED OR DAMAGED. ALSO, THE BULB AND ITS FIXTURE GET EXTREMELY HOT DURING OPERATION. WEAR PROTECTIVE EYE WEAR AND LIGHT NONABRASIVE GLOVES. DO NOT APPLY POWER TO BULBS WHILE CLEANING. ENSURE THAT EACH BULB IS FIRMLY INSTALLED IN SOCKET. REMOVE GREASE AND FINGER PRINTS FROM BULB BY CLEANING WITH A GREASE-FREE SOLVENT.

1. **RF/Pen Cabinet:** Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet.

RF/Pen II Cabinet: Lock out and tag out circuit breaker MR1 A20 CB4 at rear of RF/Pen II Cabinet.

(Refer to CD-ROM *Dir. 2187583-3 [or -2], MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)

2. **RF/Pen Cabinet:** Verify that voltage between +12.75V PAL and Dock/Light RTN is 0 Vdc.

RF/Pen II Cabinet: Verify that voltage between +12.75V PAL and Dock/Light RTN is 0 Vdc.

3. Open magnet enclosure front cover.

CAUTION

Equipment damage possibility. The alignment pin controlling the rear lens adjustment protrudes from a slot in the cover. Be extremely careful when removing bulb cover to avoid damaging the pin.

4. Remove screws securing cover over halogen bulbs and lift cover from each Halogen Light Assembly.

CAUTION

Equipment damage possibility. Do not twist halogen bulbs in the lamp sockets. The bulb has a two-pin connector that is mounted in a lamp socket. The bulb must be firmly pushed into the socket to be mounted properly. The bulb will be damaged if it is twisted or turned. Ensure that power to bulbs is off before replacing bulbs. The bulbs get extremely hot during operation.

5. Carefully pull out defective bulb. DO NOT TWIST!

6. Install new bulb by observing caution above, and inserting firmly in socket.

Note

A misaligned bulb will distort the beam path.

7. Replace covers on halogen assemblies, ensuring that alignment pin fits through slot in cover.
8. Secure covers with mounting screws.
9. Remove tag-out tag from circuit breaker MR1 A14 CB6 at the rear of the **RF/Pen Cabinet** or MR1 A20 CB4 at the rear of the **RF/Pen II Cabinet**.
10. Switch on circuit breaker MR1 A14 CB6 at the rear of the **RF/Pen Cabinet** or MR1 A20 CB4 at the rear of the **RF/Pen II Cabinet**.
11. Press ALIGN ON pushbutton on front of magnet enclosure and verify that halogen light assemblies are operating properly.
12. Replace magnet enclosure front cover.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 16, 1998	J. Saperstein	Initial conversion from Toolbook to Word.