

TABLE OF CONTENTS

TABLE OF CONTENTS 1


2- LASER DIODE REPLACEMENT..... 2

REVISION HISTORY..... 4

Description - Procedure for replacing the bore light and Laser Diodes for alignment lights. For non-CX systems refer to procedure for Bore Light, Halogen Light Replacement for Non-CX magnet.

2- LASER DIODE REPLACEMENT

The Laser Diodes are mounted in the Laser Diode Assemblies, as shown in Illustration L2648B.

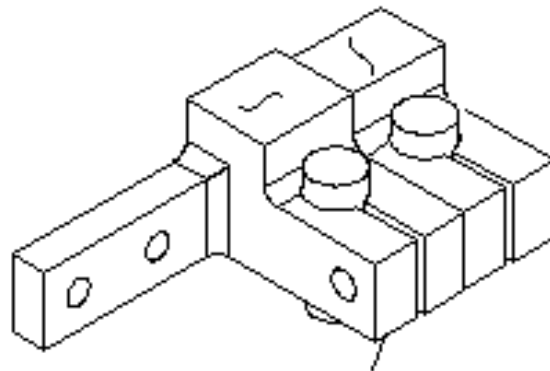

LASER DIODE DETAIL
ILLUSTRATION L2648B

1. Lock out and tag out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.

(Refer to CD-ROM *Dir. 2187583-3 [or -2]*, *MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)

2. Verify that voltage between MR1 A14 TP3 (+) and TP14 (–) is 0 Vdc.
3. Open magnet enclosure front cover.
4. Remove screws securing Laser diodes. Do not turn or clamp on laser light lens caps or damage will occur. Pry open bracket with screw driver, then turn laser diode. See Illustration L2648B above.
5. Remove Laser Diode.
6. Install new Laser Diode. Tighten alignment screws when adjustment is complete. Apply Loctite to screws before tightening.

7. Replace screws securing Laser Diodes.
8. Secure covers with mounting screws.
9. Remove tag-out tag from circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet on MEPS module.
10. Switch on circuit breaker MR1 A14 CB6.
11. Press Align On pushbutton on front of magnet enclosure and verify that Laser Diode Assemblies are operating properly.
12. Replace magnet enclosure front cover.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 16, 1998	J. Saperstein	Initial conversion from Toolbook to Word.