

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REPLACEMENT OF RTC MODULE	2
2- OCTANE POWER-UP AND CLOCK INITIALIZATION	4
3- FUNCTIONAL CHECKS.....	4
4- TROUBLESHOOTING – UNABLE TO LOGIN	5
REVISION HISTORY	6

1- REPLACEMENT OF RTC MODULE

1. Shutdown Octane and remove AC power cord.
2. Remove all cables from the system module (IP30) board.
3. Slide out the system module (IP30) by loosening the two screws and sliding out the retaining bars, then pulling on the handle.


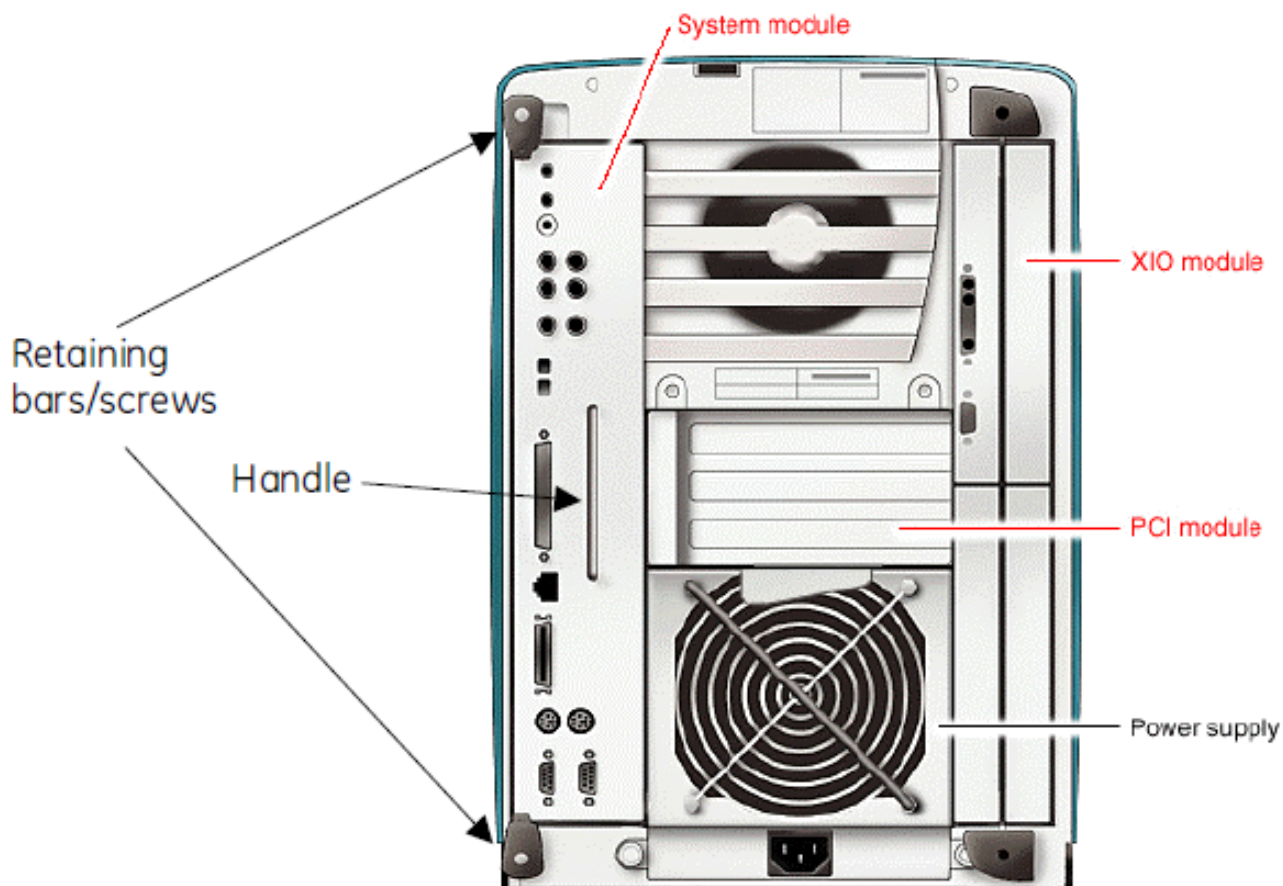


ILLUSTRATION 1-1
SYSTEM MODULE (IP30) DETAILS

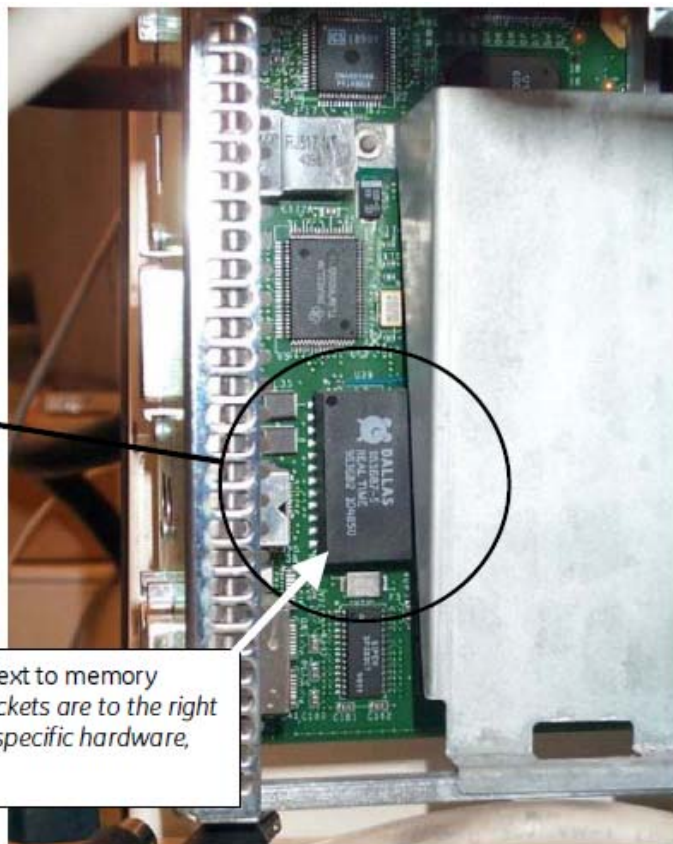

Real-time clock module location, next to memory sockets S1-S8. (Note: In picture, sockets are to the right under bracket. Depending on your specific hardware, bracket may not be present.)

ILLUSTRATION 1-2
REAL-TIME CLOCK (RTC) DETAILS

4. Note location of RTC module as shown in Illustration 1-2.
5. This part is plugged into a 24-pin socket. Carefully remove the current module and replace with the new module.

CAUTION

This is not keyed! If plugged in backwards damage will likely occur. Also part can be inserted offset from its proper position. Make sure module is centered on socket and is installed with the clock icon toward the TOP.

6. Re-install the system board and reconnect all cables.

2- OCTANE POWER-UP AND CLOCK INITIALIZATION

1. Hold power button for 20 seconds until the red LED turns off.

Note

Octane1 may initialize right away but holding the power button anyway will not affect it starting up.

2. As it boots, when the “**Starting up the system**” window appears, click on “**stop for maintenance**”. (This is so you can set the date and time prior to a full boot-up. This should be done to ensure there are no problems logging in – see Section 4).
3. Click on “**enter command monitor**”.
4. Enter the command: **single** (to boot in single user mode).
5. You will be prompted for the root password - enter the root password: **operator**.
6. Press the “Enter” key at the prompt: TERM = (iris-tp).
7. Enter the correct date: **date -n mmddhhmmccyy**

Where the fields are:

mm	month
dd	date
hh	hour
mm	minute
cc	century
yy	year

Note

When booted in single user mode, the time is GMT, so you have to include the appropriate offset relative to your current time zone. For example, if the current date/time is 4:50 PM CDT, June 14, 2007, then enter:
date -n 061421502007 (since GMT is 5 hours ahead of CDT).

8. Enter **reboot** and let the computer reboot.

3- FUNCTIONAL CHECKS

Let the computer boot up and log in. In a command window, type command date and verify that the correct date and time is displayed. If it is incorrect, especially if the time is wrong due to a mistake with the GMT offset, then it can be corrected using the date command. This time it will be with the currently selected time zone.

4- TROUBLESHOOTING – UNABLE TO LOG IN

If you attempt to log in but get a message that your password expired and you are prompted to enter a new password: just go ahead and enter a new password. After you are logged in, open a command window and follow the prompts to re-enter the original password using the **passwd** command.

This probably occurred if you allowed the Octane to boot up completely after replacing the RTC module without setting the date first as documented in Section 2, even though the date may have been subsequently set.

If you attempt to log in but get a message that your password expired and you are prompted to enter a new password, but then after entering a new password you STILL get a message that the password has expired: this is due to the fact that you are likely attempting to boot up completely but have not followed the procedure in Section 2. Press the power button once, **MOMENTARILY**, which will initiate a shutdown. Then turn the Octane back on and follow the procedure in Section 2.

If you did follow the procedure in Section 2 then follow it again up through step 7. Enter the date command and verify that the date is correct. If it appears that the date is not being retained then you may have either a defective clock module or system board.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
1	June 10, 2009	J. Selig	Initial release per ECR 2046233.