

TABLE OF CONTENTS

TABLE OF CONTENTS	1
DESCRIPTION.....	2
1- INTRODUCTION	2
2-REPLACEMENT / INSTALLATION OF PC MONITOR	2
2-1 Fixed site- PC Monitor Replacement / Installation.....	2
2-1 Mobile- PC Monitor Replacement / Installation.....	2
3- CONTRAST AND BRIGHTNESS ADJUSTMENT ON THE NEO LCD.	4
3-1 Sharpness, Phase, Position and Reset Adjustment On The NEO LCD.....	4
4- NVIEW ADJUSTMENT PROCEDURE.....	4
5- CTX PANOVUE 600 INSTALLATION INSTRUCTIONS, WINDOWS 3.1.	5
6- CHANGING RESOLUTION FOR PANOVUE 600- WINDOWS 98	8
REVISION HISTORY	11

DESCRIPTION

Two model types of LCDs are now being used. The The First and older type is an NEO Systems product. The newest model type is the CTX Panoview 600.

1- INTRODUCTION

The LCD Desktop Monitor (also known as the LCD Panel), has two adjustments at the front of the panel, and four adjustments accessed from the rear of the panel. The front adjustments are contrast and brightness. The adjustments that are accessed from the rear are sharpness, phase, position, and a reset function.

2-REPLACEMENT / INSTALLATION OF PC MONITOR

There are two types of PC Monitors. There are also two different bolt patterns to secure the PC Monitor in a mobile configuration.


2-1 Fixed site- PC Monitor Replacement / Installation

1. Disconnect the Data cable from the old PC Monitor.
2. Disconnect the Power cable from the old PC Monitor.
3. Remove the old PC Monitor from the Workspace.
4. Unpack the replacement PC Monitor and place it on the Workspace desk.
5. If necessary, feed the new data cable and power cord through the opening provided.
6. Feed the new power cord through the opening provided.
7. Plug the new PC Monitor Power Supply into the terminal strip under the Workspace.
8. If necessary, install the data cable to the back of the Workspace PC and the other end, to the PC Monitor, or connect the existing data cable.

2-1 Mobile- PC Monitor Replacement / Installation

1. Disconnect the Data cable from the old PC Monitor.
2. Disconnect the Power cable from the old PC Monitor.
3. Remove the three screws holding the PC Monitor to the Desktop.
4. Remove the old PC Monitor from the Desktop.
5. Unpack the replacement PC Monitor and place it on the Desktop.

6. Inspect the base of the new PC Monitor. If this is NOT the same brand of replacement monitor, the existing holes will not align properly. If this is the case refer to illustration 1-1 and drill the new holes in the desktop as the drawing describes. The old bolt-holes will be covered by the base of the new PC Monitor.

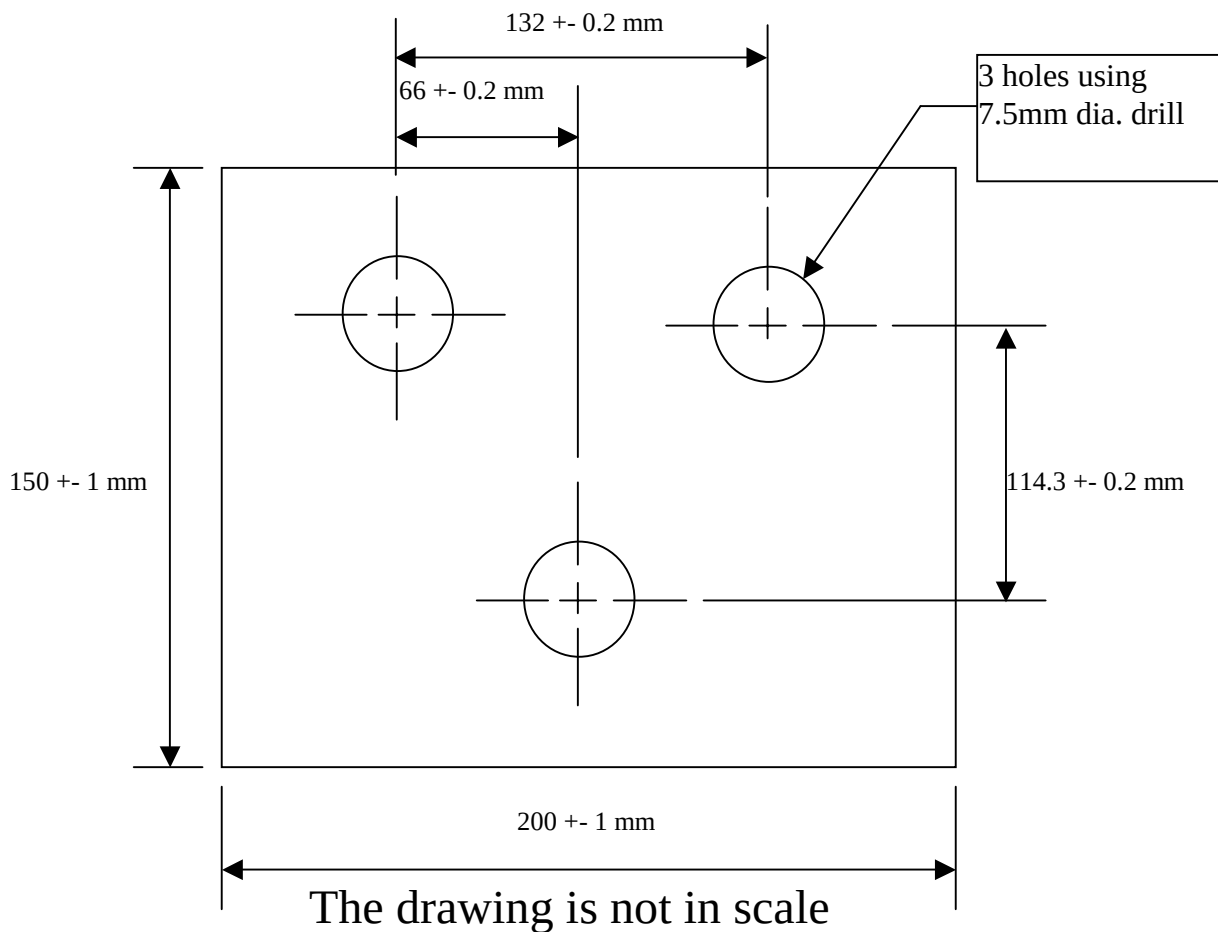

MOBILE BOLTHOLE TEMPLATE FOR NEWER PC MONITOR
ILLUSTRATION 1-1

7. Secure the new monitor to the Desktop with the mounting screws.
8. If necessary, feed the new data cable and power cord through the opening provided.
9. Feed the new power cord through the opening provided.
10. Plug the new PC Monitor Power Supply into the terminal strip under the Workspace.

11. If necessary, install the data cable to the back of the Workspace PC and the other end, to the PC Monitor, or connect the existing data cable.

3- CONTRAST AND BRIGHTNESS ADJUSTMENT ON THE NEO LCD.



Brightness: Increase (+) or decrease (-) the brightness of a displayed image.

Contrast: Increase (+) or decrease (-) the cntrast of a displayed image.

3-1Sharpness, Phase, Position and Reset Adjustment On The NEO LCD.

Phase: Increase or decrease the phase button to eliminate vertical lines from the image.

Sharpness: Fine tune the video signal from the computer by increasing or decreasing the sharpness setting.



Position: Adjust the displayed image horizontally or vertically by selecting any of the four directional control buttons.

Reset: Reset all adjustment controls back to the initial factory settings.

4- NVIEW ADJUSTMENT PROCEDURE


1. Open the Windows control panel and click on the DESKTOP Icon.

2. Set the wallpaper to lcdvert.bmp. Select Tile and OK in the dialog box.
3. Iconize the Windows so that only the background is showing.
4. Use the Phase button (on back of LCD) and the Contrast button (on front of LCD) to produce a clear image.
5. If you find that the display is way out of adjustment, press the reset button on the back of the display to return to the factory settings, then redo step 4.
6. When the display is properly adjusted, open up the Windows control panel and click on the DESKTOP icon. Set the background back to the original setting.

5- CTX Panoview 600 Installation Instructions.

5- CTX PANOVIEW 600 INSTALLATION INSTRUCTIONS, WINDOWS 3.1.

Refer to Illustration 1 for the Panoview 600 connections required.

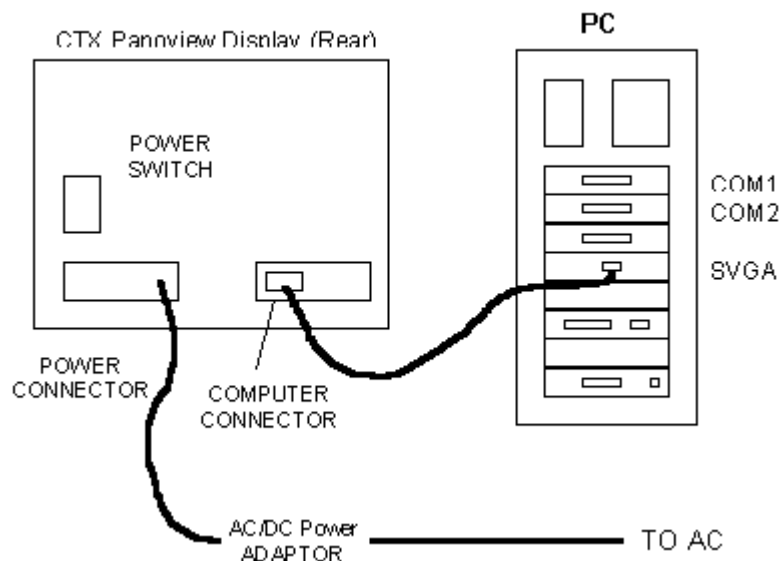

COM1
COM2
SVGA

This display has a separate power adapter. Connect the AC line cord to the power adapter, then connect the power module cable to the to the **Power** connector on the rear of the display.


ILLUSTRATION 1
PANOVIEW 600 CONNECTIONS

Connect the video signal cable between the 15-pin sub-D Computer connector on the rear of the display and the SVGA video out connector on the rear of the LX PC computer. Turn on the LCD display, and turn on the LX PC. If the computer is already on, then be sure that the computer is running *Windows* and *not* running *wavetime*, if the system is Windows 3.1 operating system.




ATI DeskTop


1. In Microsoft Windows Program manager, find the ATI program group and open it.

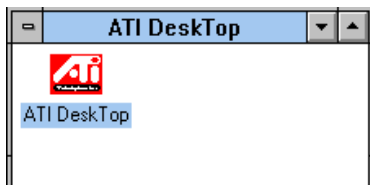


2. Double Click on the ATI Desktop icon.

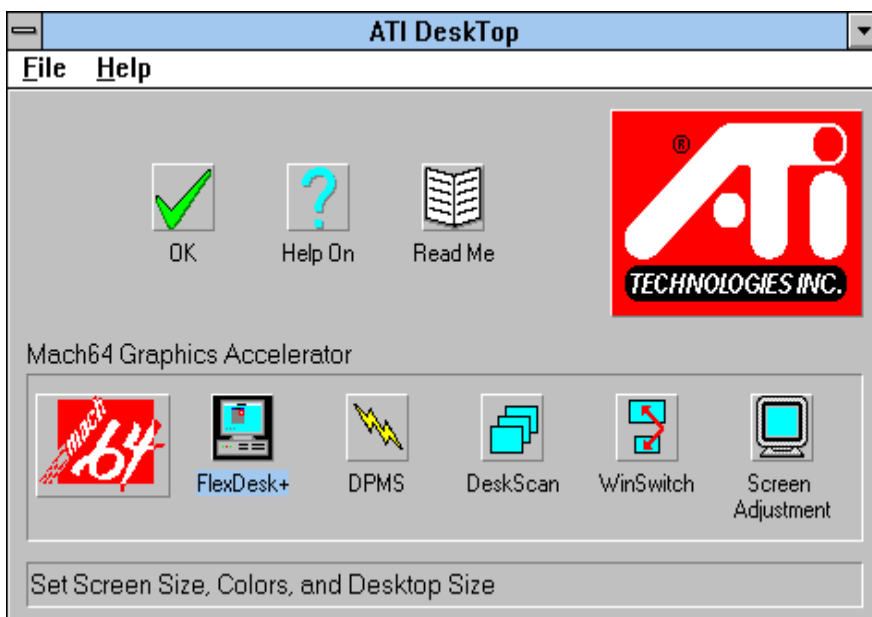


3. Click on the Screen Adjustment Icon

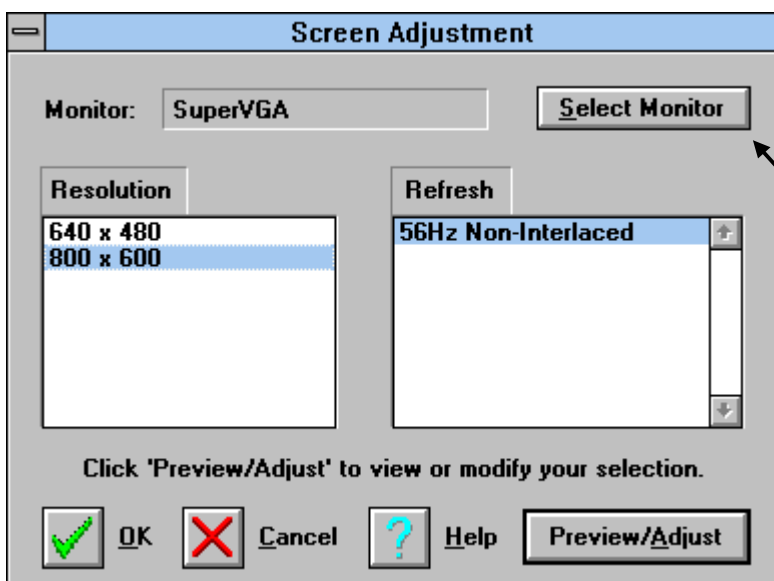

4. Select the:
"Select Monitor" button.

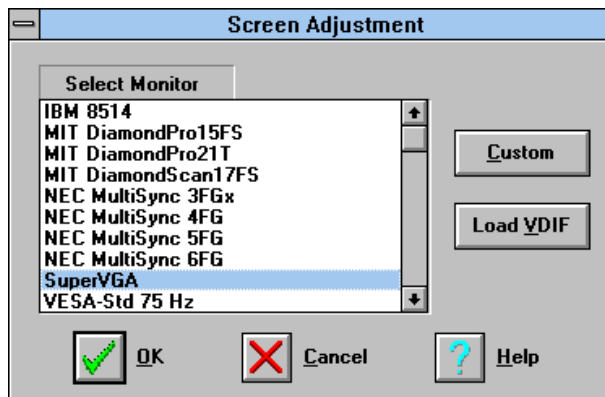


5. select the SuperVGA monitor and click on OK. Now click on OK on the previous screen adjustment menu (above) Now click on OK in the *Screen Adjustment* window, then click on OK again in the previous *Screen Adjustment* window.

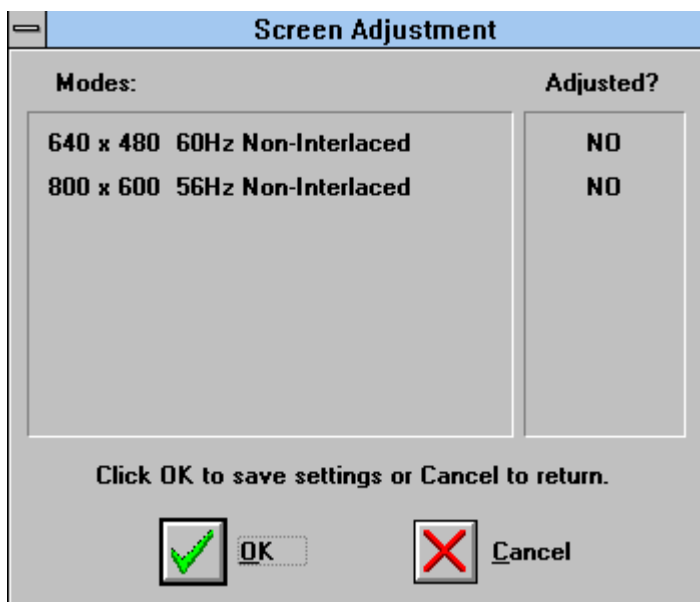

6. Verify that the window that is now displayed appears as is shown on the right, with only two modes:
640x480 60 Hz Non-Interlaced
800x600 56 Hz Non-Interlaced

If not, then check your previous steps.
Now click on OK to save settings, and then Restart Windows.

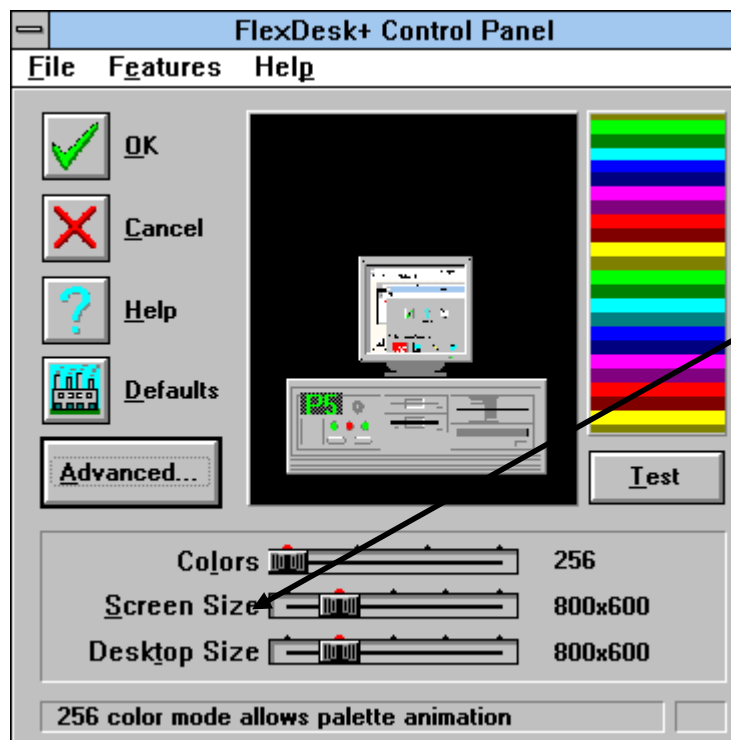

7. Drag the screen size selection to 800x600, then click on OK.

Setup is now done. Reboot the LX PC.

6- CHANGING RESOLUTION FOR PANOVIEW 600- WINDOWS 98

Note


Only do this procedure if the LCD PC display is a Panoview 600 model.

Two types of LCD PC display devices are currently being used. The older model is Nview and the latest model is Panoview 600. For the Nview, the default resolution of 640 by 480 is the highest possible setting. So, no resolution adjustments are made to the Nview LCD. If the system being loaded contains a Panoview 600, do the following to adjust the screen resolution:

Open the system Control Panel by clicking on the **[Start]** button, then **[Settings]**, then **[Control Panel]**.



Find the “Display” Icon and double click it.

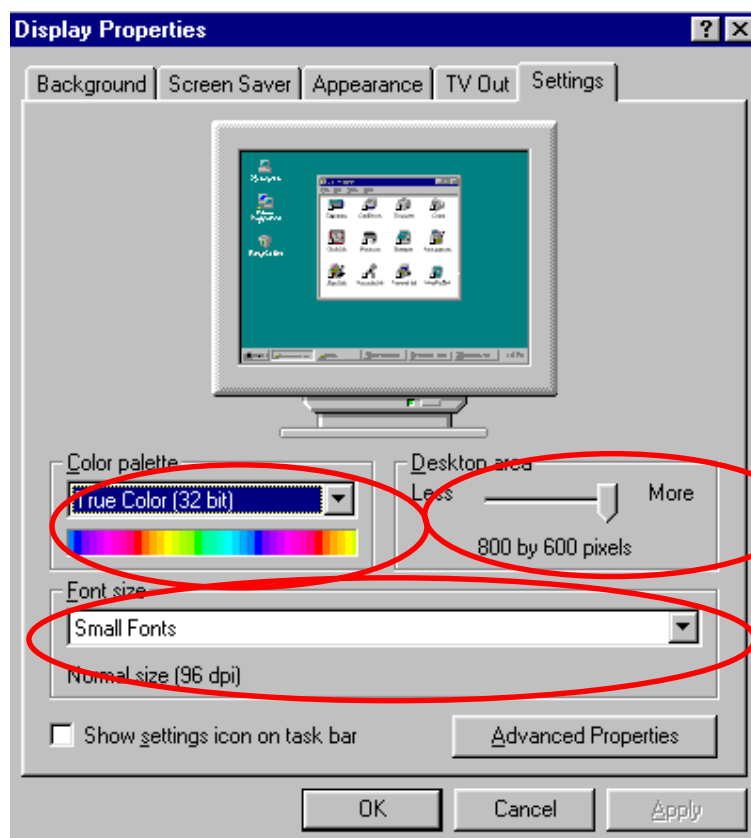

1. 1.

Color Palette to "True Color (32 bit)"

2. 2.

Desktop Area to "800 x 600"

Figure 1A: STB Video driver (new Panoview 600 monitor)

On the next screen, select the **[Settings]** tab. The screen will look like one of the following two screen shots. Set the following settings:


If your screen looks like the Figure 1A do the following:

Color Palette to "True Color (32 bit)"

Desktop Area to "800 x 600"

Font Size to "Small Fonts"

Select the **[OK]** button at the bottom of the screen. When asked to configure the monitor, select **[YES]**. Select **[Standard Monitor Types]** on the left side of the screen and **[Super VGA 800 x 600]** on the right side of the screen. Click on **[OK]** twice. The computer tests the configuration and asks "Would you like to Restart the computer with the new settings?" Click on **[OK]**; the computer will restart. When Windows 95 restarts, you can close the control panel by clicking on the **X** in the upper right corner of the window.

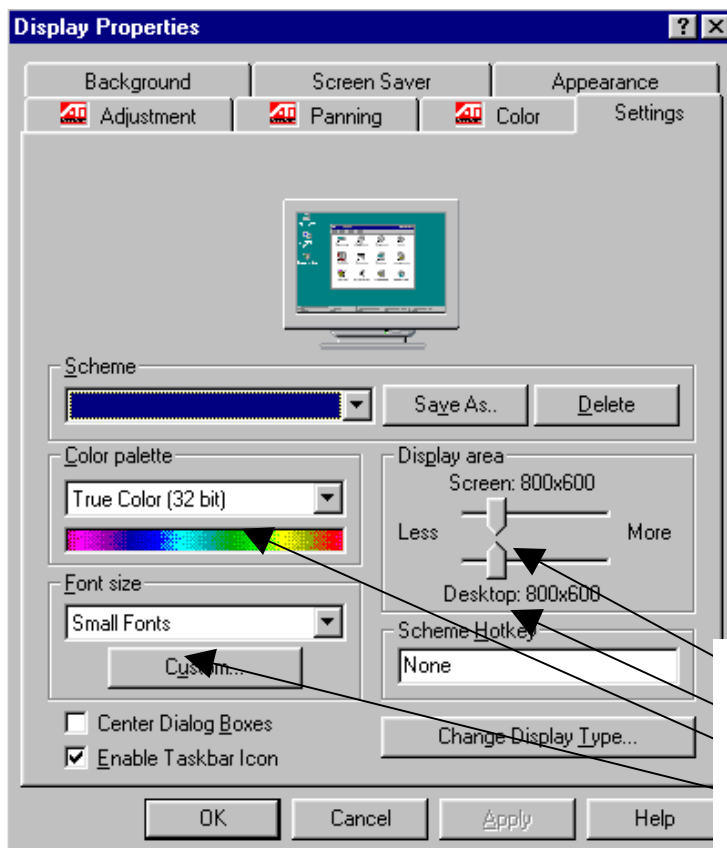

1. 1.

Screen Area to "800 x 600"

2. 2.

Desktop Area to "800 x 600"

Figure 1B: ATI Video driver (New Panoview 600 Monitor)

If your screen looks like the Figure 1B do the following:

Click on the **[Change Display Type]** button. Click on the **[Change]** button by Monitor Type. Select **[Standard Monitor Types]** on the left side of the screen and **[Super VGA 800 x 600]** on the right side of the screen. Click on **[OK]**. Click on **[Close]** to the Change Display Type window. Now change the Display Area to 800 x 600. Click on **[OK]** to the Display Properties window. Click on **[OK]**. The computer will test the configuration and ask the user "Do you want to keep these settings?" Click on **[YES]** and close control panel by clicking on the **X** in the upper right corner of the window.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	Sep 10, 2002	Hofstetter	Initial Version.