


1 Customer Password Management Process

This document describes the process of how to manage the root password for those customers that are looking to improve the security level of their system. It also contains information on how to generate a more robust password to reduce the security risk which simple passwords present.

Illustration 1: Process Overview

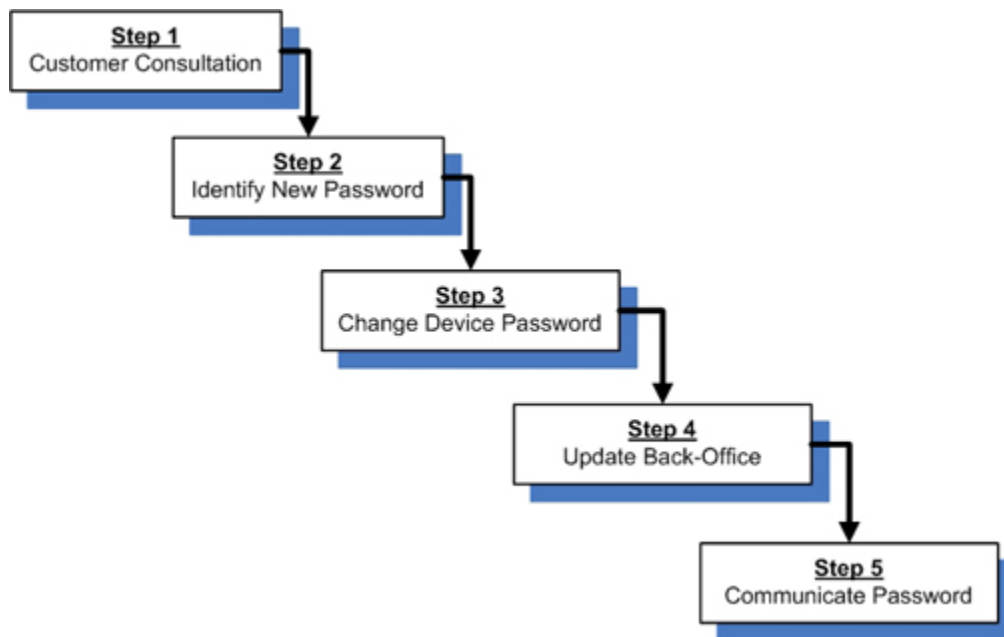

1.1 Customer Consultation

When the customer or GE initiates this process, the GE FE is to coordinate a customer consultation to discuss password provisions. As a result of that meeting, the following process (Sections 2 through 5) must be followed to complete the password change accurately.

NOTE: Many systems have the ability to enable NIS (Network Information Service), a feature that uses a central server to authenticate logins. This means passwords for some accounts are managed by the customer in their database and not on the product itself. If NIS is enabled then some passwords may still get changed, however this will require additional technical conversations with the customer so online engineers should get included in these situations.

1.2 Identify New Password(s)

The customer may request specific passwords. If this is the case, get the passwords from the customer and move on to [Section 1.3](#).

If a new password is to be created, the FE should do so in the following ways:

- If required, use customer rules and guidelines for password creation.
- If the customer does not have a defined set of rules or guidelines, use the following guidelines to develop a strong password:
 - Must be 8 characters minimum.

- Cannot be blank or left as the default.
- Should contain a mix of numbers, alpha, and special characters.
- Must not be made up solely of dictionary words.
- May contain the system ID with at least 1 more character.
- Should not be the same value at different sites.

NOTE: Each account on a single system should have a unique password. For example, the "root" and "insite" accounts should have different password values from each other. Using the same password for multiple accounts on a system will remove roll-based access and decrease the level of security on a system.

For productivity, the same password value for a single account can be used on multiple systems at a site or customer. For example, the "insite" user could have the same non-default password value on 3 different systems in a hospital. However, make sure not to use the same value over multiple sites or across a region, because that would essentially duplicate the original default value problem this service note attempts to resolve.

Good Password Examples	Bad Password Examples
!414555MR5	414555MR5
4\$42CTAW	operator
#big996622LS16	123456789a

1.3 Change Device Password(s)

After the password is identified, the FE should make the password changes on the device following the detailed instructions for either the LINUX Operating System ([Section 1.3.1](#)) or the IRIX Operating System ([Section 1.3.2](#)).

1.3.1 For Linux Operating Systems

1.3.1.1 For root Owner Level

1. Open a Shell
 - a. Login as root owner
 - b. Type: **su** <Enter>
 - c. Type: **root password** <Enter>
 - d. Type: **passwd** <Enter>
 - i. New LINUX account password: **Password Identified in Section 2** <Enter>
 - ii. Retype new LINUX account password: **Password Identified in Section 2** <Enter>
2. Type: **exit** <Enter> (To exit root level)
3. Type: **exit** <Enter> (To close the shell)

1.3.1.2 For sdc or signa Owner Level

1. Open a Shell
 - a. Login as sdc or signa
 - b. Type: **sd**c or **signa** <Enter>
 - c. Type: **sd**c/**signa** **password** <Enter>
 - d. Type: **passwd** <Enter>
 - i. New LINUX account password: **Password Identified in Section 2** <Enter>
 - ii. Retype new LINUX account password **Password Identified in Section 2** <Enter>
2. Type: **Exit** (To exit sdc or signa level)
3. Type: **Exit** (To close the shell)

1.3.1.3 For insite Owner Level

1. Open a Shell and Login as insite:
 - a. Type: **insite** <Enter>
 - b. Type: **insite** **password** <Enter>
 - c. Type: **passwd** <Enter>
 - i. New LINUX account password: **Password Identified in Section 2** <Enter>
 - ii. Retype new LINUX account password: **Password Identified in Section 2** <Enter>
2. Type: **exit** <Enter> (To exit insite level)
3. Type: **exit** <Enter> (To close the shell)

1.3.2 For IRIX Operating Systems

NOTE: All passwords for all users must be done from root level.

Open a Shell and login as root owner:

1. Type: **su** <Enter>
2. Type: **current root password** <Enter>
- **For sdc or signa Owner Level:**
 1. Type: **passwd sdc** <Enter> or **passwd signa** <Enter>
 - a. Type the new IRIX account password: **Password Identified in Section 2** <Enter>
 - b. Retype new IRIX account password **Password Identified in Section 2** <Enter>
 2. Type: **exit** <Enter> (To exit root level)

3. Type: **exit** <Enter> (To close the shell)
- **For root Owner Level:**
 1. Type: **passwd** <Enter>
 - a. Type the new IRIX account password: **Password Identified in Section 2** <Enter>
 - b. Retype new IRIX account password **Password Identified in Section 2** <Enter>
 2. Type: **exit** <Enter> (To exit root level)
 3. Type: **exit** <Enter> (To close the shell)
 4. Continue to change insite password or proceed to .
- **For insite Owner Level:**
 1. Type: **passwd insite** <Enter>
 - a. Type the new IRIX account password: **Password Identified in Section 2** <Enter>
 - b. Retype new IRIX account password **Password Identified in Section 2** <Enter>
 2. Type: **exit** <Enter> (To exit root level)
 3. Type: **exit** <Enter> (To close the shell)

2 System Password Record

System ID: _____

Site Name: _____

Created By: _____

Date: _____

Login ID	.
Password	.

Login ID	.
Password	.

Login ID	.
Password	.

Login ID	.
Password	.

Login ID	.
Password	.