


TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REMOVING MULTI-COIL FILTERS & RECEIVE SELECT SWITCH	2
2- INSTALLING MULTI-COIL FILTERS & RECEIVE SELECT SWITCH	3
3- REMOVING MULTI-COIL PRE-AMPS & PRE-AMP PROTECTION ASSEMBLY	4
4- INSTALLING MULTI-COIL PRE-AMPS & PRE-AMP PROTECTION ASSEMBLY	7
5- REMOVING MULTI-COIL SELECT SWITCH.....	11
6- INSTALLING MULTI-COIL SELECT SWITCH.....	12
7- FUNCTIONAL CHECKS REQUIRED	12
REVISION HISTORY	13


Description - Procedure for replacing multicoil hardware.

1- REMOVING MULTI-COIL FILTERS & RECEIVE SELECT SWITCH

1. Remove cable(s) from bad assembly. See Illustration 1-1 (1.5T) or Illustration 1-2 (1.0T).

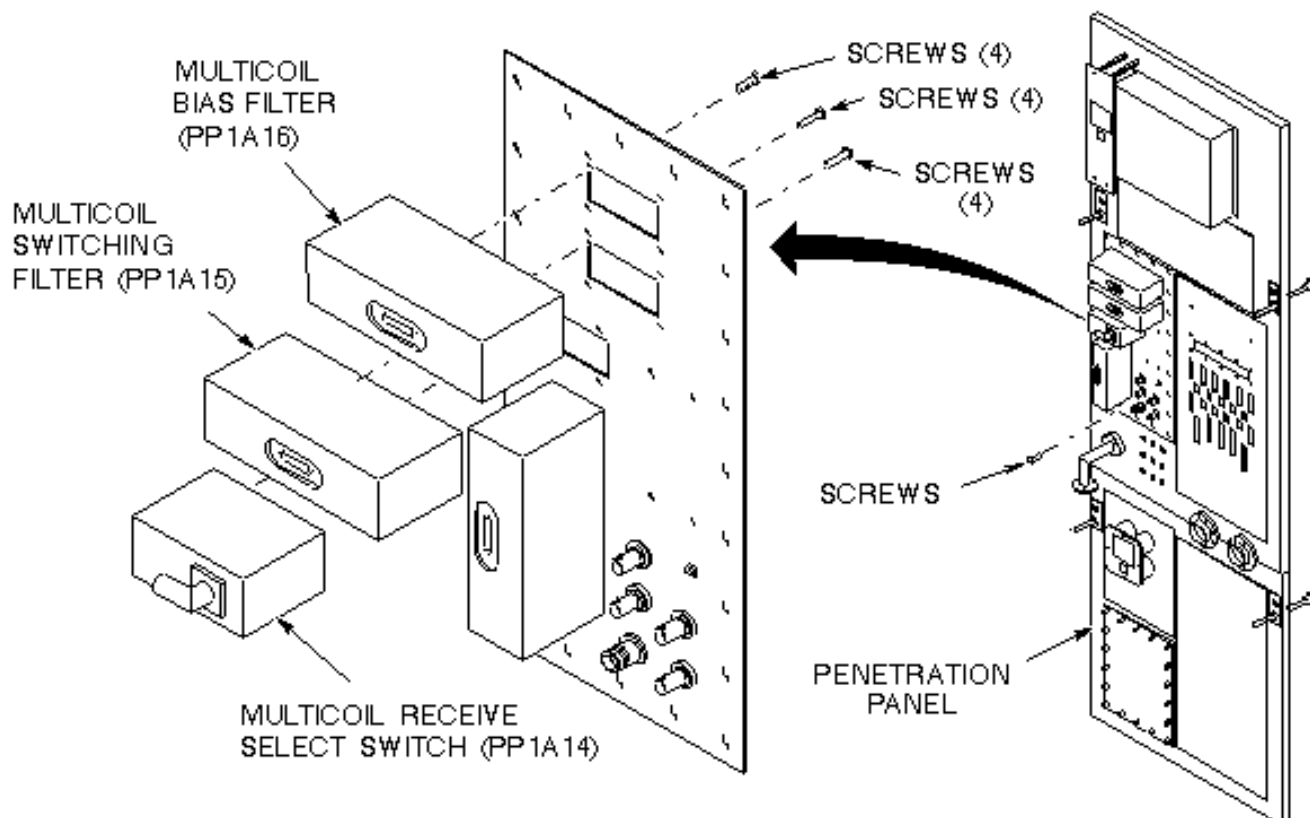

FILTER PANEL ASSEMBLY (1.5T)
ILLUSTRATION 1-1

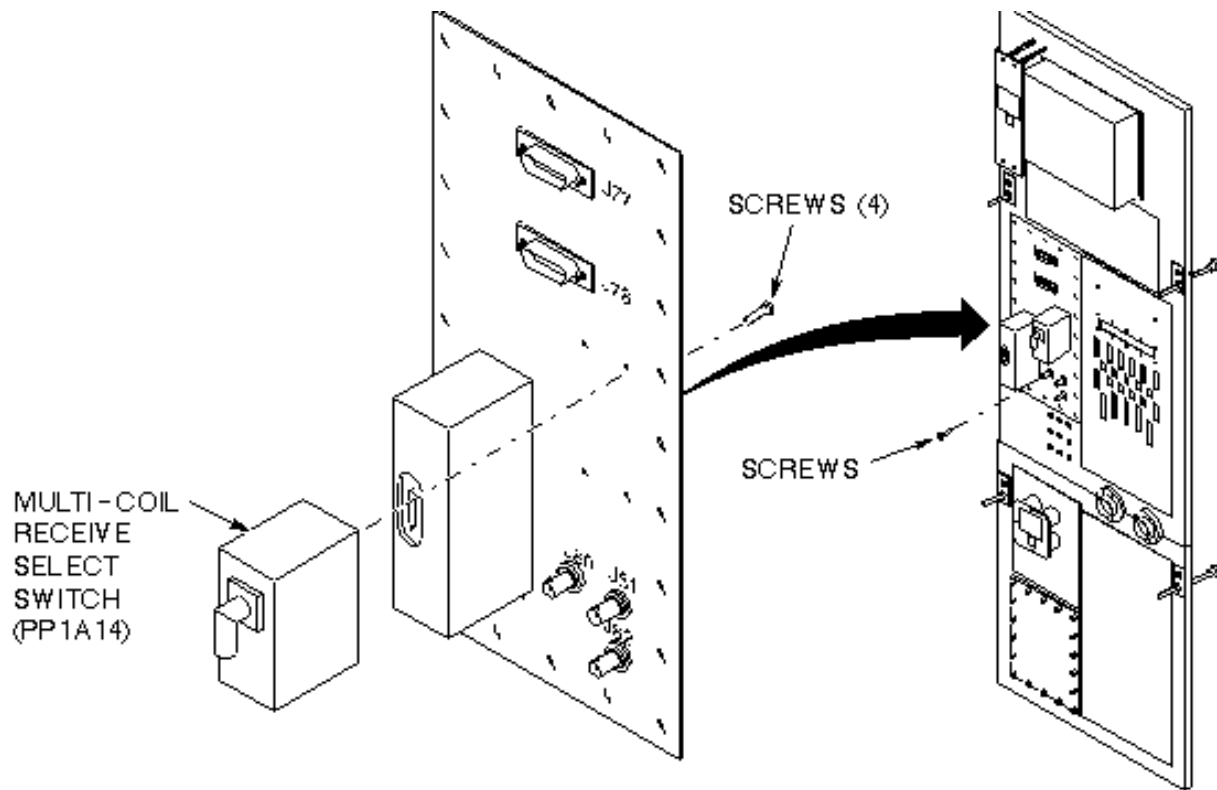

FILTER PANEL ASSEMBLY (1.0T)
ILLUSTRATION 1-2


2. Remove bad assembly on penetration panel, PP1.

2- INSTALLING MULTI-COIL FILTERS & RECEIVE SELECT SWITCH

1. Install new assembly on penetration panel, PP1. See Illustration 1-1 (1.5T) above or Illustration 1-2 (1.0T) above.
2. Install cable(s) to new assembly.


3- REMOVING MULTI-COIL PRE-AMPS & PRE-AMP PROTECTION ASSEMBLY

1. Remove upper preamplifier assemblies as shown in Illustration 3-1.

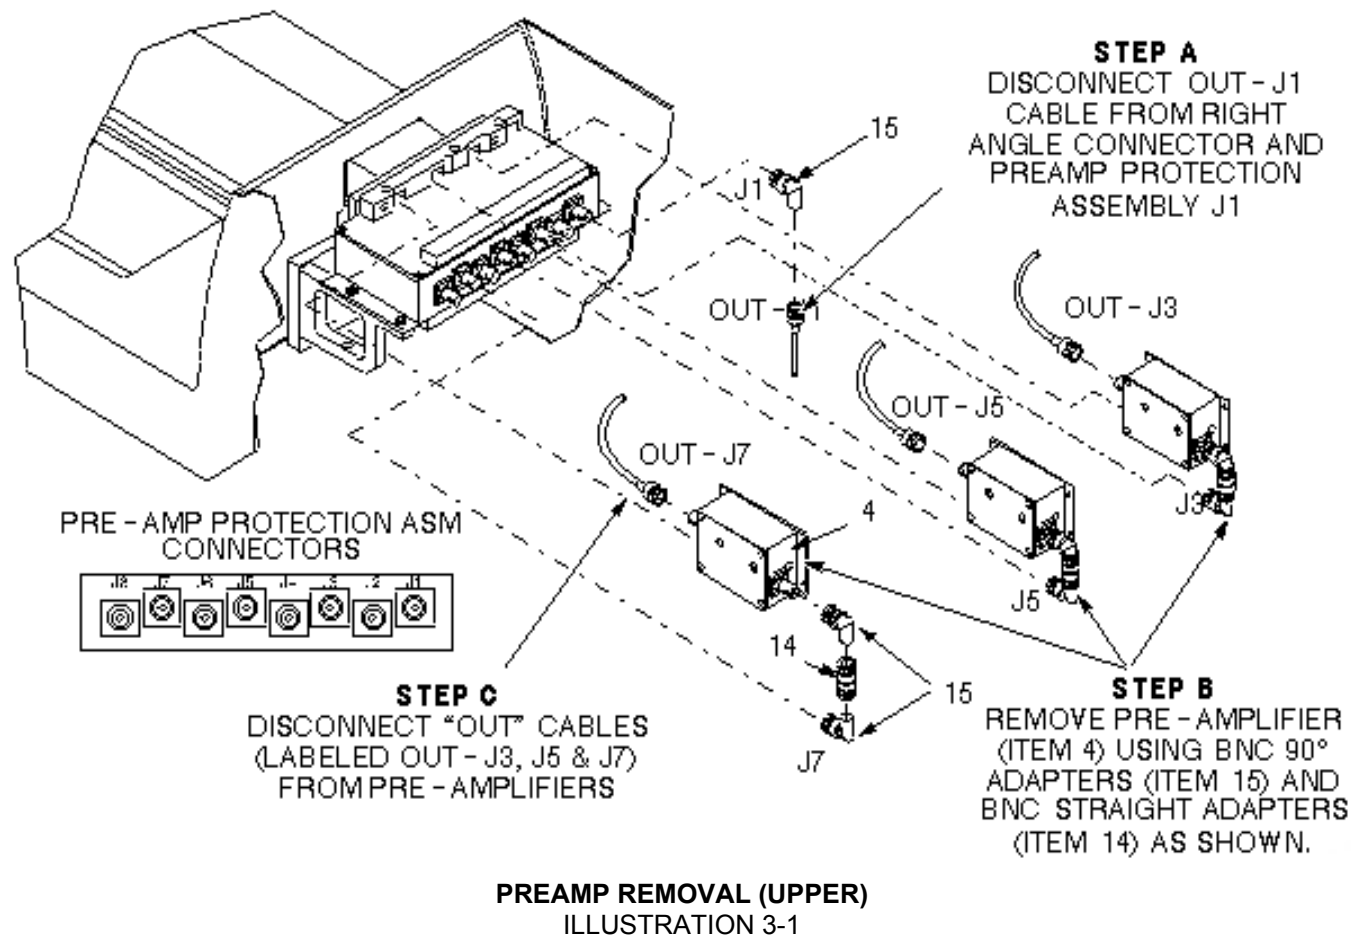


- a. Disconnect right angler adapter from J1 on preamp protection assembly.
- b. Disconnect BNC right angle adapter (item 15) from OUT-J1 cable.
- c. Disassemble two BNC right angle connectors and straight adaptors from the bad preamplifier INPUT.
- d. Remove the bad preamplifier assembly from applicable notch on preamp protection locating block.
- e. Disconnect output cables J3, J5 or J7 from the bad preamplifier OUTPUT.

2. Remove lower preamplifier assemblies as shown in Illustration 3-2.

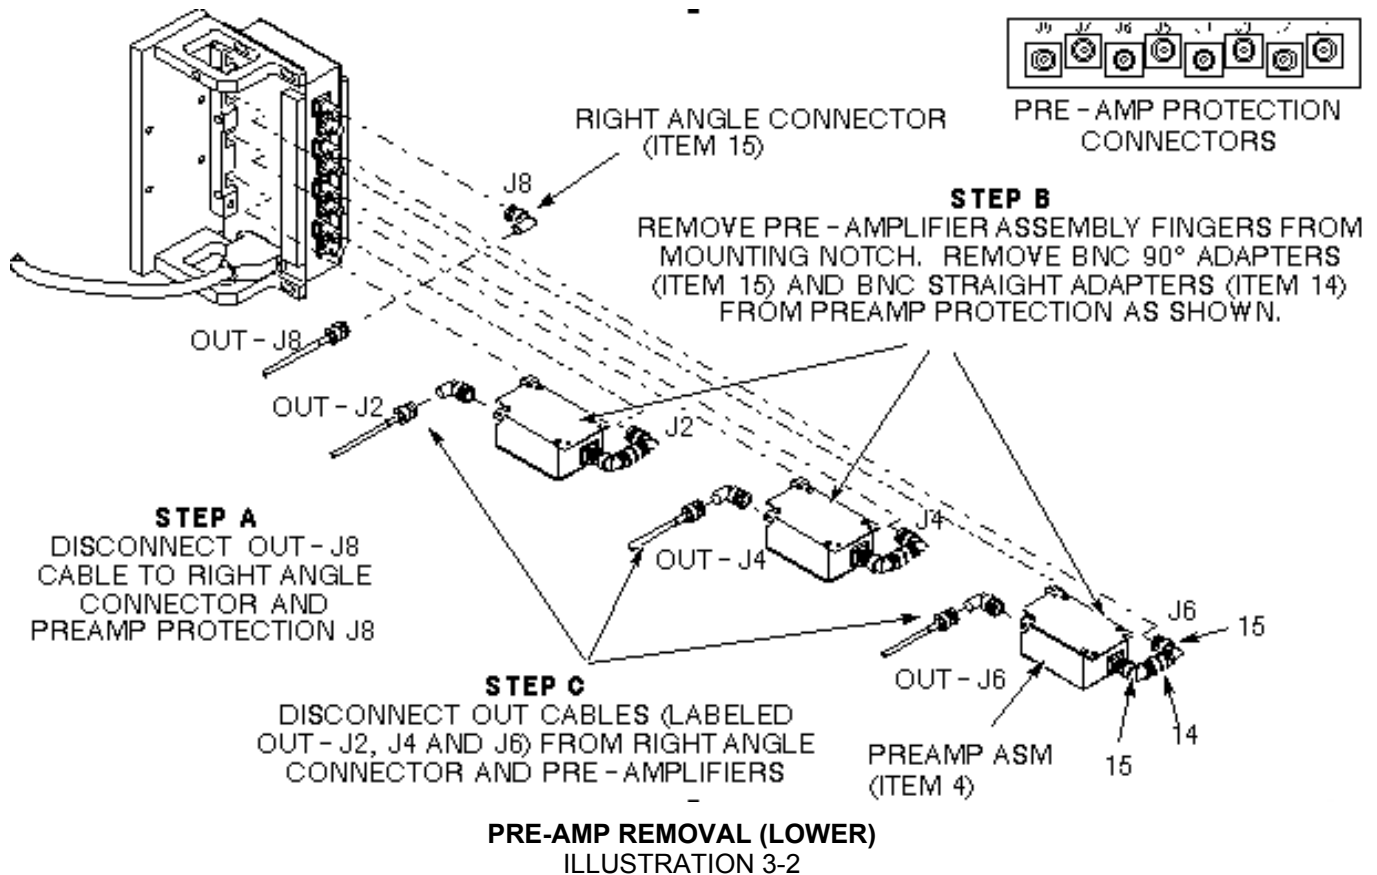

- a. Disconnect right angler adapter from J8 on pre-amp protection assembly.
- b. Disconnect BNC right angle adapter (item 15) from OUT-J8 cable.
- c. Disassemble two BNC right angle connectors and straight adaptors from each preamplifier INPUT.
- d. Remove the bad preamplifier assembly from applicable notch on pre-amp protection locating block.
- e. Disconnect output cables J2, J4 or J6 from right angle BNC connector.
- f. Remove the right angle BNC connector from the bad preamplifier OUTPUT.

3. Remove Multi-Coil Pre-amp Protection (item 10) from carriage cover, as shown in Illustration 3-3.

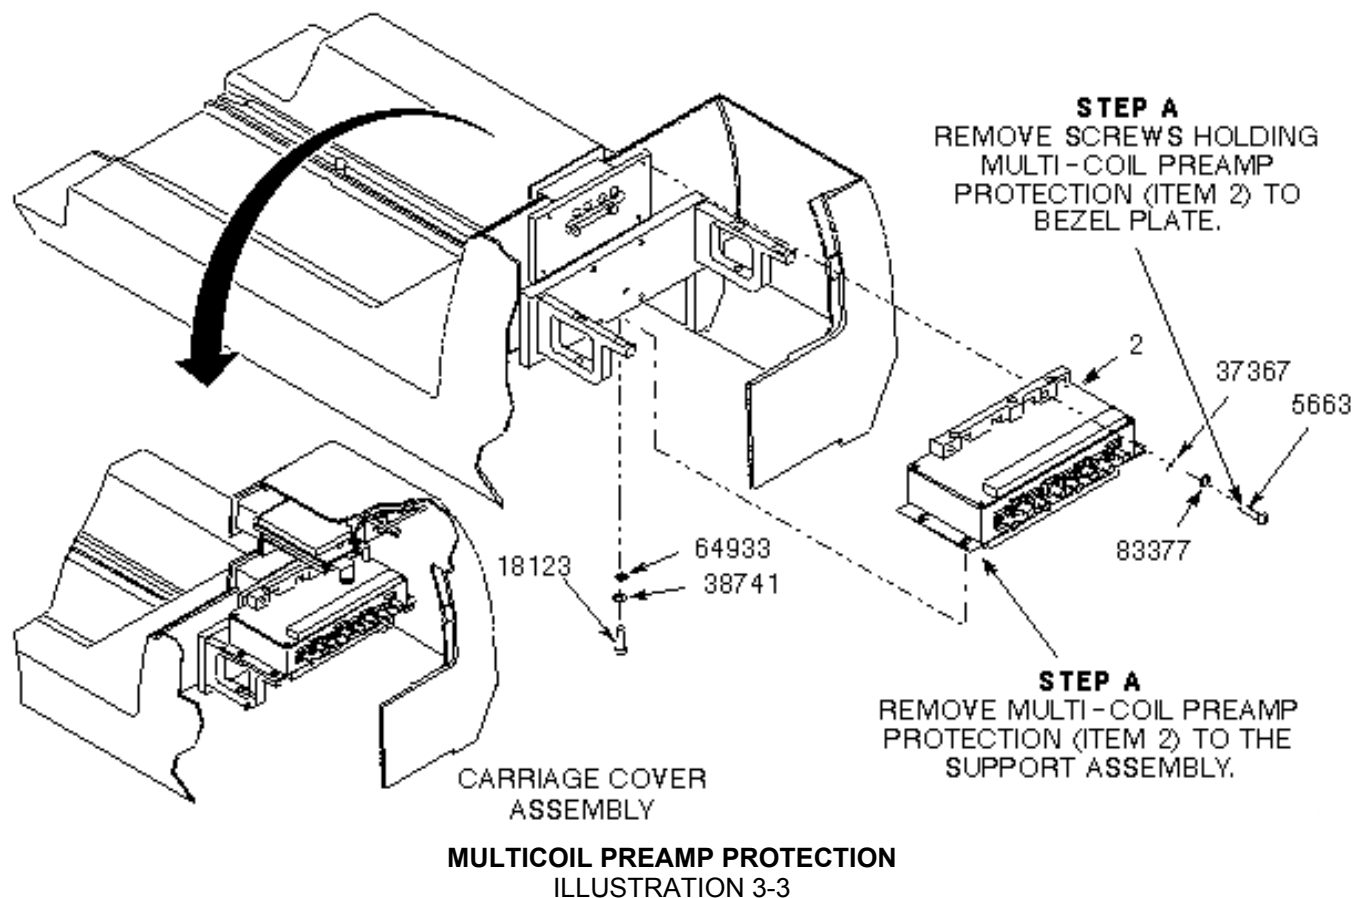


- a. Remove all four screws from bezel plate.
- b. Remove four screws from support assembly.
- c. Remove Multicoil Preamp Protection from support assembly.

4- INSTALLING MULTI-COIL PRE-AMPS & PRE-AMP PROTECTION ASSEMBLY

CAUTION

It is very important to inspect the thin white coaxial cables from the cable take up track to the pre-amps. These cables can produce intermittent shorts, system problems, and degrade performance when pinched between the Carriage Cover Assembly causing burnt inductors inside the Multicoil Select Switch (T3500PL). Reference Service Note 60973 for more details. Be sure to tie wrap the thin white coaxial cables together to ensure the cables can not reach the pinch point, see step 4 in this same section.


1. Attach Multi-Coil Pre-amp Protection (item 10) to carriage cover, as shown in Illustration 4-1.

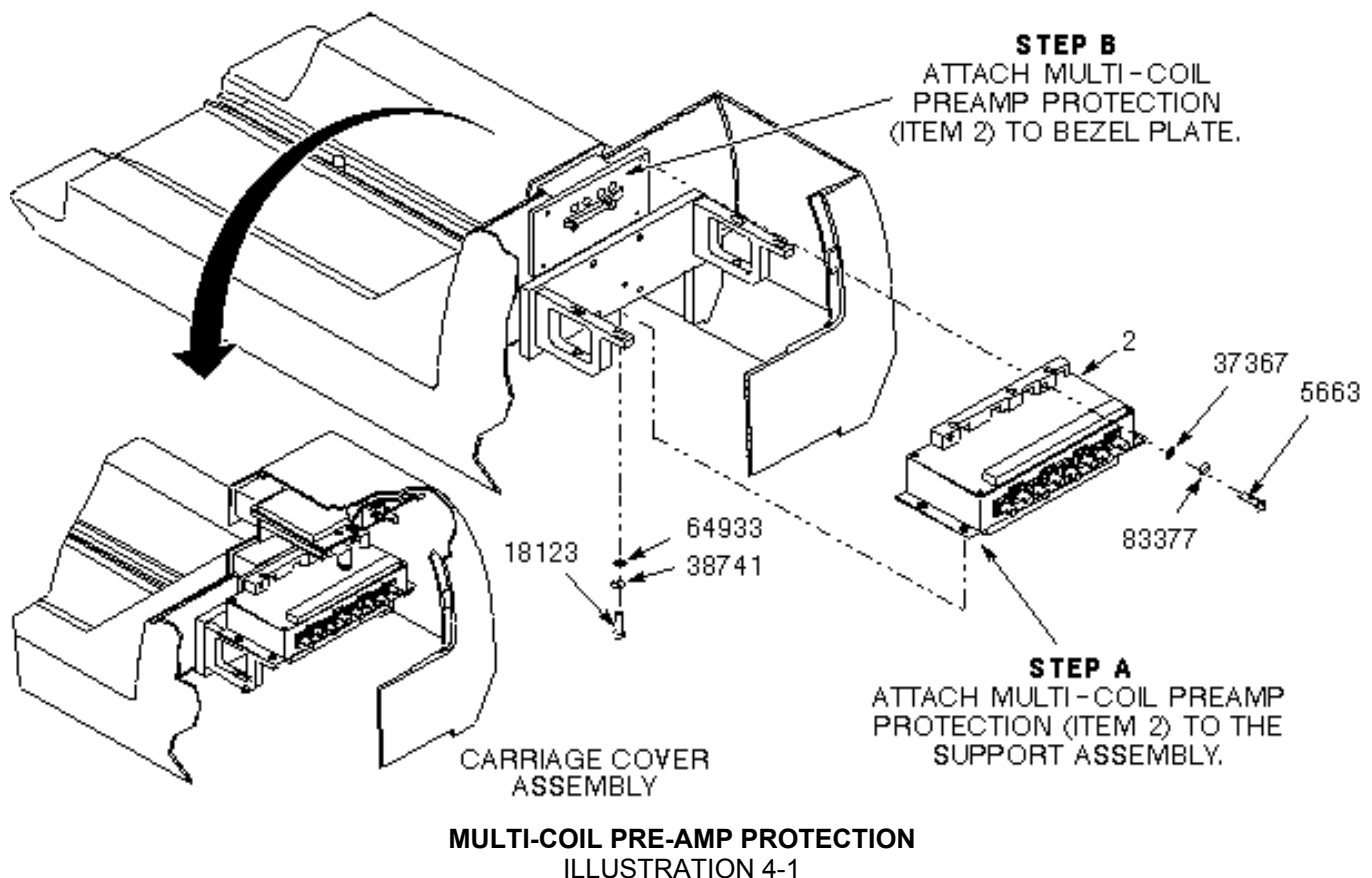

- a. Assembly Multi-Coil Pre-amp Protection (item 2) to support assembly. Leave screws loose.
- b. Push Multi-Coil Pre-amp Protection into bezel as far forward as it will go. Fasten Multi-Coil Pre-amp Protection to bezel plate.


- c. Verify that Multi-Coil Pre-amp Protection connector is as far into bezel as it will go. This prevents an incomplete, or intermittent, connection to a phased array coil; this would be difficult to troubleshoot.
- d. Tighten all eight screws.

2. Install upper preamplifier assemblies as shown in Illustration 4-2.

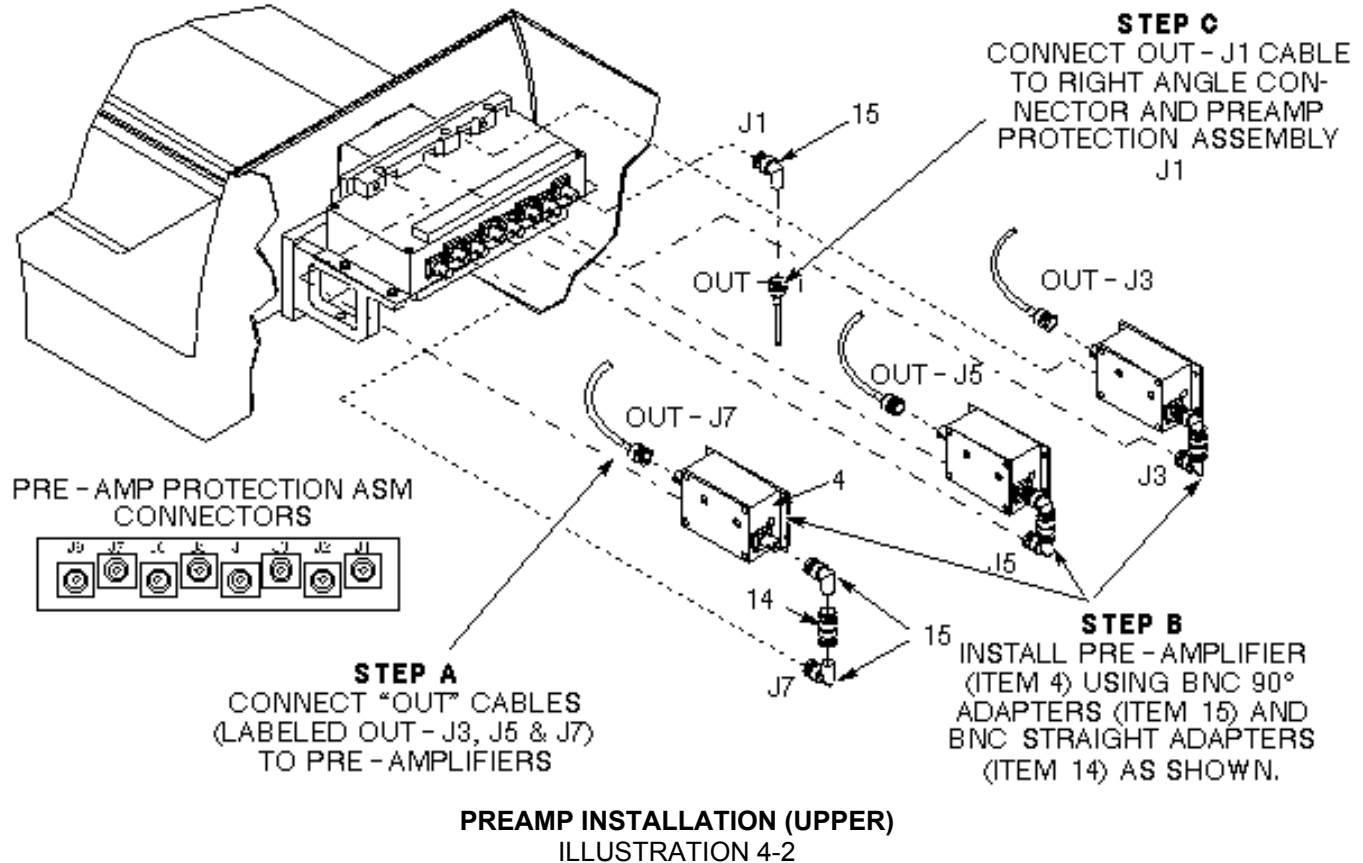


- a. Connect output cables J3, J5, and J7 to each preamplifier OUTPUT.
- b. Insert each preamplifier assembly into applicable notch on preamp protection locating block.
- c. Assemble two BNC right angle connectors and straight adaptors to each preamplifier INPUT.
- d. Attach BNC right angle adapter (item 15) to OUT-J1 cable.
- e. Connect right angler adapter to J1 on preamp protection assembly.

3. Install lower pre-amplifier assemblies as shown in Illustration 4-3.

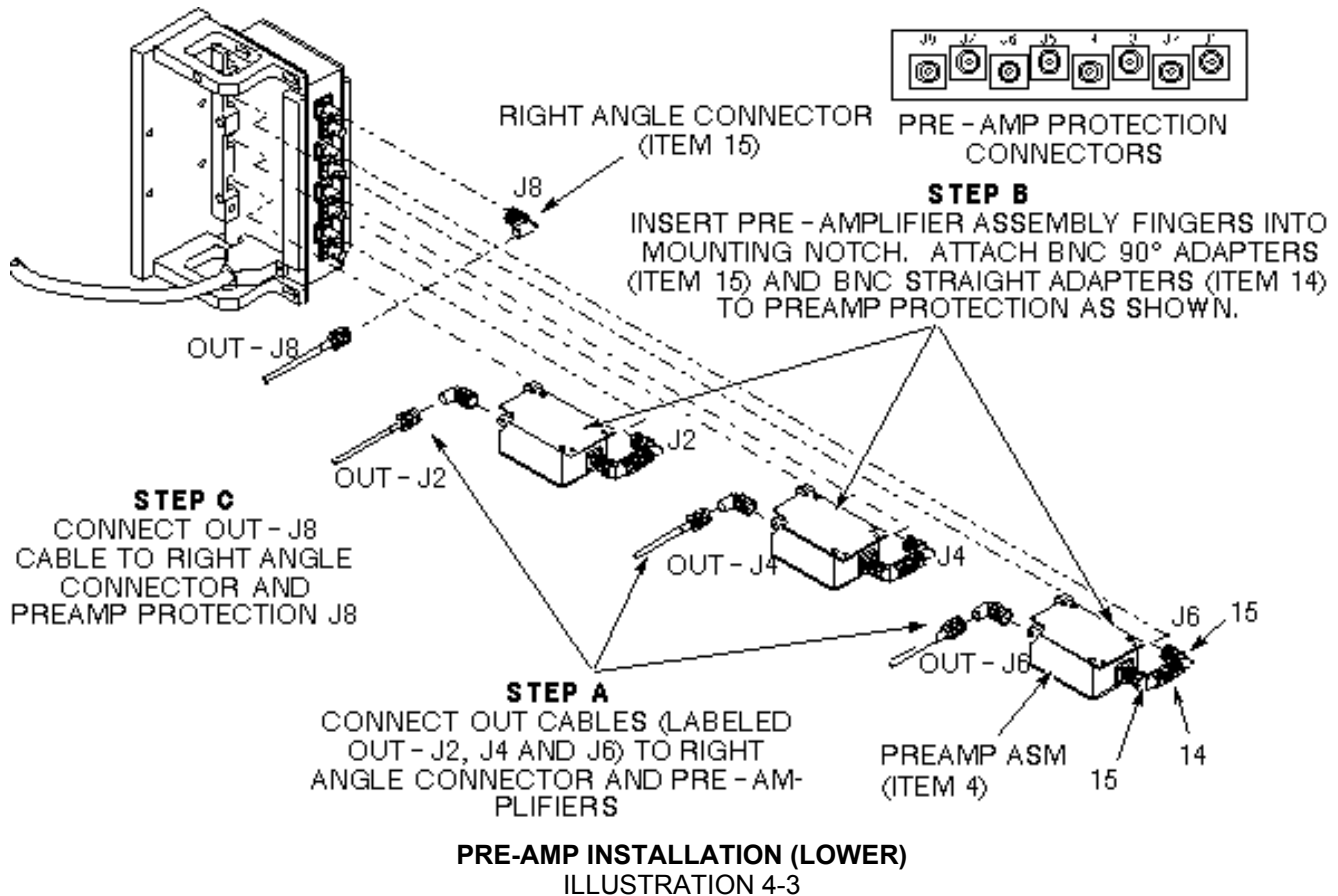

- Install a right angle BNC connector to each pre-amplifier OUTPUT.
- Connect output cables J2, J4, and J6 to right angle BNC connector.
- Insert each Preamplifier assembly into applicable notch on pre-amp protection assembly locating block.
- Assemble two BNC right angle connectors and straight adaptors to each pre-amplifier INPUT.
- Attach BNC right angle adaptor (item 15) to OUT-J8 cable.
- Connect right angler adapter to J8 on pre-amp protection assembly.

4. Install tie wraps on thin white coaxial cables between the cable take-up track and the pre-amp assemblies as shown in Illustration 4-4.

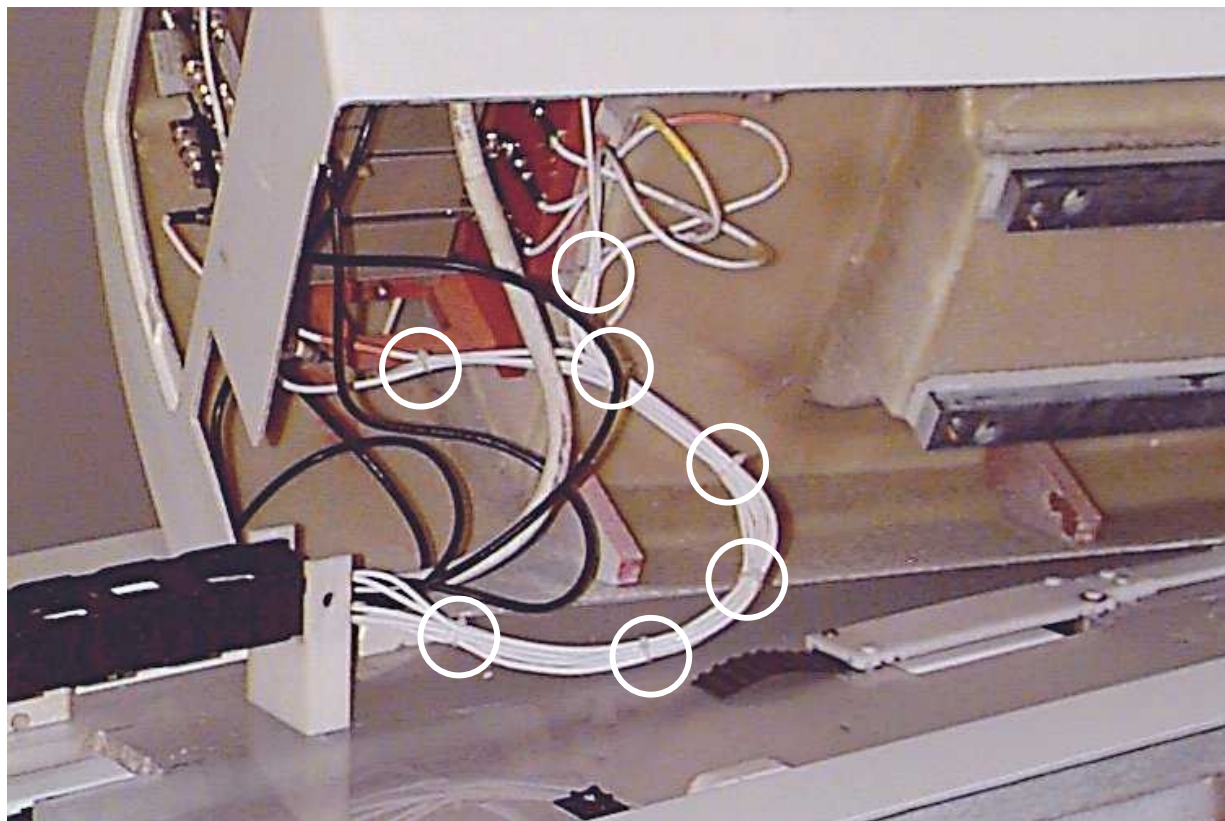

TIE WRAP INSTALLATION
ILLUSTRATION 4-4

- a. Install seven (7) tie wraps 3 to 4 inches apart around the thin white coaxial cables, see Illustration 4-4.
- b. Clip off the ends of the Tie Wraps, see Illustration 4-4.
- c. Install carriage cover.

5- Removing Multi-coil Select Switch

1. Disconnect cables from Multi-Coil Select Switch. See Illustration 5-1. Use slide-latch to disconnect Run 736 from J19.
2. Disconnect Multi-Coil Select Switch (item 19) from lower rail of rear pedestal. See Illustration 5-1.
3. Remove small cover on Multicoil Select Switch to inspect for burnt inductors. The most probable cause of burnt inductors is a shorted / pinched white coax cable in the carriage assembly. If you have a burnt inductor, check its corresponding cable.


MULTICOIL SELECT SWITCH (T3500PL) CONNECTIONS:

TABLE 5-1

Burnt L5 / check cable on J14	Burnt L17 / check cable on J12
Burnt L6 / check cable on J18	Burnt L18 / check cable on J16
Burnt L11/ check cable on J17	Burnt L23 / check cable on J15
Burnt L12 / check cable on J13	Burnt L24 / check cable on J11

Note


To help prevent damage to the white coax cables in the carriage assembly, see step 4-4.

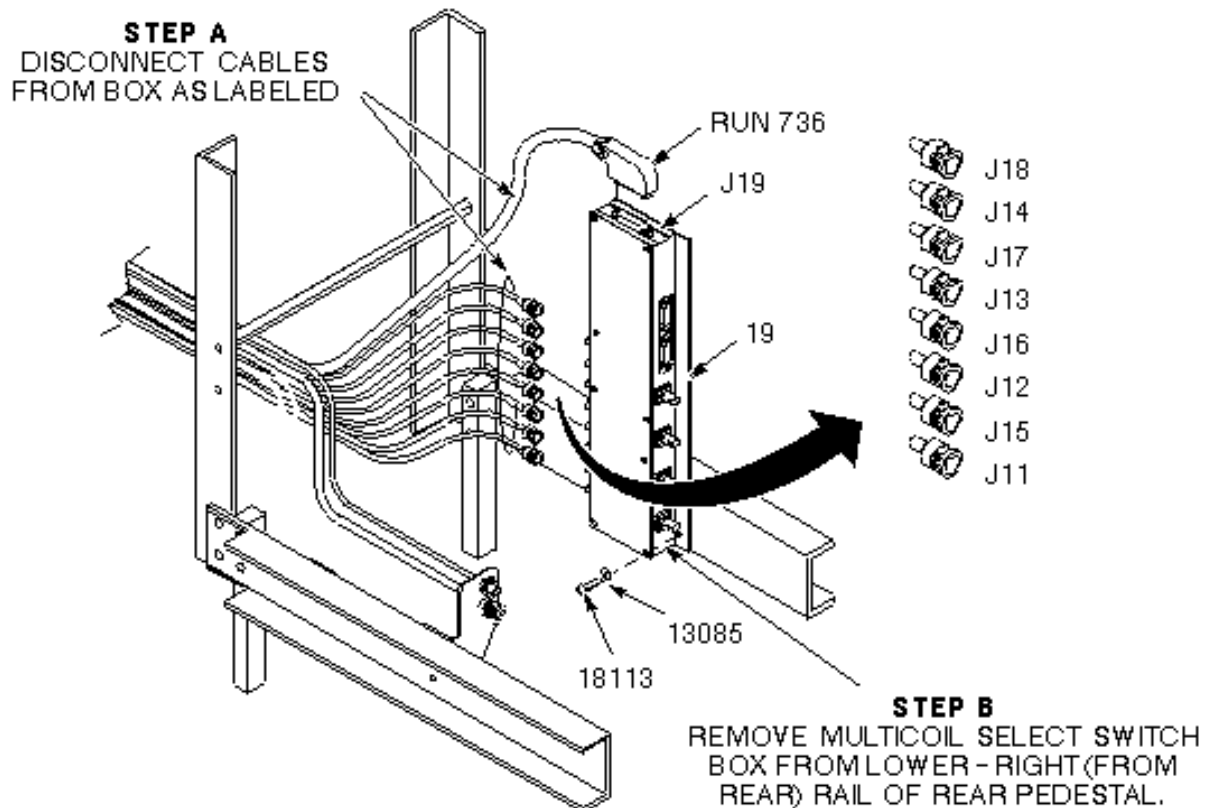

MULTI-COIL SELECT SWITCH AND CONNECTING CABLES
ILLUSTRATION 5-1

6- INSTALLING MULTI-COIL SELECT SWITCH

1. Connect cables to Multi-Coil Select Switch. See Illustration 6-1. Use slide-latch to secure Run 736 to J19.
2. Attach Multi-Coil Select Switch (item 19) to lower rail of rear pedestal. See Illustration 6-1.

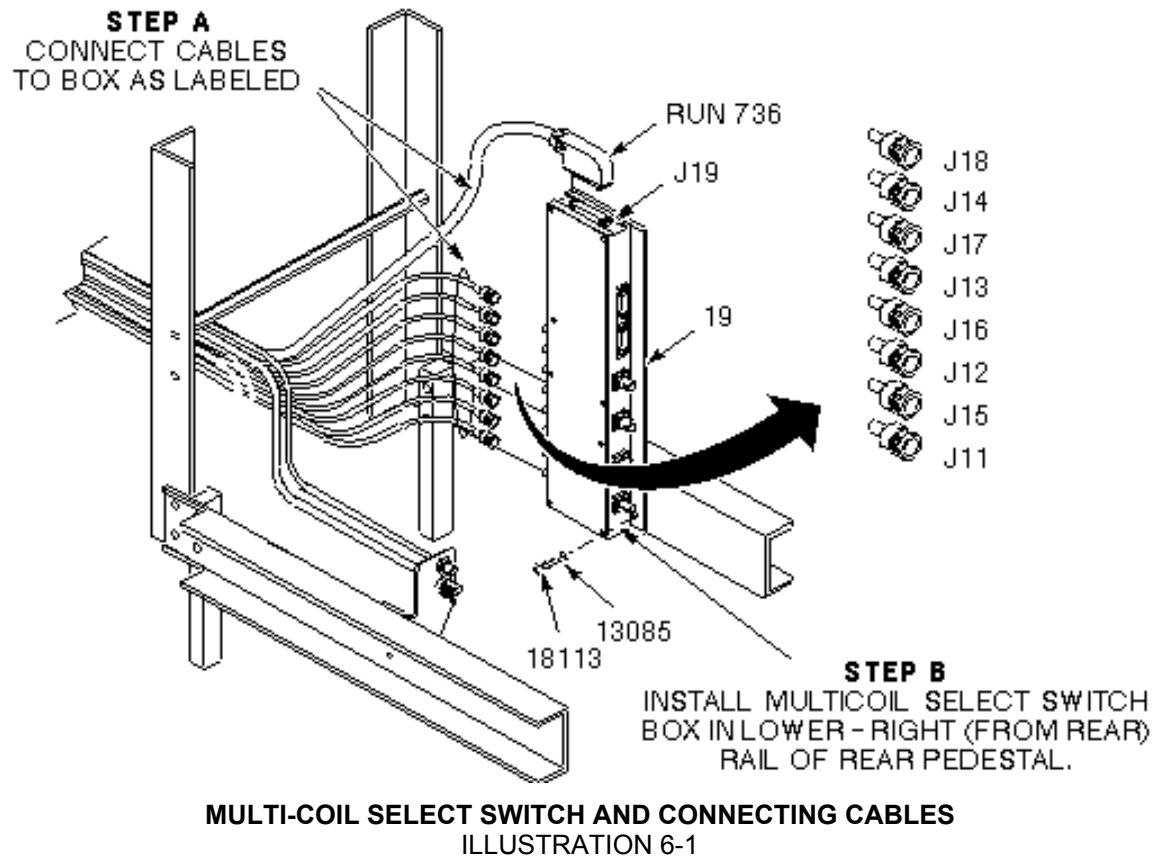

7- FUNCTIONAL CHECKS REQUIRED

1. Refer to procedure for Multi-Coil Switch Driver and PIN Diodes.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	July 22, 1998	M. Whitlow	Initial Conversion from Toolbook to Word.
1	October 14, 1999	B. Schmidt	Added Caution statement to section 4. Added Illustration 4-4 and steps explaining same.
2	October 26, 1999	B. Schmidt	Added MultiCoil cable connections (J#'s table 5-1), page 11