

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- POWER MONITOR FAULT CODES	2
REVISION HISTORY	4


Description - This section applies only to Signa 1.5T or 1.0T systems installed with the Erbtec RF/Pen cabinet.

1- POWER MONITOR FAULT CODES

The power monitor test mode is invoked by placing jumpers JP2 & JP6 in position B (Test) on the Communications Manager/Power Monitor Board. With these jumpers in position B, the board is **not** capable of shutting down the RF amplifier. However, unless **both** power monitors are in the test mode, a fault on the power monitor not in test mode will still cause an amplifier trip.

Following are several key features to keep in mind when using the test mode:

- Fault codes are displayed whenever any event occurs which would normally shut down the RF amplifier. The code for the **most recent fault is latched** into LEDs on the front edge of the Communications Manager/Power Monitor Board as shown in Illustration 1-1.

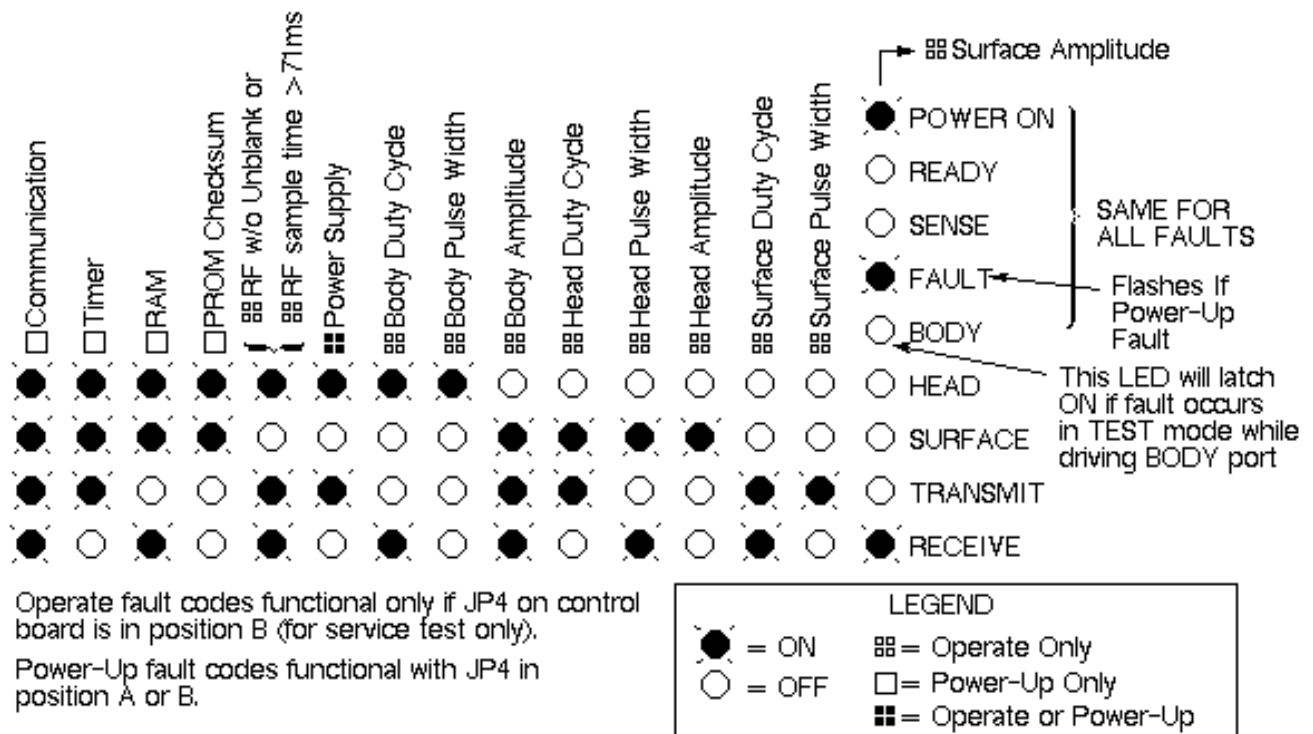

POWER MONITOR FAULT CODES
ILLUSTRATION 1-1

- Placing the monitor interlock switch momentarily to Reset then back to Mode 1 clears the fault display. Up to approximately six seconds may be required for the LEDs to go off after Reset.
- Placing the monitor interlock switch to Mode 2 has no effect in test mode.
- The Transmit and Receive LEDs will flash to indicate operation of the serial port **only** if no fault code is being displayed.

- It is normal for the Body LED to latch on when a fault occurs, **if** it was on **when** the fault occurred.
- If the Fault LED is **flashing**, a power-up fault has occurred.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	July 24, 1998	J. Saperstein	Initial conversion from Toolbook to Word.
1	Oct 13, 1999	M. Keber	Added correct proprietary heading to document.