


## TABLE OF CONTENTS

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>TABLE OF CONTENTS .....</b>                                 | <b>1</b>  |
| <b>1- COMPONENT LOCATIONS .....</b>                            | <b>2</b>  |
| 1-1 System Support Module (SSM) .....                          | 3         |
| 1-1-1 Front SSM Detail .....                                   | 4         |
| 1-1-2 Rear SSM .....                                           | 4         |
| 1-1-3 Rear SSM Connector Descriptions .....                    | 5         |
| 1-2 RFI Module .....                                           | 6         |
| 1-2-1 RFI Module Front Connector Descriptions .....            | 6         |
| 1-2-2 RFI Module Rear Connector Descriptions .....             | 7         |
| 1-3 1.0T TELI Solid State RF Amps.....                         | 8         |
| 1-3-1 1.0T TELI Solid State RF Amp Capacitors .....            | 9         |
| 1-3-2 1.0T TELI Solid State RF Amp Fans .....                  | 10        |
| 1-3-3 1.0T TELI Solid State RF Amp Power Supplies.....         | 11        |
| 1-3-4 1.0T TELI Solid State RF Amp Fuse Location .....         | 13        |
| 1-3-5 1.0T TELI Solid State RF Amp Connector Descriptions..... | 13        |
| 1-4 Power Distribution Unit (PDU) .....                        | 14        |
| 1-4-1 PDU Front Detail.....                                    | 15        |
| <b>2- INTERCONNECTS.....</b>                                   | <b>16</b> |
| 2-1 RF/PDU Cabinet Interconnects.....                          | 16        |
| 2-2 System Support Module Interconnects .....                  | 17        |
| <b>REVISION HISTORY.....</b>                                   | <b>18</b> |

**Description** - This section applies to Signa Horizon/LX II systems installed with the 1.0T RF/PDU cabinet.

## 1- COMPONENT LOCATIONS


See Illustration 1-1.

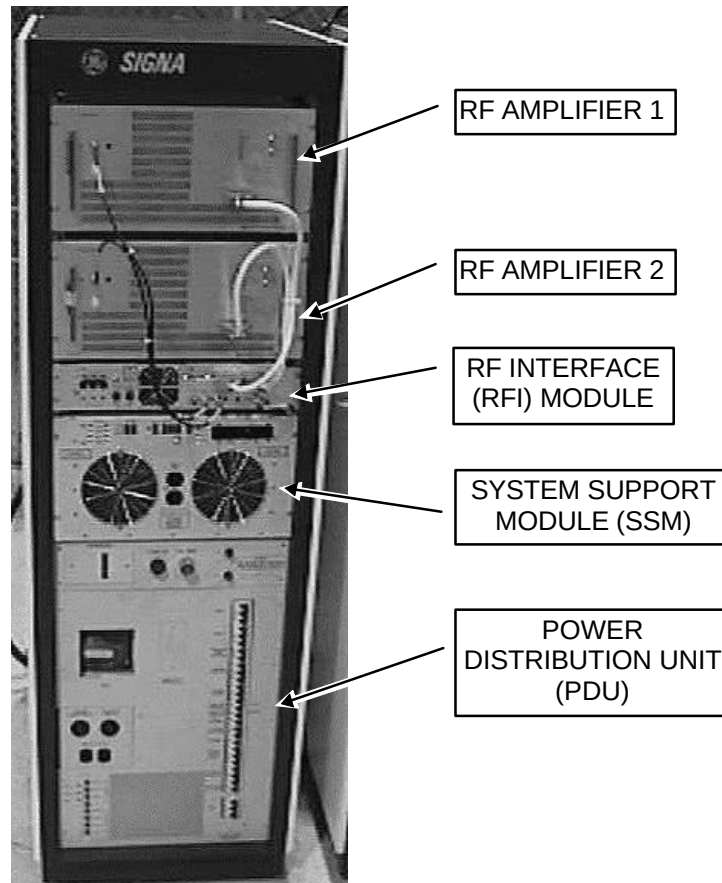

**RF/PDU CABINET LOCATIONS**  
ILLUSTRATION 1-1

## 1-1 System Support Module (SSM)


See Illustration 1-2.

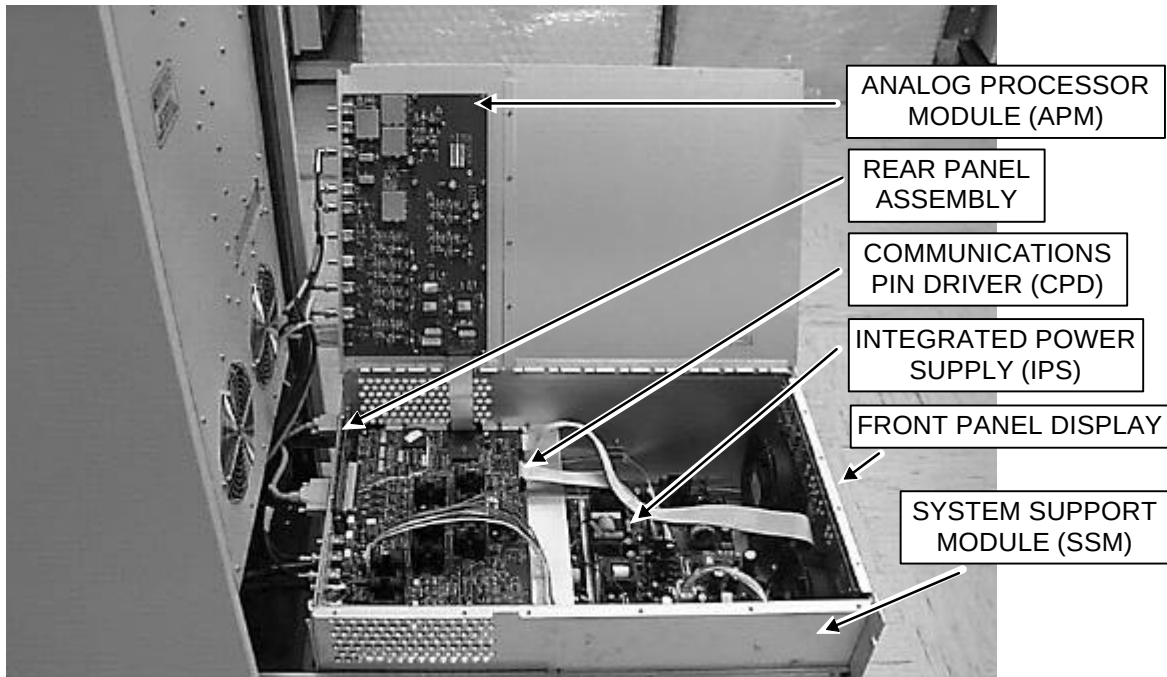

**SSM COMPONENT LOCATIONS**  
ILLUSTRATION 1-2

### 1-1-1 Front SSM Detail


See Illustration 1-3.

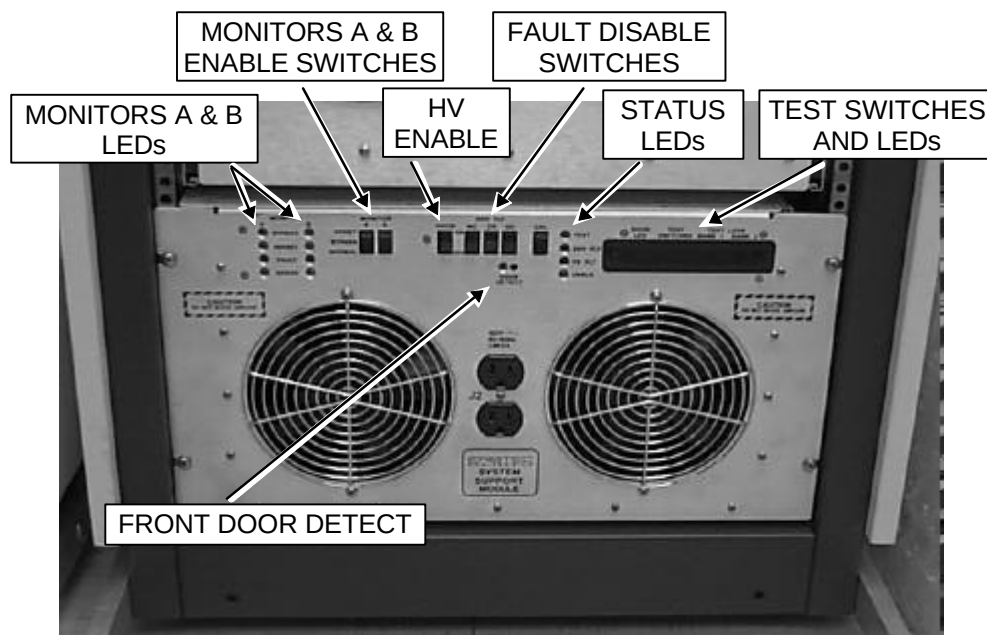

**FRONT SSM LOCATIONS DETAIL**  
ILLUSTRATION 1-3

### 1-1-2 Rear SSM

See Illustration 1-4.

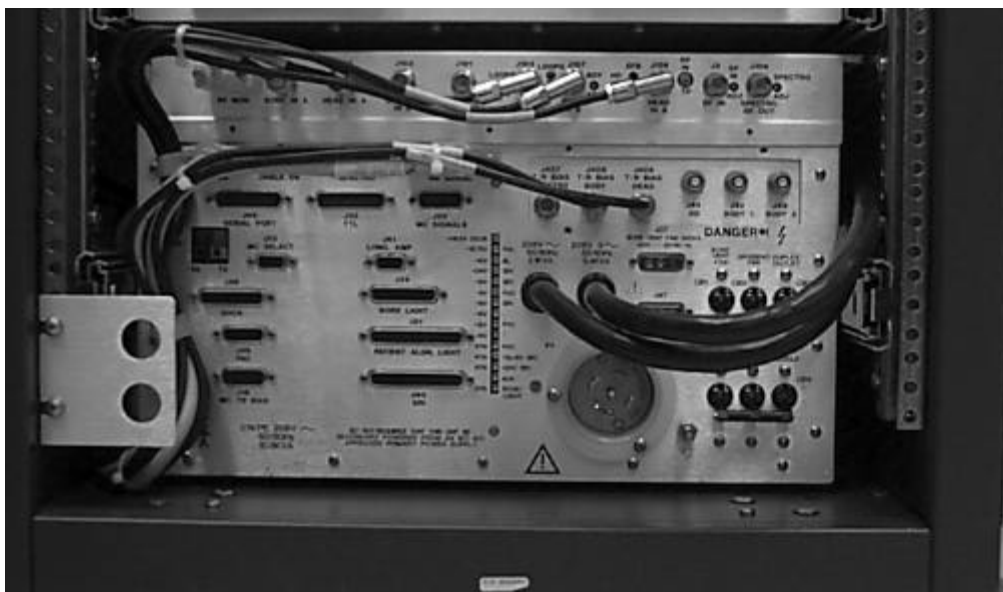

**REAR SSM LOCATION**  
ILLUSTRATION 1-4

**1-1-3 Rear SSM Connector Descriptions**


See Table 1-1.

TABLE 1-1  
REAR SSM CONNECTOR DESCRIPTIONS

| CONNECTOR | DESCRIPTION      | CONNECTOR | DESCRIPTION                             |
|-----------|------------------|-----------|-----------------------------------------|
| J110      | BODY IN A        | CB4       | SYSTEM SUPPORT MODULE<br>MAIN           |
| J108      | HEAD IN A        | P1        | AC IN                                   |
| J107      | BODY IN B        | J35       | PAC                                     |
| J106      | HEAD IN A        | J40       | SRI                                     |
| J104      | SPECTRO RF OUT   | J32       | TTL                                     |
| J103      | EFB RF OUT       | J41       | LONGITUDINAL AMP                        |
| J102      | SPECTRO IN B     | J36       | DOCK                                    |
| J101      | SPECTRO IN A     | J34       | BORE LIGHT                              |
| J43       | BODY 2           | J31       | PATIENT ALIGNMENT LIGHT                 |
| J44       | DD               | J37       | BORE VENT FAN                           |
| J42       | BODY 1           | J47       | GRADIENT FAN                            |
| J407      | T/R BIAS SPECTRO | J3        | RF IN                                   |
| J408      | T/R BIAS BODY    | J46       | SERIAL PORT                             |
| J409      | T/R BIAS HEAD    | J5        | UNBLANK ENABLE                          |
| J501      | NB SERIAL PORT   | J20       | MULTICOIL SIGNALS                       |
| J503      | RF MON           | J22       | MULTICOIL SELECT                        |
| J504      | PCM              | J18       | MC TR BIAS                              |
| J507      | SPECTRO          | J2        | HEAD/BODY DIRECTIONAL<br>COUPLER OUTPUT |
| CB1       | BORE VENT        | RX        | MDS RECEIVE                             |
| CB2       | GRADIENT FAN     | TX        | MDS TRANSMIT                            |
| CB3       | DUPLEX OUT       |           |                                         |

## 1-2 RFI Module

See Illustration 1-5.

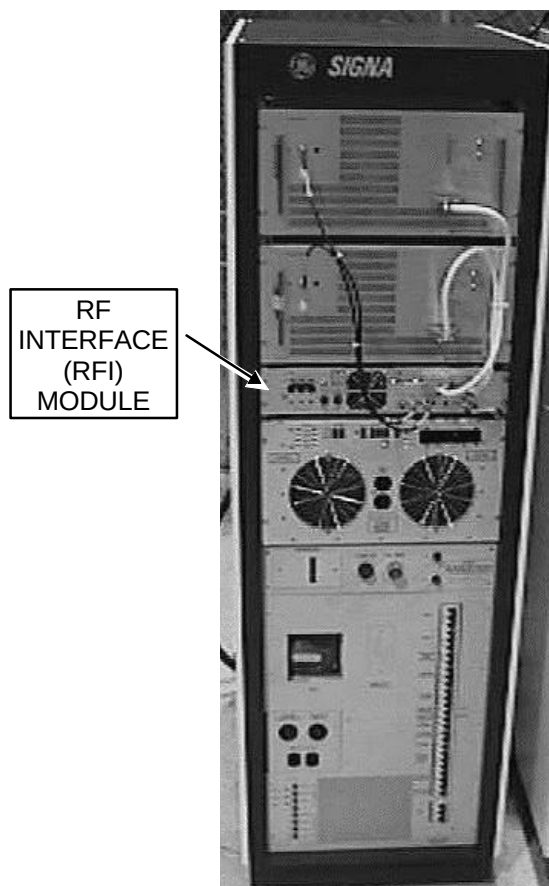

**RFI MODULE LOCATION**  
ILLUSTRATION 1-5

### 1-2-1 RFI Module Front Connector Descriptions


See Table 1-2.

TABLE 1-2  
**FRONT RFI MODULE CONNECTOR DESCRIPTIONS**

| Connector | Description  |
|-----------|--------------|
| J15       | Balance Out  |
| J11       | Amp 1 Drive  |
| J12       | Amp 2 Drive  |
| J14       | RF Input     |
| J13       | RF Test Port |
| J16       | Amp 1 Comm   |
| J17       | Amp 2 Comm   |

## 1-2-2 RFI Module Rear Connector Descriptions

See Illustration 1-6 for locations and Table 1-3 for descriptions.

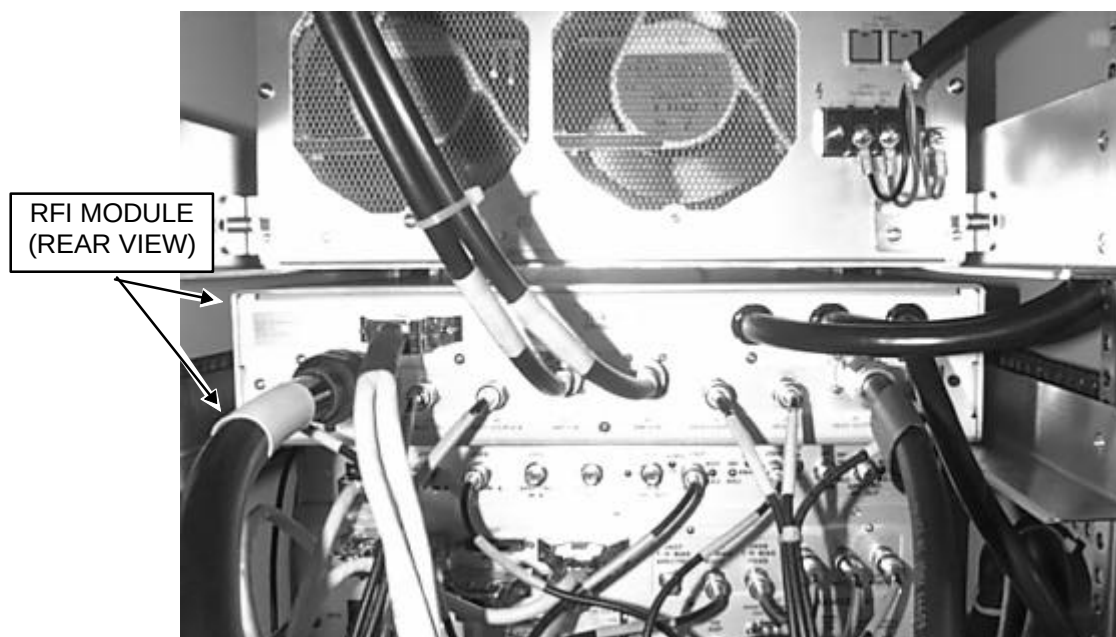


**RFI MODULE REAR CONNECTIONS**  
ILLUSTRATION 1-6

TABLE 1-3  
**RFI MODULE REAR CONNECTOR DESCRIPTIONS**

| Connector | Description   | Connector | Description    |
|-----------|---------------|-----------|----------------|
| J8        | Body Couple A | J3        | Head Output    |
| J4        | Body Output   | J5        | Head Couple B  |
| J10       | Body TR       | J18       | General Comm   |
| J1        | Amp 1 In      | J19       |                |
| J2        | Amp 2 In      | J20       |                |
| J7        | Head Couple A | J21       | Power from PDU |
| J9        | Head TR       |           |                |

### 1-3 1.0T TELI Solid State RF Amps

See Illustration 1-7.

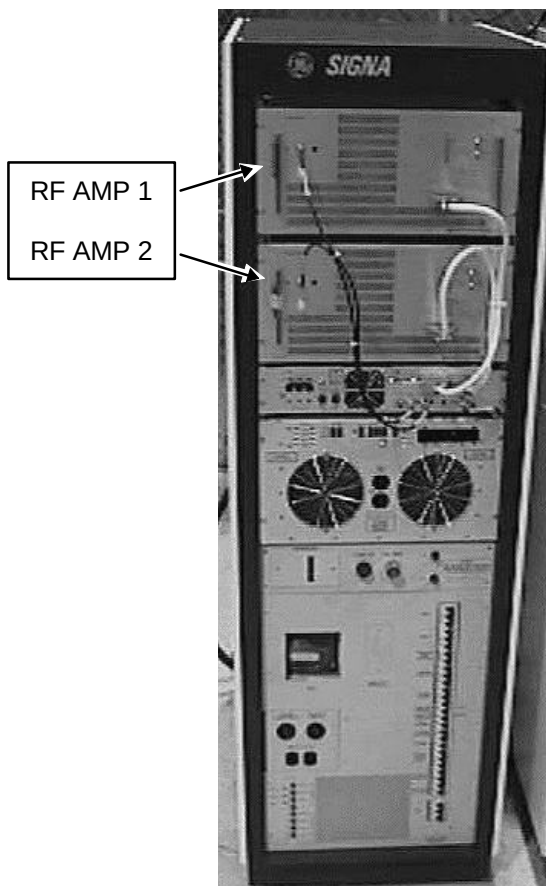


**RF AMP LOCATIONS**  
ILLUSTRATION 1-7



### 1-3-1 1.0T TELI Solid State RF Amp Capacitors


See Illustration 1-8.

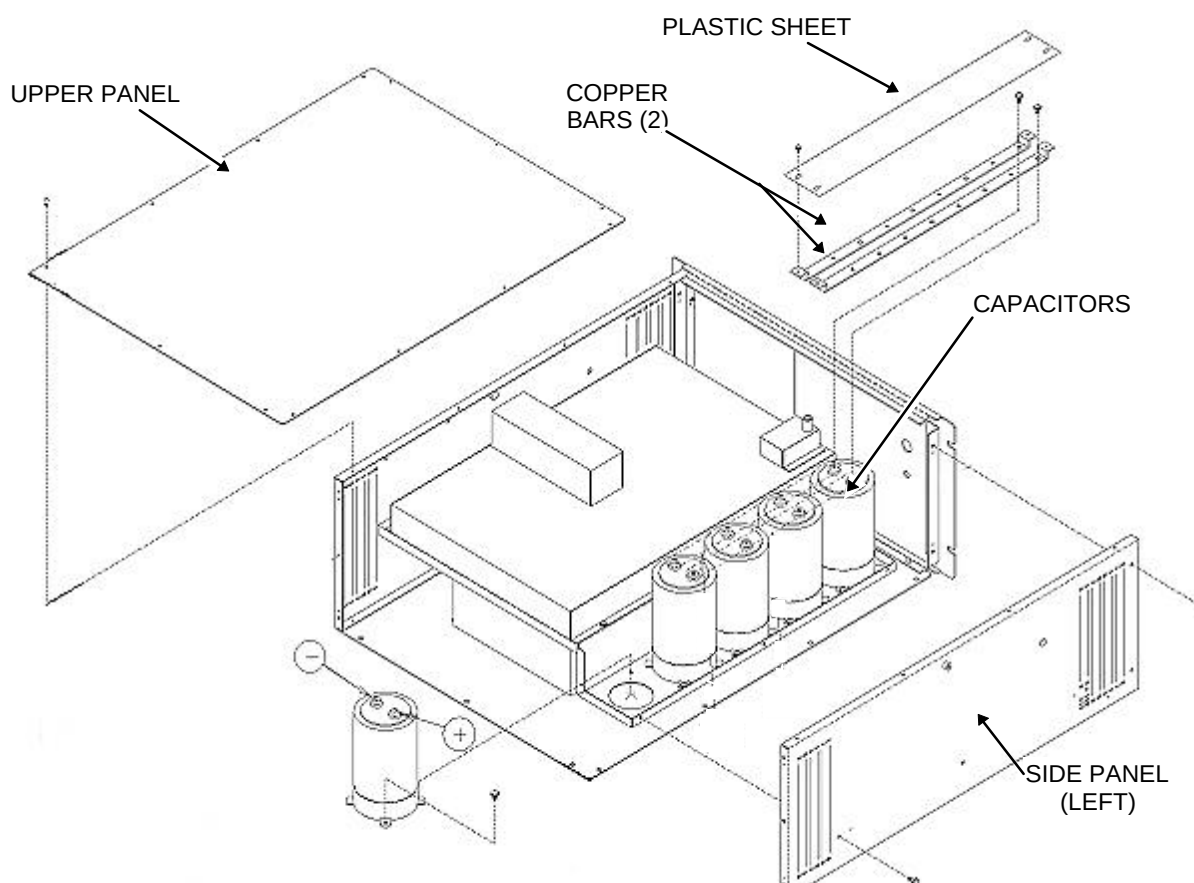

**1.0T RF AMP CAPACITOR LOCATION**  
ILLUSTRATION 1-8

### 1-3-2 1.0T TELI Solid State RF Amp Fans

See Illustration 1-9.

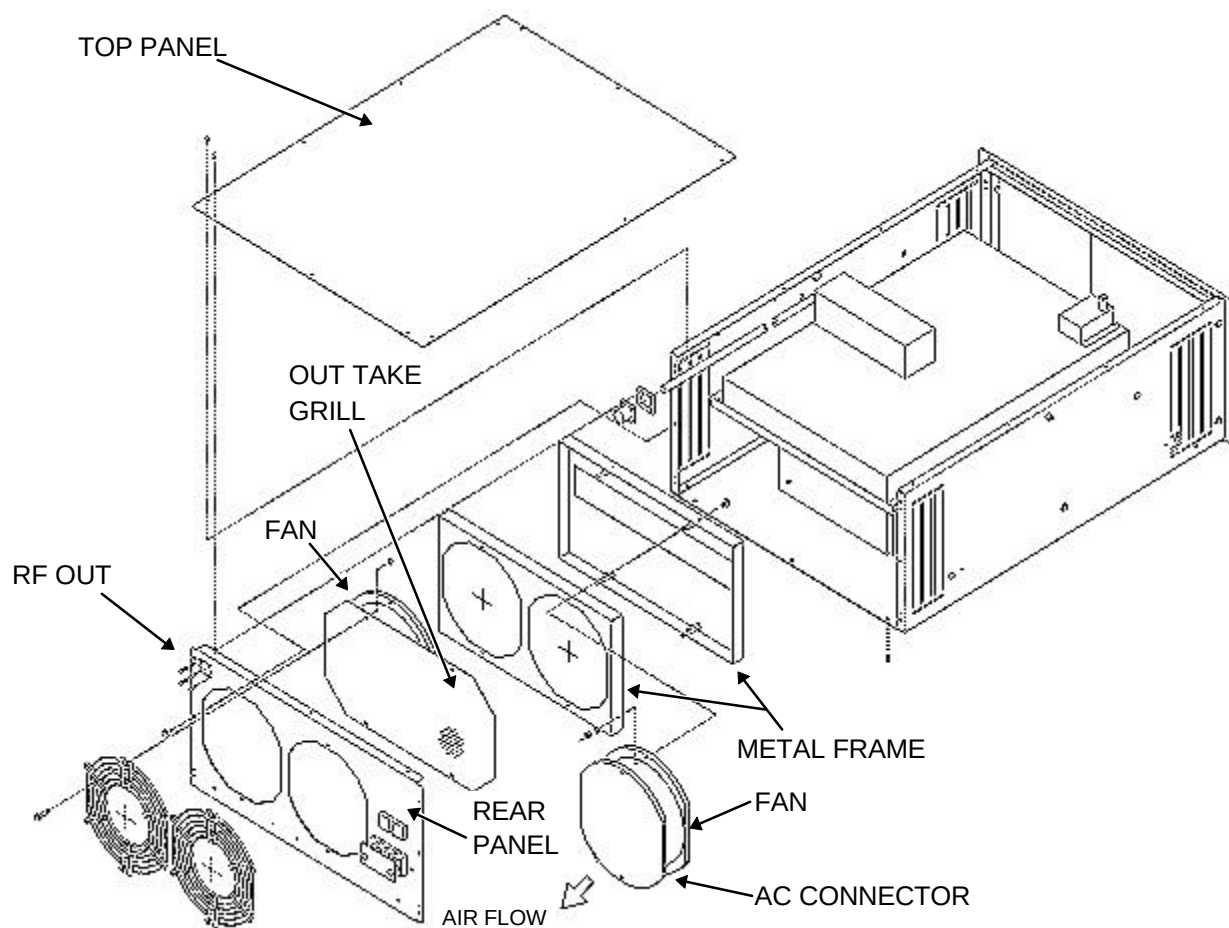


**1.0T RF AMP FAN LOCATION**  
ILLUSTRATION 1-9

### 1-3-3 1.0T TELI Solid State RF Amp Power Supplies

#### 48 Volt Power Supply

See Illustration 1-10.

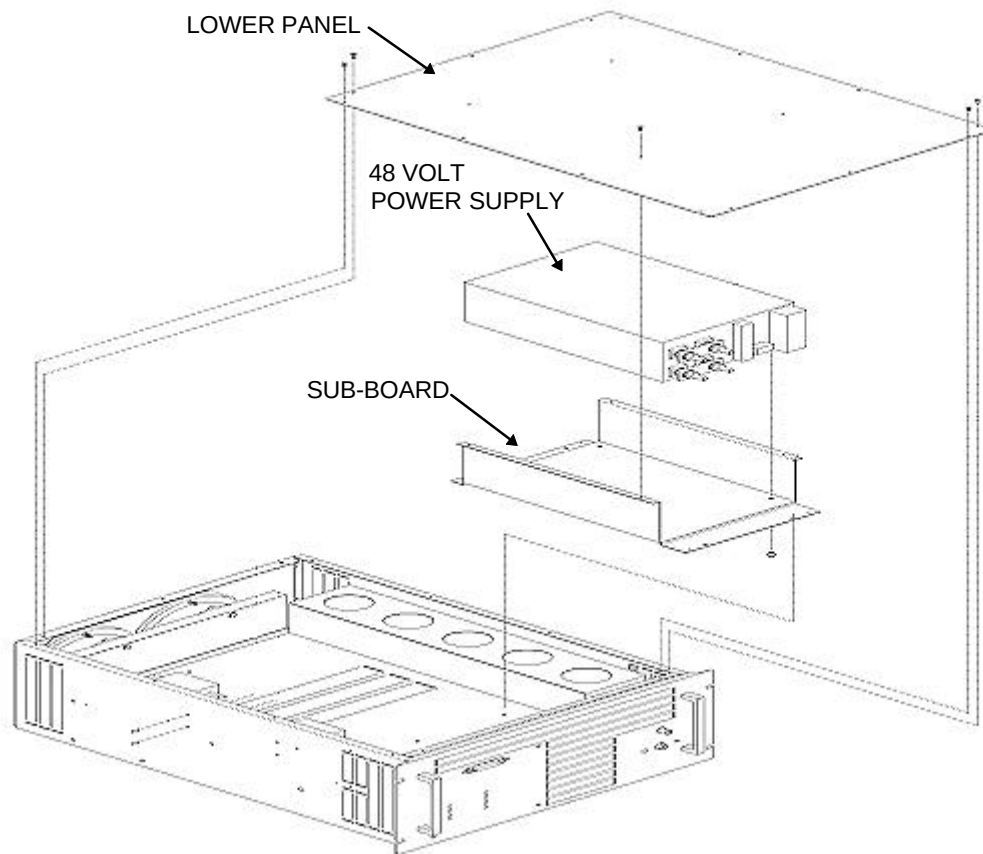


**48 VOLT POWER SUPPLY LOCATION**  
ILLUSTRATION 1-10

### 1-3-3 1.0T TELI Solid State RF Amp Power Supplies (continued)

#### 24 Volt Power Supply


See Illustration 1-11.

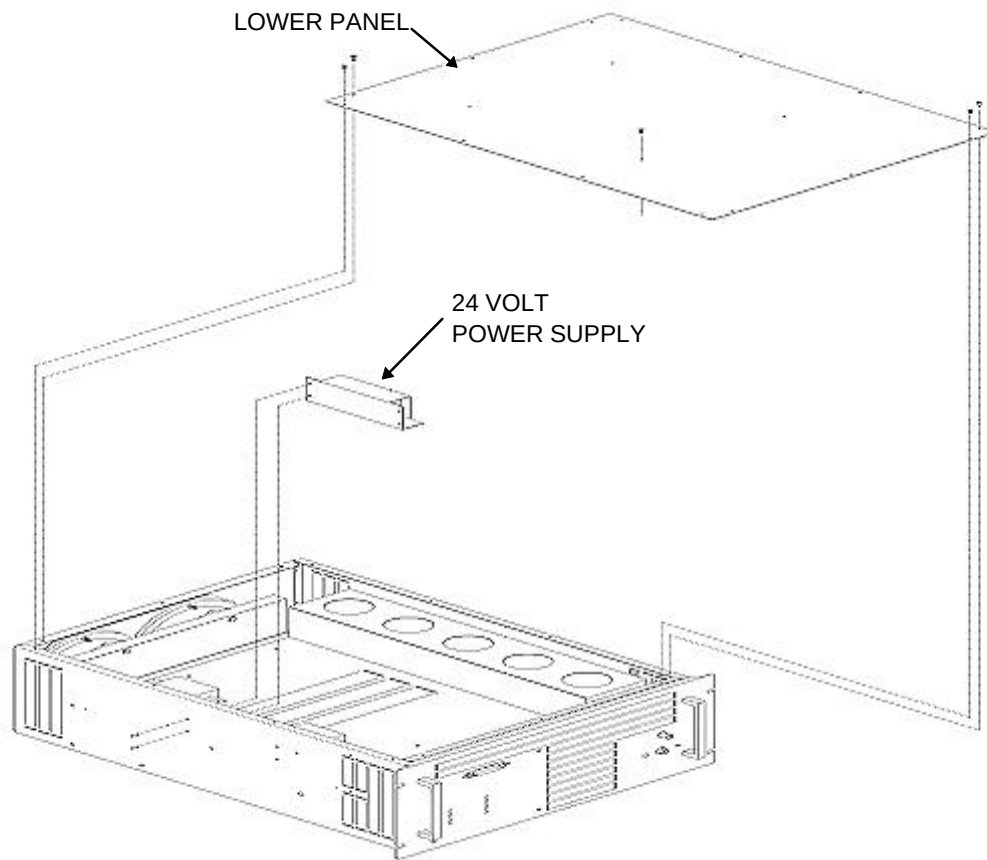

**24 VOLT POWER SUPPLY LOCATION**  
ILLUSTRATION 1-11

### 1-3-4 1.0T TELI Solid State RF Amp Fuse Location

See Illustration 1-12.

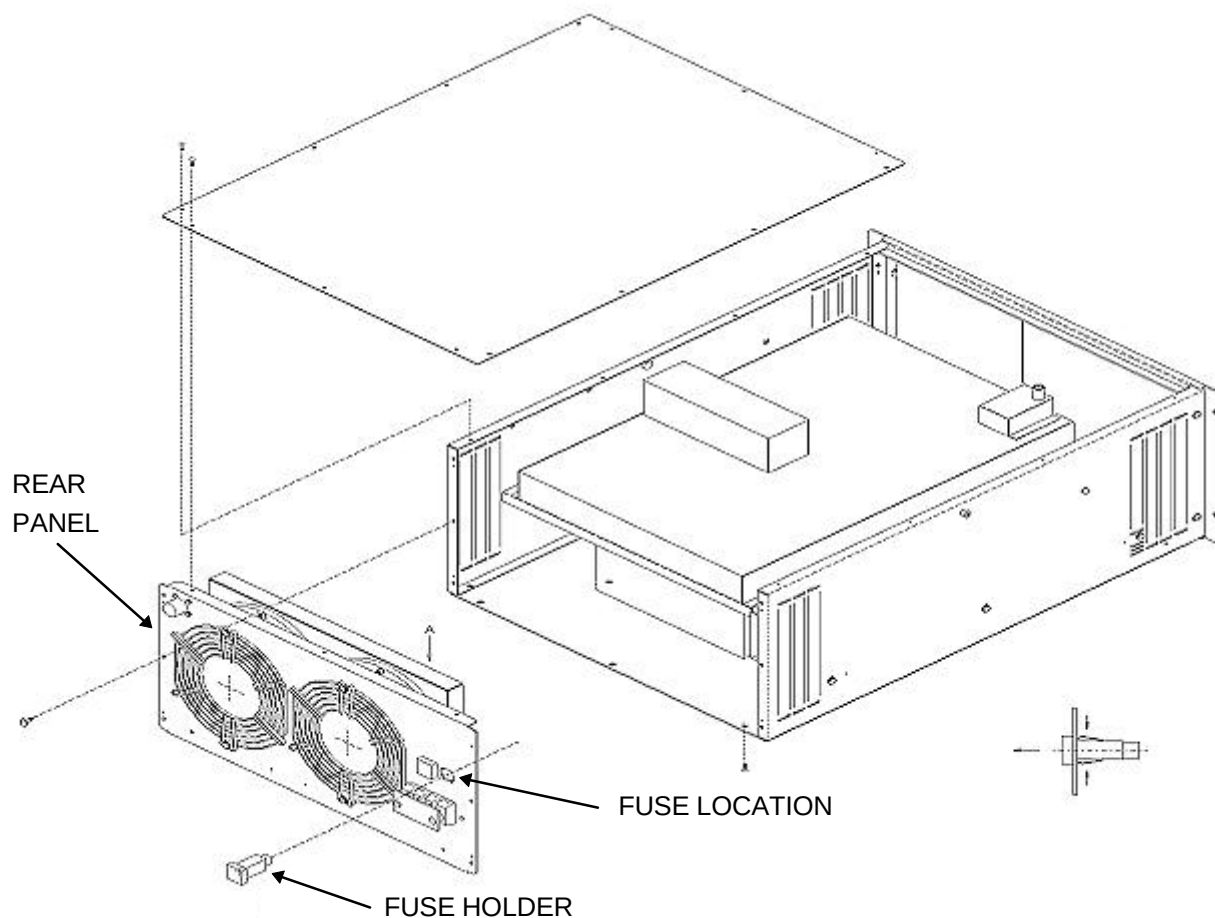

**RF AMP FUSE LOCATION**  
ILLUSTRATION 1-12

### 1-3-5 1.0T TELI Solid State RF Amp Connector Descriptions


See Table 1-4.

TABLE 1-4  
**RF AMP CONNECTOR DESCRIPTIONS**

| Connector    | Description |
|--------------|-------------|
| <b>Front</b> |             |
| J3           | RF In       |
| J2           | RF Sample   |
| J1           | Ext. Cont.  |
| <b>Rear</b>  |             |
| J4           | RF Out      |
| T1           | Phase L     |
| T2           | Phase N     |

#### 1-4 Power Distribution Unit (PDU)


See Illustration 1-13 for PDU location.

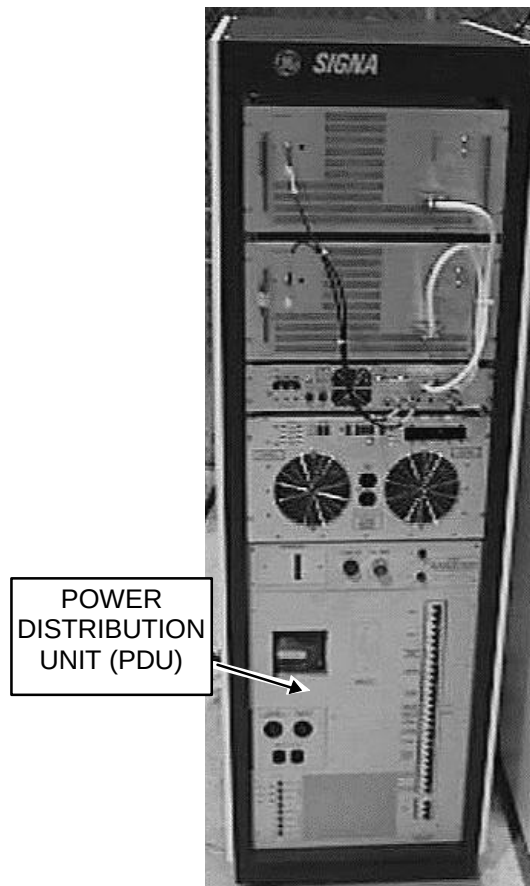

**PDU LOCATION**  
ILLUSTRATION 1-13

### 1-4-1 PDU Front Detail

See Illustration 1-14.

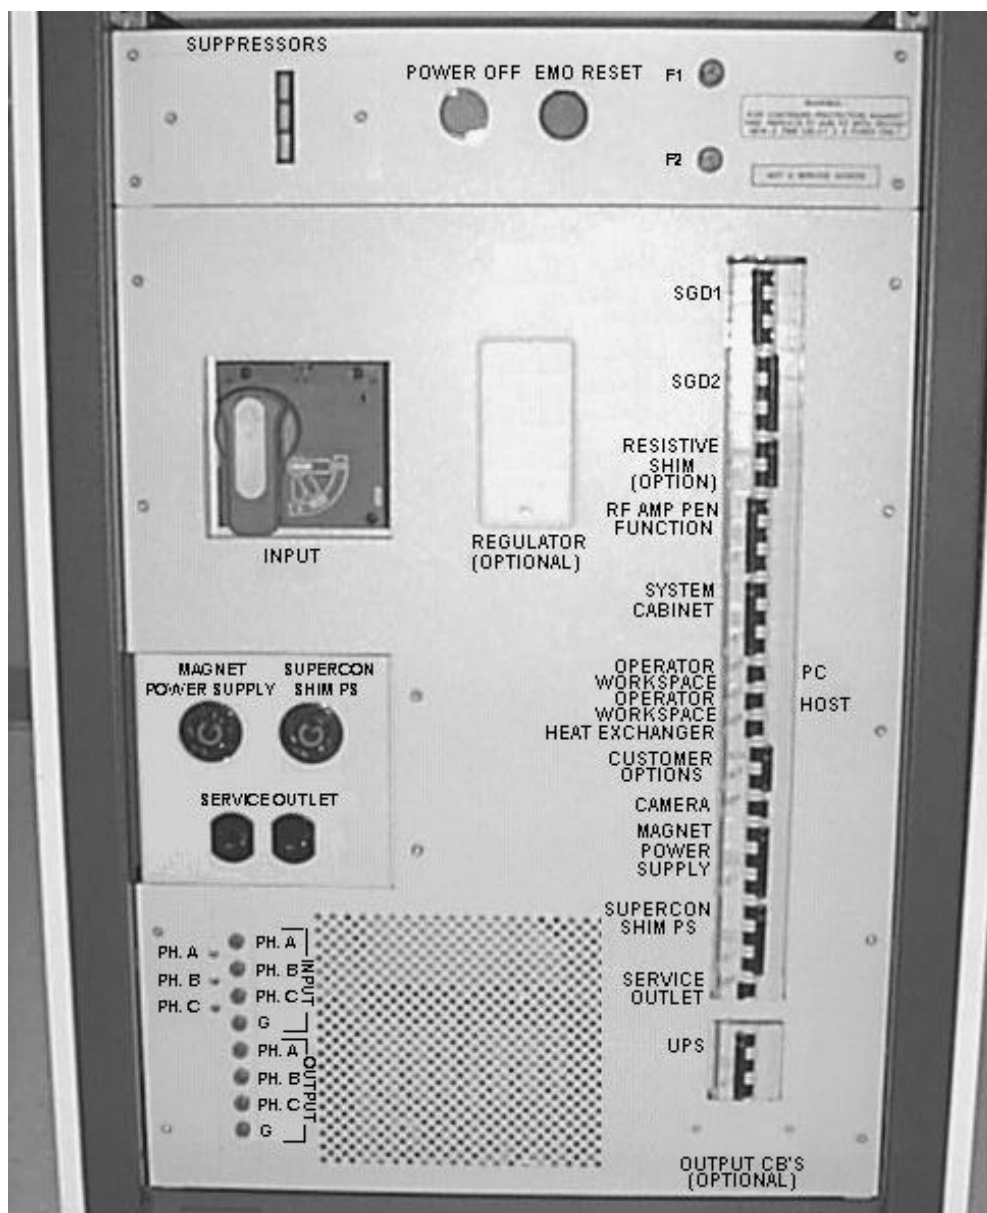


**PDU FRONT DETAIL**  
ILLUSTRATION 1-14

## 2- INTERCONNECTS

### 2-1 RF/PDU Cabinet Interconnects


See Illustration 2-1 for rear cabinet interconnects.

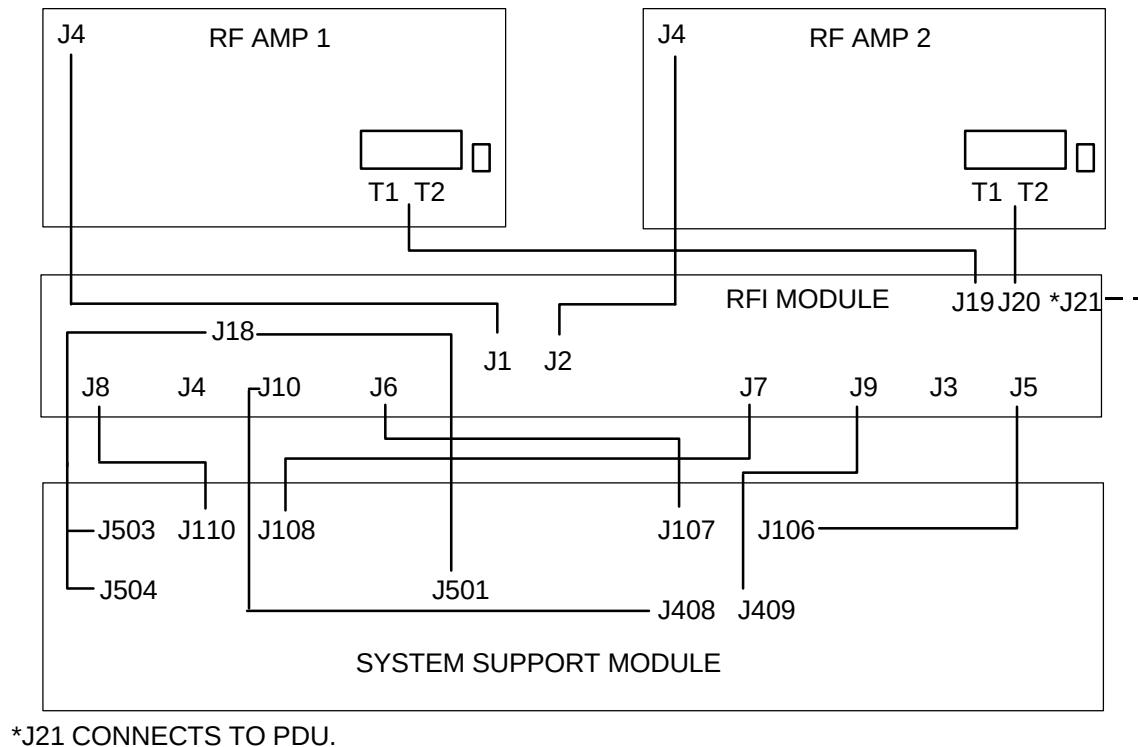

\*J21 CONNECTS TO PDU.

**REAR CABINET RF INTERCONNECTS**  
ILLUSTRATION 2-1

See Illustration 2-2 for front cabinet interconnects.

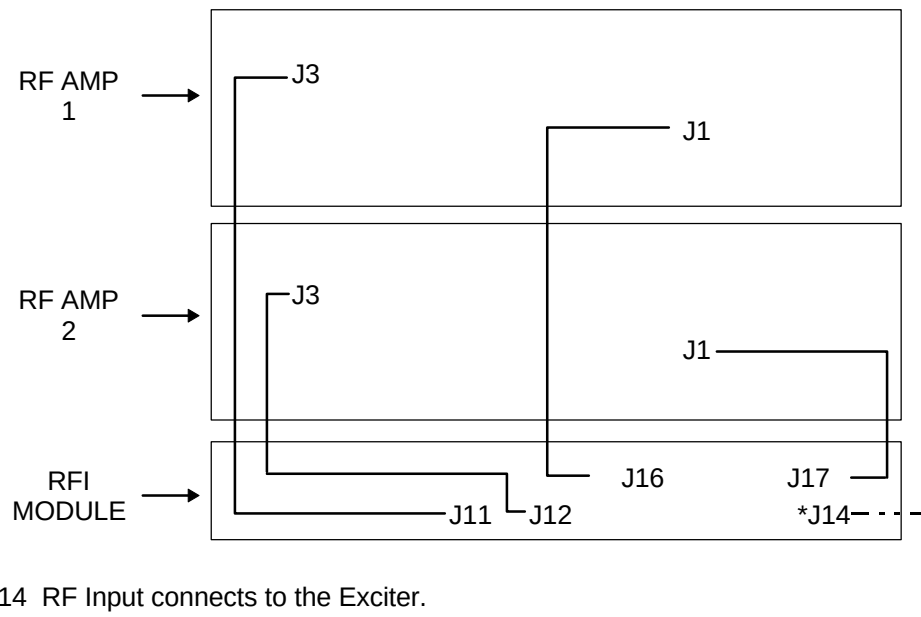


\*J14 RF Input connects to the Exciter.

**FRONT CABINET RF INTERCONNECTS**  
ILLUSTRATION 2-2



## 2-2 System Support Module Interconnects

See Illustration 2-3.

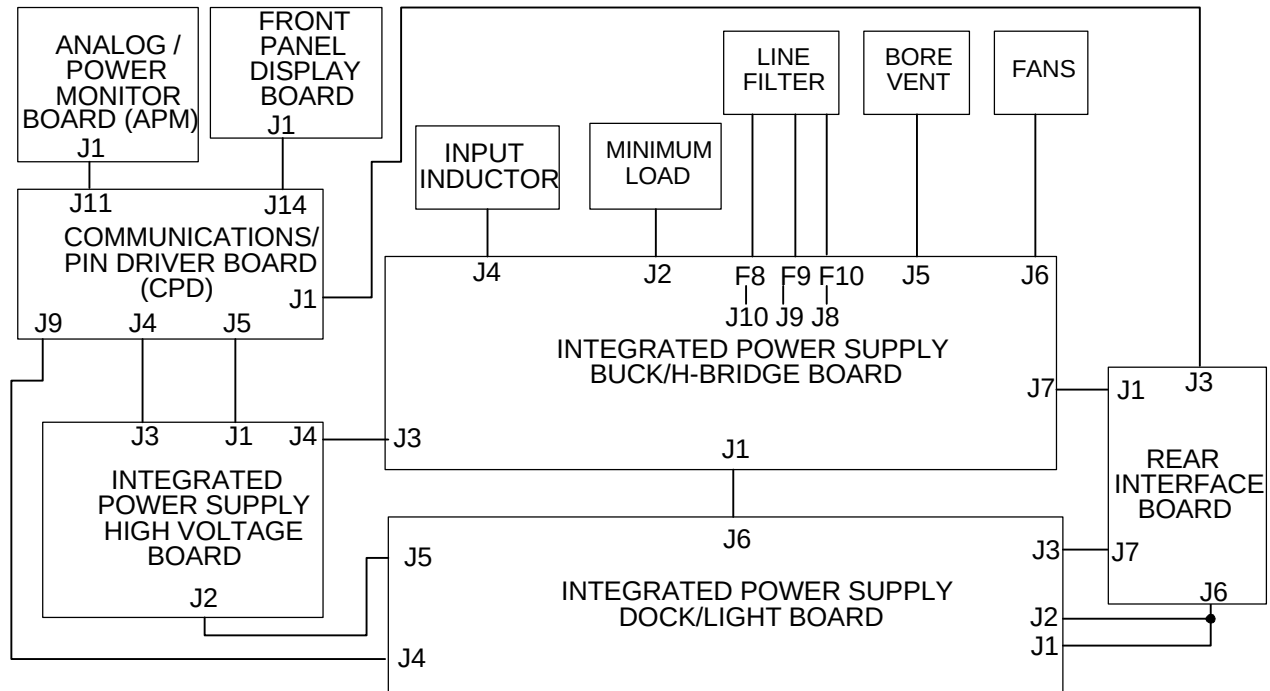

**SYSTEM SUPPORT MODULE INTERCONNECTS**  
ILLUSTRATION 2-3

## REVISION HISTORY

| REV | DATE          | AUTHOR     | PRIMARY REASONS FOR CHANGE |
|-----|---------------|------------|----------------------------|
| A   | Mar. 23, 1998 | K. Keshena | Preliminary version.       |
| 0   | June 30, 1998 | K. Keshena | Initial release.           |
|     |               |            |                            |
|     |               |            |                            |
|     |               |            |                            |