

TABLE OF CONTENTS

Table of Contents1

1 Magnet Enclosure.....2

 1-1 Opening Enclosure (MG2).....2

2- rear pedestal replacement.....3

 2-1 Rear Pedestal Removal.....3

 2-2 Rear Pedestal Installation.....5


Revision History6

Description - Procedures for opening magnet enclosure covers and replacing the Rear Pedestal.


1 MAGNET ENCLOSURE

1-1 Opening Enclosure (MG2)

The magnet open enclosure consists of 18 panels (all removable), plus the front and rear endbells. (See Illustrations 1-1 and 1-2.)

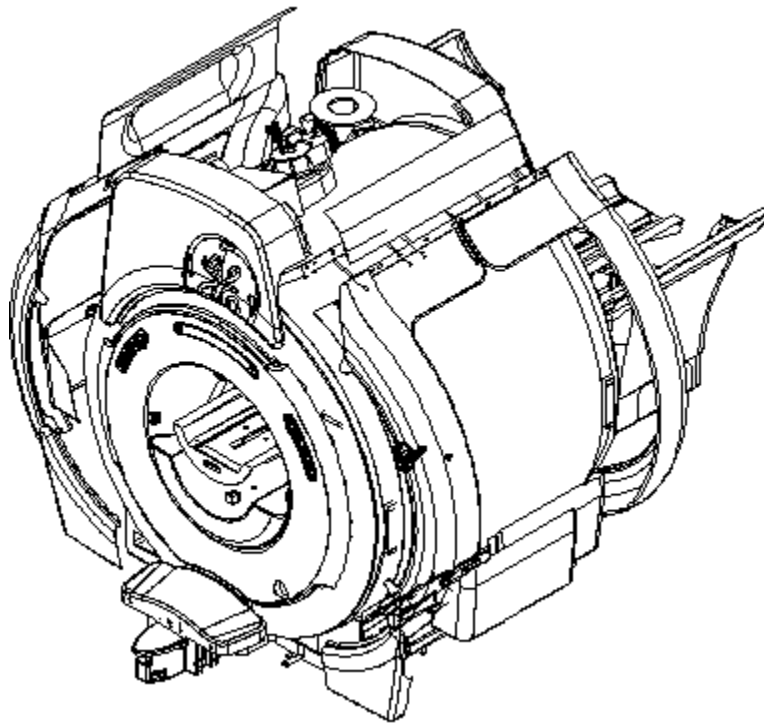

ACCESS TO MAGNET ENCLOSURE FRONT VIEW
ILLUSTRATION 1-1

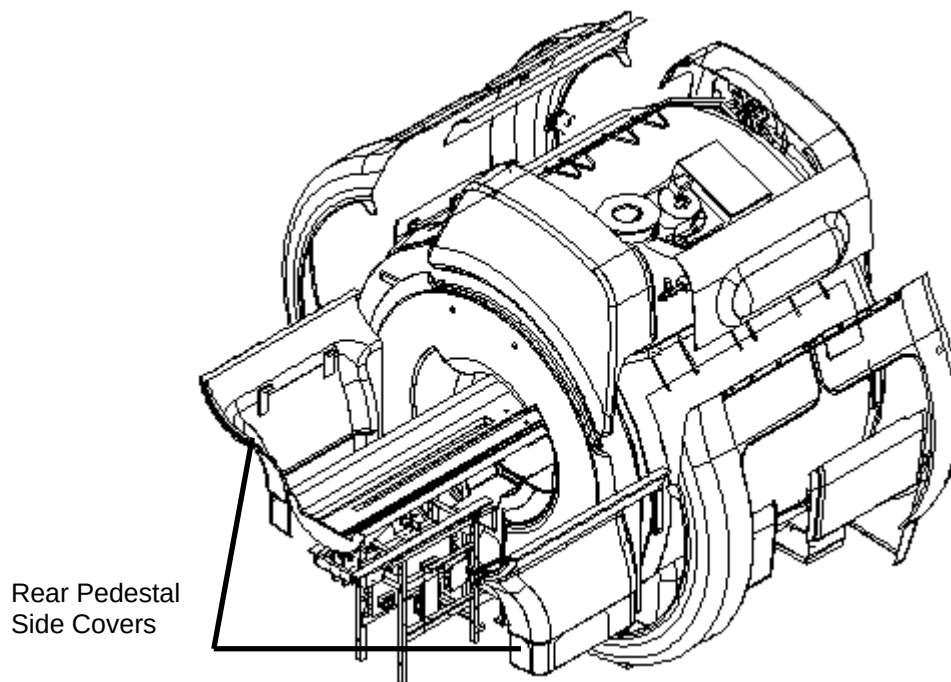

ACCESS TO MAGNET ENCLOSURE REAR VIEW
ILLUSTRATION 1-2

2- REAR PEDESTAL REPLACEMENT

2-1 Rear Pedestal Removal

1. Lock-Out / Tag-Out circuit breaker MR1 A14 CB6 at rear of RF/Pen Cabinet (MR1) on magnet enclosure power supply (MEPS) module.


For **RF/Pen II** and **RF/PDU Cabinet**: Lock-Out / Tag-Out circuit breaker MR1 A20 CB4 at rear of RF/Pen II and RF/PDU Cabinet on System Support Module (SSM). Refer to Safety procedure, SYSMSA2.PDF.

2. Verify that voltage between MR1 A14 TP4 (+) and TP13 (–) is **0 VDC**.

For RF/Pen II and RF/PDU Cabinet, verify that voltage between MR1 A20 TP4 (+) (SRI+24V) and TP13 (–) (SRI RTN) is **0 VDC**.

3. Lift and remove rear pedestal side covers. (See Illustration 1-2.)

4. Using a flat-blade screwdriver, remove two screws holding bridge to the rear pedestal. (See Illustration 1-3.)

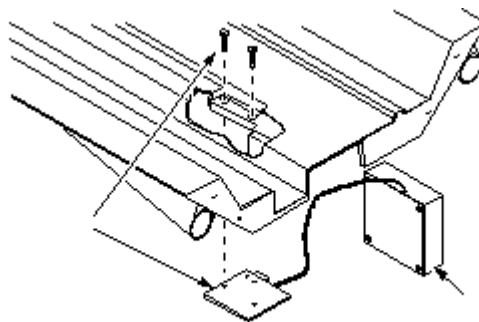

BRIDGE REAR SCREWS
ILLUSTRATION 1-3

5. Disconnect all cabling to rear pedestal and slide away from magnet.



THE REAR PEDESTAL HOUSES THE LONGITUDINAL DRIVE MOTOR, WHICH IS HIGHLY FERROUS. IF THE MAGNET IS RAMPED, ANY MOVEMENT OF THE REAR PEDESTAL REQUIRES THREE PEOPLE AND THE LONGITUDINAL DRIVE MOTOR MUST BE MAINTAINED AS FAR FROM THE MAGNET AS POSSIBLE.

6. The rear pedestal is only attached to the magnet via the two screws in the bridge. With three people, slide the rear pedestal away from the magnet making sure to keep the longitudinal drive motor as far from the magnet as possible.

2-2 Rear Pedestal Installation



THE REAR PEDESTAL HOUSES THE LONGITUDINAL DRIVE MOTOR, WHICH IS HIGHLY FERROUS. IF THE MAGNET IS RAMPED, ANY MOVEMENT OF THE REAR PEDESTAL REQUIRES THREE PEOPLE AND THE LONGITUDINAL DRIVE MOTOR MUST BE MAINTAINED AS FAR FROM THE MAGNET AS POSSIBLE.

1. With three people, slide the rear pedestal toward the magnet keeping the longitudinal drive motor as far from the magnet as possible. Attach all cabling.
2. Install the two screws that hold the bridge to rear pedestal.
3. Replace rear pedestal side covers.
4. Remove Lock-Out / Tag-Out.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASON FOR CHANGE
0	Mar. 31, 1999	W. Pasciak	Initial release.
1	May, 21, 1999	S.M. Atladottir	Updated procedure references for new GUI.
2	Sept. 30, 2010	R. Kohl	Per CAPA 1859293: Added Warning and Step 6 to Section 2-1 - Rear Pedestal Removal and added Warning to Section 2-2 - Rear Pedestal Installation.