

TABLE OF CONTENTS

TABLE OF CONTENTS 1

1- REMOVAL OF FAILED BOARD 2

2- BOARD SETUP..... 3

3- INSTALLATION OF REPLACEMENT BOARD 4


4- FUNCTIONAL CHECKS REQUIRED 4

REVISION HISTORY 6

Description - Procedure for replacing the CPU Board, located in the ISE/TPS Chassis.


1- REMOVAL OF FAILED BOARD

1. Remove front cover from system cabinet.
2. Turn off the Main circuit breaker, CB1 (see Illustration L4601A).

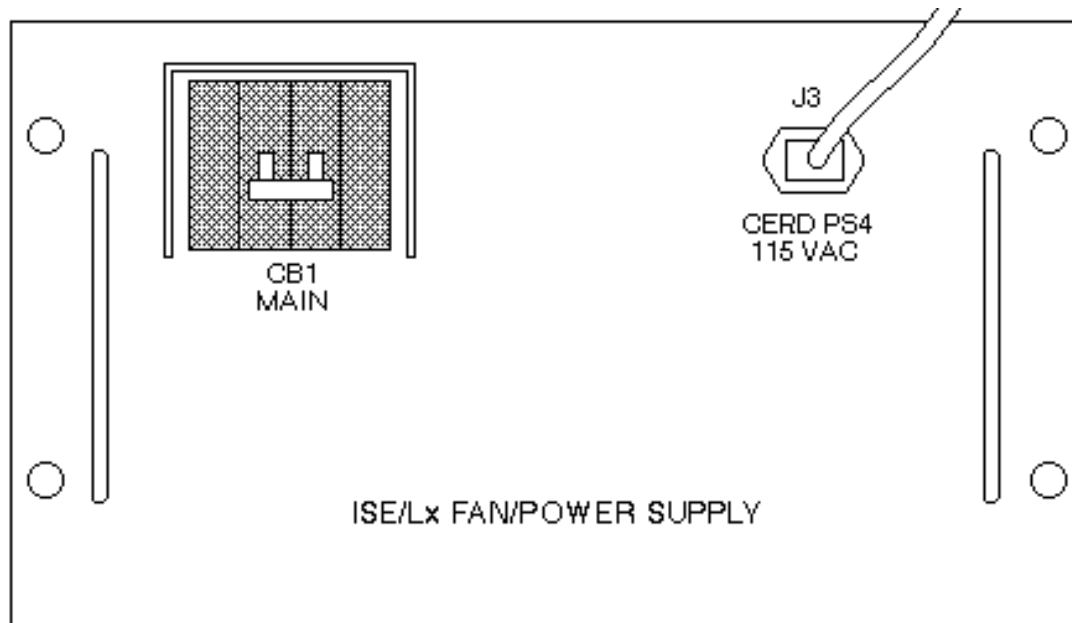

ISE/TPS FAN/POWER ASSEMBLY - FRONT VIEW
ILLUSTRATION L4601A

3. Loosen the two front panel screws. Remove the CPU Assembly from the ISE/TPS Chassis (see Illustration L4729A).

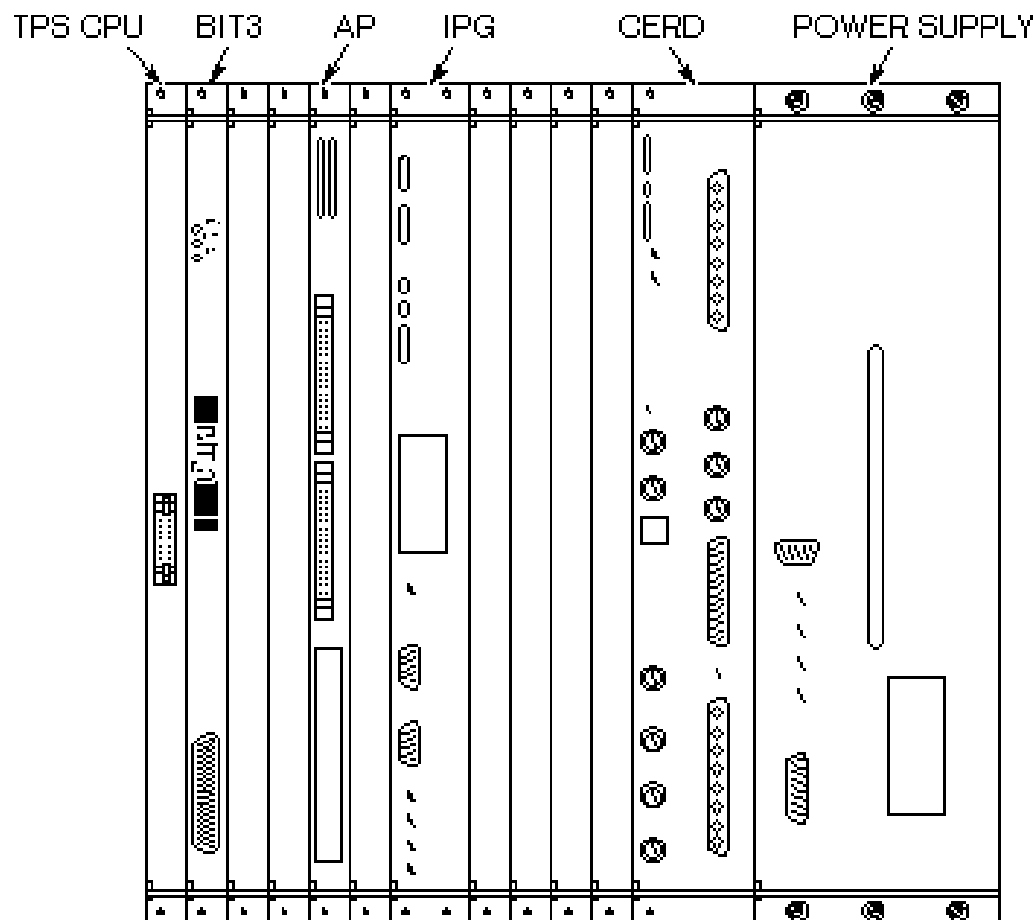

ISE/TPS CHASSIS - FRONT VIEW
ILLUSTRATION L4729A

2- BOARD SETUP

The following tables display CPU Board switch, jumper, and LED information.

See Table 1 for switch information

TABLE 1
SWITCH INFORMATION

Switch	Position	Description	Notes
Reset		Forces reset to board	red
Abort		Generates an interrupt	black

See Table 2 for jumper information

TABLE 2
JUMPER INFORMATION

Jumper	Jumper Position	Notes
J1	1-2 Closed	System controller selection
J11	Open	Synchronous clock selection for Serial Port 1
J12	Open	Synchronous clock selection for Serial Port 2
J20	1-3 Closed 2-4 Closed	VMEbus +5V backup power source selection
J21	2-3 Closed	EPROM size selection
J22	All pins jumpered	General purpose readable register configuration.

See Table 3 for LED information

TABLE 3
LED INFORMATION

Led	Color	Description	Notes
Fail	Red	Lights when the BRDFAIL* signal line is active. Part of DS1.	
STAT	Yellow	Driven by the MC68040 status lines on the MVME162. Lights when a halt condition from the processor is detected. Part of DS1.	
RUN	Green	Lights when the local bus TIP* signal line is low. This indicates that one of the local bus masters is executing a local bus cycle. Part of DS2.	
SCON	Green	Lights when the VMEchip2 in the MVME162 is the VMEbus system controller. Part of DS2	
LAN	Green	Lights when the LAN chip is local bus master. Part of DS3.	
FUSE	Green	Lights when power is available to the transceiver interface (the MVME162 supplies +12V power to the LAN Ethernet transceiver interface through a fuse). Part of DS3.	

3- INSTALLATION OF REPLACEMENT BOARD

1. Install CPU Board into ISE/TPS Chassis and tighten the two front panel screws (see Illustration L4729A in Section 1).
2. Turn on the main circuit breaker, CB1 (see Illustration L4601A in Section 1).
3. Install system cabinet front cover.
4. If Signa Horizon (8.x) software is running, **[Reset TPS]** .

4- FUNCTIONAL CHECKS REQUIRED

1. Perform one head or body scan.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 1, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.