


TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REMOVAL OF FAILED BACKPLANE POWER SUPPLY	2
2- INSTALLATION OF BACKPLANE POWER SUPPLY	3
3- CALIBRATION REQUIRED.....	3
4- FUNCTIONAL CHECKS REQUIRED	4
REVISION HISTORY	5

Description - Procedure for replacing the Backplane Power Supply, located in the rear of the ISE/TPS Chassis.


1- REMOVAL OF FAILED BACKPLANE POWER SUPPLY

1. Shutdown Signa Horizon (8.x) software.
2. Remove front cover from System Cabinet.
3. Turn off the main (CB1) circuit breaker (see Illustration L4601A).

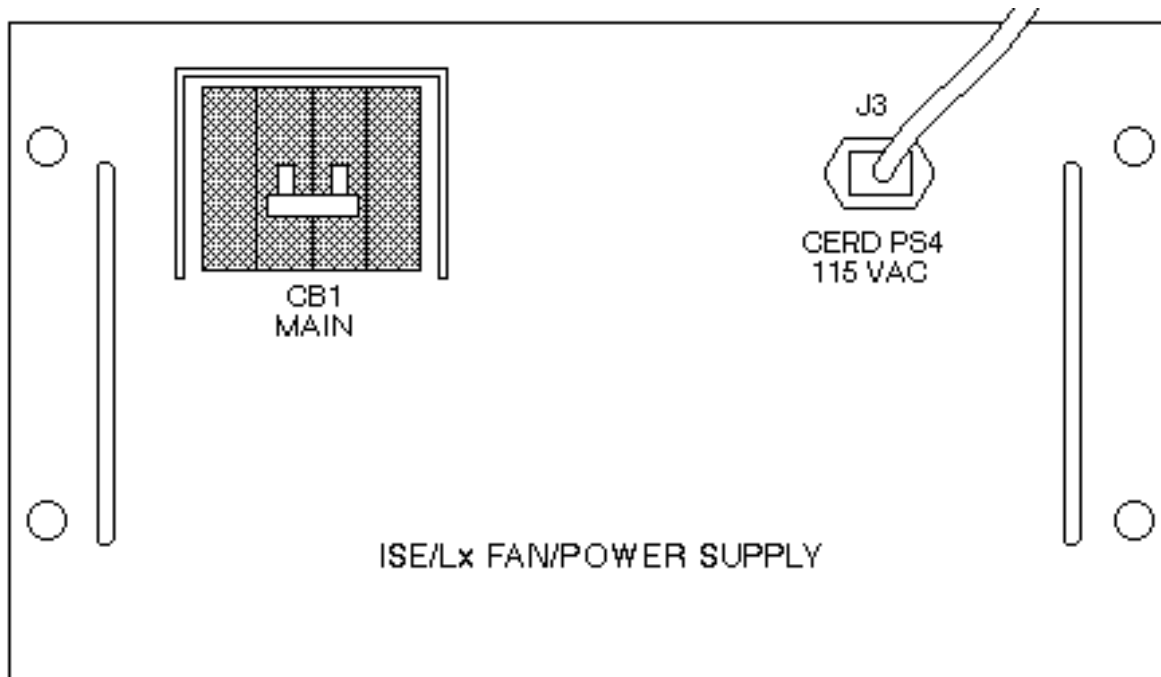

ISE/TPS FAN/POWER ASSEMBLY - FRONT VIEW
ILLUSTRATION L4601A

4. Disconnect main power cable, J2, from rear of Fan/Power Module (not pictured).
5. Remove the eight panel screws. See Illustration L4759A.

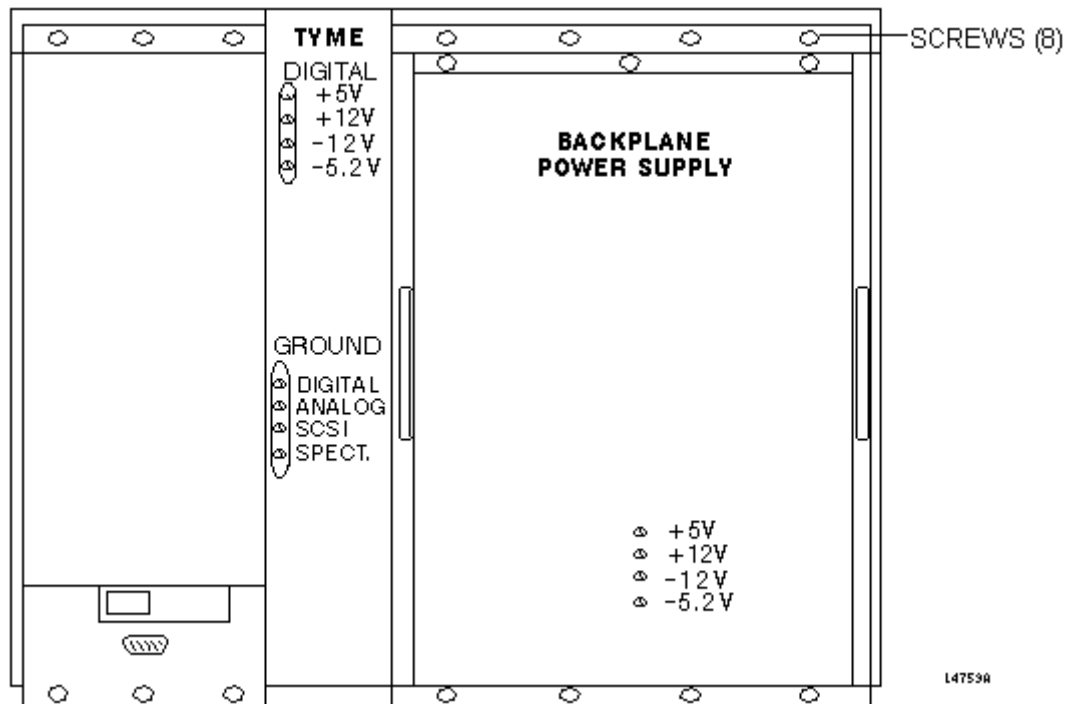

BACKPLANE POWER SUPPLY REPLACEMENT
ILLUSTRATION L4759A



Possible personal injury. Remove this module slowly to avoid injury from unbalanced weight.

6. Slowly remove the Backplane Power Supply.

2- INSTALLATION OF BACKPLANE POWER SUPPLY

1. Slowly install the Backplane Power Supply.
2. Install the eight panel screws. See Illustration L4759A in Section 1.
3. Connect main power cable, J2, to rear of Fan/Power Module.
4. Turn on the main (CB1) circuit breaker (see Illustration L4601A in Section 1).
5. Install System Cabinet front cover.
6. Bring up Signa Horizon (8.x) software.

3- CALIBRATION REQUIRED

Refer to ISE/TPS Backplane Power Supply Adjustments.

4- FUNCTIONAL CHECKS REQUIRED

1. Perform one head or body scan.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 1, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.