

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1- REMOVING TPS/ISE CHASSIS	2
2- INSTALLING NEW TPS/ISE CHASSIS	2
3- FUNCTIONAL CHECKS REQUIRED	4
REVISION HISTORY	5

This procedure applies to 1.5T and 1.0T systems.

Description - The TPS/ISE Backplane is not intended to be a replacement item. Upon failure of the TPS/ISE Backplane, a TPS/ISE chassis **without circuit boards** is the replacement item.

1- REMOVING TPS/ISE CHASSIS

1. Turn off TPS/ISE power with CB6 on rear of System Cabinet. **Tag** CB6 to prevent it from being turned on. (Refer to the latest, *MR Release Signa 5x/8x Service Methods, Renewal Parts and Service Tools*, Procedure for Safety, Section 6, OSHA LOCKOUT/TAGOUT REQUIREMENTS.)
2. Remove front cover from System Cabinet.
3. Turn TPS/ISE power supply off with breaker on front, and **verify** that power is off.
4. Remove all power and signal cables from TPS/ISE Chassis.



Personal injury possibility. TPS/ISE chassis is heavy and should be handled carefully. Use conventional heavy lifting techniques.

5. Remove TPS/ISE Chassis from cabinet.

2- INSTALLING NEW TPS/ISE CHASSIS

Note

The TPS/ISE Backplane has different "keystrips" in the CERD Board slots for each field strength. The backplane keystrips ensure only the correct field strength CERD Board is plugged into the backplane (example, a 1.5T TPS/ISE Backplane will not accept the 1.0T CERD Board),




Personal injury possibility. TPS/ISE chassis is heavy and should be handled carefully. Use conventional heavy lifting techniques.

1. Install TPS/ISE Chassis in cabinet.



Equipment damage possibility. Avoid static electric damage to circuit board components. Handling TPS/ISE boards without taking proper grounding precautions could cause static damage to components. Wear a properly grounded wrist strap when handling circuit boards.


2. Remove all TPS/ISE boards from failed chassis and install them in new chassis.
3. Check backplane setup. See Illustration L2883A and Table 1 for jumper positions.

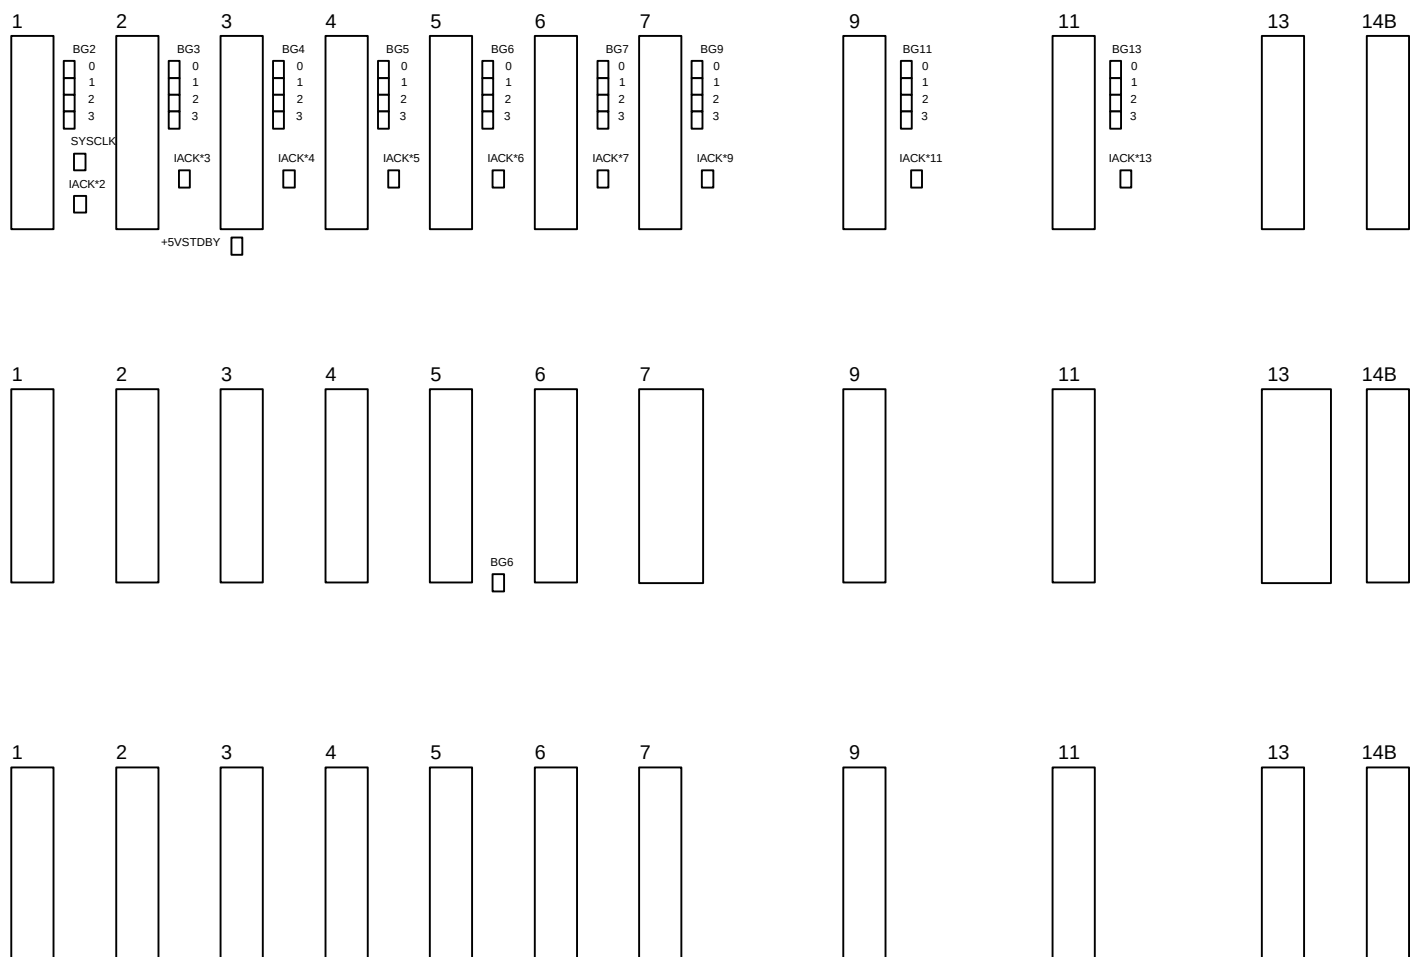

BACK SIDE OF BACKPLANE, VIEWED
AS PROJECTION THROUGH THE FRONT

TPS/ISE BACKPLANE
ILLUSTRATION L2883A

TABLE 1
JUMPER ILLUSTRATION

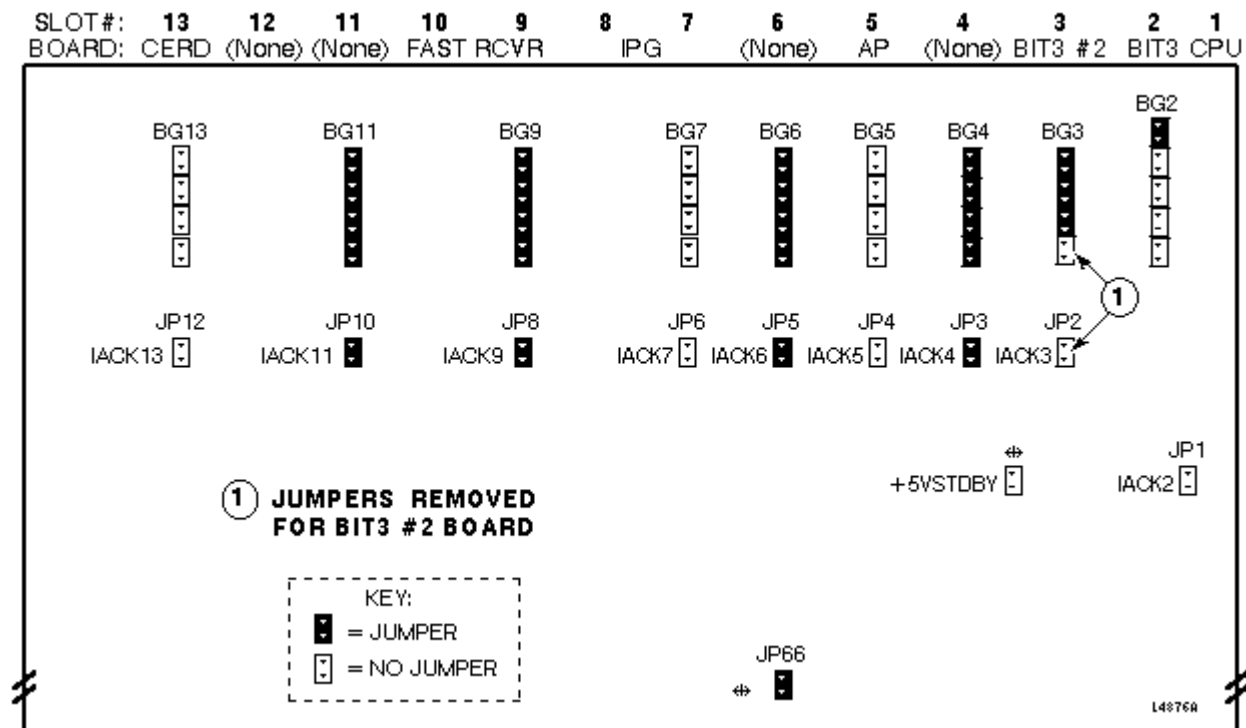

Note

Jumpers are in the “as shipped” configuration. refer to applicable option installation Direction for jumper configuration specific to each option.

4. Connect all power and signal cables to TPS/ISE Chassis.
5. Turn TPS/ISE power supply on with breaker on front.
6. Install front cover from System Cabinet.
7. Remove tag from CB6 on rear of System Cabinet, and turn on TPS/ISE power.
8. **[Reset TPS]** from the Service Desktop menu.

3- FUNCTIONAL CHECKS REQUIRED

1. Run one head and body scan.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 2, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.