

TABLE OF CONTENTS

TABLE OF CONTENTS 1

1- REMOVAL OF FAILED ASSEMBLY 2

2- REMOVAL OF EXPANSION MODULE (A2) 4

3- REMOVAL OF THE TNF ASSEMBLY (A24) 5

 3-1 Installation of Replacement TNF Assembly 6

 3-2 Installation (with TNF Expansion Module) 6


4- FUNCTIONAL CHECKS REQUIRED 7

REVISION HISTORY 8

Description - Procedure for replacing the TNF assembly, located in the system cabinet.


1- REMOVAL OF FAILED ASSEMBLY

1. Remove the system cabinet front cover.
2. Turn off the main circuit breaker, CB1 (see Illustration L4601A).

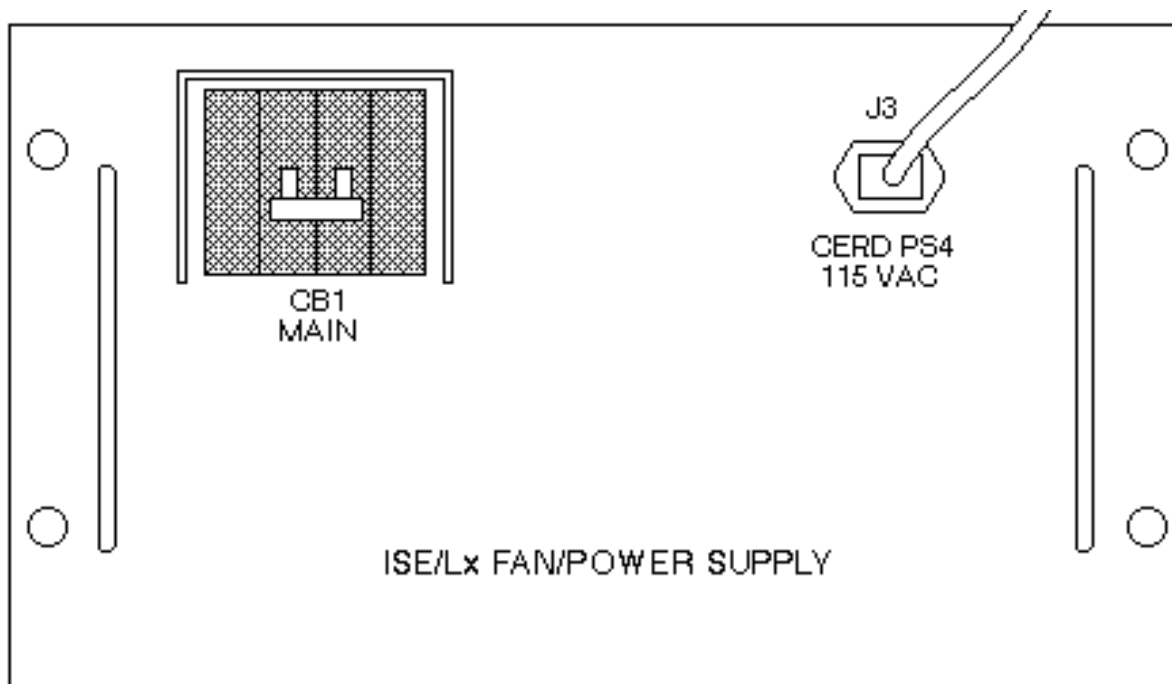


ISE/TPS FAN/POWER ASSEMBLY – FRONT VIEW
ILLUSTRATION L4601A

3. For additional access to cable connections on the TNF assembly, remove the two blank panels at the top of the front side of the system cabinet (See Illustration L4871A).

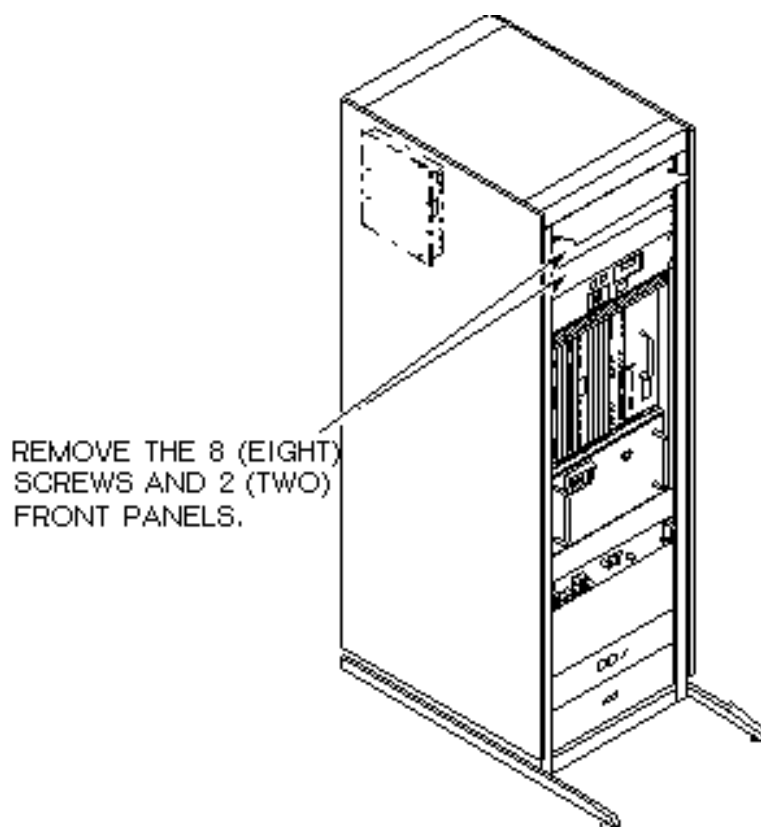

FRONT PANELS
ILLUSTRATION L4871

4. Open the system cabinet rear door.
5. Turn off power to the TNF assembly by disconnecting the power cord at J6 on the Power Panel (MR2 A12), (see Illustration L2534A).

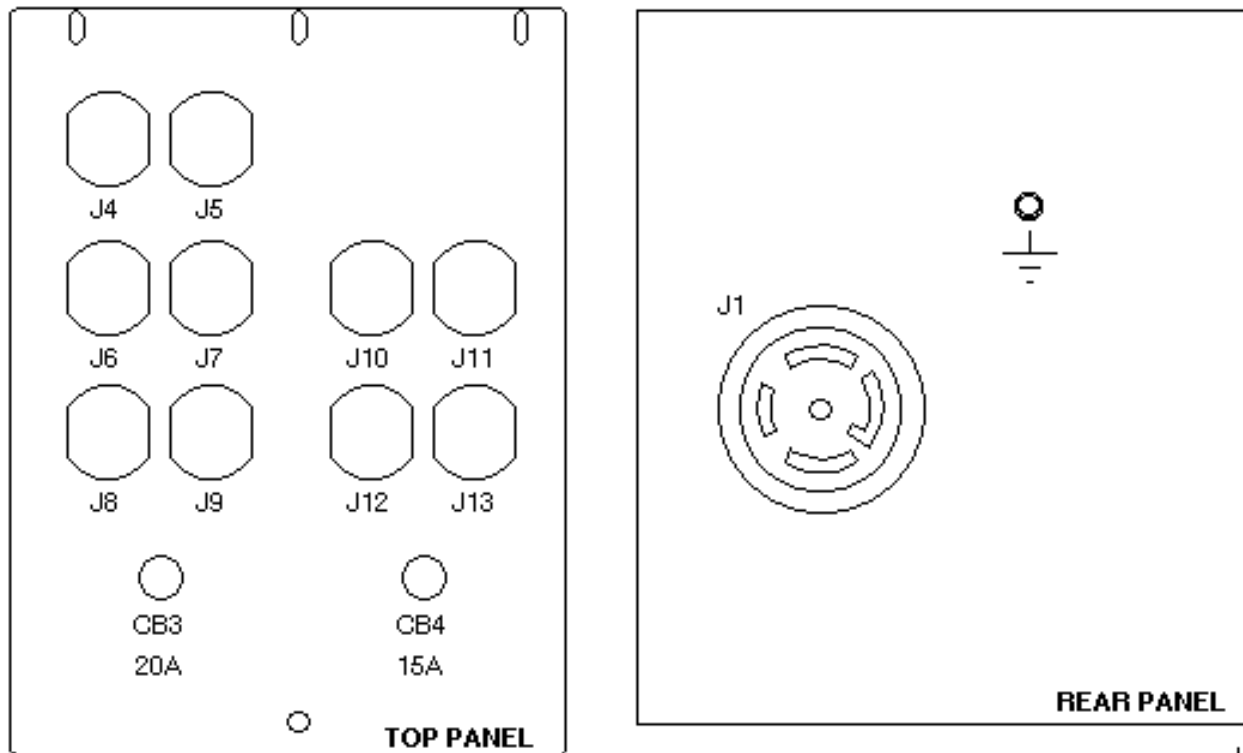

POWER OUTLET LOCATION
ILLUSTRATION L2534A




Equipment damage possibility. ESD procedures should be followed when removing the TNF assembly.

2- REMOVAL OF EXPANSION MODULE (A2)

If you do not have a TNF Expansion Module (MR2 A24 A2), proceed to Section 3- Removal of the TNF Assembly (A24)

1. Disconnect the power connector (J2) and signal connections (J8, J9, J10, J18, J19, J20) from the TNF Expansion Module (MR2 24 A2), (see Illustration L4863A in Section 2).

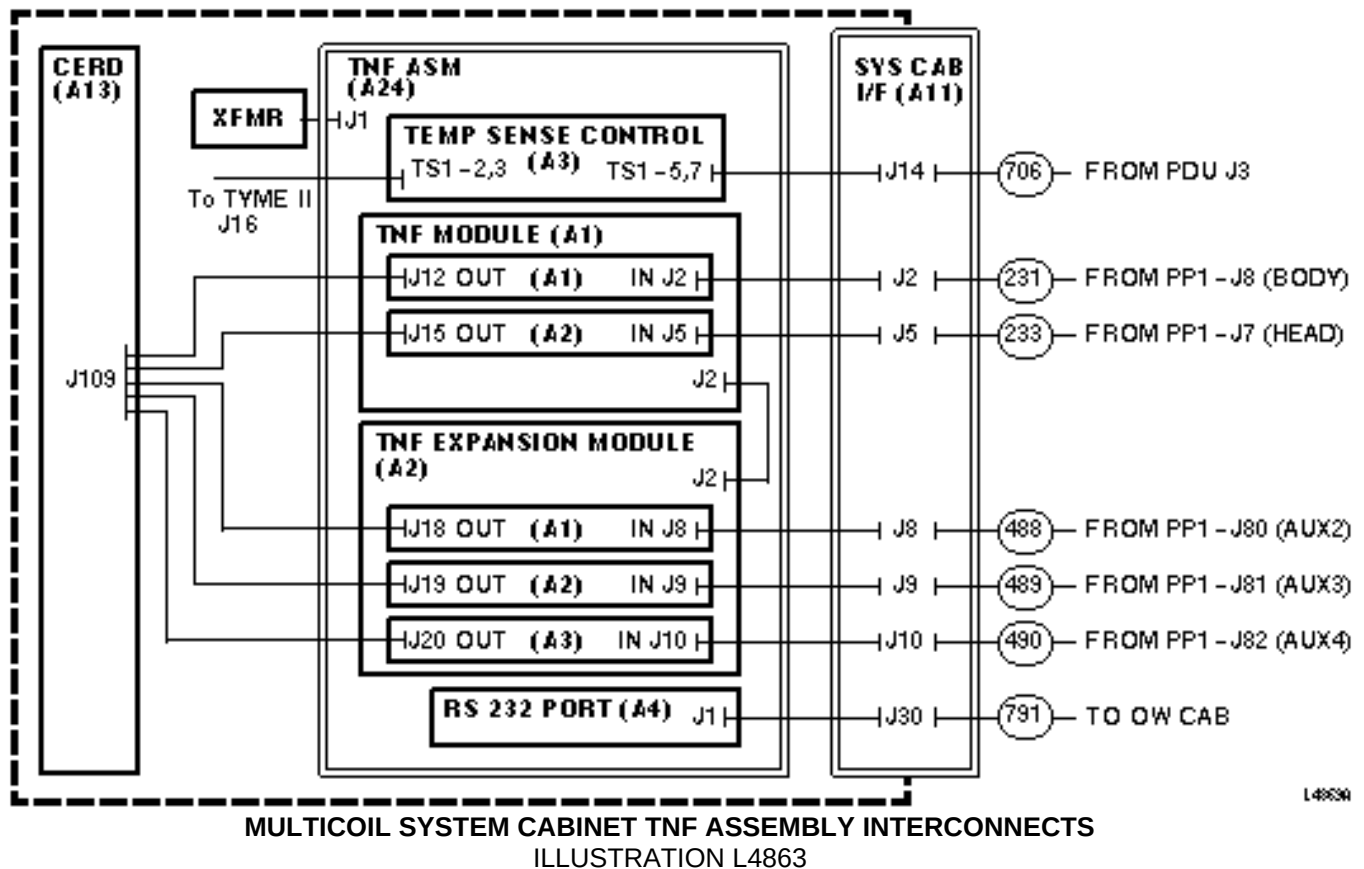

2. While holding the TNF Expansion Module remove the six screws that secure it to the TNF Module (MR2 A24 A1). Remove the TNF Expansion Module.
3. Remove five of the six stand-off posts from the TNF Module (A1). One is left on to hold the TNF Module in place until the TNF assembly is removed.

3- REMOVAL OF THE TNF ASSEMBLY (A24)

1. Disconnect the power connector (J1) and signal connections (J2, J5, J12, J15), from the TNF assembly (see Illustration L4863A in Section 2).
2. Disconnect the RS-232 connector (J1) from the RS-232 Port (MR2 A24 A4) (see Illustration L4863A in Section 2).
3. Disconnect terminal strip connections (TS1-2,3) & (TS1- 5,7) (MR2 A24 A3) (see Illustration L4863A in Section 2).
4. While holding the TNF assembly, remove the four screws that secure it to the mounting plate fastened to the inside of the system cabinet.
5. If the TNF assembly had an Expansion Module, remove the last standoff.

3-1 Installation of Replacement TNF Assembly

1. Install the TNF Assembly onto the mounting plate inside the system cabinet, and secure with the four screws removed in step 4 of section 3.
2. Connect terminal trip connections (TS1-2,3) & (TS1- 5,7) (MR2 A24 A3) (see Illustration L4863A in Section 2).
3. Connect the RS-232 connector (J1) from the RS-232 Port (MR2 A24 A4) (see Illustration L4863A in Section 2).
4. Connect the power connector (J1) and signal connections (J2, J5, J12, J15), from the TNF assembly (see Illustration L4863A in Section 2).
5. Restore power to the TNF assembly by connecting the power cord at J6 on the Power Panel (MR2 A12), (see Illustration L2534A in Section 1).
6. Close the system cabinet rear door.
7. Install the two blank panels at the top of the front side of the system cabinet (see Illustration L4871A in Section 1).
8. Turn on the main circuit breaker, CB1 (see Illustration L4601A in Section 1).
9. Install the system cabinet front cover, then select **[Reset TPS]**.

3-2 Installation (with TNF Expansion Module)

1. Remove the six screws that secure TNF Module (MR2 A24 A1) in place and replace them with the six stand-off posts removed in step 3, section 1.
2. Install the TNF Assembly onto the mounting plate inside the system cabinet and secure with the four screws removed in step 4, section 2.
3. Connect terminal strip connections (TS1-2,3) & (TS1- 5,7) (MR2 A24 A3) (see Illustration L4863A in Section 2).
4. Connect the RS-232 connector (J1) from the RS-232 Port (MR2 A24 A4) (see Illustration L4863A in Section 2).
5. Connect the power connector (J1) and signal connections (J2, J5, J12, J15), from the TNF assembly (see Illustration L4863A in Section 2).
6. While holding the TNF Expansion Module against the six stand-off posts, install the six screws removed in step 1-2 to secure the TNF Expansion Module (MR2 A24 A2).

7. Connect the power connector (J2) and signal connections (J8, J9, J10, J18, J19, J20) from the TNF Expansion Module (MR2 24 A2), (see Illustration L4863A in Section 2).
8. Restore power to the TNF assembly by connecting the power cord at J6 on the Power Panel (MR2 A12), (see Illustration L2534A in Section 1).
9. Close the system cabinet rear door.
10. Install the two blank panels at the top of the front side of the system cabinet (See Illustration L4871A in Section 1).
11. Turn on the main circuit breaker, CB1 (see Illustration L4601A in Section 1).
12. Install the system cabinet front cover, then select **[Reset TPS]**.

4- FUNCTIONAL CHECKS REQUIRED

1. Perform one head or body scan.

REVISION HISTORY

REV	DATE	AUTHOR	PRIMARY REASONS FOR CHANGE
0	June 2, 1998	J. Saperstein	Initial Conversion from Toolbook to Word.