

820-0240 Install Instructions Resistivity Sensor Kit (PN 205-0121-12) GE PN 5267649

Tools Required:

- Adjustable wrench or Slip Wrench
- Nylon Plug Fitting (Lytron PN 430-0277)
- Teflon[™] Tape
- Loctite[™] 565
- Tie Wraps

NOTE: For systems with 2 Resistivity sensors, please refer to Procedure below as well as the procedure starting on page 2 of this instruction for removal of duplicate sensor.

Procedure:

1. Shutdown and Lockout/Tag out system in accordance with GE procedures.

NOTE: The Gradient Pump should be off before proceeding - verify by looking at variable frequency drive for GPMP, the display should be blank.

2. Drain the gradient coil reservoir by following GE service procedures.
3. Unplug the failed DI sensor from the appropriate jack on the side of the Signal Box. Refer to the table and photo below:

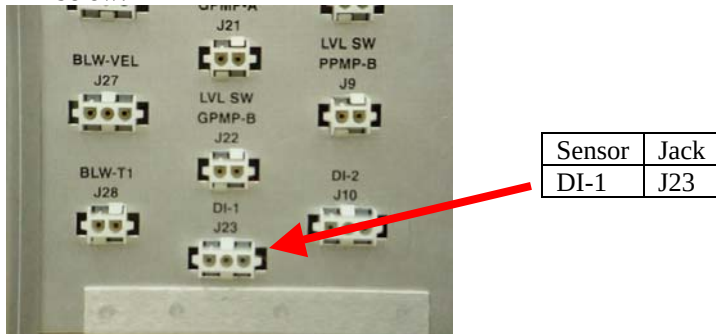


Illustration 1 Detail of DI Sensor Jack on side of Signal Box

4. Remove the DI sensor cable from its routing from the tank to the right side of the Signal Box.
5. Using an adjustable wrench, unscrew the DI Sensor from the tank.



DI Sensor


Illustration 2 DI Sensor Location

Installation of Resistivity Sensor Kit.

1. Apply adequate amount of Loctite™ 565 around the threads of the new sensor.
2. Using the adjustable wrench, screw new sensor into the tank. Allow at least 30 minutes for Loctite™ to set up.
3. After making a service loop by the tank, tie wrap cable in place along route to Signal Box.
4. Plug new sensor into DI-1 (J23) on the side of the Signal Box.
5. Fill the system with coolant previously removed using the funnel provided in the HEC and remove LOTO.
6. Restore power to the HEC and restart pumps and blower if they don't come on automatically (hold up and push F1, F2, F3).
7. Check for leaks around sensor just replaced.
8. Monitor system for proper operation.

Procedure (For systems having 2 Resistivity Sensors in Tank):

1. Shutdown and Lockout/Tag out system in accordance with GE procedures.
NOTE: The Gradient Pump should be off before proceeding - verify by looking at variable frequency drive for GPMP, the display should be blank.
2. Drain the gradient coil reservoir by following GE service procedures.
3. Unplug the failed DI sensor from the appropriate jack on the side of the Signal Box. Refer to the table and photo below:

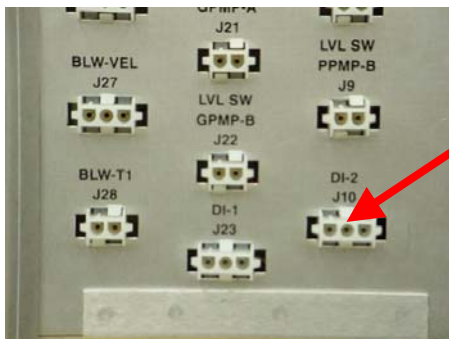

Sensor	Jack
DI-2	J10

Illustration 3 Detail of DI Sensor Jack on side of Signal Box

4. Remove the DI sensor cable from its routing from the tank to the right side of the Signal Box.
5. Using an adjustable wrench, unscrew the DI Sensor from the tank.



DI Sensor
DI-2

6. Refer to ***Installation of Resistivity Sensor Kit*** for installation steps.

End of Procedure