


SECTION 1– SHIPPING / DELIVERY INSTRUCTIONS

1-1 INTRANSIT SERVICE

Note


The following information outlines provisions for filling and electrical / temperature checks while magnet is still in shipping crate. This will enable required service to be performed in transit based upon magnet shipping date. The following Illustrations (1-1 through 1-4) show the magnet configuration behind each shipping crate access door. Access doors and hinges not shown for clarity.

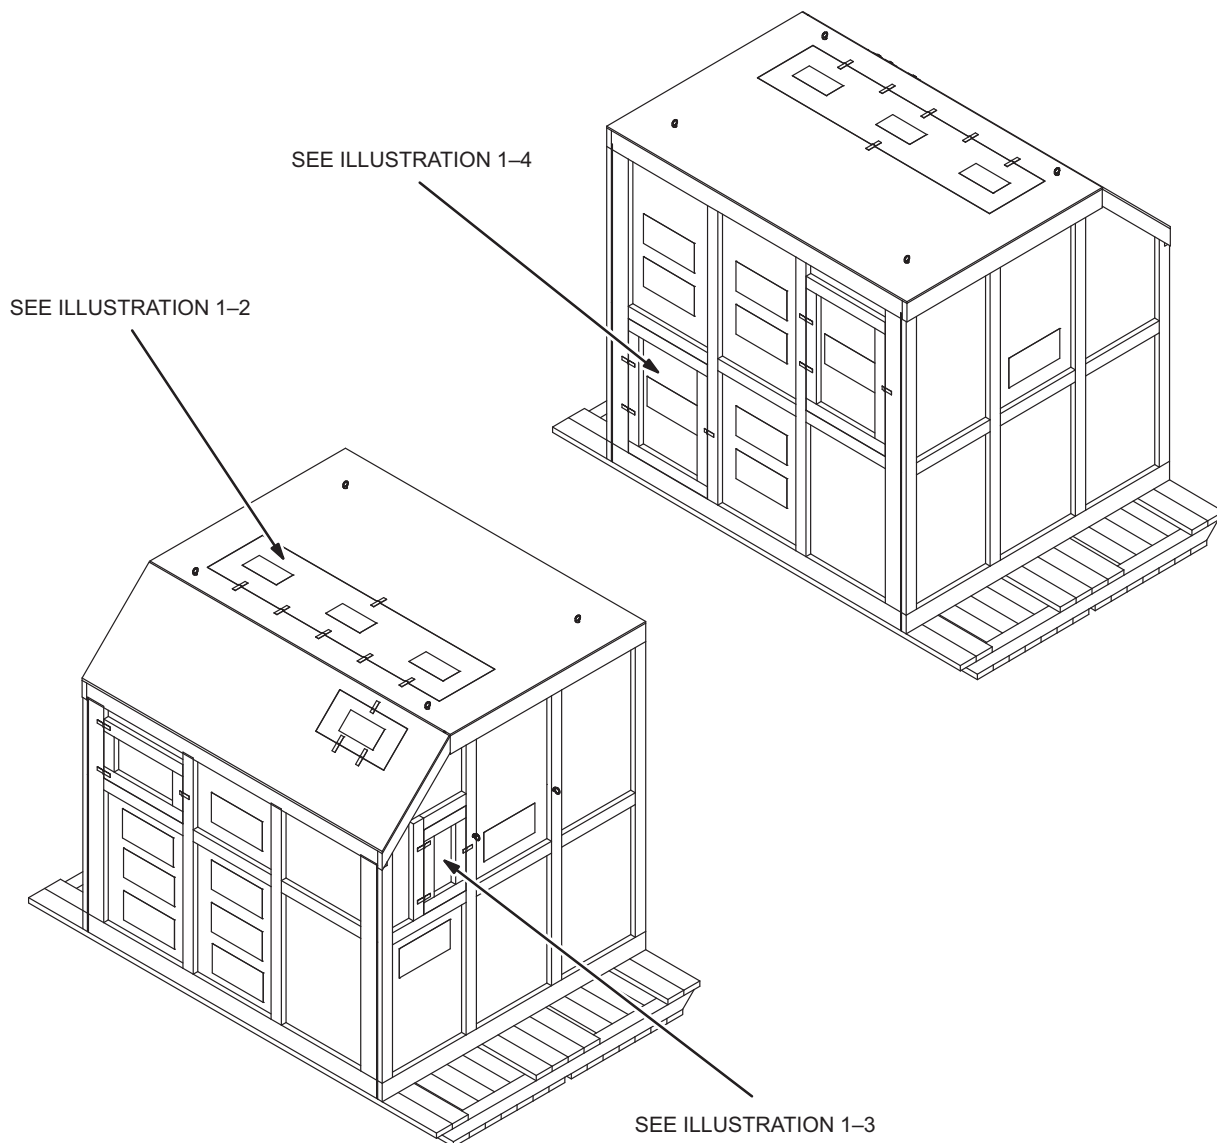


ACCESS DOOR LABELING ON CRATE

ILLUSTRATION 1-1


1-1 INTRANSIT SERVICE (continued)

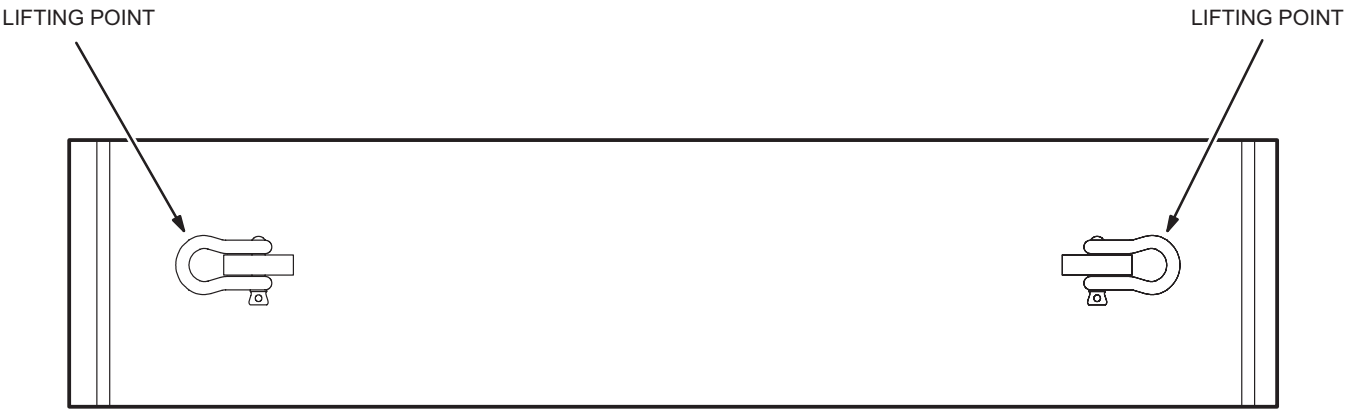

TOP ACCESS DOOR LABELED “LIFTING POINT”
ILLUSTRATION 1-2

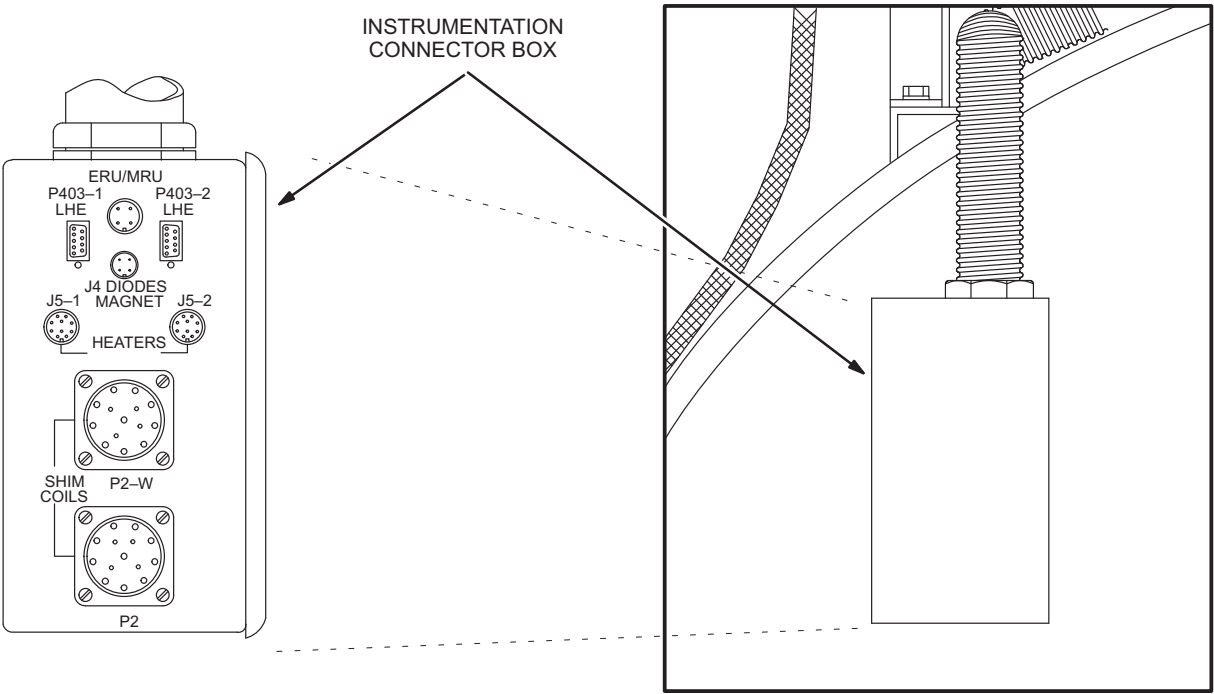

FRONT ACCESS DOOR LABELED “INSTRUMENT CONNECTOR”
ILLUSTRATION 1-3

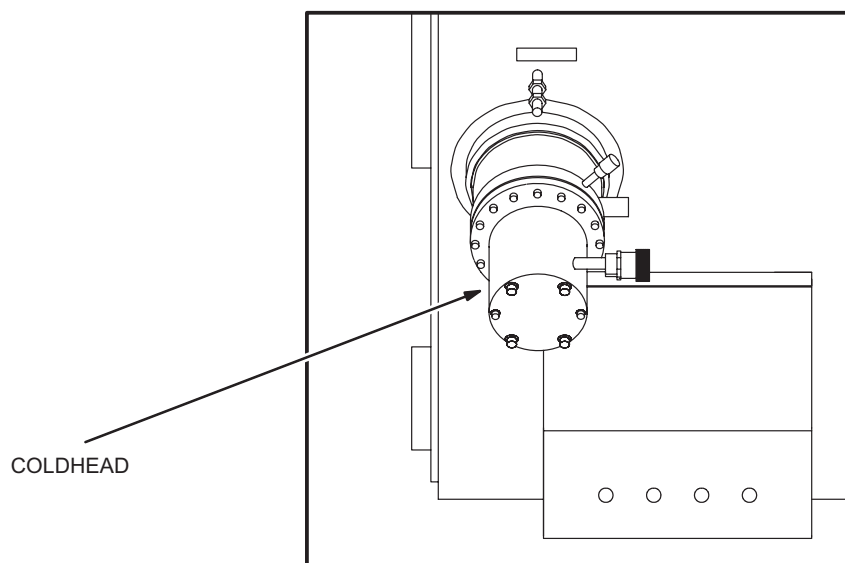1-1 INTRANSIT SERVICE (continued)

LEFT SIDE ACCESS DOOR LABELED "COLD HEAD ACCESS"
ILLUSTRATION 1-4

1-2 SHIPPING / HANDLING

Shipping and handling guidelines are provided in Table 1-1.

These guidelines must be followed to prevent any potential damage to the magnet during shipping and handling.

Review guidelines with Shipper / Riggers prior to transporting magnet.

TABLE 1-1
MAGNET SHIPPING AND HANDLING INFORMATION

MAGNET	* MAXIMUM WEIGHT	** MAXIMUM TILT	(1) ALLOWABLE SHIPPING MODES	(2) FORKLIFT CAPABILITY
SIV	SIV = 19,300 lbs.	30 deg.	A, T, Tr, B	Yes

MAGNET	SHIPPING CAPABILITY	(3) MAXIMUM TRANSIT TIME	MAXIMUM SHOCK LOADS	COMMENTS
SIV	Cold	21 days	2 G's	See Notes

* Includes weight of Shipping Crate (2,200 lbs.)

** Tilt allowed when suspended by Lifting Shackles.

Notes:

- Key for Shipping mode symbols:
 - "A" Airplane (including any plane that has fuselage openings large enough to accept a magnet)
 - "T" Air ride Trailer (Any magnet transported on a non-air ride trailer must be identified and never used in a Mobile trailer.)
 - "Tr" Train
 - "B" Boat or ocean going ship
- Extreme care must be exercised during forklift operations. The magnet pallet / crate must be picked up from the sides only. The forks MUST be placed directly under the four (4) feet of the magnet. The magnet feet can be identified by the steel plates attached to the pallet.
- The elapsed time begins when the magnet leaves the Florence loading dock.