

Effectivity

The following CT Equipment is affected:

2260619 LightSpeed Plus Gantry Assembly
2281841, -2 Folding Front Cover Dollies

Purpose

The purpose of this FMI is to install additional guards, which will further reduce the risk of injury to service personnel.

Furnished Materials

FMI Kit Part Number 2299385 includes the items listed below.

Qty	Description	Part #
1	FMI Document	2299184-100
1	Plastic Terminal strip guard for x-fmr	2290204
1	Sheet metal axial drive guard	2294730
2	Dolly U bracket	2300868
2	Front cover dolly washer	46-328431P3
2	Front cover U bracket and h/w	2297948

Required Tools and Test Equipment

Qty	Description	Part #
1	8 mm Hex Wrench	
1	6 mm Hex Wrench	
1	4 mm Hex Wrench	
AR	Loctite	

Disposal

U.S. ONLY

- 1.) Return all obsolete parts to:

GEMS Recycling Center
c/o ACE Warehouse, Bldg. 11
2200 College Avenue
Cudahy, WI 53110

- 2.) Destroy and/or dispose of all obsolete software and documentation according to GE policy.

INTERNATIONAL SITES (OUTSIDE THE U.S.)

Destroy and/or dispose of all obsolete hardware, software and documentation according to GE policy.

People Power

Allow 1.0 hours of labor for the completion of this FMI.

Procedure

1 Front Cover Dolly Base Bracket (2300868) Installation



Figure 1 Assemble front cover dolly base, using new bracket

- 1.) Unfold front cover dolly base.
- 2.) Place dolly upright onto dolly base.
- 3.) Slide bracket over both pieces of the base, as shown in Figure 1.
- 4.) Slide pin through all three pieces.

2 Front Cover Dolly U-Bracket (2297948) Installation

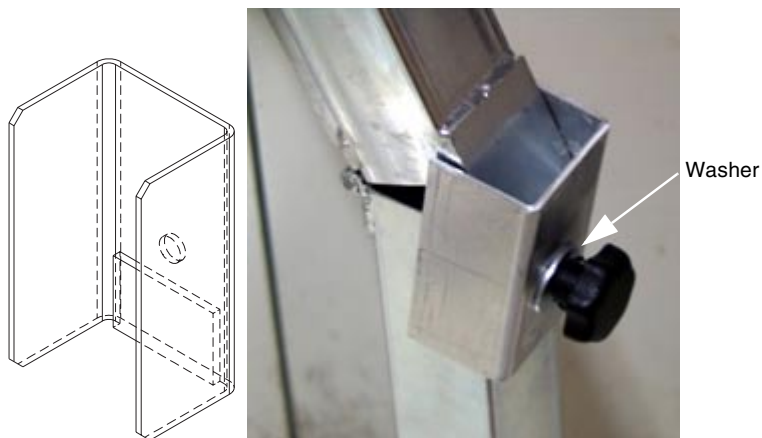


Figure 2 New Front Cover Dolly U-Bracket

- 1.) Remove the thumbscrew from the front cover dolly upright.
- 2.) With the dolly upright unfolded, position the new u-bracket so that its hole lines up with the thumbscrew hole.
- 3.) Using washer (see Figure 2), reinsert thumbscrew and tighten.

3 Gantry Preparation

3.1 Side Cover Removal

CAUTION
Potential for
injury if covers
removed and
power is left
"ON".

- 1.) Lower table to home (lowest) position.

Always remove the right side cover first, and turn "OFF" power at the STC.

- 2.) Use an 8mm Hex wrench to unlatch the side cover from the front cover. See Figure 3.

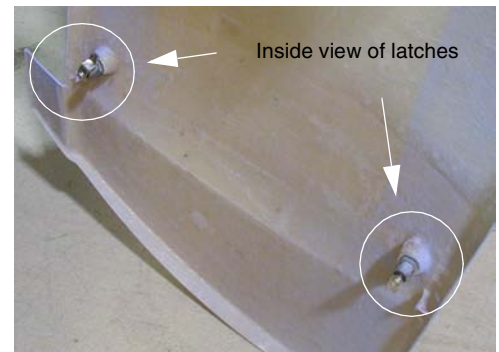
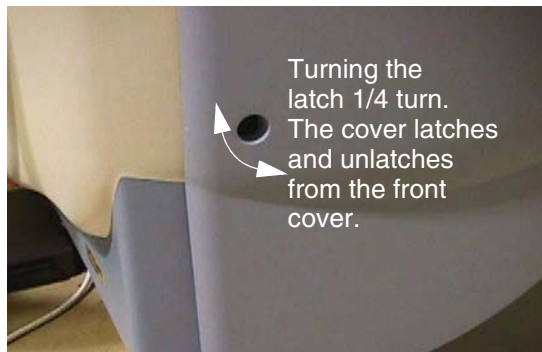


Figure 3 Side Cover Latches

- 3.) Remove the right side cover by lifting it upward to release the two (2) latches, located on the top edge of the cover. Once removed, the STC backplane should be exposed.

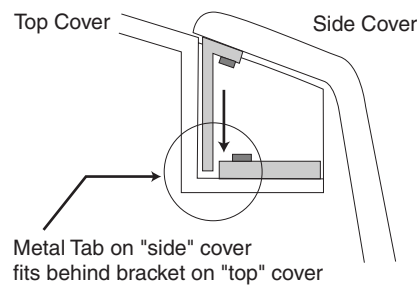


Figure 4 Side and Top Cover Clasp

- 4.) Turn off all three (3) power switches on the STC backplane.

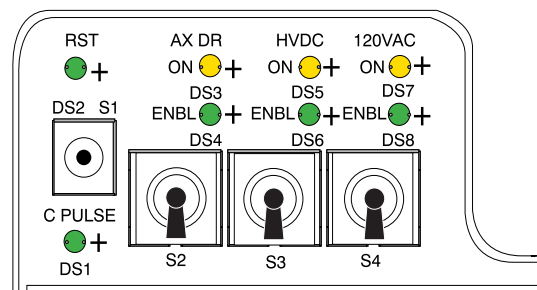


Figure 5 STC Power Switches

- 5.) Repeat steps 1-3 for the left side cover.

3.2 Top Cover Removal

- 1.) Take the end of the top cover nearest to the side cover and tilt upwards.
- 2.) Slide the cover down 75 millimeters. This allows the cover's tab to disengage from the mounting bracket. See Figure 6.

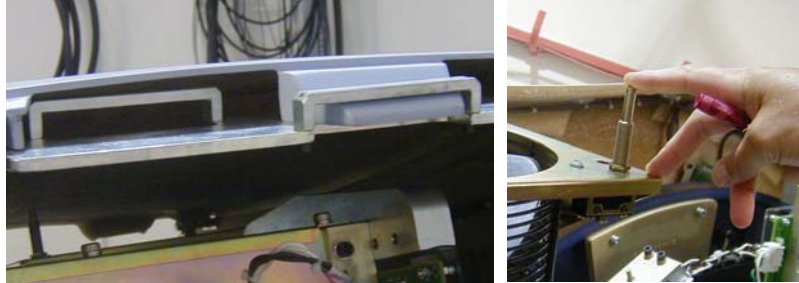


Figure 6 Top cover tabs and bracket, plus fan interlock switch.

- 3.) Lift the cover clear and repeat the above steps for the other cover.

3.3 Rear Cover Removal

- 1.) Assemble the rear cover dolly.
 - a.) Tighten the two (2) shoulder bolts to the rear cover.



Figure 7 One side of the Rear cover dolly

- b.) Fit side dolly through the shoulder bolts and secure assembly with two (2) wing nuts. See Figure 7.
 - c.) Repeat steps a and b for the other side dolly.



CAUTION
Potential for
injury with
covers removed
and power ON.

- 2.) Disconnect cables on the right side of the rear cover.
- 3.) Remove rear cover.
 - a.) Disengage upper and lower cantrell brackets on both sides of the rear cover.
 - 1.) Using steady but firm pressure, lift each of the lower cantrell brackets from their associated retainers. See Figure 8.

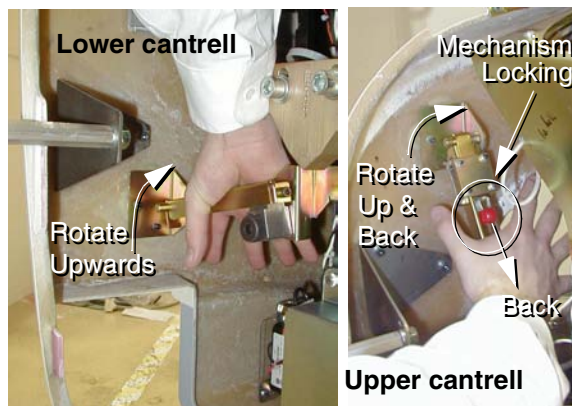


Figure 8 Releasing cover brackets

- 2.) Disengage the locking mechanism on the upper cantrell brackets by using your thumb to slide the trigger (red lever) back. This will release the locking mechanism and allow the cantrell to be rotated upwards with steady and firm pressure.
- b.) Disengage the rubber retaining straps on both sides.

4 Transformer Terminal Guard (2290204) Replacement

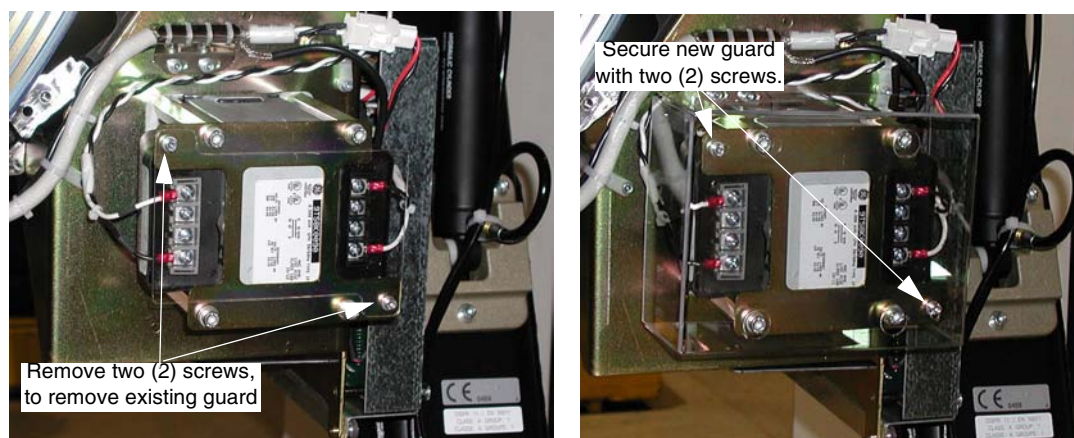


Figure 9 Replace x-fmr terminal guard (plastic) — old is shown at left, new at right

- 1.) Locate the HEMRC/step-up transformer (located on the axial dynamic braking module, at the gantry's bottom right, as you view the gantry from the rear).
- 2.) Remove the existing transformer terminal guard, by removing two (2) 4mm hex screws and washers (two plain and two lock washers).
- 3.) Attach new transformer terminal guard, using the two (2) screws and four (4) washers removed in step 2.
- 4.) Properly dispose of obsolete guard.

5 Axial Drive Guard (2294730) Replacement

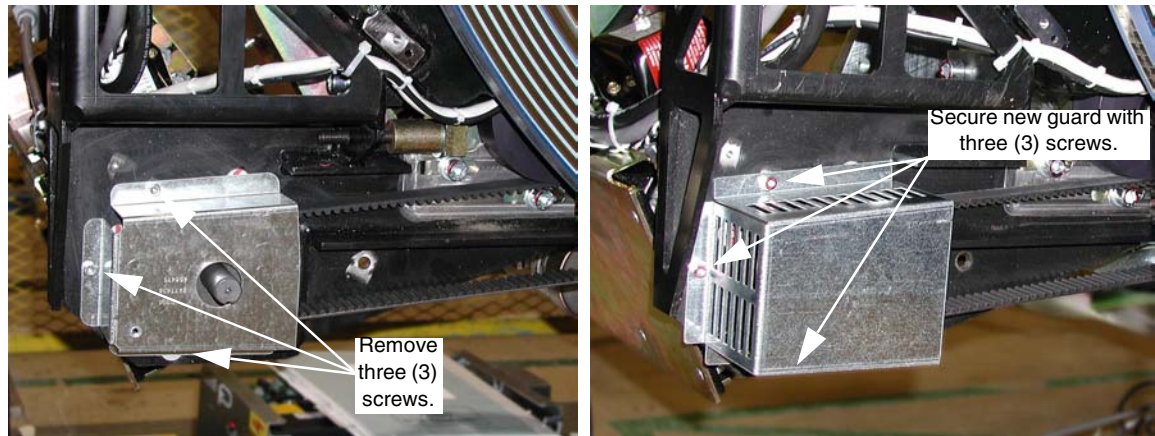


Figure 10 Replace Axial Drive Guard (sheet metal) — old is shown at left, new at right

- 1.) Locate the existing Axial Drive Guard (bottom left, as you view the gantry from the rear).
- 2.) Remove the existing guard, by removing three (3) 6 mm hex screws.
- 3.) Attach new axial guard, using the three (3) 6 mm hex screws and loctite. Torque to 7.9 N-m.
- 4.) Properly dispose of old guard.

6 Gantry Reassembly

Reverse the steps in *3 Gantry Preparation*, to reassemble the gantry.

End of Document