


MR EXCITE2 HP XW8000 "PC LINUX HOST" OVERVIEW

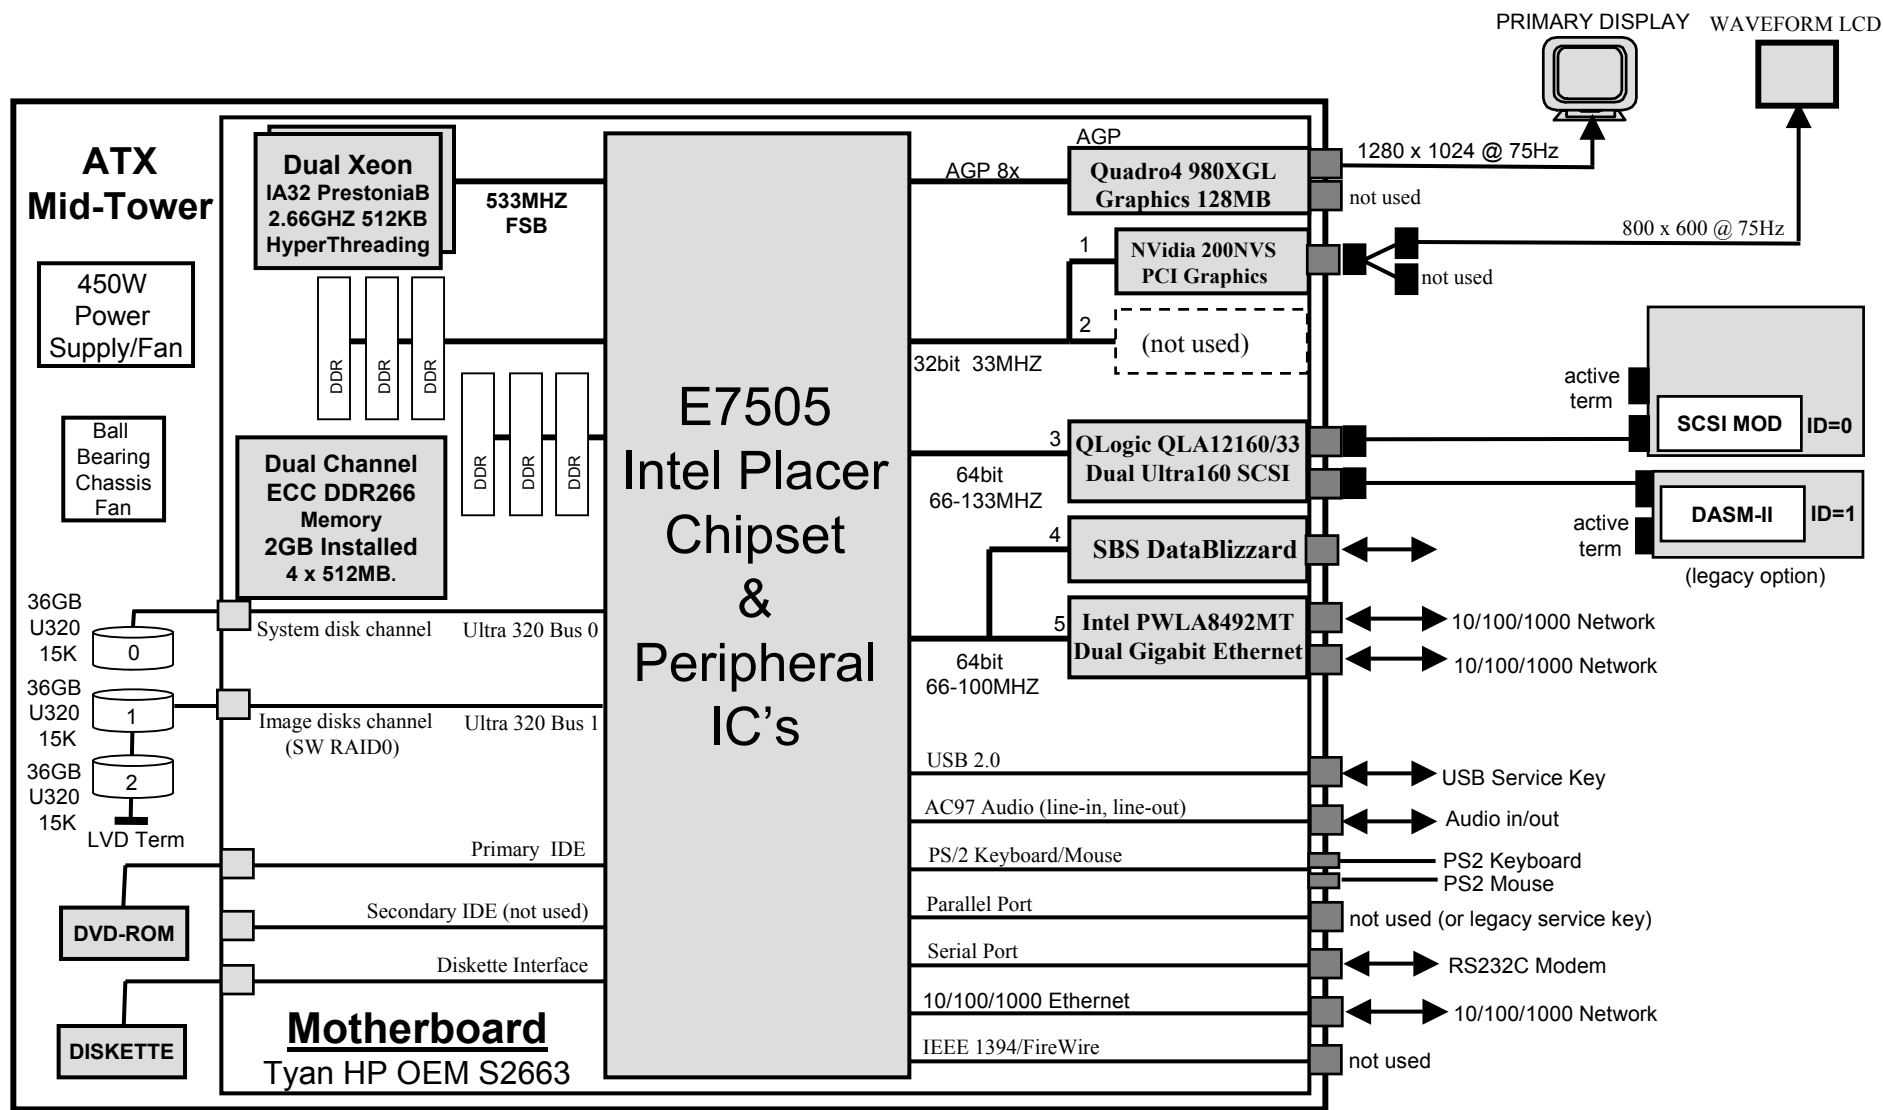

HP XW8000 TROUBLESHOOTING – LED's

Power LED is Flashing or Red

The Power LED on the Power On/Off button has the following states:

- **Solid green:** System on
- **Solid yellow:** Stand By or Hibernate Mode (not used)
- **Flashing yellow or solid red:** System error


Hard Disk Drive Activity LED

If the hard disk drive activity LED flickers whenever the system is accessing either hard drive.


Network Activity LED

The network activity LED at the rear of the system on the onboard network port flicker whenever there is network activity (as long as the system is plugged into AC power with power switch on or off).

Front View of Workstation

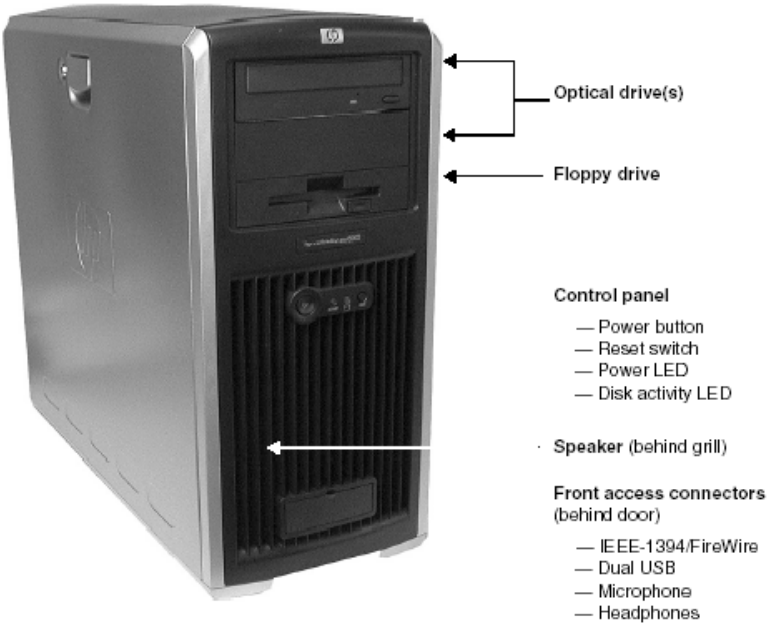

Rear View of Workstation

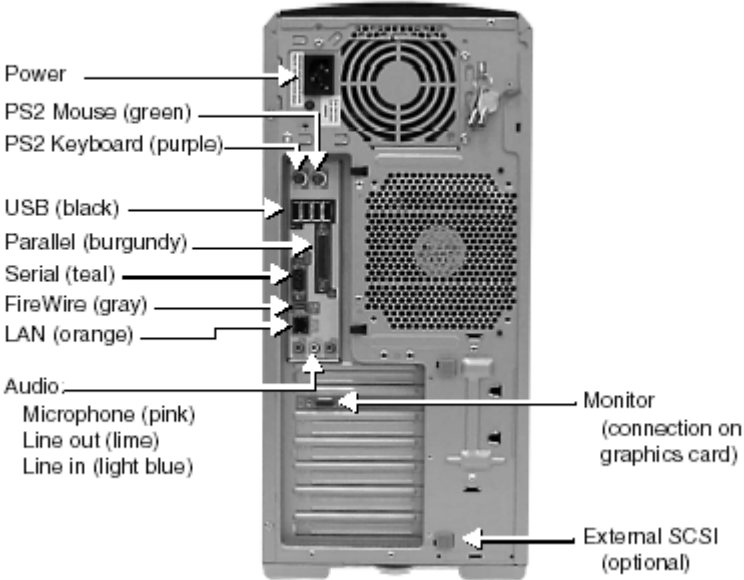

HP XW8000 TROUBLESHOOTING – Error Codes On Screen

The Power-on-Self-Test (POST) can detect both an error and a change to the configuration. In either case, a code and short description is displayed.

- Press # to see more details about the message. After viewing these details, you are returned to the original POST display screen.

Common POST errors and recommended solutions:

- **error 0010:** The PC configuration has been lost, cleared, corrupted or has not been initialized. When the PC remains unplugged for a long period of time, the battery that provides the current to keep the CMOS memory powered may become discharged.
- **error 0011:** When the PC remains unplugged for a long period of time, the battery that provides the current to keep the PC date and time may become discharged.
- **error 0012:** The PC configuration has been cleared or has not been initialized.
- **error 0031:** The microcode update for your processor was not found in the system BIOS. The microcode update corrects some errata inside the processor. When it is not loaded, the processor may function incorrectly, potentially causing data loss or corruption. Your BIOS version is probably too old and does not contain the microcode update suitable for your processor.
- **error 0100:** A key on the keyboard has been pressed during the PC power-on self-test.
 1. Ensure that nothing was put on the keyboard during boot process, and that a key was not accidentally pressed down.
 2. If the error persists, your keyboard may need to be replaced.

- **error 0101:** The keyboard has reported an error during its self-test.

1. Restart your PC.
2. If the error persists, your keyboard may need to be replaced.

- **error 0102:** The system board self-test has detected a general failure on the integrated keyboard controller. Your system board may need to be replaced.

- **error 0103:** The keyboard is not connected.

1. Check that the keyboard connector is firmly connected.
2. If the problem persists, your keyboard cable may be damaged or your keyboard may need to be replaced.

- **error 0105:** The mouse has reported an error during its self-test.

1. Clean the mouse and its moving ball
2. If the problem persists, your mouse may need to be replaced.

- **error 0106:** The mouse is not responding.

1. Check that the mouse connector is firmly connected.
2. If the problem persists, your mouse may need to be replaced.

- **error 0108:** The system configuration has detected that the mouse and keyboard connections are inverted.

1. Turn of the system.
2. Swap the mouse and keyboard connections.

HP XW8000 TROUBLESHOOTING – Beep Codes

Troubleshooting with the HP e-buzzer

When your system starts up, the system firmware performs pre-boot diagnostics to test your hardware configuration for most problems.

If a problem is detected during pre-boot, the system e-buzzer will emit audible beeps and an encoded error message. The e-buzzer emits a different number of beeps for each type of error. The sequence may start with a modem-like sound lasting about three seconds, followed by a number of clear beeps, or the e-buzzer may simply emit clear beeps.

The e-buzzer reports the following errors after a 15-second timeout on that component:

- Memory (3 beeps)
- Graphics card (4 beeps)
- PnP/PCI card (5 beeps)

Beeps	Component	Error	Solution
0	N/A	No problem or power button stuck	Make sure power button is not stuck
1	Processor	Processor failure	Cycle power, if problem persists, replace FRU
2	Power Supply	Power supply failure	Cycle power, if problem persists, replace FRU
3	Memory	Memory failure	Cycle power, if problem persists, replace FRU
4	Video	Graphics Card	Cycle power, if problem persists, replace FRU
5	PCI Card	PnP/PCI card initialization problem	Cycle power, if problem persists, replace FRU
6	BIOS	Corrupted BIOS	Cycle power, if problem persists, replace FRU
7	System Board	Defective system board	Cycle power, if problem persists, replace FRU