




10-3 UPGRADE FOR HORIZON STYLE MAGNET ENCLOSURE

10-3-1 TABLE REMOVAL AND CARRIAGE POSITIONING

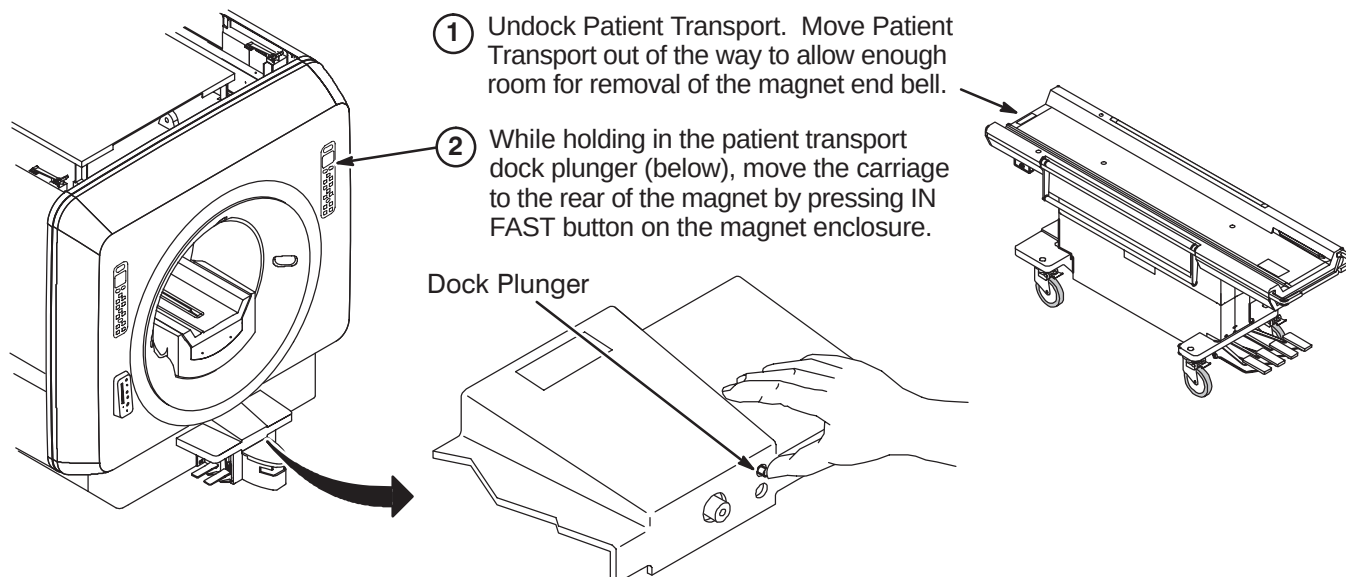

10-3-2 REMOVAL OF ENCLOSURE COVERS

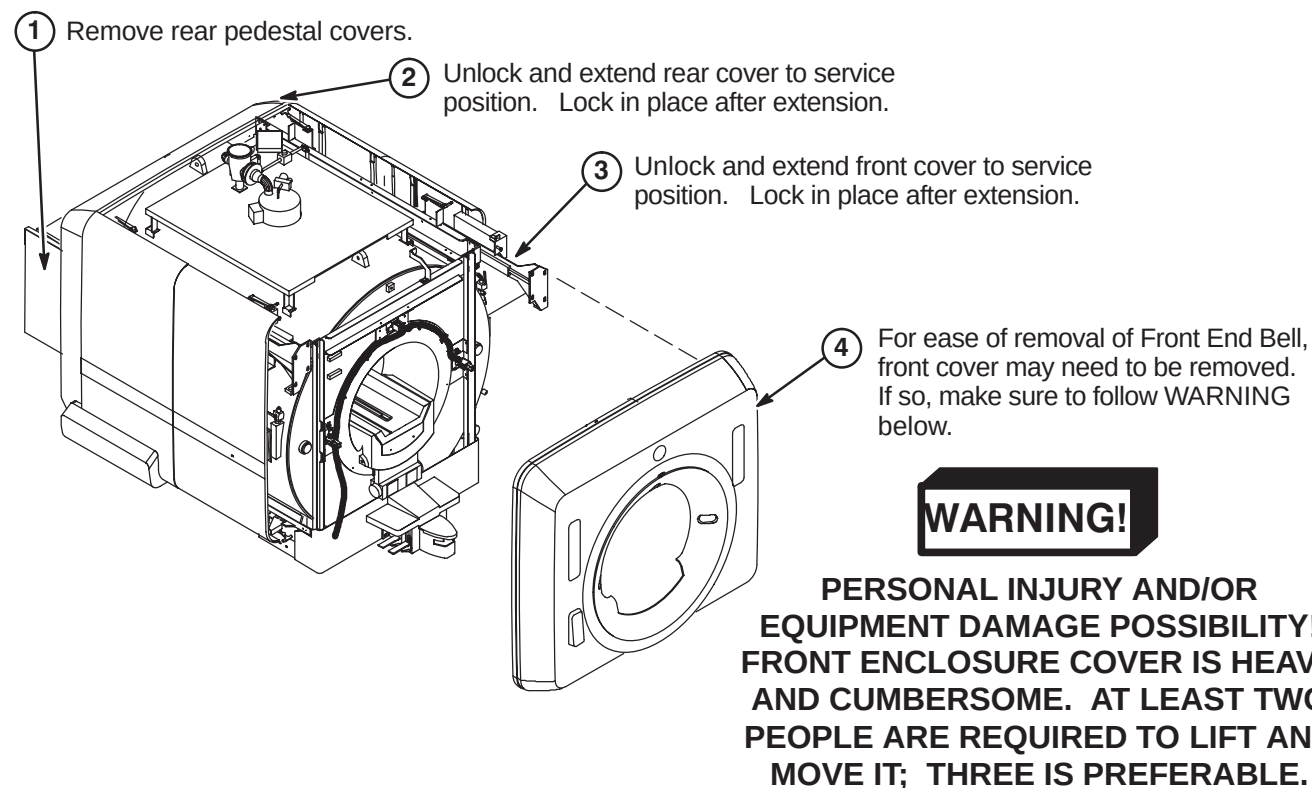


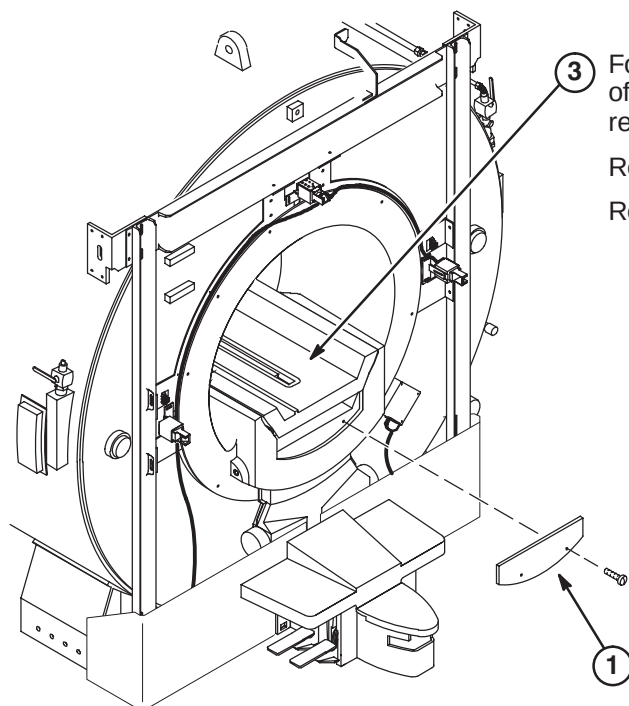10-3-3 REMOVAL OF FRONT END BELL PANEL

③ For removal of Front End Bell, Bridge must be moved out of the way either by lifting the front end or complete removal.

Refer to Section **10-3-4-A** for procedure to lift the Bridge.

Refer to Section **10-3-4-B** for removal of Bridge.

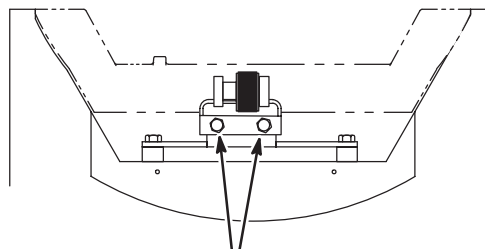


② Unfasten M10 flat washers, lock washers, and screws attaching front end of bridge asm to front end bell.

① Unfasten (2) M6 x 25 pan screws and remove end bell panel.

10-3-4 BRIDGE HANDLING OPTIONS PRIOR TO REMOVAL OF FRONT END BELL


The Bridge needs to be repositioned or removed prior to removal of Front End Bell. Review sections **10-3-4-A** and **10-3-4-B**. Determine which method would best fit the needs of your site.

10-3-4-A Lifting Front End Of Bridge

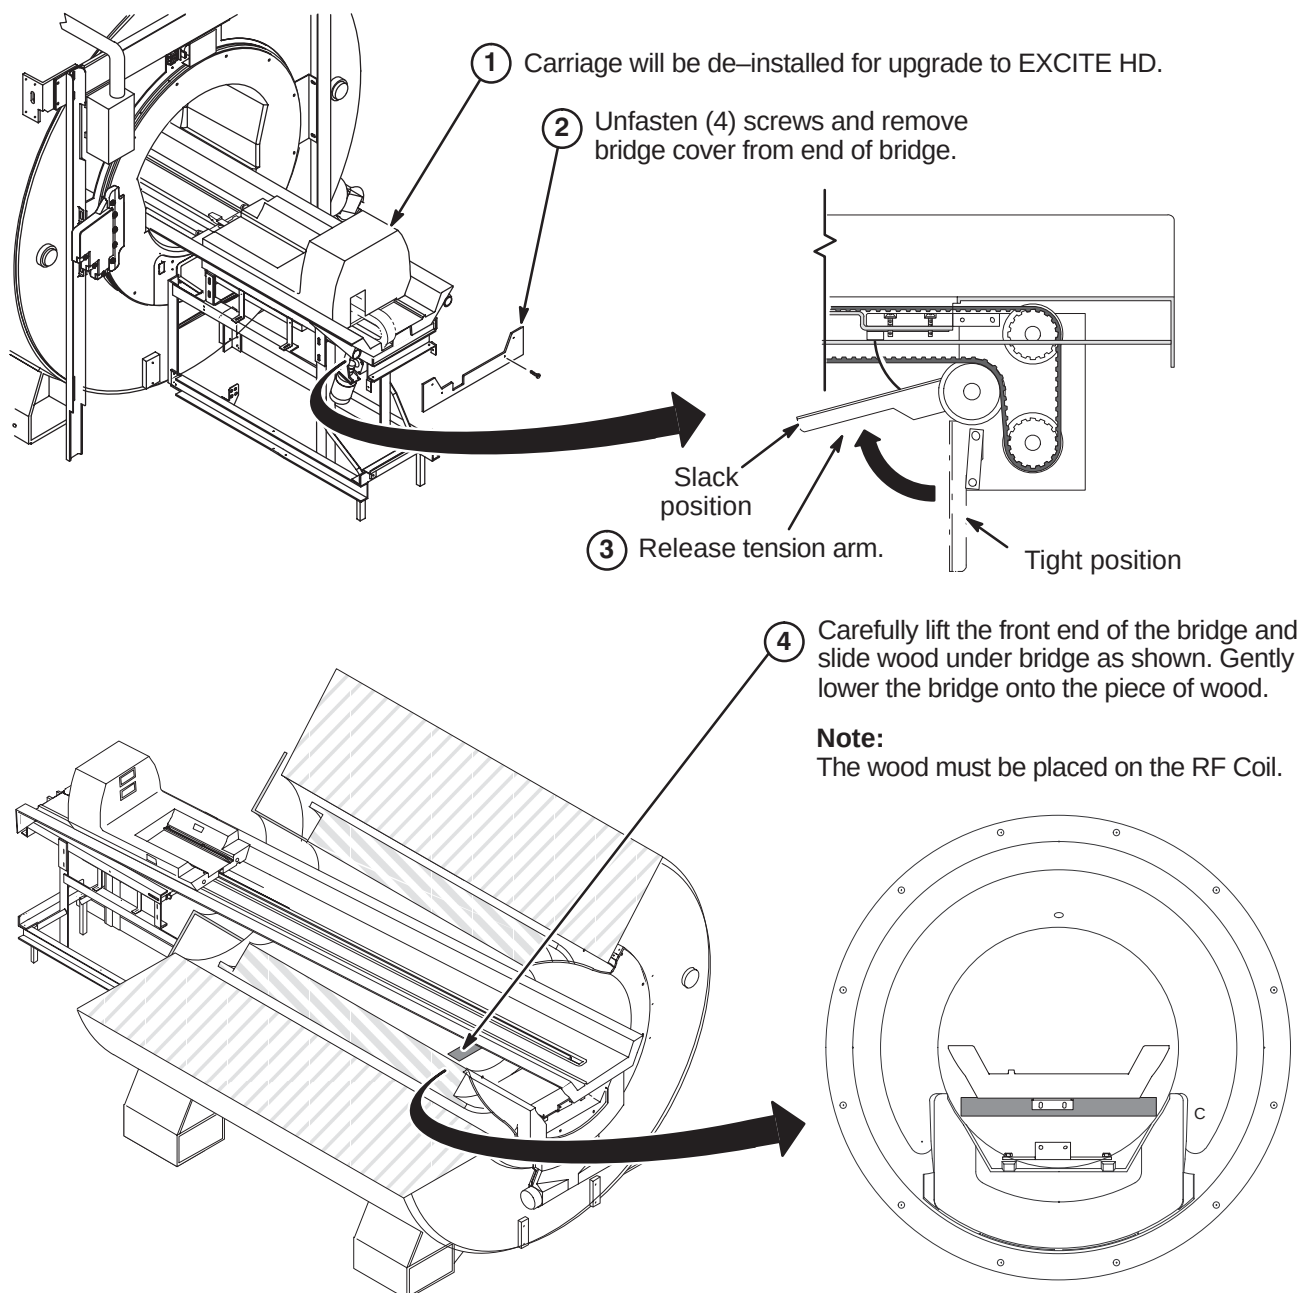

10-3-4-B Removal of Bridge


The upgrade to EXCITE HD requires a new LPCA with Cable Track and 16 Channel Switch. The de-installation instructions for existing components being replaced are located in the applicable magnet enclosure upgrade procedure in this manual. The steps below should be part of these de-installation instructions.

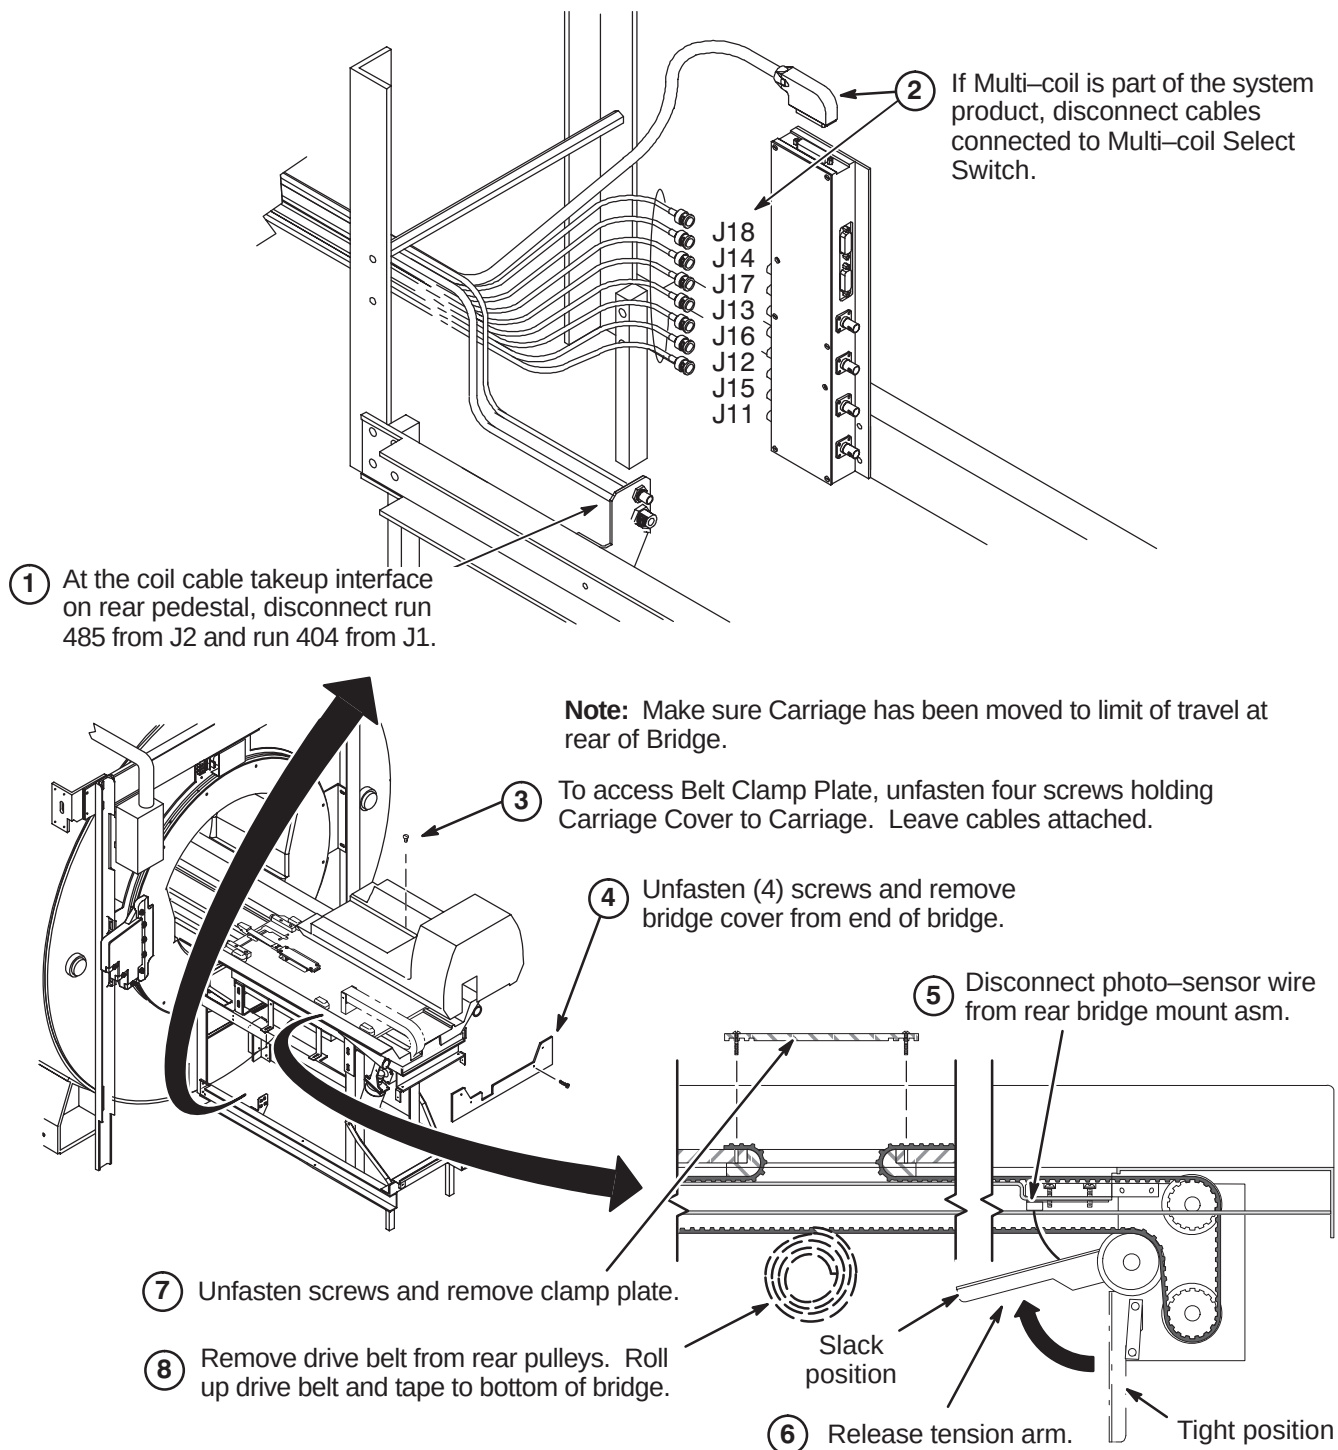


10-3-4-B Removal of Bridge (continued)

CAUTION

Possible equipment damage! Be careful not to damage the home flag on the drive belt when removing or replacing the bridge. The home flag is fragile and can easily be damaged.

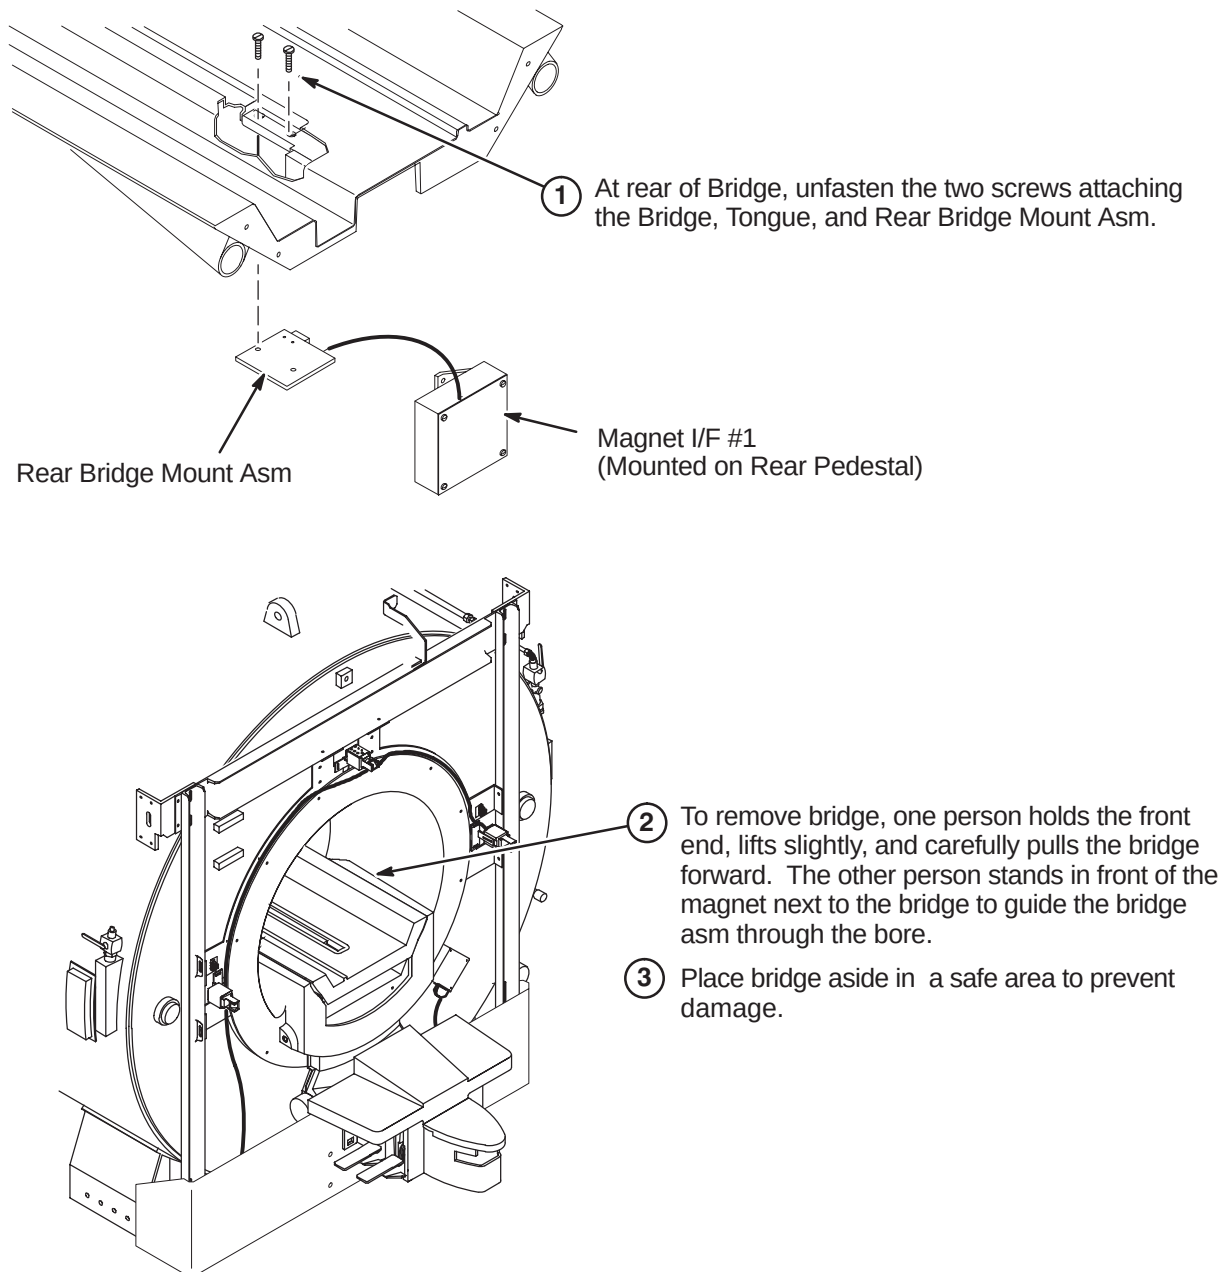


L

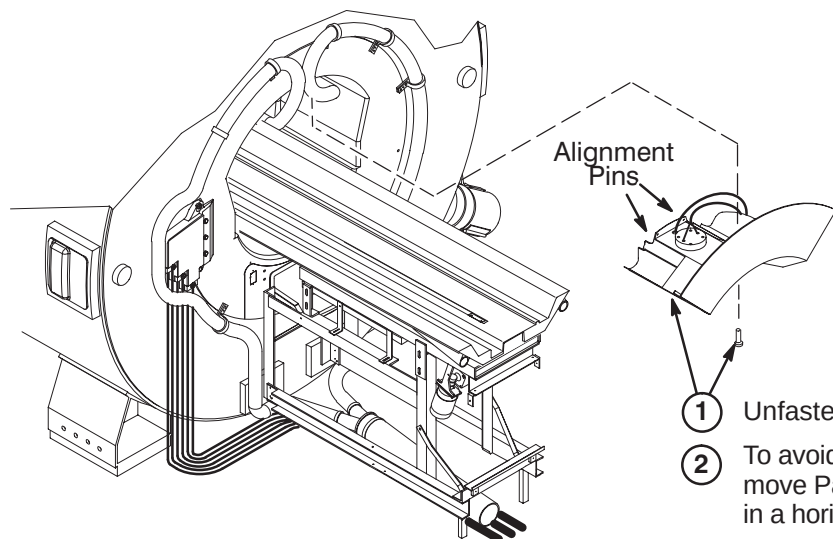10-3-5 REMOVE PATIENT COMFORT MODULE**Note:**

Hold Patient Comfort Module in place until mounting screws in Step 1 are removed. Alignment Pins can break off during removal if over-stressed.

- ① Unfasten two M6 x 25 SST Pan Head Screws.
- ② To avoid breaking alignment pins during removal, move Patient Comfort Module away from End Bell in a horizontal path.

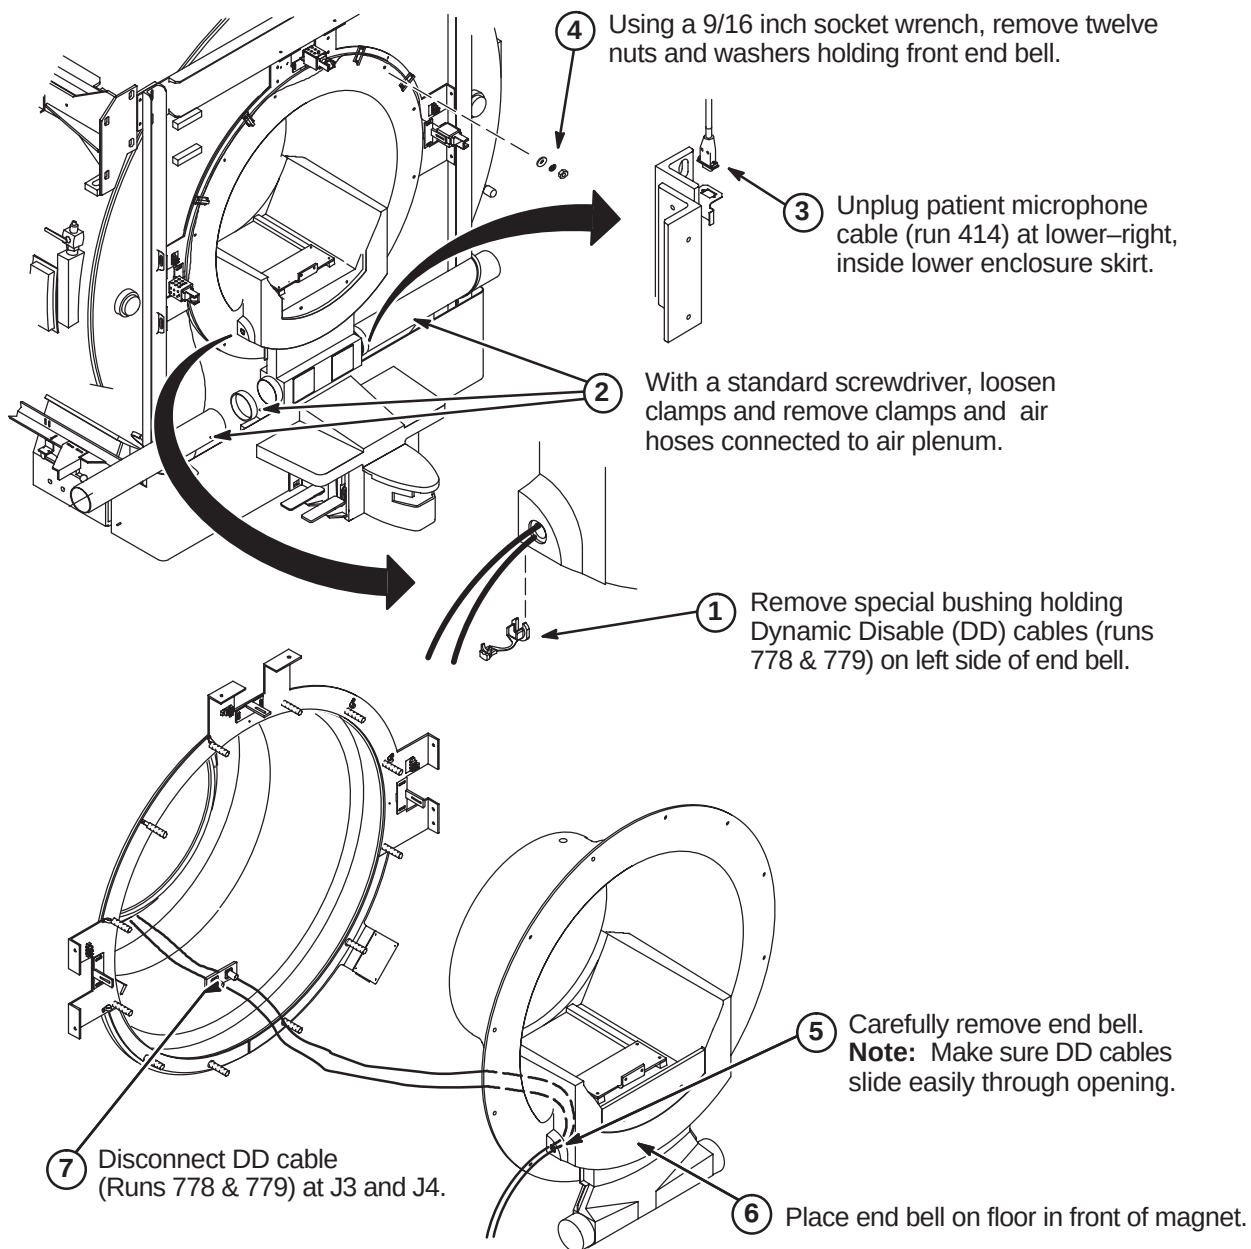
10-3-6 FRONT END BELL REMOVAL

10-3-7 TEMPERATURE SENSOR CABLE REMOVAL


The site can have the existing Temperature Sensor Cable routed to the Rear end bell (earlier location) or Front end bell (later location). Either way, the cable needs to be removed and replaced with new cable, Run 1260. One of the two following procedures will be applicable to your site.

10-3-7-A Remove Existing Single Temperature Sensor Cable

- ① Unfasten existing Temperature Sensor Cable (Run 749) from top inside of Body Coil. It may be attached with:
adhesive fastener (as shown)
OR
with the Light and Cable clamp

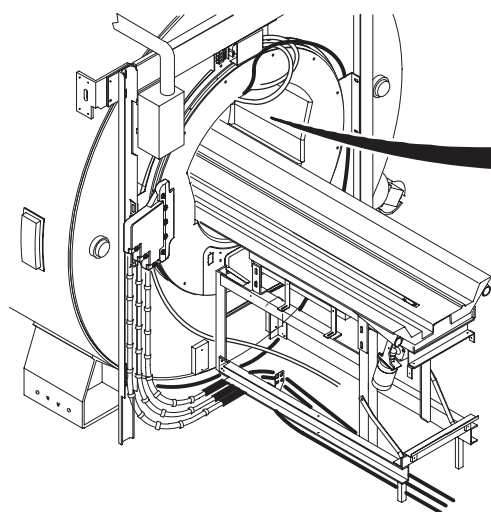


Note: View of Sensor and Light Tubes is looking up at the top inside of the Body Coil. (visible to patient laying in Body Coil)

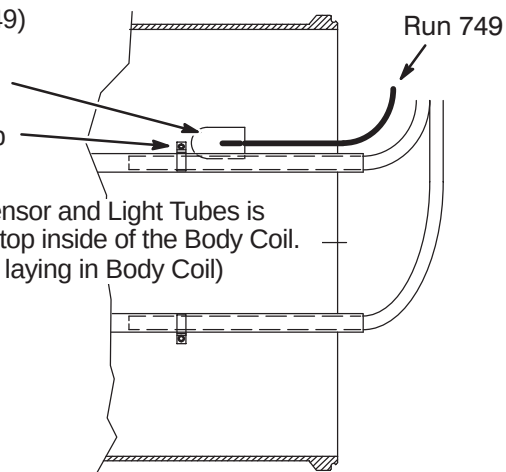


- ② Disconnect other end of Run 749 from J10 on SRI module.
- ③ Remove and discard cable.

10-3-7-B Remove Existing Dual Temperature Sensor Cable

The site may have upgraded to a Dual Thermal Sensor Run 749 recently, but this cable has to be removed and replaced with new Dual Thermal Sensor cable, Run 1260 (5123812). EXCITE HD requires Run 1260 to be installed.

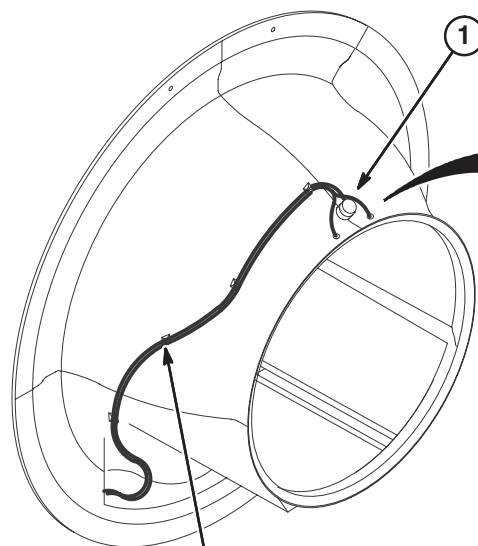


- ① Remove existing Dual Thermal Sensor Cable from end bell. Take care not to damage end bell.

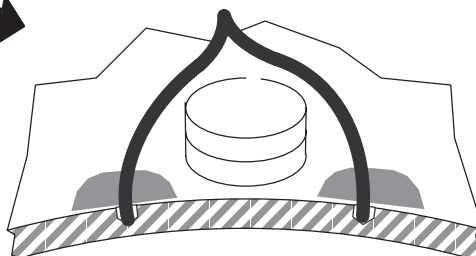

- ② Cut cable ties and remove Dual Thermal Sensor Cable from Front End Bell.

10-3-8 PREPARE END BELL FOR INSTALLATION OF DUAL THERMAL SENSOR CABLE**WARNING!**

FERROUS MATERIAL HAZARD! DO NOT DRILL, HAMMER, CHISEL, ETC. OR USE ANY FERROUS TOOLS IN MAGNET ROOM UNLESS MAGNET IS RAMPED DOWN!

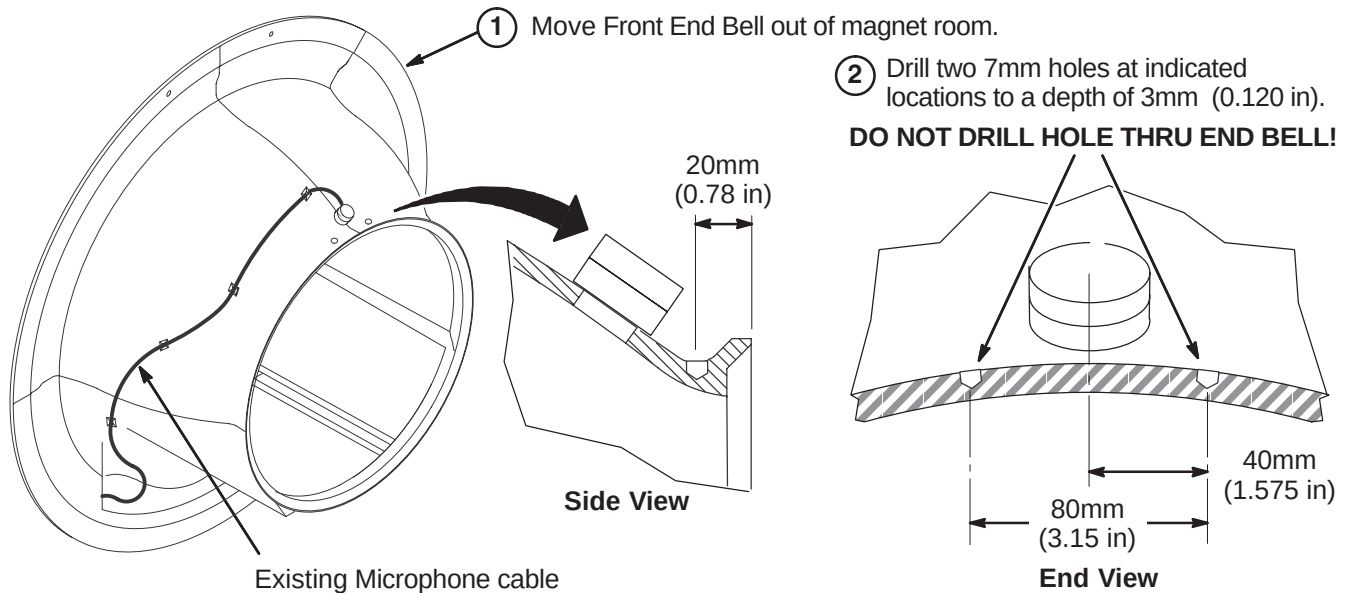**10-3-9 ATTACH DUAL THERMAL SENSOR CABLE**