

820-0238 – Install Instructions Air Temperature Sensor (RTD) (P/N 205-0121-10) GE P/N: 5269689

Tools Required:

- (2) 9/16" wrenches or slip wrenches
- Loctite[™] 565
- Tie Wraps (Lytron PN 101601-01)

Removal Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Lockout/Tag out system in accordance with GE procedures.
3. Locate Air Temperature Sensor (RTD) to remove. Sensor is located on exhaust of heat exchanger.

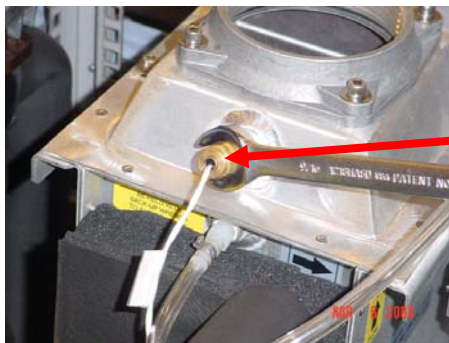


Photo 1

4. Disconnect the associated RTD from the Signal Box.
5. Cut tie wraps that secure the RTD routed from the Signal Box to the RTD position.
6. While holding the inner nut with a 9/16" wrench, remove RTD by loosening RTD outer nut with a second 9/16" wrench.
7. Remove nut and ferrule from temperature sensor by sliding off. Leave inner nut attached to exhaust plenum.

End of Procedure

Install Instructions for Air Temperature Sensor (RTD)

1. Install new ferrule and barrel connector by sliding them on over the temperature sensor.
2. Discard new inner nut.
3. Prepare screw end of Air Temperature Sensor (RTD) with a moderate amount of Loctite 565 or equivalent.
4. Carefully screw RTD into manifold.
5. Using a 9/16" wrench, tighten to hand tight.
6. Route the RTD cable along original path to the Signal Box. Tie wrap in place.
7. Connect signal harness to Signal Box.

8. Check for air leaks around unit just installed.
9. Return machine to running condition per Lytron manual #820-0190.
10. Check reading associated with Air Temperature Sensor just replaced.

End of Procedure

Revision History

REV	ECN# / REASON FOR CHANGE	DATE	APPRV'D
A	Initial Release	6/11/2008	H. Bufe
B	Updated	7/1/08	M. Golini
C	ECN 17682 changed GE P/N to 5269689	3/3/11	H. Bufe