

820-0234 Install Instructions - Signal Box (P/N 205-0121-06) GE P/N 5269691

Tools Required:


- Flat bladed screwdriver

Removal Procedure:

1. Perform shutdown and lockout of system in accordance with the GE 'LOTO for Heat Exchanger Cabinet (HEC)' procedure.
2. Open door to heat exchanger cabinet. If necessary, the door can be removed from its hinges by lifting up on the door.
3. Open front cover of Signal Box by loosening 6 thumbscrews.
4. Secure signal box cover by inserting tabs into built-in hinge holes in Signal Box frame.
5. Remove the following cables plugs from their respective sockets on the right side of the Signal Box:
J1 through J28

NOTE: The Signal Box weighs approximately 14 lbs.

6. While supporting the Signal Box with one hand, loosen 4 thumbscrews that secure the Signal Box to the heat exchanger cabinet frame.

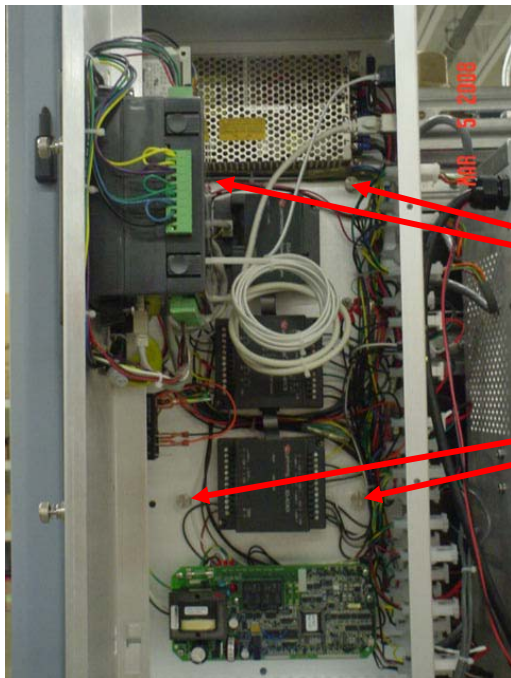

Thumbscrews – 1 in
each corner

Photo 1 Signal Box interior- thumbscrew location

7. Close the main cover to the Signal Box.
8. Crate Signal Box for shipment.

End of Procedure

Installation Procedure:

1. Remove new Signal Box front cover by loosening 6 screws.
2. Position the Signal Box so that the mounting holes in the main cabinet frame align with thumbscrews on the Signal Box.
3. Tighten one thumbscrew at a time to just finger tight. Tighten thumbscrew and then its opposite counterpart until all 4 thumbscrews are secure.
4. Plug connectors J1 through J28 into the appropriate jack on the right side of the Signal Box.
5. Replace front cover on the Signal Box.
6. Remove Lockout/Tagout in accordance with GE procedures.
7. Start system per Lytron manual #820-0190.

End of Procedure