

**ADMINISTRATIVE INFORMATION****FMI No: 25373****FMI Title: VCT M4 (06MW03.4) Software Update**

FMI TYPE	CHARGE CODES	IMPLEMENTATION DATES
☒ Mandatory Safety	GEMS - AM:	Issue Date: 3/13/2006
☐ Mandatory	GEMS - E:	
☐ Mandatory on Request	GEMS - A:	Close Date: 9/29/2006

☒ Staged FMI	Customer List provided by FMI Administration. If you identify additional units within effectivity range, but they are not shown on the customer list, contact FMI Administration in your Pole.
☒	Parts and any special tools are furnished automatically. To address shortages and ordering exceptions, contact FMI Administration in your Pole.
☐	Parts Ordering: GEMS - Americas, Contact your Region logistics coordinator GEMS - Europe, Order FMI kits from GPO/EPL Buc GEMS - Asia, Contact your region logistics coordinator
☐	No Parts are required to complete this FMI.
☐ Batch with	_____
	To minimize costs, combine implementation of this FMI with the FMI's listed for all customers where the effectivity is the same (Please see your customer lists).
☐ Non-Staged	No Customer List is provided. Each service location must identify affected units, and place part orders as indicated in the Special Instructions.

Technical Support

GEMS - Americas	GEMS - Europe	GEMS - Asia
GE Medical Systems Insite Center (414) 524-5300 800-321-7973 Milwaukee, WI 53201, USA	GEMS - E / ESC BP34 F 78533 BUC CEDEX, FRANCE Tel: (33 1) 39 20 00 07 or ESC Fax: (33 1) 30 70 99 70	Asia Support Center Phone: 81-426-56-0033 Fax: 81-426-48-2905

Special Instructions:**Unit Tracked:** 5124069**FMI Instructions Part No.:** 5144791-100**Do NOT leave unsecured on site**

FMI Completion Certification Report

Mail To

GEMS - Americas

GEMS - Europe

G.E. Medical Systems
Attn: FMI Admin. W-523
P.O. Box 414
Milwaukee, WI 53201

GEMS - Europe
FMI Admin. 322
BP34
F78533 Buc Cedex, France

Send to your
Country FMI or Service
Administrator

FMI No.: 25373

FMI Title: VCT M4 (06MW03.4) Software Update

Customer Full Name:

Number and Street Address:

City and Country:

Country Code

Site Number

System I.D.

Unit Tracked:

Model Number	Serial Number	Compl. Date DD/MM/YY	FMI Comp. Code	Service Hours	
				Labor	Travel

FMI Completion Code

1. Modification Complete or previously modified.
2. FMI not required per FMI instruction.
3. Not modified. Unit in storage. FMI kit returned to stock.
4. Modification refused or equipment altered. Customer signature and title required.
5. Unit location unknown or unit not in area. Product Locator notified.

Customer Refusal or Equipment Altered - Modification Pending.

Installer
Comments

Effectivity

The following CT Equipment is affected:

All VCT systems manufactured before March 2006

Model number tracked: 5124069

Purpose

The purpose of this FMI is to update the VCT installed base with VCT M4 software, documentation and to verify the correct wiring on the GFI breaker.

Furnished Materials

FMI 25373 Collector 5145027

Qty	Description	Part #
1	FMI 25373 Document	5144791-100
1	VCT Hi-power opt SW Key	5169414
1	Documentation Collector M4	5136582-3
1	VCT M4 06MW03.4 software collector	5167622
1	Split Ferrite Core	2338755

Tools Required

Qty	Description	SW Version	Part #
1	FMI Document	06MW03.4	5144791-100

Personnel Requirements

"8" hours labor and "1" hours of travel

Procedure

1. Preparation or Before you Begin

Save system state.

2. LFC, VCT M4 (06MW03.4) Software Load Procedure

Use the *LightSpeed 7.X Software Installation Procedures* manual (5116412-100) to install VCT M4 (06MW03.4) system software.

IMPORTANT:

- Use **ONLY** Revision 8 of Direction 5116412-100.
- Destroy any copies of Revision 7 or earlier (do **NOT** use).

3. Full System Calibration

After the a successful software load, complete the following calibration procedures:


- Collimator Calibration
- Detailed Calibration
- FastCal

4. GFI Breaker Wiring Check


Purpose – This check is to verify that the GFI breaker is wired correctly. The GFI breaker is located on the right side of the gantry at the top mounted behind the service switchboard.

- 1) Remove right side gantry cover and with all power on press the GFI test button that is on top of the GFI breaker. The GFI should trip. If it does, reset the breaker, put side cover back on and you are done. If it does not trip go to Step 2.
- 2) Make sure that all power is turned off and LOTO per service manual directions
- 3) Remove covers as necessary to access GFI


- 4) Remove GFI safety cover

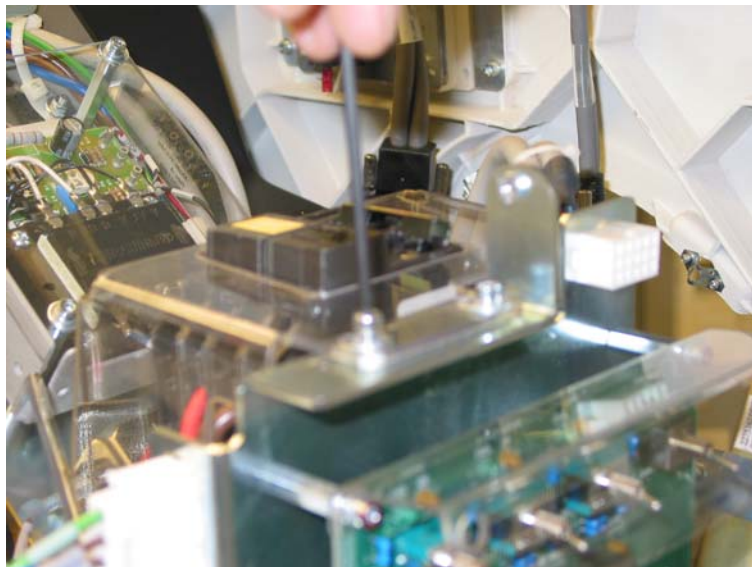


- 5) Remove the AC filter wires from Load side of GFI

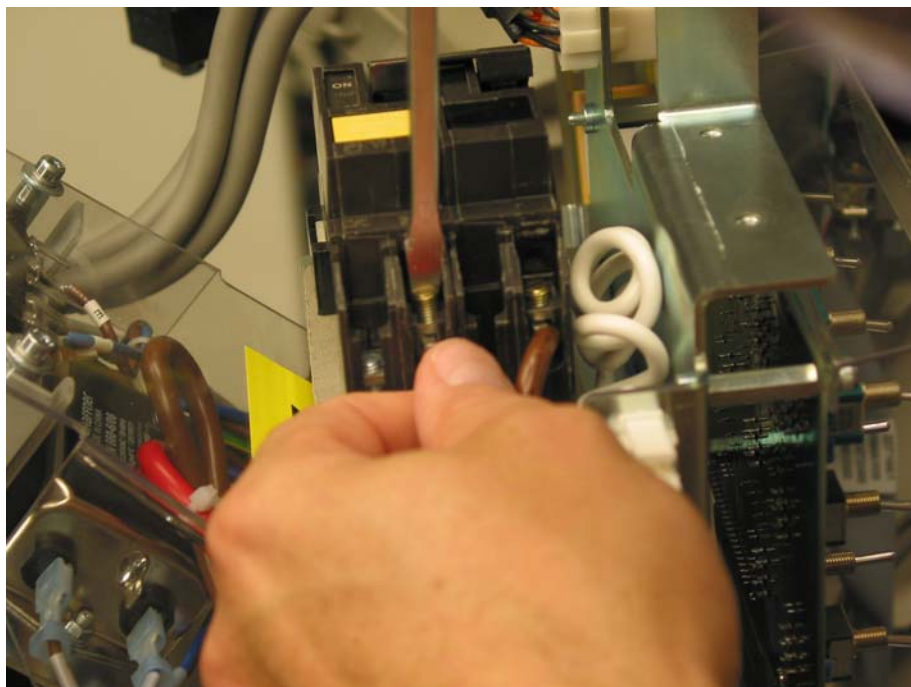


6) Remove wires from GFI mounting plate terminals.

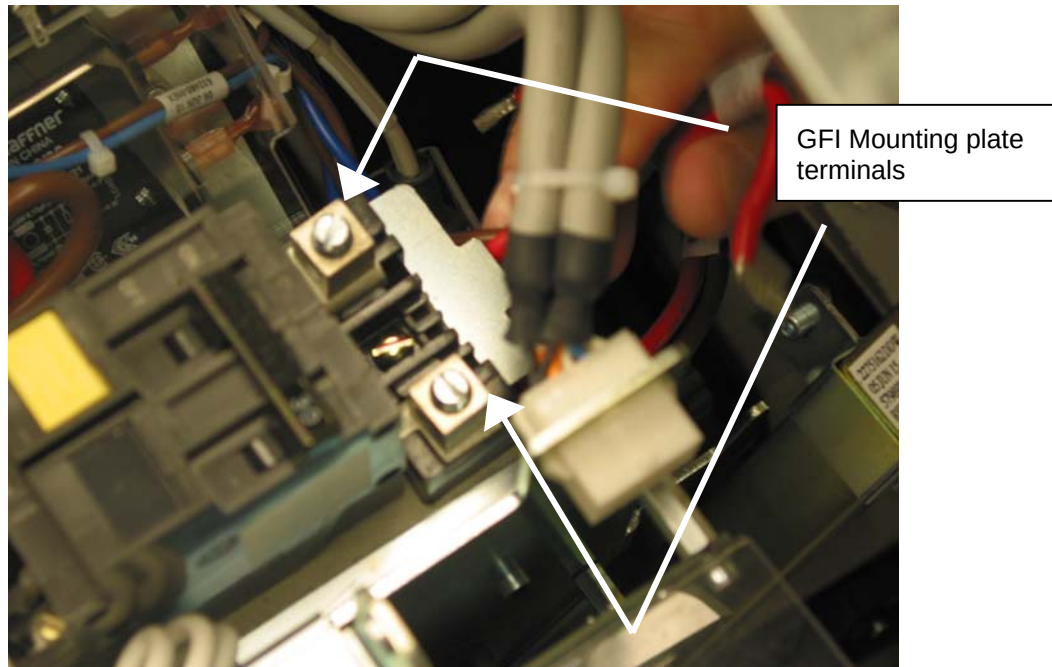


7) Insert wires from AC filter which were removed from other side of GFI in Step 5 and tighten screws.

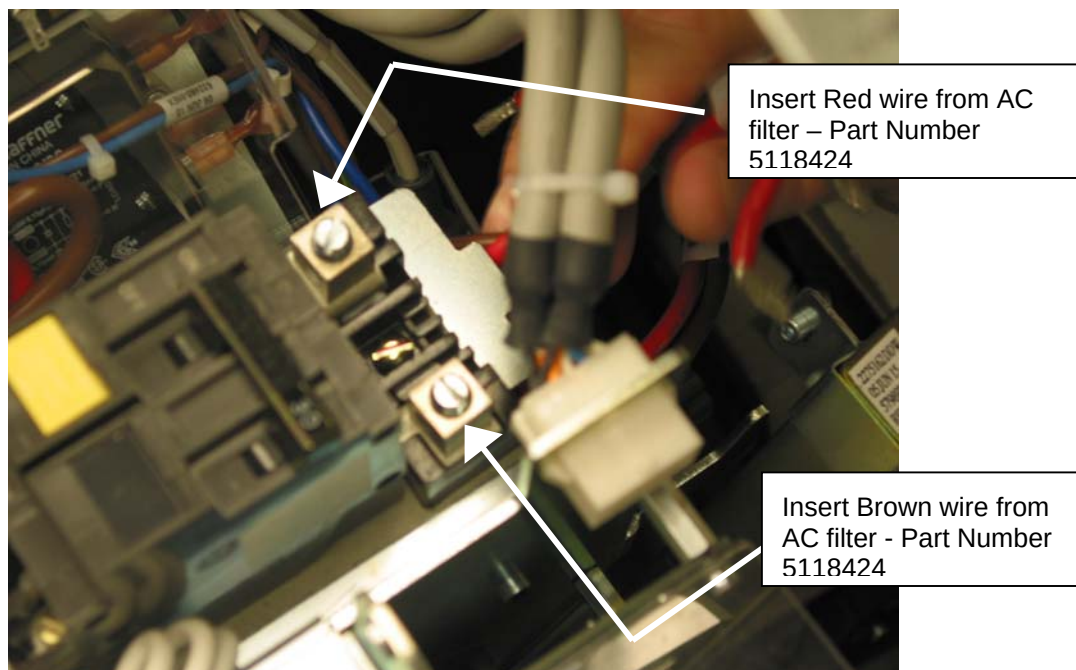

8) Insert wires from Slipping Brushblock removed in Step 6 and tighten screws.

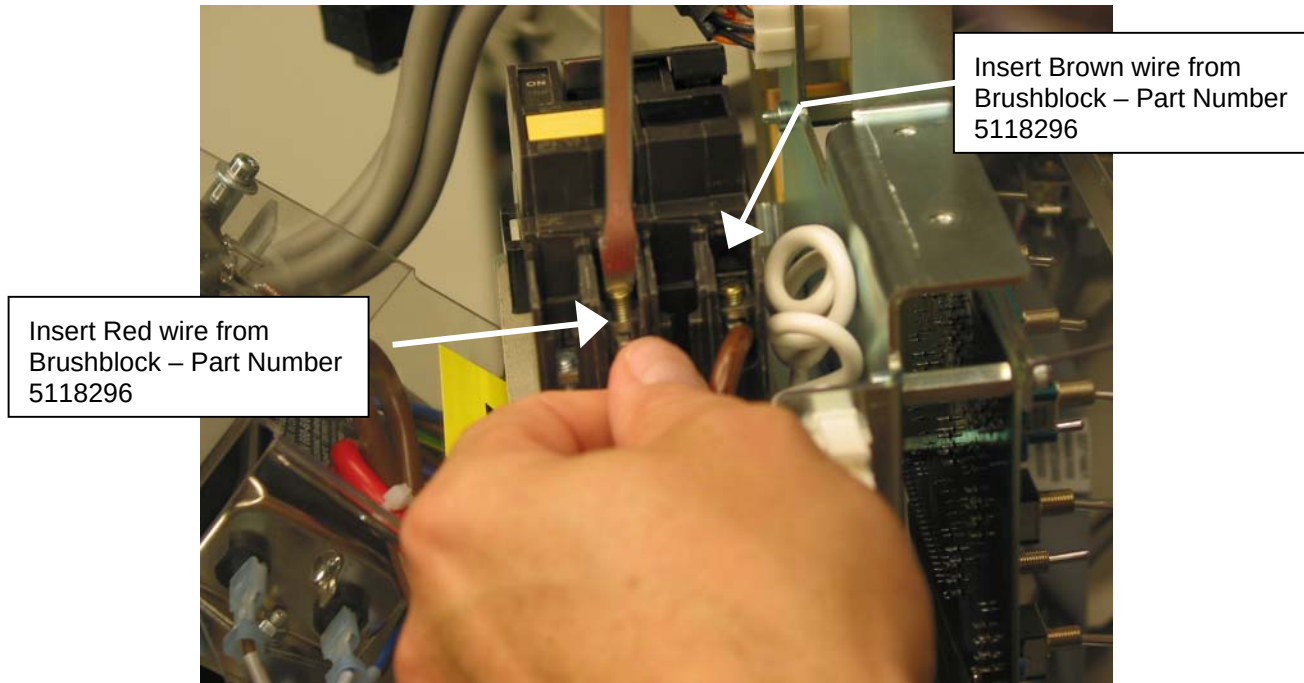

9) Reinstall the GFI cover

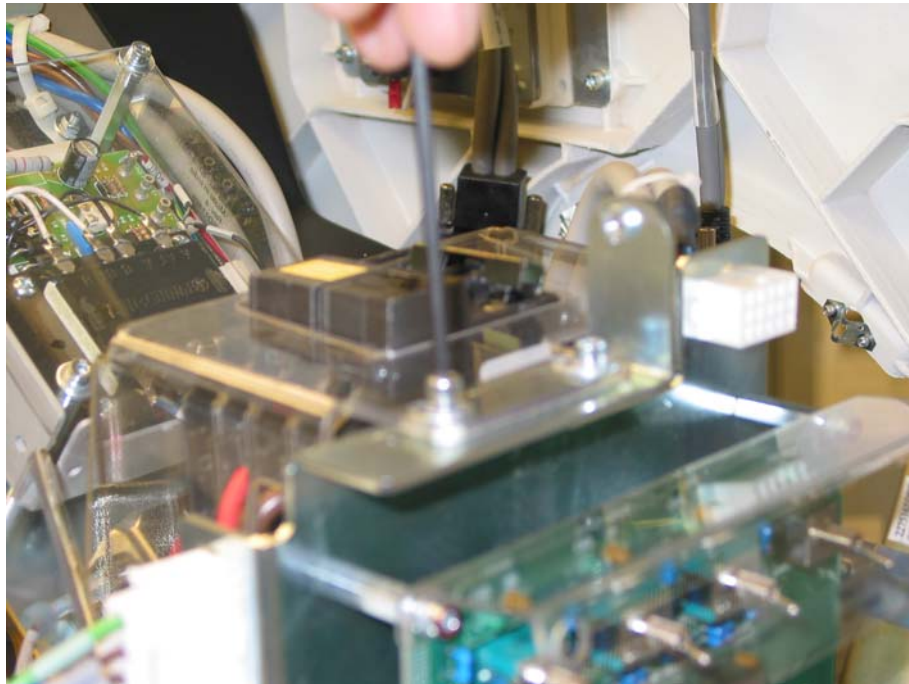

10) Turn on power and push the test button on GFI. The GFI should trip. If it does, reset the breaker, put covers back on and you are done. If it does not trip, redo steps 1-10. If problem persists, order new GFI Breaker assembly.

5. Ferrite Installation for Sites with Partial UPS Only

If your system has a partial UPS, verify that the control cable part number is **2368952-4** or **5169224**. If you have either cable, do not add the ferrite. If the UPS control cable part # is **2368952-2**, please install ferrite (2338755) as shown.



6. Load Class C and Class M Software

Notice: Avoid Partial Load of Class M Software

To ensure a proper load of the Class M Software, load Class C Software and immediately load Class M Software without rebooting the system between CD loads. The Class M Software CD load will fail to mount if not completed in this sequence. If the Class M Software install log exhibits Errors, usually a repeat attempt at loading Class M Software CD succeeds.

Load Class C Software

Load provided Class C software as follows:

1. Open a shell
2. Enter root as superuser:
At the ctuser prompt, type: **su - <ENTER>**
At the Password prompt, type: **#bigguy <ENTER>**
3. Insert the Class C software CD into DVD Drive (on Host). Wait for the disk read to STOP.
4. Install the Class C software on the system.
At the root prompt, type: **install.classC <ENTER>**
5. Verify Class C is properly loaded on the system.
The following command will display the Class C version
swhwinfo -c
Verify the version is **06MW03C.4**
6. Remove the Class C software CD.

Load Class M Software

Load provided Class M software as follows:

1. Open a shell
2. Enter root as superuser:
At the ctuser prompt, type: **su - <ENTER>**
At the Password prompt, type: **#bigguy <ENTER>**
3. Insert the Class M software CD into DVD Drive (on Tower). Wait for the disk read to STOP.
4. Install the Class M software on the system.
At the root prompt, type : **install.classM <ENTER>**
5. Verify Class M is properly loaded on the system.
The following command will display the Class M version
swhwinfo -m
Verify the version is **06MW03M.4**
6. Remove the Class M software CD.

7. Re-Initializing Insite Connectivity

This release of software contains a new IIP release (IIP 3.3.7-Linux9). Although there are essentially no changes in this IIP Release from previous releases, there are two key areas that have been introduced by the CT Application Software:

- Additional Data Mining ProDiags tasks
- Network Security Access protection via a new Product Network Filter configuration utility

To ensure these features are correctly set, an Insite Checkout is NOT required. Because the basic Insite configuration information on the system should be correct from the original Insite Checkout, in most cases, it is only necessary to run ConfigLink via exiting the IIP Admin Configuration utility Insite Checkout Tab Screen.

8. Restore System State To Retrieve Class M Configuration Parameters

Once Class M software has been loaded, you must repeat a Restore System State to recover all previous Insite and Class M configuration parameters.

NOTE: Make sure that the Key System Information is correctly set. If not, use the following to configure the connection:

- o IIP Admin Configuration utility to reset Network Configuration Info as described in the following procedures.

9. Enable Insite Interactive Platform Configuration Utility

See Figure 2, Insite Interactive Platform Configuration Utility Gaining Access and Selecting ProDiags Utility.

Enable the Insite Interactive Platform Configuration utility as follows:

Open a shell

Enter root as superuser:

At the ctuser prompt, type: **su - <ENTER>**

At the Password prompt, type: **#bigguy <ENTER>**

Launch the IIP Admin Configuration utility:

At the root prompt, type: **iipadmin config <ENTER>**

The system displays the Insite Interactive Platform Configuration utility with the Proprietary Agreement Acceptance Screen.

Obtain access to the IIP Admin Configuration utility:

On the IIP Admin Configuration utility Proprietary Agreement Acceptance Screen:

Click on **Accept** three times.

The IIP Admin Configuration utility displays the Information Tab.

Launch the independent ProDiags utility from the IIP Admin Configuration Utility:

On the IIP Admin Configuration utility Information Screen:

Click on the **ProDiags** Tab.

The IIP Admin Configuration utility displays the ProDiags Tab.


On the IIP Admin Configuration utility ProDiags Screen:

Click on the **Custom** button.

The IIP Admin Configuration utility launches the independent ProDiags utility as shown in Figure 3.

Figure 2

Insite Interactive Platform Configuration Utility
Gaining Access and Selecting ProDiags Utility

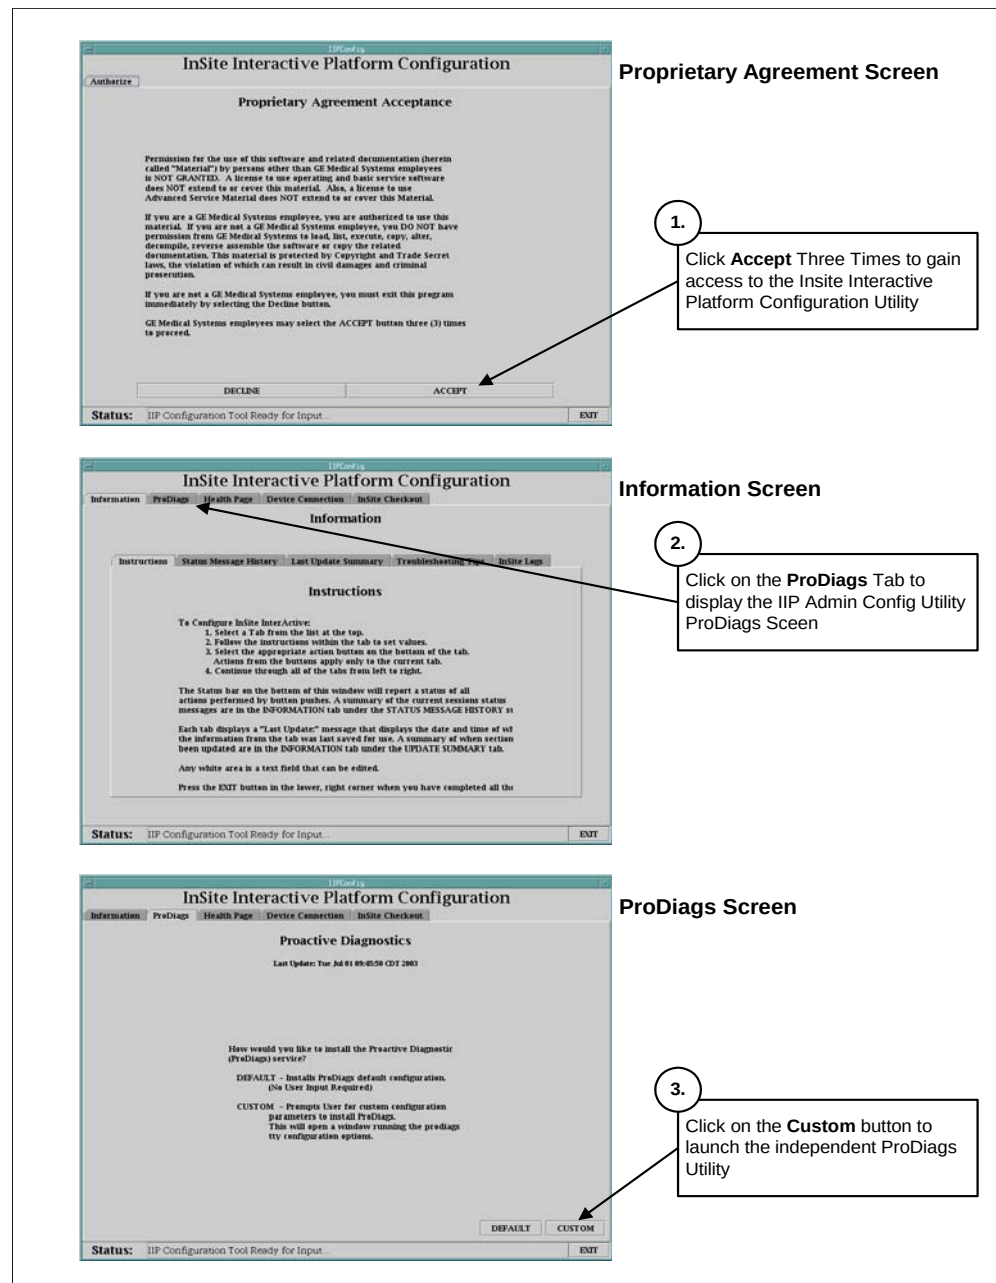

10. Configure ProDiags Schedule

With this release of software, the IIP 3.3.7-Linux9 platform contains a four new data collection ProDiags packages that push data to the AutoSC and the On Line Center RDA Data Warehouse. These new packages (or tasks) must be configured to match the site's operational usage.

The default ProDiags schedule provided in this release should be adequate for most systems. However, we recommend that you review this schedule and update according to your particular site's normal operation.

See Table 1 for a list of all ProDiags tasks.

Table 1

ProDiags Tasks available with IIP 3.3.7-Linux9

ProDiags Task Name	Description	Default Setting	Default Schedule		Notes
			Frequency	Time	
idm	Collect gesyslog data and CurrSysCfgInfo file data. Parses both into xml files.	ON	Daily	16:35	Preferred once daily schedule.
idm_send_data	Tars and Zips gesyslog.xml and CurrSysCfgInfo.xml files and pushes to AutoSC.	ON	Daily	16:40	Should be set to run at least 5 min. after idm task.
ctrdi	Collects scanRx parameters for Service Commercial IPM Offering.	OFF			Enabled and set to random daily schedule between 09:00 and 15:00 by datamine_on AutoSC Sweep.
PassChg	Reports System Password changes.	ON	Daily	05:30	Output sent to AutoSC.
pd_HouseKeeping	Cleans up the IIP log files.	ON	Daily	06:12 12:12 18:12 00:12	No output sent to AutoSC.
IIP_HouseKeeping	Cleans up the ProDiags directory.	ON	Daily	04:30	No output sent to AutoSC.
pd_ASC_Notify	Dials and transmits any residual ProDiags packages in usr/g/insite/tds/q directory to the AutoSC.	ON	Hourly	00:28	Outputs sent to AutoSC.
healthpg	Builds CT version Health Page ASCII Report and transmits to AutoSC.	ON	Daily	04:45	Outputs sent to AutoSC.
ChkLogs	Checks system logs for errors and transmits to AutoSC.	OFF			No longer supported.
FLOG	Reports failed log in attempts and reports to AutoSC.	OFF			No longer supported.
dialout_test	Checks connection to AutoSC.	OFF			Normally not scheduled – used only to test ProDiags functionality.
slprune	Prunes various Service logs on system.	OFF			Normally not scheduled – used only as required.
PushTubeUsage	Collect and push TubeUsage data to AutoSC.	ON	Weekly Wednesday	10:16	Similar to Tube Usage sweep but pushes data to AutoSC vs. pull.

PushRTS	Collect and push standard set of RTS data to AutoSC.	ON	Daily	10:07	Limited RTS data set for Tubes Engineering.
PushRTSAll	Collect and push large set of RTS data to AutoSC.	OFF	Daily	10:07	Selectively enabled remotely for additional monitoring capability.
PushScanRx	Collect and push AutomA ScanRx data to AutoSC.	OFF	Daily	17:00	Selectively enabled remotely for additional monitoring capability.
PushScanUsage	Collect and push ScanUsage data to AutoSC.	OFF	Daily	17:30	Selectively enabled remotely for additional monitoring capability.
sw_download	Collects and pushes system software configuration to compare to latest software patches available in back office.	ON	Weekly Wednesday	12:00	New feature with Pathfinder M3 and VCT M4 software releases.
hart	Collect and push System Configuration data to AutoSC.	ON	Weekly Monday	10:00	New with Pathfinder M3 and VCT M4 software releases.
ekg	Collect and push EKG csv data files to AutoSC.	ON	Weekly Friday	16:15	New with VCT M4 software release. Intended for Application Specialist use to assist Rad Techs with Cardiac Gated Patient Exams.

11. Reli Monitoring ProDiags Tasks

There are two Reli Monitoring ProDiags tasks that need to be set up according to local hospital system usage:

idm

This is the Reli Monitoring data collection engine task. This engine collects a portion of the current gesyslog file in `usr/g/service/log` based on the last time the data collection ran. In addition, the engine collects a high-level system configuration file (`CurrSysCfgInfo`) in `usr/g/service/state`. After collecting these two data files, the engine parses the data into an xml file and places the resultant files into `usr/g/insite/idm/xml/iipHealthPage` as xml files. If no previous xml files were in this directory, the engine creates the `iipHealthPage` directory to place the `gesyslog.xml` file and the `CurrSysCfgInfo.xml` files.

idm_send_data

This is the Reli Monitoring “push-to-AutoSC” or data transfer engine task. This engine collects the `gesyslog.xml` files and `CurrSysCfgInfo.xml` files in the `usr/g/insite/idm/xml/iipHealthPage` directory, compresses the files into a tar and tar.gz package, and pushes the compressed packages to the AutoSC.

Scheduling Considerations

The key consideration in setting up the Reli Monitoring ProDiags tasks (or any ProDiags tasks) is understanding when the system is powered up. No ProDiags tasks will run when the system is powered off. For example: If the system is turned off overnight or is only powered on between 08:00AM until 17:00PM, ProDiags tasks should be scheduled to run after 08:00AM and before 17:00PM.

The `idm` engine runs an xml parser, which tends to demand cpu resources even though the ProDiags tasks run in the background. In addition, xml files can be up to 4X the size of the original ASCII file because of all the additional tagging elements. Therefore, we recommend scheduling this

task at least twice a day if not up to four times a day. This scheduling will minimize the size of the xml files and minimize cpu usage while building the xml files.

We recommend scheduling the `idm_send_data` task to run 5 minutes after the `idm` task. This 5 minute gap should provide adequate time for the `idm` data collection process to complete and allow the `idm_send_data` “push-to-the-AutoSC” process to successfully push whatever data has been collected by the `idm` engine. Therefore, the `idm` and `idm_send_data` tasks should be set in pairs with the `idm_send_data` task set 5 minutes after the scheduled `idm` task.

Lastly, for a multiple system setup where all the systems are the same time zone, we recommend the set up for each system be staggered to minimize impact on the AutoSC. At a minimum, use a 15 minute interval for the `idm_send_data` tasks between systems.

Default Schedule and Scheduling Examples

The default schedule for the Reli Monitoring tasks are as follows:

ProDiags Task	Iteration	Day	Hour	Minute
<code>idm</code>	1	Daily	04 PM	35
<code>idm_send_data</code>	1	Daily	07 AM	00

Using the model described previously (system is powered on between 08:00AM and 17:00PM), the following is a recommended example schedule to set up for the Reli Monitoring tasks:

ProDiags Task	Iteration	Day	Hour	Minute
<code>idm</code>	1	Daily	08 AM	30
<code>idm_send_data</code>	1	Daily	08 AM	35
<code>idm</code>	1	Daily	12 PM	30
<code>idm_send_data</code>	1	Daily	12 PM	35
<code>idm</code>	1	Daily	04 PM	30
<code>idm_send_data</code>	1	Daily	04 PM	35

If the system is powered on 24 hours/day or the system is in use 24 hours/day, the following is a recommended example schedule to set up for the Reli Monitoring tasks (every 6 hours):

ProDiags Task	Iteration	Day	Hour	Minute
<code>idm</code>	1	Daily	08 AM	30
<code>idm_send_data</code>	1	Daily	08 AM	35
<code>idm</code>	1	Daily	02 PM	30
<code>idm_send_data</code>	1	Daily	02 PM	35
<code>idm</code>	1	Daily	08 PM	30
<code>idm_send_data</code>	1	Daily	08 PM	35
<code>idm</code>	1	Daily	02 AM	30
<code>idm_send_data</code>	1	Daily	02 AM	35

12. New ProDiags Tasks With Pathfinder M3 and VCT M4 Releases

There are five new ProDiags tasks that need to be set up according to local hospital system usage. The default frequency and time settings for these tasks should be adequate (See Table 1).

Due to possible overwriting of the default ProDiags schedule provided in the Class M software package when performing Restore State after the Class M install, some of these tasks may no longer be in the schedule. Ensure the following tasks are scheduled at the frequency and times specified in Table 1:

PushTubeUsage

PushRTS

sw_download

hart

ekg

Note: The ekg ProDiags task only applies to VCT Systems.

13. Updating Already Scheduled ProDiags Tasks (Frequency or Time)

See Figure 3.

As an example, use the following sequence to update the scheduled time (Hour and Minute) of the **idm** and **idm_send_data** tasks:

ProDiags **idm_send_data** (push Reli Monitoring data to the AutoSC) task

- Click on the **idm_send_data** task **Hour** field.
- From the pull down list, select an hour that the system is normally on (typically between 09:00 and 17:00).
- On the “Data has been modified. Please confirm it” pop-up, click on **Yes**.
- Click on the **idm_send_data** task **Minute** field.
- From the pull down list, select a minute (preferably an odd minute such as 3, 14, 22, etc).
- On the “Data has been modified. Please confirm it” pop-up, click on **Yes**.

ProDiags **idm** task

Set up the **idm** (collect Reli Monitoring data) task to run five minutes before the **idm_send_data** task.

- Click on the **idm** task **Hour** field.
- From the pull down list, select an hour that sets the **idm** task to run five minutes before the **idm_send_data** task.
- On the “Data has been modified. Please confirm it” pop-up, click on **Yes**.
- Click on the **idm_send_data** task **Hour** field.
- From the pull down list, select a minute that sets the **idm** task to run five minutes before the **idm_send_data** task.
- On the “Data has been modified. Please confirm it” pop-up, click on **Yes**.

When completed with the **idm** and **idm_send_data** modifications, click on the **Apply** button at the bottom of the the Schedule Tab. On the “Apply change confirmation” pop-up, click on **Yes**.

Figure 3

ProDiags Graphical Utility

Schedule Tab – Modifying Scheduled Tasks

Proactive Diagnostics

Schedule Management

Schedule Management provides the following functionalities

1. Add a task to the schedule
2. Delete a task from the schedule
3. View the schedule

Task	Iterations	Day	Hour	Minute	Type	Time Slot
PassChg	1	Daily	05 AM	30	Background	
pd_HouseK...	1	Daily	04 AM	30	Background	
pd_ASC_No...	1	Daily	Hourly	28	Background	
Healthpg	1	Daily	04 AM	45	Background	
IP_HouseK...	1	Daily	06 AM	12	Background	
IP_HouseK...	1	Daily	12 PM	12	Background	
IP_HouseK...	1	Daily	06 PM	12	Background	
IP_HouseK...	1	Daily	12 AM	12	Background	
idm_send_...	1	Daily	07 AM	00	Background	
idm	1	Daily	Hourly	00	Background	

1.

Click on **Hour** and **Minute** fields of **idm_send_data** task and select an hour and minute from the pull down lists between 9 AM and 5 PM.

After each selection, click **Yes** on the "Data has been modified. Please confirm it" pop up.

2.

Click on **Hour** and **Minute** fields of **idm** task and select an hour and minute from the pull down lists to schedule 5 minutes before the **idm_send_data** task.

After each selection, click **Yes** on the "Data has been modified. Please confirm it" pop up.

3.

When **idm** and **idm_send_data** Hour and Minute selections are complete, click on **Apply** to finalize the schedule updates.

Click **Yes** on the "Are you sure you want to apply changes?" pop up.

Buttons: New, Delete, Reload, Apply, Help

Status: Reading data... Done

14. Adding new ProDiags Scheduled Tasks

See Figure 4.

Use the sequence displayed in Figure 4 to add and update the scheduled time (Hour and Minute) of the ProDiags tasks provided in this software release.

Figure 4

ProDiags Graphical Utility

Schedule Tab – Adding New Scheduled Tasks

1. Click on **New** and the ProDiags utility launches the **Adding New Schedule** pop up.

2. Click on the task that needs to be added to the schedule and click on **OK**.

After selection, click **Yes** on the "Are you sure you want to add this task to the schedule?" pop up.

On the "Please edit the newly created scheduled item" pop up, click **OK**.

3. Click on **Day**, **Hour** and **Minute** fields of each new task and select a Day (or Daily), an hour and minute from the pull down lists to schedule task.

After each selection, click **Yes** on the "Data has been modified. Please confirm it" pop up.

4. When all changes are complete, click on **Apply** to finalize the schedule updates.

Click **Yes** on the "Are you sure you want to apply changes?" pop up.

Task	Task Description	Type	Scheduled
Idm_send_data	Sends data colle...	Background	Yes
PushRTS	Push RTS Data	Background	Yes
PushRTSAll	Push Complete ...	Background	No
PushScanRx	Push AutoMa D...	Background	No
PushScanUsage	Push Scan Usag...	Background	No
PushTubeUsage	Push Tube Usag...	Background	Yes

ID	Task	Frequency	Day	Hour	Minute	Type	Scheduled
1	IP_HouseK...	Daily	12	PM	12	Background	
1	IP_HouseK...	Daily	06	PM	12	Background	
1	IP_HouseK...	Daily	12	AM	12	Background	
1	Idm_send...	Daily	07	AM	00	Background	
1	Idm	Daily	Hourly	00		Background	

Buttons: New, Delete, Reload, Apply, Help

Status: Reading data... Done

Close the ProDiags utility browser by selecting **Close** from the upper left browser window pull down menu. The ProDiags browser should close and the Insite Interactive Platform Configuration utility should display the HealthPage Tab as shown in Figure 5.

15. Configure HealthPage

After completing the ProDiags setup, the IIP Admin Configuration utility automatically switches to the HealthPage Tab as shown in Figure 5.

The Restore State process (after loading Class M software) restored the following information for the HealthPage Reports:


- All e-mail addresses of targeted recipients that were previously loaded
- HealthPage report contents that was previously configured
- HealthPage report schedule that was previously configured

Unless you have recent changes to any of these three items, you can skip the HealthPage Tab of the IIP Admin Configuration utility and select the Device Connection Tab. If you have changes that you want to make (e-mail addresses, report content, report schedule), follow the instructions on the IIP Admin Configuration utility.

Figure 5

Insite Interactive Platform Configuration Utility

HealthPage Tab

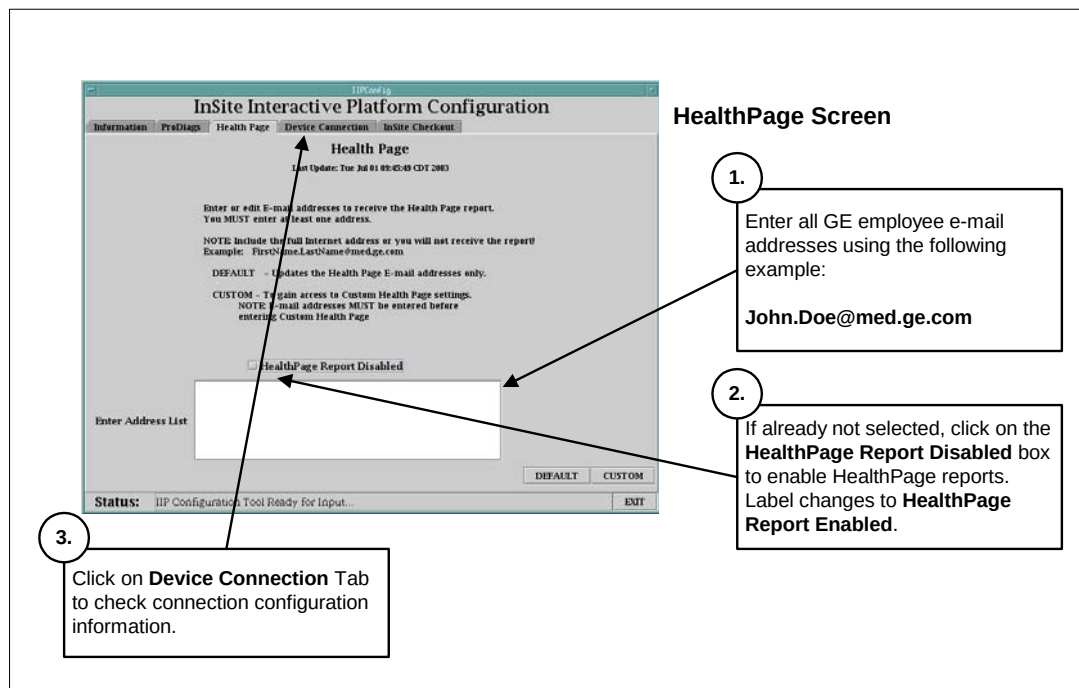

16. Check Device Connection Setup

Modem Setup

When selecting the Device Connection Tab, the IIP Admin Configuration utility automatically displays the Modem Setup Screen as shown in Figure 6.

If your system was configured for Modem connectivity, the Restore State process (after loading Class M software) restored all the Modem setup parameters. To verify, refer to Section 1 of this FMI where you recorded Insite Connectivity Info.

- If there were no Modem parameters in the .insiteINFO file but there were BroadBand parameters, skip to the Check BroadBand Device Connection Setup procedure.
- If there were Modem parameters in the .insiteINFO file but the parameters displayed in the Modem Setup Screen do not match what you previously recorded, enter the correct values as required.

NOTE: The Modem configuration parameters should be pre-loaded from the Restore State process. Do not change settings unless these values were not properly restored.


If required, follow the instructions in Figure 5. The default values are usually the correct values or most commonly used. Parameter selections that do not require customization are:

CPU Serial Port Name

Figure 6

Insite Interactive Platform Configuration Utility

Device Connection Tab – Modem Setup

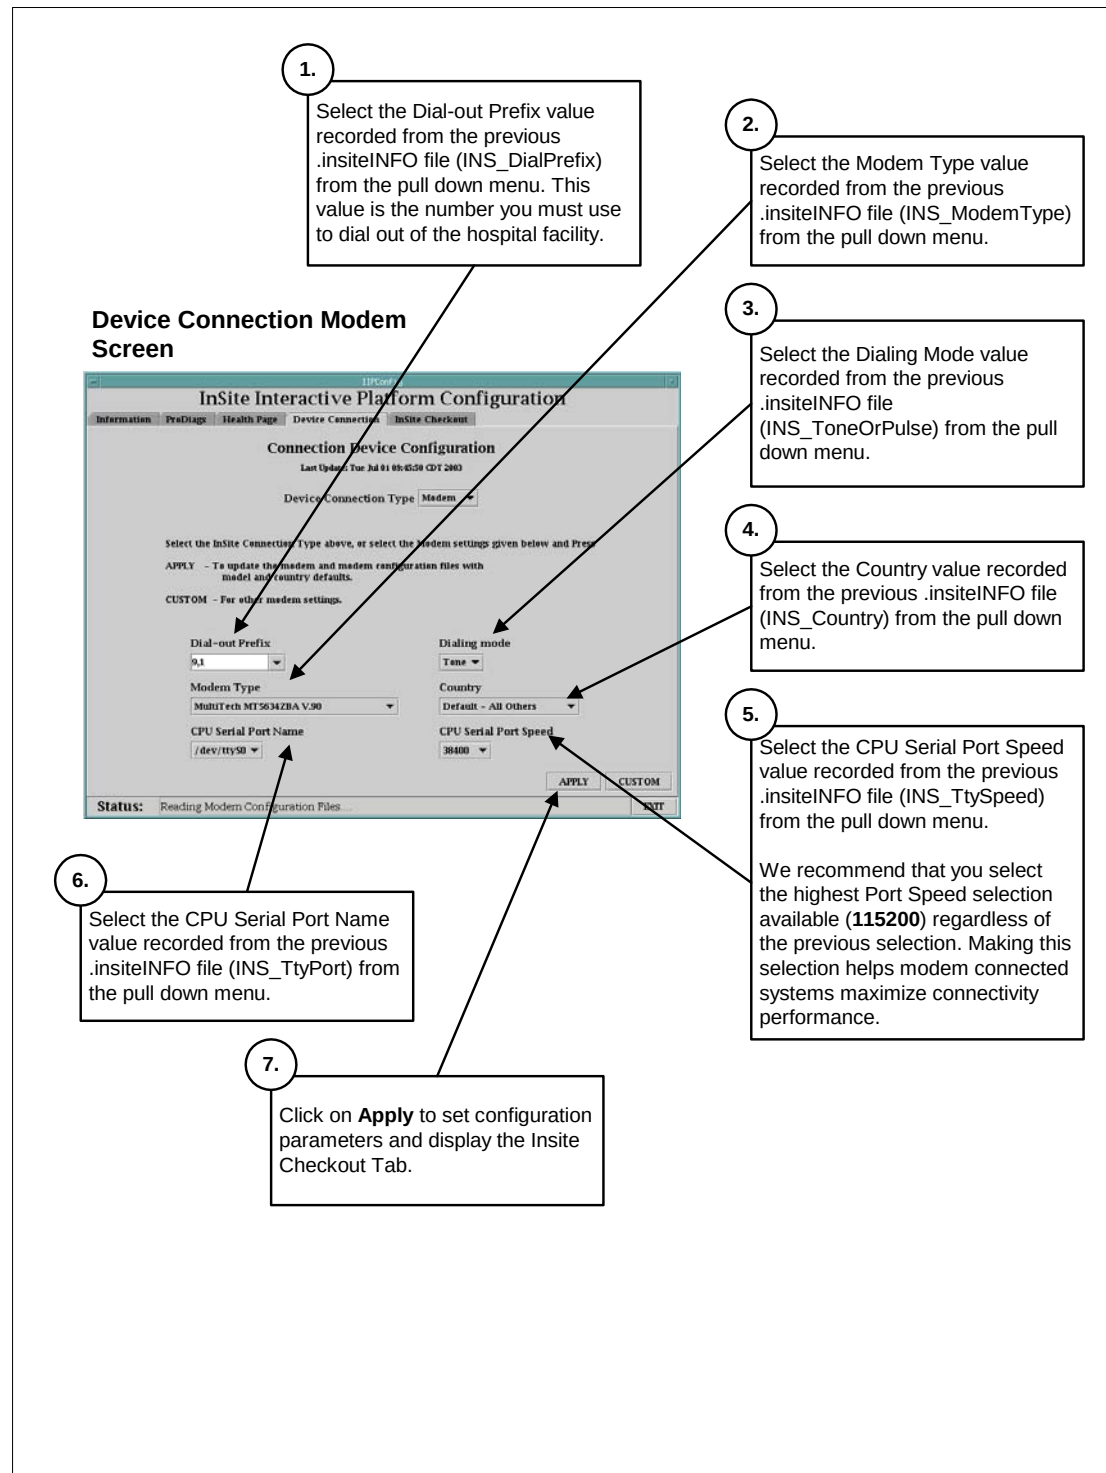

17. Broadband Setup

If your system was previously BroadBand Insite connected, click on the Network button of the IIP Admin Configuration utility Device Connection Tab to display the Network Setup Screen as shown in Figure 7.

If your system was configured for BroadBand connectivity, the Restore State process (after loading Class M software) restored all the BroadBand setup parameters. To verify, refer to Section 1 of this FMI where you recorded Insite Connectivity Info.


NOTE: The BroadBand Network configuration parameters should be pre-loaded from the Restore State process. However, the on-site FE who performed the original Insite Checkout of the system may have used the hospital's imaging LAN default gateway IP Address (selection was available in the previous release of IIP).

DO NOT USE THE HOSPITAL WORKING LAN DEFAULT GATEWAY IP ADDRESS AS THE INSITE GATEWAY IP ADDRESS OTHER THAN AS A TEMPORARY MEANS TO CONNECT TO THE ON LINE CENTER!!

Figure 7

Insite Interactive Platform Configuration Utility

Device Connection Tab – Network Setup

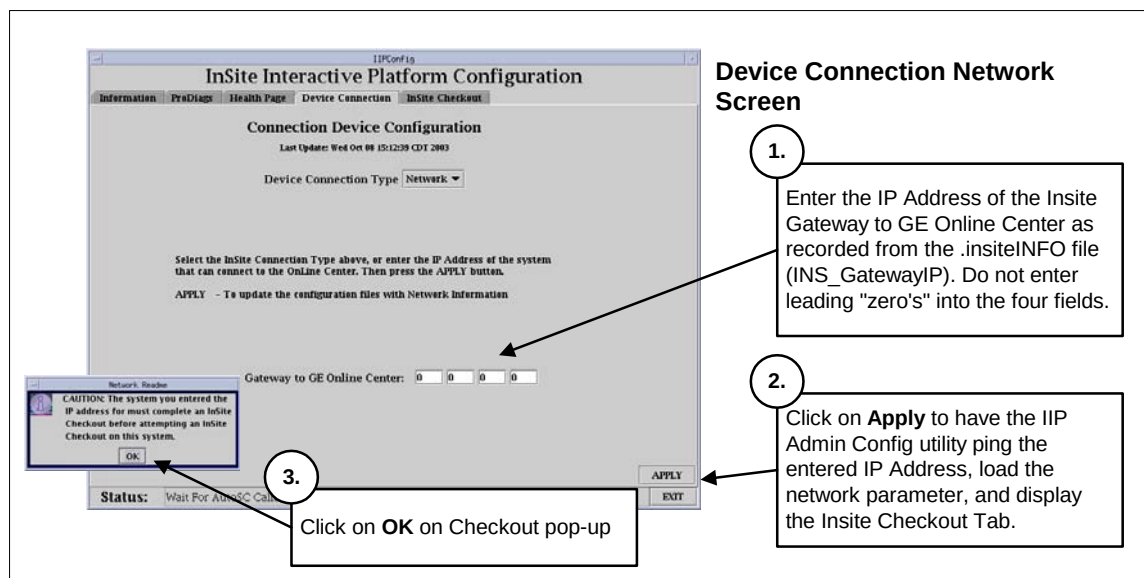


18. Completing the Insite Re-Initialization

Follow the instructions provided in Figure 8 to exit the IIP Admin Configuration Utility.

Figure 8

Insite Interactive Platform Configuration Utility

Insite Checkout Tab – Exiting the IIP Admin Configuration Utility

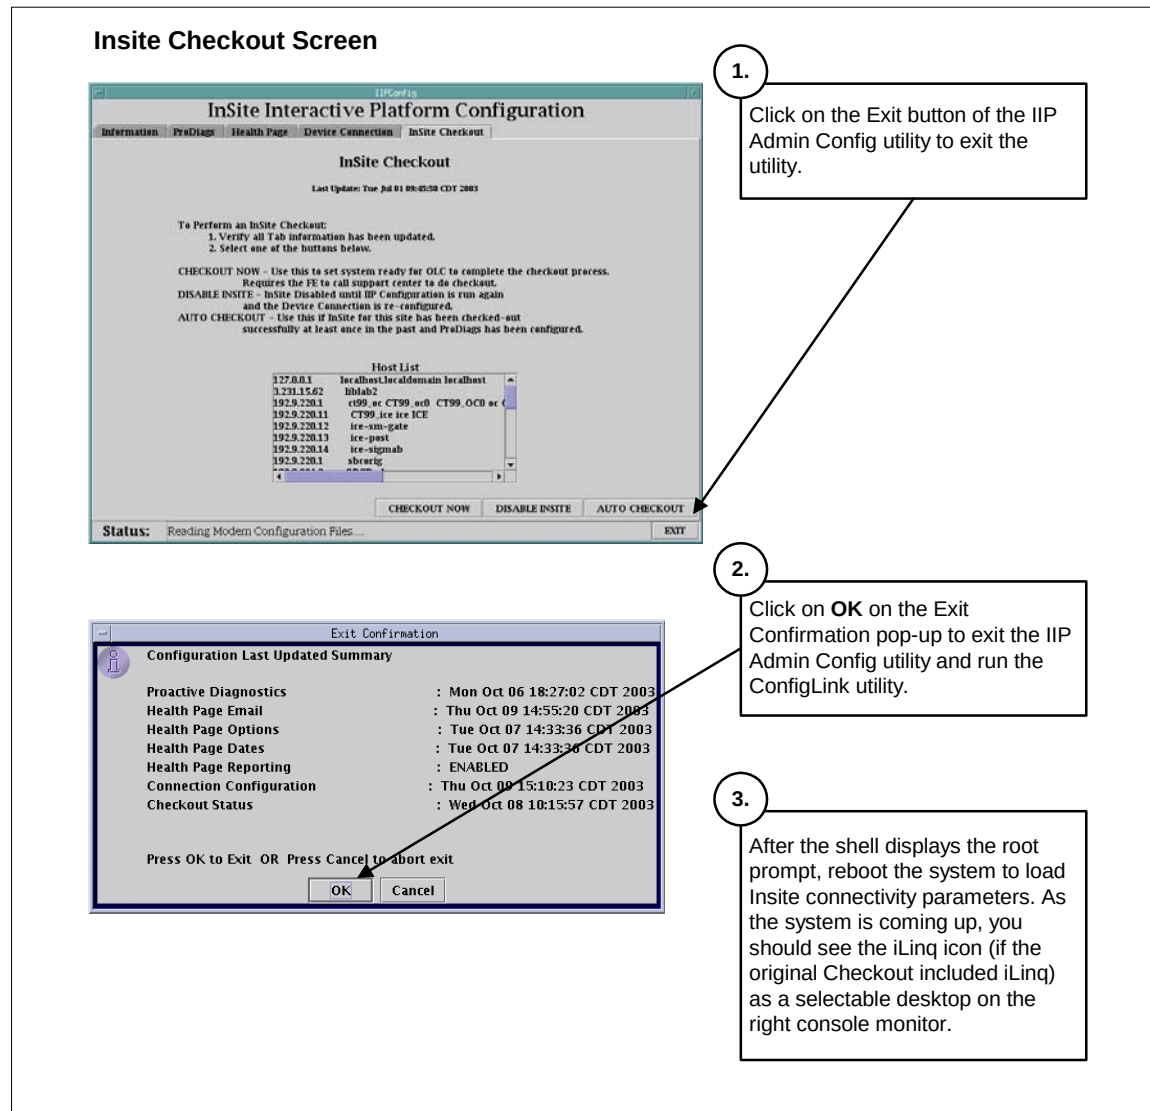

19. Run ConfigLink

Run the Insite **ConfigLink** script to populate all configuration information required to fully restore connectivity parameters on the system.

1. Open a shell

2. Enter root as superuser:

At the ctuser prompt, type: `su - <ENTER>`

At the Password prompt, type: `#bigguy <ENTER>`

3. Change directory to Insite:

At the root prompt, type: `cd /usr/g/insite <ENTER>`

4. Run the ConfigLink script

At the root prompt, type: `ConfigLink <ENTER>`

Wait for the shell to return the root prompt to ensure the **ConfigLink** process completes. When complete, exit root and close the shell.

20. Reboot System

To ensure all Insite configuration parameters are properly loaded into the operating system (route tables, etc.), perform a system reboot.

1. Click on the pink Shutdown button.
2. From the Shutdown selection pop-up, click on **Restart**, then **OK**, to reboot the system.

21. Save System State

At the completion of the Load From Cold Process, Full Calibration and Insite Re-Initialization process, ensure all system state parameters are saved using the Save System State Utility.

22. Finishing Up

Customer Documentation & Software

Make sure that the customer receives the Class A Operator/Service documentation and all the Software CD-ROM's provided with this FMI.

23. FMI Closure

Close FMI per regional procedure. Note that the FMI cannot be closed until the Product Locator cards are completed, sent in, and GIB is updated with all tracked items in this FMI.

Remove this FMI document from the customer site.