

820-0229 – Install Instructions for 5 HP Pump P/N: 205-0121-01 (GE P/N: 5156321)

Tools Required:

- Strap wrench (Lytron P/N: 530-0790) or slip-joint pliers.
- Hoist Assembly (P/N: 205-0121-17)

Removal Procedure:

1. Perform shutdown of system in accordance with Lytron manual #820-0190.
2. Verify Lockout/Tagout system is in accordance with GE procedures.
3. Drain system. Drain system in accordance with Lytron manual #820-0190. *It is also acceptable to drain the system through the pump drain.*
4. Install Hoist Assembly (PN 205-0121-17) and Chain lift assembly included in PN 205-0121-01.
5. Remove LCS7397GX door by opening door and removing door from its hinges.
6. Locate Variable Frequency Drive (VFD) for pump in question.
7. Remove Electrical Box cover to expose VFD wiring.
8. Remove pump supply wiring from VFD (record wire locations for re-installation).
9. Remove power cord from bottom of Electrical Box.
10. Remove discharge hose from pump using Strap wrench on SAE flare fitting.
11. Break suction hose from tank at union (Refer to Photo 1).



Photo 1
Breaking the suction hose connection to the tank

12. Loosen retaining screws for pump tray 2 places, (Refer to photo2)

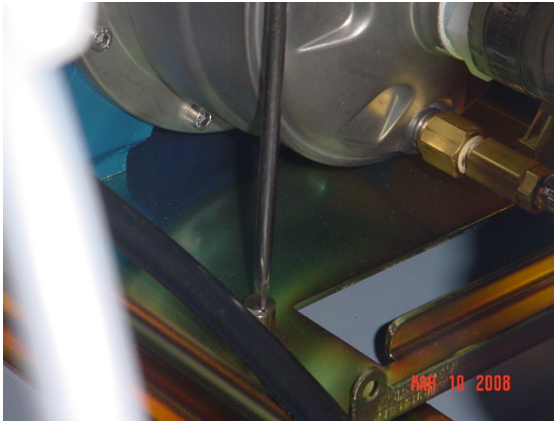


Photo 2
Loosening the pump tray retain screws

13. Grab tray by built in handle and pull forward until it stops. Lift up over lip of cabinet to facilitate lifting with hoist.

14. Attach Chain lift assembly to pump lifting brackets on 4 corners of pump plate. Ensure that both chains going to back brackets are mated to the same link. Ensure the front bracket chains are likewise mated. This will provide a balanced lift.

15. Attach Chain lift assembly to Hoist assembly. (Refer to Photo 3)



Photo 3
Hoist Assembly Hook and Chain detail

16. Place Hoist Assembly handle in “Up” position. (Refer to Photo 4)




Photo 4
Hoist Handle in “UP” position

17. Ratchet Hoist Assembly handle to begin lifting the pump.
18. When pump is high enough to clear cabinet, carefully swing Chain lift assembly toward the packing crate.
19. When the pump is in proper position, place the Hoist Assembly ratchet in “Down” position.
20. Lower pump until it is settled in crate.

End of Procedure

Installation Procedure

1. Machine should be in a shutdown condition as required by above procedure.
2. Position Pump crate as close to machine as possible to facilitate lifting of the pump.
3. Attach Hoist Assembly chain hook to the pump through 4 eyelets located on the pump tray.

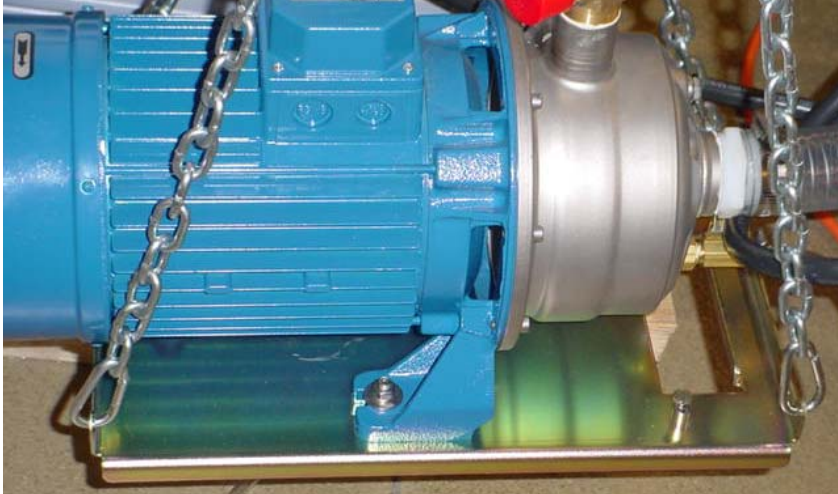

4. Place Hoist Assembly handle in the "UP" position.
5. Take slack out of chain length by ratcheting the handle.
6. While guiding the tightened chain with your free hand, slowly lift the pump until it clears the lip of the machine.
7. Slide the pump into the machine along the Hoist Assembly track.

NOTE: The pump will be unable to go the complete distance due to the angle with the machine.

8. Lower the pump until the pump front end rests on the lip of the machine.
9. Remove the Hoist Assembly chain hooks from the pump.
10. Move the pump onto the pump positioning tracks.
11. Slide the pump back into the machine and align the two thumbscrews that secure the pump.
12. Route the power cable for the pump through the machine to the Electrical Box.
13. Wire the pump to the appropriate Variable Frequency Drive (VFD).
14. Remove the Hoist Assembly from the machine.
15. Tighten supply hose union and reattach discharge hose at pump.
16. Fill the system in accordance with Lytron manual #820-0190.
17. Clear the Lockout/Tagout in accordance with GE procedures.
18. Perform a normal startup according to Lytron manual #820-0190
19. Check for any leakage. Repair if necessary.

End of Procedure