



GOC SCSI Tower DVD/MOD Replacement

[\(Click here for Summary Version\)](#)

1 Personnel Requirements

Required Persons	Preliminary Reqs	Procedure	Finalization
1	Timing Not Applicable	1 hour	Timing Not Applicable

2 Overview

This procedure outlines the steps necessary to replace a DVD or MOD drive within a SCSI Tower Assembly.

Last Update	03/26/2007
-------------	------------

3 Preliminary Requirements

3.1 Tools and Test Equipment

Item	Qty	Effectivity	Part#	Manufacturer
Standard and Phillips Screwdriver	1	-	-	-
Needle Nose Pliers	1	-	-	-

3.2 Replacement Parts

Item	Qty	Effectivity	Part#	Manufacturer
SCSI Tower Assembly with MOD Drive	1	-	2381744	-
DVD-RW Drive	1	-	5116795-2	-
Sony MOD Drive	1	-	2318598	-
SCSI Terminator	1	-	2350404	-

3.3 Safety



⚠ DANGER

ELECTRIC SHOCK HAZARD!

LETHAL VOLTAGES ARE PRESENT INSIDE THE GLOBAL OPERATOR CONSOLE (GOC) TOWER.

ENSURE POWER IS TURNED OFF AND THAT THE POWER CORD IS REMOVED BEFORE OPENING THE DRIVE TOWER.

4 Procedure

4.1 SCSI Tower Assembly

4.1.1 Replacing the SCSI Tower Assembly


1. Shut down the PC software.
2. Power down the Global Operator Console (GOC).
3. Remove the SCSI cable, power cable, and SCSI terminator from the rear of the SCSI Tower Assembly (see [Illustration 1](#)).

Illustration 1: SCSI Cables



4. If the SCSI Tower Assembly replacement kit was not supplied with a SCSI terminator, attach the SCSI terminator removed from the failed unit to the new unit.
5. Connect the SCSI cable and power cable to the replacement SCSI Tower Assembly.
6. Power on the GOC.
7. Confirm that the green power light on the right front of the replacement SCSI Tower Assembly is illuminated. If not, apply power to the SCSI Tower Assembly from the power button on the front of the unit as shown in [Illustration 2](#).

Illustration 2: Tower Power Switch

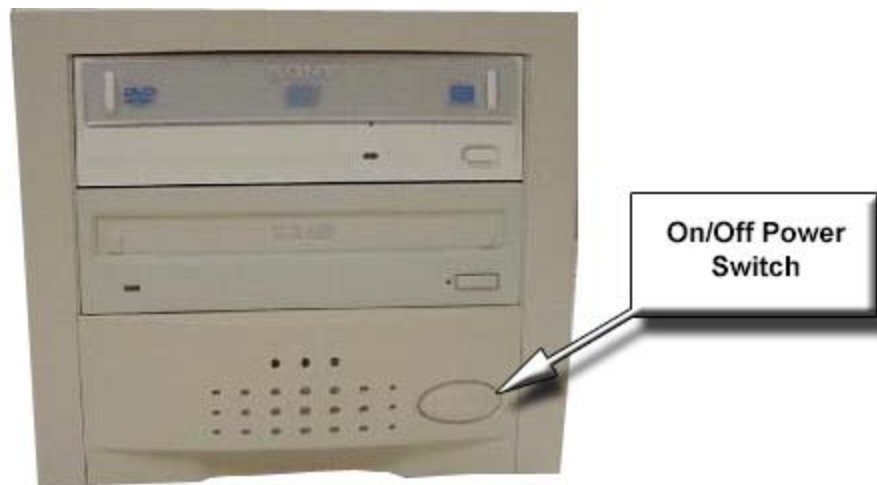

8. Once the machine is booted, the MOD or DVD should be fully functional. It is not necessary to run any software scripts after installing the replacement within SCSI Tower Assembly. The address switches on the rear of the SCSI Tower are not used; Therefore, settings are not important.

4.1.2 Troubleshooting SCSI Tower Assembly

If the system does not detect the drive, perform the following steps:


1. Confirm the SCSI Tower Assembly is receiving power.
2. Confirm the SCSI data cable and SCSI terminator are connected as shown in [Illustration 1](#).
3. Confirm the other end of the SCSI data cable is connected to the PC.
4. Confirm that the SCSI terminator green LED is illuminated as shown in [Illustration 1](#).
5. If power was applied to the SCSI tower too late in the boot process, the software may not have detected it. In this case, reboot.
6. If necessary remove SCSI Tower Assembly cover and confirm the following:
 - a. Power and data cables are firmly connected to MOD and DVD.
 - b. All switches in both DIP modules on top of Sony MOD (model SMO-F551) are in the OFF position. See [Illustration 10](#).
 - c. Pins in locations 1, 7, and 9 of the functional switch on the Sony MOD (model SMO-F551) have shorting jumpers. See [Illustration 12](#).
 - d. The jumper board on the rear of the DVD drive is properly seated.
7. If the DVD/MOD never did function properly, which required a repair or replacement of the item, then configure or reconfigure the software and proceed to [Configuring Software](#).

4.1.3 Configuring Software

1. Launch MR Service Desktop.
2. Click [Configure] .


3. Click [FE mode] .
4. Click [Click here to start the tool] .

Illustration 3: FE Mode

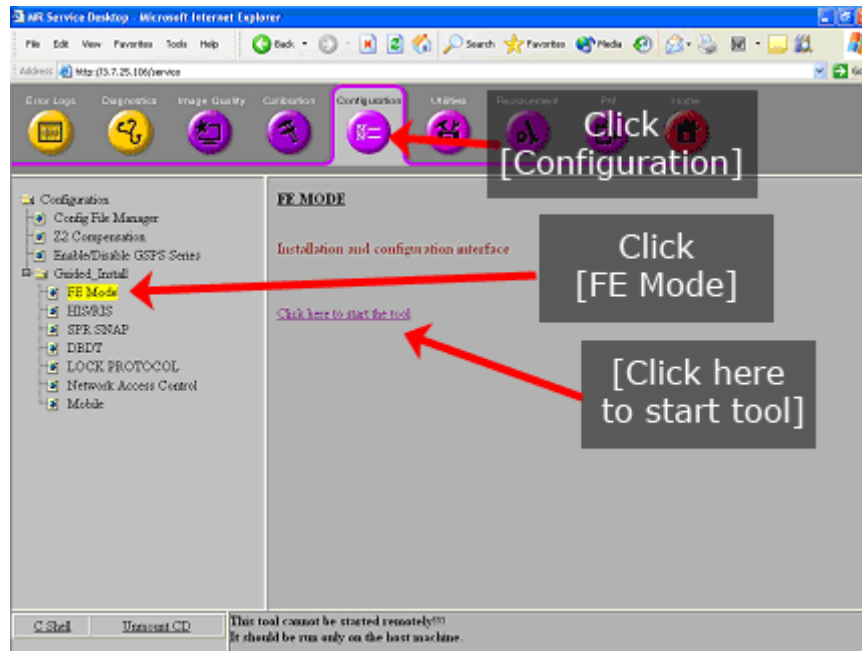


5. Login window will open.
6. Login: **Root**.

Illustration 4: Login

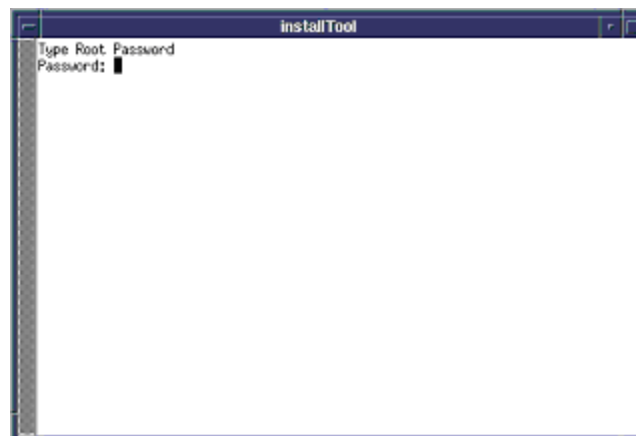

7. Password: **operator**.
8. From the Utilities heading in the left navigation tree, select [Display MOD/CD-ROM] .
9. Click [Setup Devices] .

Illustration 5: Display MOD/CD-ROM

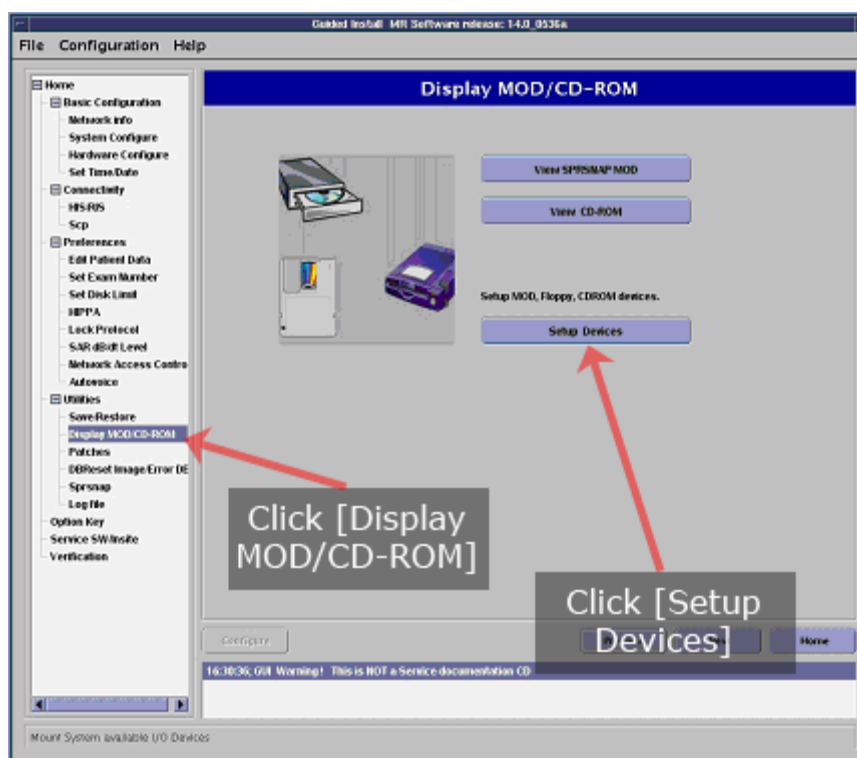

10. When this procedure is complete, exit the guided install module and go to [Finalization, Step 1](#) (plus remaining steps of the Finalization section).

4.2 DVD/MOD Replacement Procedure

4.2.1 Removing DVD/MOD Drives


1. Shut down the PC software.
2. Power down the GOC.
3. Remove the SCSI cable, power cable, and SCSI terminator from the rear of the SCSI Tower Assembly (see [Illustration 6](#)).

Illustration 6: SCSI Tower Assembly



4. From the SCSI Tower cover, remove three screws (as shown in [Illustration 7](#)).

Illustration 7: Removing SCSI Tower Cover

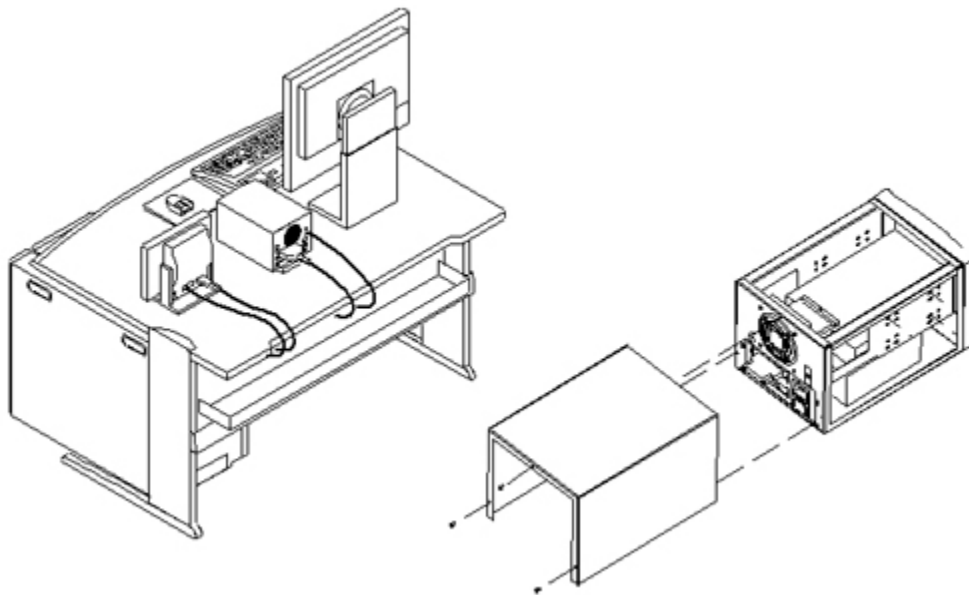


5. Disconnect power and data connections from the rear of the device.

NOTE: Steps to remove the MOD drive are similar to those for removing the DVD Drive.


6. Remove four screws from the drive (two on each side) and slide it out the front of the tower as shown in [Illustration 8](#). The DVD drive is on the top and the MOD drive is the on the bottom (or *secondary*) drive.

Illustration 8: Slide Drive Out of Tower (Example shows DVD Drive)

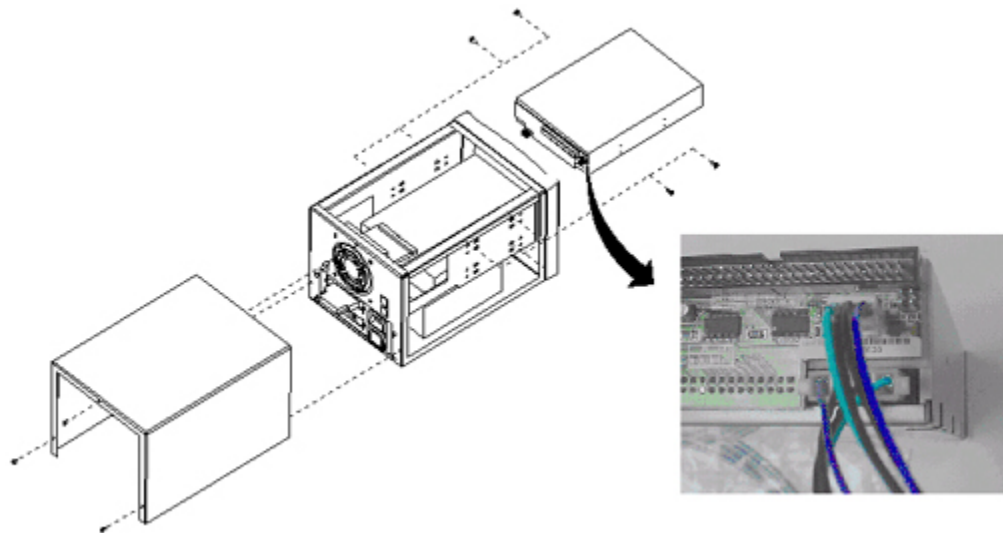


7. **(For replacing the MOD drive)** Remove one jumper from the functional switch (see [Illustration 11](#)) and save it for the replacement MOD.
8. **(For DVD Drive)** Verify jumper positions on DVD as shown in [Illustration 9](#).

Illustration 9: Verify DVD Jumper Positions

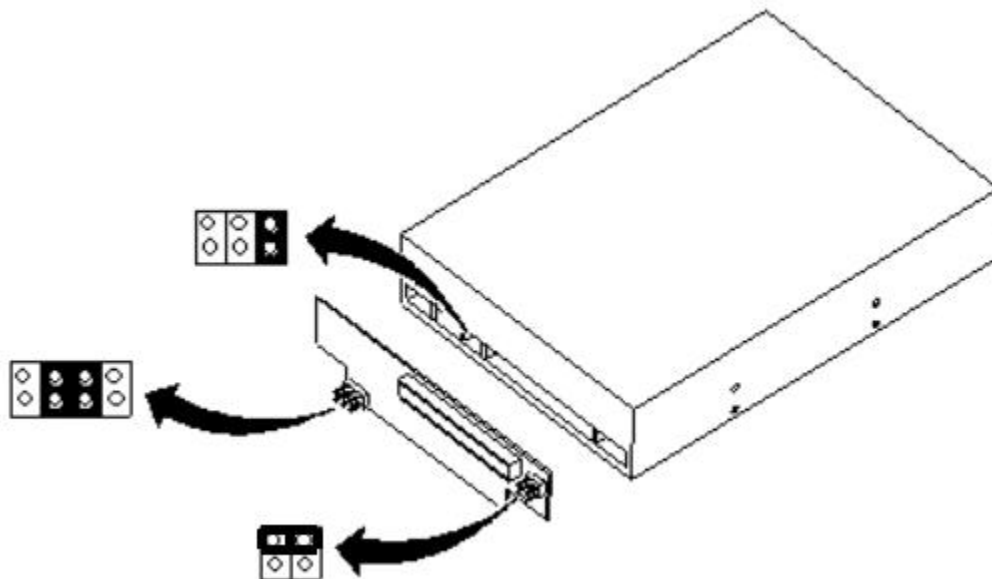

9. **(For Sony MOD Drive)** Verify the following settings and jumpers:
 - All switches in both DIP modules on top of Sony MOD (model SMO-F551) are in OFF position.

Illustration 10: DIP Settings on Sony MOD

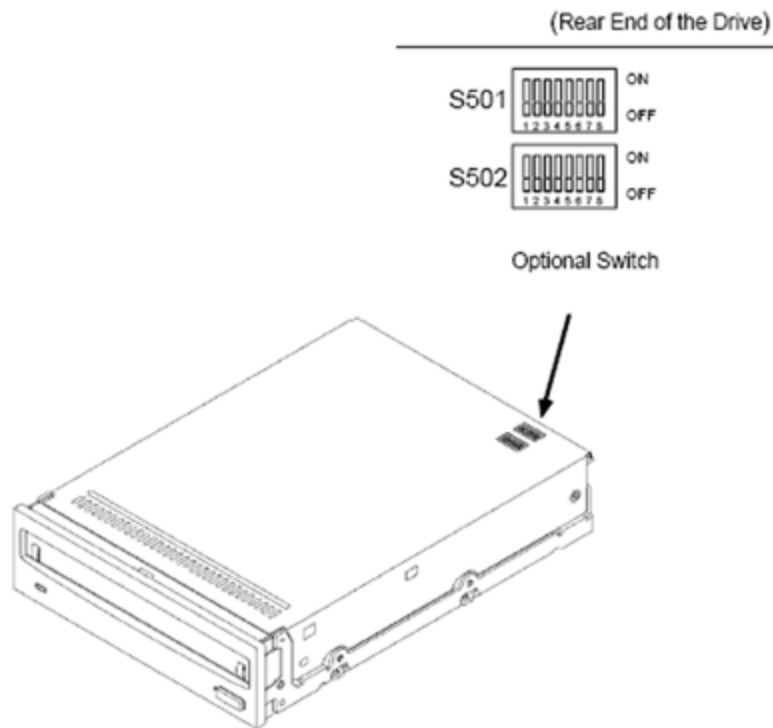

- Pins in locations 1, 7, and 9 of the functional switch on the Sony MOD (model SMO-F551) have shorting jumpers.

NOTE: Use the jumper removed from the replaced MOD to match the jumper settings shown in [Illustration 12](#).

Illustration 11: Rear View of MOD Drive


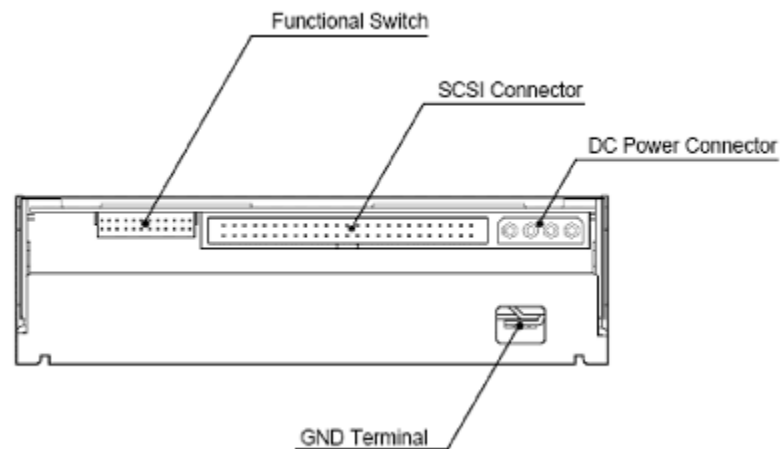


Illustration 12: Jumper Settings at Rear of MOD Drive

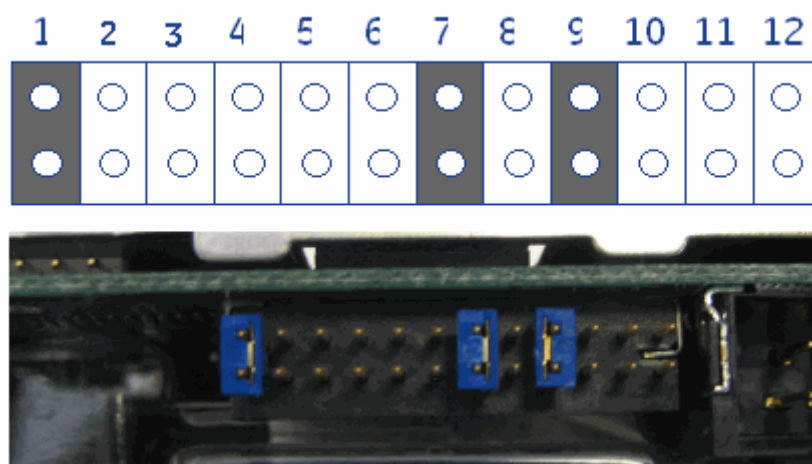

4.2.2 Reassembly

1. Partially slide the drive in the tower and connect the power and data cable.
2. Reinstall the 4 drive mounting screws
3. Install the SCSI Tower Cover, see [Illustration 7](#).
4. Reinstall the SCSI cable, power cable, and SCSI terminator from the rear of the SCSI Tower Assembly (see [Illustration 1](#)).
5. Power on the GOC.
6. Confirm the green power light on the right front of the replacement SCSI Tower Assembly is illuminated. If not, apply power to the SCSI Tower Assembly from the power button on the front of the unit as shown in [Illustration 2](#).
 - a. Confirm the SCSI Tower Assembly is receiving power.
 - b. Confirm the SCSI Data Cable and SCSI terminator are connected as shown in [Illustration 1](#) (locations not important).
 - c. Confirm that the other end of the SCSI data cable is connected to the PC.
 - d. Confirm SCSI terminator green LED is illuminated as shown in [Illustration 2](#).
 - e. If power was applied to the SCSI Tower too late in the boot process, the software may not have detected it. If this is the case, reboot.

5 Finalization

1. In the left navigation pane, go to *Utilities* and select *SaveRestore*.
2. Click [Save Information & SaveGI] . (This operation is often referred to as performing a "SaveInfo".)
3. Insert the media to be used into the drive.
4. Perform a [Verification Of SaveInfo Data](#) to ensure information was saved correctly.

 [Back to top](#)